



astaro

Sophos Network Security

Astaro Security Gateway

Version 8.300

Administration Guide

Date: 1/10/2012 11:23 AM UTC

The specifications and information in this document are subject to change without notice. Companies, names, and data used in examples herein are fictitious unless otherwise noted. This document may not be copied or distributed by any means, in whole or in part, for any reason, without the express written permission of Astaro GmbH & Co. KG. Translations of this original manual must be marked as follows: "Translation of the original manual".

© 2000–2012 Astaro GmbH & Co. KG.

All rights reserved.

Amalienbadstraße 41/Bau 52,

76227 Karlsruhe,

Germany

<http://www.astaro.com>

Astaro Security Gateway, Astaro Mail Gateway, Astaro Web Gateway, Astaro Command Center, Astaro Gateway Manager, and WebAdmin are trademarks of Astaro GmbH & Co. KG. Cisco is a registered trademark of Cisco Systems Inc. iOS is a trademark of Apple Inc. Linux is a trademark of Linus Torvalds. All further trademarks are the property of their respective owners.

Limited Warranty

No guarantee is given for the correctness of the information contained in this document. Please send any comments or corrections to documentation@astaro.com.

Contents

1 Installation	13
1.1 Recommended Reading	13
1.2 System Requirements	14
1.2.1 UPS Device Support	15
1.2.2 RAID Support	16
1.3 Installation Instructions	16
1.3.1 Key Functions During Installation	16
1.3.2 Special Options During Installation	17
1.3.3 Installing Astaro Security Gateway	17
1.4 Basic Configuration	21
1.5 Backup Restoration	27
2 WebAdmin	29
2.1 WebAdmin Menu	30
2.2 Button Bar	31
2.3 Lists	32
2.4 Searching in Lists	33
2.5 Dialog Boxes	34
2.6 Buttons and Icons	35
2.7 Object Lists	36
3 Dashboard	39
3.1 Flow Monitor	42
4 Management	45
4.1 System Settings	45
4.1.1 Organizational	46
4.1.2 Hostname	46
4.1.3 Time and Date	46
4.1.4 Shell Access	50
4.1.5 Reset Configuration or Passwords	51
4.2 WebAdmin Settings	52
4.2.1 General	52
4.2.2 Access Control	53
4.2.3 Security	54
4.2.4 HTTPS Certificate	55
4.2.5 User Preferences	56
4.2.6 Advanced	58
4.3 Licensing	59

4.3.1 How To Obtain A License	59
4.3.2 OnDemand Licensing.....	60
4.3.3 Classic Licensing.....	63
4.3.4 Overview.....	65
4.3.5 Installation.....	66
4.3.6 Active IP Addresses.....	67
4.4 Up2Date	67
4.4.1 Overview.....	68
4.4.2 Configuration.....	70
4.4.3 Advanced.....	71
4.5 Backup/Restore	72
4.5.1 Backup/Restore	73
4.5.2 Automatic Backups.....	76
4.6 User Portal.....	77
4.6.1 Global.....	80
4.6.2 Advanced.....	81
4.7 Notifications.....	82
4.7.1 Global.....	82
4.7.2 Notifications.....	83
4.7.3 Advanced.....	83
4.8 Customization.....	84
4.8.1 Global.....	84
4.8.2 Web Filter.....	85
4.8.3 Download Manager.....	87
4.8.4 SMTP/POP3 Proxy.....	88
4.9 SNMP.....	89
4.9.1 Query.....	89
4.9.2 Traps.....	92
4.10 Central Management	93
4.10.1 Astaro Command Center.....	93
4.11 High Availability.....	97
4.11.1 Hardware and Software Requirements.....	99
4.11.2 Status.....	100
4.11.3 System Status.....	101
4.11.4 Configuration.....	102
4.12 Shutdown and Restart	107
5 Definitions & Users	109
5.1 Network Definitions.....	109
5.2 Service Definitions.....	113
5.3 Time Period Definitions.....	116

5.4 Users & Groups.....	118
5.4.1 Users.....	118
5.4.2 Groups.....	121
5.5 Client Authentication.....	124
5.6 Authentication Servers.....	125
5.6.1 Global Settings.....	126
5.6.2 Servers.....	127
5.6.2.1 eDirectory.....	127
5.6.2.2 Active Directory.....	129
5.6.2.3 LDAP.....	133
5.6.2.4 RADIUS.....	136
5.6.2.5 TACACS+.....	138
5.6.3 Single Sign-On.....	140
5.6.4 Advanced.....	142
6 Interfaces & Routing	145
6.1 Interfaces.....	145
6.1.1 Interfaces.....	146
6.1.1.1 Automatic Interface Network Definitions.....	147
6.1.1.2 Interface Types.....	147
6.1.1.3 3G/UMTS.....	149
6.1.1.4 Ethernet Standard.....	151
6.1.1.5 Ethernet VLAN.....	153
6.1.1.6 Cable Modem (DHCP).....	155
6.1.1.7 DSL (PPPoE).....	157
6.1.1.8 DSL (PPPoA/PPTP).....	159
6.1.1.9 Modem (PPP).....	161
6.1.2 Additional Addresses.....	164
6.1.3 Link Aggregation.....	165
6.1.4 Uplink Balancing.....	166
6.1.5 Multipath Rules.....	168
6.1.6 Hardware.....	170
6.2 Bridging.....	172
6.2.1 Status.....	172
6.2.2 Advanced.....	174
6.3 Quality of Service (QoS).....	174
6.3.1 Status.....	175
6.3.2 Traffic Selectors.....	176
6.3.3 Bandwidth Pools.....	180
6.4 Uplink Monitoring.....	182
6.4.1 Global.....	182

6.4.2 Actions.....	182
6.4.3 Advanced.....	183
6.5 IPv6.....	184
6.5.1 Global.....	185
6.5.2 Prefix Advertisements.....	185
6.5.3 6to4.....	186
6.5.4 Tunnel Broker.....	187
6.6 Static Routing.....	188
6.6.1 Standard Static Routes.....	189
6.6.2 Policy Routes.....	190
6.7 Dynamic Routing (OSPF).....	192
6.7.1 Global.....	193
6.7.2 Area.....	194
6.7.3 Interfaces.....	196
6.7.4 Message Digests.....	198
6.7.5 Debug.....	198
6.7.6 Advanced.....	199
6.8 Border Gateway Protocol.....	200
6.8.1 Global.....	200
6.8.2 Systems.....	201
6.8.3 Neighbor.....	202
6.8.4 Route Map.....	203
6.8.5 Filter List.....	205
6.8.6 Advanced.....	206
6.9 Multicast Routing (PIM-SM).....	207
6.9.1 Global.....	208
6.9.2 Interfaces.....	209
6.9.3 RP Routers.....	210
6.9.4 Routes.....	211
6.9.5 Advanced.....	212
7 Network Services	215
7.1 DNS.....	215
7.1.1 Global.....	215
7.1.2 Forwarders.....	216
7.1.3 Request Routing.....	216
7.1.4 Static Entries.....	217
7.1.5 DynDNS.....	218
7.2 DHCP.....	220
7.2.1 Servers.....	221
7.2.2 Relay.....	223

7.2.3 Static Mappings.....	224
7.2.4 IPv4 Lease Table.....	225
7.2.5 IPv6 Lease Table.....	226
7.3 NTP.....	227
8 Network Security	229
8.1 Firewall.....	229
8.1.1 Rules.....	229
8.1.2 Country Blocking.....	233
8.1.3 ICMP.....	234
8.1.4 Advanced.....	235
8.2 NAT.....	238
8.2.1 Masquerading.....	239
8.2.2 DNAT/SNAT.....	240
8.3 Intrusion Prevention.....	243
8.3.1 Global.....	243
8.3.2 Attack Patterns.....	244
8.3.3 Anti-DoS/Flooding.....	247
8.3.4 Anti-Portscan.....	249
8.3.5 Exceptions.....	250
8.3.6 Advanced.....	252
8.4 Server Load Balancing.....	254
8.4.1 Balancing Rules.....	254
8.5 VoIP.....	257
8.5.1 SIP.....	257
8.5.2 H.323.....	259
8.6 Advanced.....	260
8.6.1 Generic Proxy.....	260
8.6.2 SOCKS Proxy.....	261
8.6.3 IDENT Reverse Proxy.....	263
9 Web Security	265
9.1 Web Filtering.....	266
9.1.1 Global.....	266
9.1.2 AntiVirus/Malware.....	270
9.1.3 URL Filtering.....	272
9.1.4 URL Filtering Categories.....	276
9.1.5 Exceptions.....	277
9.1.6 Advanced.....	280
9.1.7 HTTPS CAs.....	285
9.2 Web Filtering Profiles.....	289
9.2.1 Overview.....	290

9.2.2 Proxy Profiles.....	291
9.2.3 Filter Assignments.....	295
9.2.4 Filter Actions.....	296
9.2.5 Parent Proxies.....	300
9.3 Application Control.....	301
9.3.1 Network Visibility.....	301
9.3.2 Application Control Rules.....	302
9.3.3 Advanced.....	305
9.4 FTP.....	305
9.4.1 Global.....	306
9.4.2 AntiVirus.....	307
9.4.3 Exceptions.....	308
9.4.4 Advanced.....	309
10 Mail Security	311
10.1 SMTP.....	311
10.1.1 Global.....	311
10.1.2 Routing.....	312
10.1.3 AntiVirus.....	315
10.1.4 AntiSpam.....	319
10.1.5 Exceptions.....	326
10.1.6 Relaying.....	327
10.1.7 Advanced.....	330
10.2 SMTP Profiles.....	333
10.3 POP3.....	339
10.3.1 Global.....	339
10.3.2 AntiVirus.....	340
10.3.3 AntiSpam.....	342
10.3.4 Exceptions.....	344
10.3.5 Advanced.....	346
10.4 Encryption.....	350
10.4.1 Global.....	353
10.4.2 Options.....	355
10.4.3 Internal Users.....	357
10.4.4 S/MIME Authorities.....	359
10.4.5 S/MIME Certificates.....	361
10.4.6 OpenPGP Public Keys.....	363
10.5 Quarantine Report.....	364
10.5.1 Global.....	366
10.5.2 Exceptions.....	367
10.5.3 Advanced.....	369

10.6 Mail Manager.....	370
10.6.1 Mail Manager Window.....	371
10.6.1.1 SMTP/POP3 Quarantine.....	371
10.6.1.2 SMTP Spool.....	373
10.6.1.3 SMTP Log.....	374
10.6.2 Global.....	375
10.6.3 Configuration.....	377
11 Wireless Security.....	379
11.1 Global Settings.....	379
11.1.1 Global Settings.....	380
11.1.2 Advanced.....	381
11.2 Wireless Networks.....	383
11.3 Access Points.....	386
11.3.1 Overview.....	386
11.3.2 Grouping.....	388
11.4 Wireless Clients.....	390
12 Web Application Security.....	393
12.1 Web Application Firewall.....	393
12.1.1 Global.....	393
12.1.2 Virtual Web Servers.....	394
12.1.3 Real Web Servers.....	396
12.1.4 Firewall Profiles.....	397
12.1.5 Exceptions.....	401
12.1.6 Advanced.....	402
12.2 Certificate Management.....	402
12.2.1 Certificates.....	402
12.2.2 Certificate Authority.....	403
12.2.3 Revocation Lists.....	403
12.2.4 Advanced.....	403
13 RED Management.....	405
13.1 Overview.....	406
13.2 Global Settings.....	406
13.3 Client Management.....	407
13.4 Deployment Helper.....	411
13.5 Tunnel Management.....	413
14 Site-to-site VPN.....	415
14.1 Amazon VPC.....	416
14.1.1 Status.....	416
14.1.2 Setup.....	418

14.2 IPsec	419
14.2.1 Connections	422
14.2.2 Remote Gateways	424
14.2.3 Policies	427
14.2.4 Local RSA Key	431
14.2.5 Advanced	433
14.2.6 Debug	436
14.3 SSL	436
14.3.1 Connections	437
14.3.2 Settings	440
14.3.3 Advanced	442
14.4 Certificate Management	444
14.4.1 Certificates	444
14.4.2 Certificate Authority	447
14.4.3 Revocation Lists (CRLs)	449
14.4.4 Advanced	449
15 Remote Access	451
15.1 SSL	452
15.1.1 Global	452
15.1.2 Settings	454
15.1.3 Advanced	455
15.2 PPTP	457
15.2.1 Global	458
15.2.2 iOS Devices	460
15.2.3 Advanced	461
15.3 L2TP over IPsec	461
15.3.1 Global	462
15.3.2 iOS Devices	465
15.3.3 Advanced	466
15.4 IPsec	467
15.4.1 Connections	470
15.4.2 Policies	472
15.4.3 Advanced	476
15.4.4 Debug	479
15.5 Cisco VPN Client	479
15.5.1 Global	479
15.5.2 iOS Devices	481
15.5.3 Debug	482
15.6 Advanced	483
15.7 Certificate Management	484

15.7.1 Certificates.....	484
15.7.2 Certificate Authority.....	484
15.7.3 Revocation Lists (CRLs).....	484
15.7.4 Advanced.....	484
16 Logging & Reporting	485
16.1 View Log Files.....	487
16.1.1 Today's Log Files.....	487
16.1.2 Archived Log Files.....	488
16.1.3 Search Log Files.....	489
16.2 Hardware.....	489
16.2.1 Daily.....	490
16.2.2 Weekly.....	491
16.2.3 Monthly.....	491
16.2.4 Yearly.....	492
16.3 Network Usage.....	492
16.3.1 Daily.....	492
16.3.2 Weekly.....	493
16.3.3 Monthly.....	494
16.3.4 Yearly.....	494
16.3.5 Bandwidth Usage.....	494
16.4 Network Security.....	496
16.4.1 Daily.....	496
16.4.2 Weekly.....	497
16.4.3 Monthly.....	497
16.4.4 Yearly.....	498
16.4.5 Firewall.....	498
16.4.6 IPS.....	498
16.5 Web Security.....	499
16.5.1 Web Usage Report.....	499
16.5.2 Search Engine Report.....	503
16.5.3 Departments.....	505
16.5.4 Scheduled Reports.....	506
16.5.5 Application Control.....	507
16.5.6 Deanonymization.....	508
16.6 Mail Security.....	509
16.6.1 Usage Graphs.....	509
16.6.2 Mail Usage.....	510
16.6.3 Blocked Mail.....	510
16.6.4 Deanonymization.....	510
16.7 Remote Access.....	511

16.7.1 Activity.....	512
16.7.2 Session.....	512
16.8 Web Application Firewall.....	513
16.8.1 Usage Graphs.....	513
16.8.2 Details.....	514
16.9 Executive Report.....	514
16.9.1 View Report.....	515
16.9.2 Archived Executive Reports.....	515
16.9.3 Configuration.....	515
16.10 Log Settings.....	516
16.10.1 Local Logging.....	516
16.10.2 Remote Syslog Server.....	518
16.10.3 Remote Logfile Archives.....	520
16.11 Reporting Settings.....	523
16.11.1 Settings.....	523
16.11.2 Exceptions.....	525
16.11.3 Anonymizing.....	525
17 Support.....	527
17.1 Manual.....	527
17.2 Printable Configuration.....	528
17.3 Contact Support.....	529
17.4 Tools.....	529
17.4.1 Ping Check.....	529
17.4.2 Traceroute.....	530
17.4.3 DNS Lookup.....	531
17.5 Advanced.....	532
17.5.1 Process List.....	533
17.5.2 LAN Connections.....	533
17.5.3 Routes Table.....	533
17.5.4 Interfaces Table.....	533
17.5.5 Config Dump.....	533
17.5.6 Weblog Import.....	534
17.5.7 Resolve REF.....	534
18 Log Off.....	535

1 Installation

This section provides information on installing and setting up Astaro Security Gateway on your network. The installation of Astaro Security Gateway proceeds in two steps: first, installing the software; second, configuring basic system settings. The initial setup required for installing the software is performed through a console-based installation menu. The internal configuration can be performed from your management workstation through the web-based administrative interface of Astaro Security Gateway called WebAdmin. Before you start the installation, check if your hardware meets the minimum system requirements.

Note – If you are employing an Astaro Security Gateway Appliance, you can skip the following sections and directly jump to the *Basic Configuration* section, as all Astaro Security Gateway Appliances ship with ASG Software preinstalled.

The following topics are included in this chapter:

- [Recommended Reading](#)
- [System Requirements](#)
- [Installation Instructions](#)
- [Basic Configuration](#)
- [Backup Restoration](#)

1.1 Recommended Reading

Before you begin the installation, you are advised to read the following documents that help you setting up Astaro Security Gateway, all of which are enclosed within the package of your Astaro Security Gateway Appliance unit and which are also available at the [Astaro Knowledgebase](#):

- Quick Start Guide Hardware
- Operating Instructions

1.2 System Requirements

The minimum hardware requirements for installing and using ASG are as follows:

- **Processor:** Pentium 4 with 1.5 GHz (or compatible)
- **Memory:** 1 GB RAM
- **HDD:** 20 GB IDE or SCSI hard disk drive
- **CD-ROM Drive:** Bootable IDE or SCSI CD-ROM drive
- **NIC:** Two or more PCI Ethernet network interface cards
- **NIC (optional):** One heart-beat capable PCI Ethernet network interface card. In a high-availability system, the primary and secondary system communicate with one another through so-called heart-beat requests. If you want to set up a high-availability system, both units need to be equipped with heart-beat capable network interface cards.
- **USB (optional):** One USB port for communications with a UPS device
- **Switch (optional):** A network device that connects (and selects between) network segments. Note that this switch must have jumbo frame support enabled.

Astaro provides a list of hardware devices compatible with ASG Software. The *Hardware Compatibility List* (HCL) is available at the [Astaro Knowledgebase](#). To make the installation and operation of ASG Software less error-prone, you are advised to only use hardware that is listed in the HCL. The hardware and software requirements for the client PC used to access WebAdmin are as follows:

- **Processor:** Clock signal frequency 1 GHz or higher
- **Browser:** Firefox 2 (recommended) or Microsoft Internet Explorer 6 or 7. JavaScript must be enabled. In addition, the browser must be configured not to use a proxy for the IP address of the ASG's internal network card (eth0).

Note – To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options > Security*. In addition, select *Auto-*

matic Prompting for File Downloads in the Trusted Sites Zone when using Internet Explorer 7.

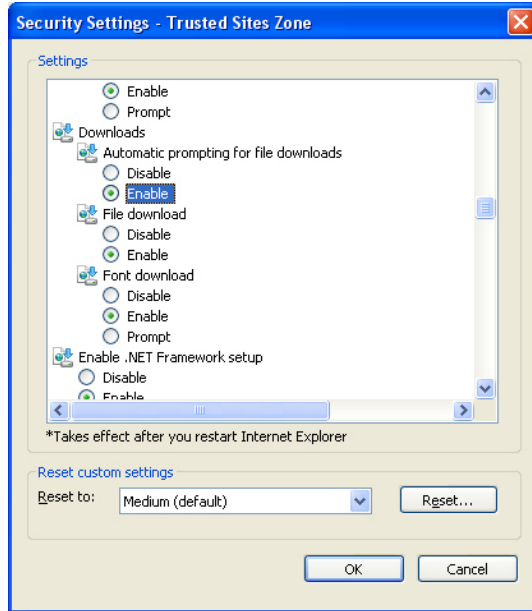


Figure 1 IE7 Security Settings Trusted Sites Zone

1.2.1 UPS Device Support

Uninterruptible Power Supply(UPS) devices maintain a continuous supply of electric power to connected equipment by supplying power from a separate source when utility power is not available. Astaro Security Gateway supports UPS devices of the manufacturers MGE UPS Systems and APC. The communication between the UPS device and Astaro Security Gateway is made via the USB interface.

As soon as the UPS device runs in battery operation, a notification is sent to the administrator. If the power failure persists for a longer period and the voltage of the UPS device approximates a critical value, another message will be sent to the administrator—the Astaro Security Gateway will be shut down automatically.

Note – Please read the operation manual of the UPS device to connect the devices to Astaro Security Gateway. The ASG will recognize the UPS device when booting via the USB interface. Only boot Astaro Security Gateway when you have connected the USB interfaces to each other.

1.2.2 RAID Support

A RAID (*Redundant Array of Independent Disks*) is a data storage scheme using multiple hard drives to share or replicate data among the drives. To ensure that the RAID system is detected and properly displayed on the Dashboard, you need to use a RAID controller that is supported by Astaro Security Gateway. Check the HCL to figure out which RAID controllers are supported. The HCL is available at the [Astaro Knowledgebase](#). Use "HCL" as search term to locate the corresponding page.

1.3 Installation Instructions

What follows is a step-by-step guide of the installation process of Astaro Security Gateway Software.

Before you begin the installation, please make sure you have the following items available:

- The Astaro Security Gateway CD-ROM
- The license key for Astaro Security Gateway

The setup program will check the hardware of the system, and then install the software on your PC.

1.3.1 Key Functions During Installation

In order to navigate through the menus, use the following keys (please also note the additional key functions listed at the bottom of a screen):

- **F1:** Displays the context-sensitive help screen.
- **Cursor keys:** Use these keys to navigate through the text boxes (for example, the license agreement or when selecting a keyboard layout).
- **Tab key:** Move back and forth between text boxes, lists, and buttons.
- **Enter key:** The entered information is confirmed, and the installation proceeds to the next step.
- **Space key:** Select or unselect options marked with an asterisk.
- **Alt-F2:** Switch to the installation console.
- **Alt-F4:** Switch to the log.
- **Alt F1:** Switch to the interactive bash shell.
- **Alt-F1:** Return to the main installation screen.

1.3.2 Special Options During Installation

Some screens offer additional options:

View Log: Opens the installation log.

Support: Opens the support dialog screen.

To USB Stick: Writes the installation log as zip file to a USB stick. Remember to insert a USB stick before confirming this option. The zip file can be used to solve installation problems, e.g. by the Astaro Support Team.

Back: Returns to the previous screen.

Cancel: Opens a confirmation dialog window to abort the installation.

Help: Opens the context-sensitive help screen.

1.3.3 Installing Astaro Security Gateway

1. **Boot your PC from CD-ROM drive.**
The installation start screen is displayed.

Note – You can always press F1 to access the help menu. Pressing F3 in the start screen opens a troubleshooting screen.

2. **Press Enter.**

The *Introduction* screen is displayed.

3. **Select Start Installation.**

The *Hardware Detection* screen is displayed.

The software will check the following hardware components:

- CPU
- Size and type of hard disk drive
- CD-ROM drive
- Network interface cards
- IDE or SCSI controllers

If your system does not meet the minimum requirements, the installation will report the error and abort.

As soon as the hardware detection is completed, the *Detected Hardware* screen is displayed for information purposes.

4. **Press Enter.**

The *Select Keyboard* screen is displayed.

5. **Select your keyboard layout.**

Use the Cursor keys to select your keyboard layout, e.g. *English (UK)*, and press Enter to continue.

The *Select Timezone* screen is displayed.

6. **Select your area.**

Use the Cursor keys to select your area, e.g. *Europe*, and press Enter to continue.

7. **Select your time zone.**

Use the Cursor keys to select your time zone, e.g. *London*, and press Enter to continue.

The *Date and Time* screen is displayed.

8. Set date and time.

If date and time are not correct, you can change them here. Use the Tab key and the Cursor keys to switch between text boxes. You can unselect the *Host Clock is UTC* option by pressing the Space key. Invalid entries will be rejected. Confirm your settings with the Enter key.

The *Select Admin Interface* screen is displayed.

9. Select an internal network card.

In order to use the WebAdmin tool to configure the rest of Astaro Security Gateway, select a network interface card to be the internal network card (eth0). Choose one of the available network cards from the list and confirm your selection with the Enter key.

Note – Interfaces having an active connection are marked with the word *LINK*.

The *Network Configuration* screen is displayed.

10. Configure the administrative network interface.

Define the IP address, network mask, and gateway of the internal interface which is going to be the administrative network interface. The default values are:

Address: 192.168.2.100

Netmask: 255.255.255.0

Gateway: none

You need to change the gateway value only if you wish to use the WebAdmin interface from a workstation outside the subnet defined by the netmask. Note that the gateway itself must be within the subnet.¹

Confirm your settings with the Enter key.

If your CPU supports 64 bit the *64 Bit Kernel Support* screen is displayed. Otherwise the installation continues with the *Enterprise Toolkit* screen.

11. Install the 64-bit kernel.

Select *Yes* to install the 64-bit kernel or *No* to install the 32-bit kernel.

The *Enterprise Toolkit* screen is displayed.

12. Accept installation of the Enterprise Toolkit.

The Enterprise Toolkit comprises the Astaro Software. You can decide to install Open Source software only. However, we advise to also install the Enterprise Toolkit to be able to use the full functionality of Astaro Security Gateway.

Press Enter to install both software packages or select *No* to install the Open Source software only.

The *Installation: Partitioning* screen is displayed.

13. Confirm the warning message to start the installation.

Please read the warning carefully. After confirming, all existing data on the PC will be destroyed.

If you want to change your settings, select *Back*.

¹For example, if you are using a network mask of 255.255.255.0, the subnet is defined by the first three octets of the address: in this case, 192.168.2. If your administration computer has the IP address 192.168.10.5, it is not on the same subnet, and thus requires a gateway. The gateway router must have an interface on the 192.168.2 subnet and must be able to contact the administration computer. In our example, assume the gateway has the IP address 192.168.2.1.

Caution – The installation process will delete all data on the hard disk drive.

The software installation process can take up to a couple of minutes.

The *Installation Finished* screen is displayed.

14. **Remove the CD-ROM, connect to the internal network, and reboot the system.**

When the installation process is complete, remove the CD-ROM from the drive and connect the `eth0` network card to the internal network. Except for the internal network card (`eth0`), the sequence of network cards normally will be determined by PCI ID and by the kernel drivers. The sequence of network card names may also change if the hardware configuration is changed, especially if network cards are removed or added.

Then press Enter in the installation screen to reboot the ASG. During the boot process, the IP addresses of the internal network cards are changed. The installation routine console (Alt+F1) may display the message "No IP on `eth0`" during this time.

After Astaro Security Gateway has rebooted (a process which, depending on your hardware, can take several minutes), ping the IP address of the `eth0` interface to ensure it is reachable. If no connection is possible, please check if one of the following problems is present:

- The IP address of Astaro Security Gateway is incorrect.
- The IP address of the client computer is incorrect.
- The default gateway on the client is incorrect.
- The network cable is connected to the wrong network card.
- All network cards are connected to the same hub.

1.4 Basic Configuration

The second step of the installation is performed through WebAdmin, the web based administrative interface of Astaro Security Gateway. Prior to configuring basic system settings, you should have a plan how to integrate Astaro Security

Gateway into your network. You must decide which functions you want it to provide, for example, if you want to operate it in bridge mode or in standard (routing) mode, or how you want it to control the data packets flowing between its interfaces. However, you can always reconfigure Astaro Security Gateway at a later time. So if you do not have planned how to integrate Astaro Security Gateway into your network yet, you can begin with the basic configuration right away.

1. **Start your browser and open WebAdmin.**

Browse to the URL of Astaro Security Gateway (i.e., the IP address of eth0). In order to stay consistent with our configuration example above, this would be `https://192.168.2.100:4444` (note the HTTPS protocol and port number 4444).

Deviating from the configuration example, each Astaro Security Gateway Appliance ships with the following default settings:

- **Interfaces:** Internal network interface (eth0)
- **IP address:** 192.168.0.1
- **Network mask:** 255.255.255.0
- **Default gateway:** none

To access WebAdmin of any Astaro Security Gateway Appliance, enter the following URL instead:

`https://192.168.0.1:4444`

To provide authentication and encrypted communication, Astaro Security Gateway comes with a self-signed security certificate. This certificate is offered to the web browser when an HTTPS-based connection to WebAdmin is established. For being unable to check the certificate's validity, the browser will display a security warning. Once you have accepted the certificate, the initial login page is displayed.

The screenshot shows the 'Welcome to WebAdmin' page with a 'Basic system setup' form. The form includes fields for Hostname, Company or Organization Name, City, Country (a dropdown menu), admin account password, Repeat password, and admin account email address. A note on the right states: 'These settings must be made before the system can be used. Please note that ALL fields must be filled in and the hostname must not contain special characters or spaces. After applying the settings, log into the system with username **admin** and the password you set below.' Below the form is a scrollable area containing the 'IMPORTANT--READ CAREFULLY BEFORE OPERATING THIS SOFTWARE' section, which includes the 'Astaro License Agreement'. At the bottom, there is a 'Print EULA' button, a checkbox for 'I accept the license agreement', and a 'Perform basic system setup' button.

Figure 2 WebAdmin: Initial Login Page

2. Fill out the Basic System Setup form.

Enter accurate information of your company in the text boxes presented here. In addition, specify a password and valid e-mail address for the administrator account. If you accept the license agreement, click the *Perform Basic System Setup* button to continue logging in. While performing the basic system setup, a number of certificates and certificate authorities are being created:

- **WebAdmin CA:** The CA with which the WebAdmin certificate was signed (see *Management > WebAdmin Settings > HTTPS Certificate*).
- **VPN Signing CA:** The CA with which digital certificates are signed that are used for VPN connections (see *Site-to-site VPN > Certificate Management > Certificate Authority*).
- **WebAdmin Certificate:** The digital certificate of WebAdmin (see *Site-to-site VPN > Certificate Management > Certificates*).

- **Local X.509 Certificate:** The digital certificate of Astaro Security Gateway that is used for VPN connections (see *Site-to-Site VPN > Certificate Management > [Certificates](#)*).

The login page appears. (With some browsers it may, however, happen that you are presented another security warning because the certificate has changed according to your entered values.)

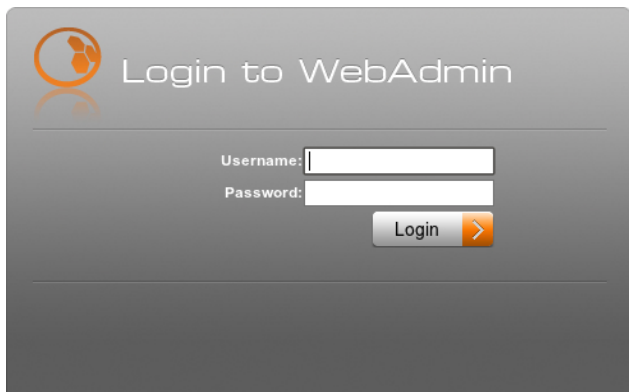


Figure 3 WebAdmin: Regular Login Page

3. Log into WebAdmin.

Type `admin` in the *Username* field and enter the password you have specified on the previous screen.

A configuration wizard is presented to you which will guide you through the initial configuration process. Follow the steps to configure the basic settings of Astaro Security Gateway.

If you have a backup file, you can decide to restore this backup file instead (please refer to section [Backup Restoration](#)).

Alternatively, you can safely click *Cancel* (at any time during the wizard's steps) and thereby exit the wizard, for example if you want to configure Astaro Security Gateway directly in WebAdmin. You can also click *Finish* at any time to save your settings done so far and exit the wizard.

4. Install your license.

Click the folder icon to upload your purchased license (a text file). Click *Next* to install the license. In case you did not purchase a license, click *Next* to use the built-in 30-day trial license with all features enabled that is shipped with Astaro Security Gateway.

5. Configure the internal network interface.

Check the presented settings for the internal network interface (*eth0*). The settings for this interface are based on the information you provided during the installation of the software. Additionally, you can set the Astaro Security Gateway to act as DHCP server on the internal interface by selecting the checkbox.

Note – If you change the IP address of the internal interface, you must connect to WebAdmin again using the new IP address after finishing the wizard.

6. Select the uplink type for the external interface.

Select the connection type of your uplink/Internet connection the external network card is going to use. The type of interface and its configuration depend on what kind of connection to the Internet you are going to use. Click *Next*.

In case the Astaro Security Gateway has no uplink or you do not want to configure it right now, just leave the *Internet Uplink Type* input box blank. If you configure an Internet uplink, IP masquerading will automatically be configured for connections from the internal network to the Internet.

If you select *Standard Ethernet Interface with Static IP Address*, specifying a *Default Gateway* is optional. If you leave the text box blank, your default gateway setting of the installation routine will persist. You can skip each of the following steps by clicking *Next*. You can make and change those skipped settings later in WebAdmin.

7. Make your basic firewall settings.

You can now select what types of services you want to allow on the Internet. Click *Next* to confirm your settings.

8. Make your basic intrusion prevention settings.

You can now make settings regarding intrusion prevention for several operation systems and databases. Click *Next* to confirm your settings.

9. Make your settings for instant messaging and P2P.

You can now select which instant messaging or peer-to-peer protocols should be blocked. Click *Next* to confirm your settings.

10. Make your Web Security settings.

You can now select whether the web traffic should be scanned for viruses and spyware. Additionally, you can select to block web pages that belong to certain categories. Click *Next* to confirm your settings.

11. Make your Mail Security settings.

You can now select the first checkbox to enable the POP3 proxy. You can also select the second checkbox to enable the ASG as inbound SMTP relay: Enter the IP address of your internal mail server and add SMTP domains to route. Click *Next* to confirm your settings.

12. Confirm your settings.

A summary of your settings is displayed. Click *Finish* to confirm them or *Back* to change them. However, you can also change them in WebAdmin later.

After clicking *Finish* your settings are saved and you are redirected to the Dashboard of WebAdmin, providing you with the most important system status information of the Astaro Security Gateway unit.

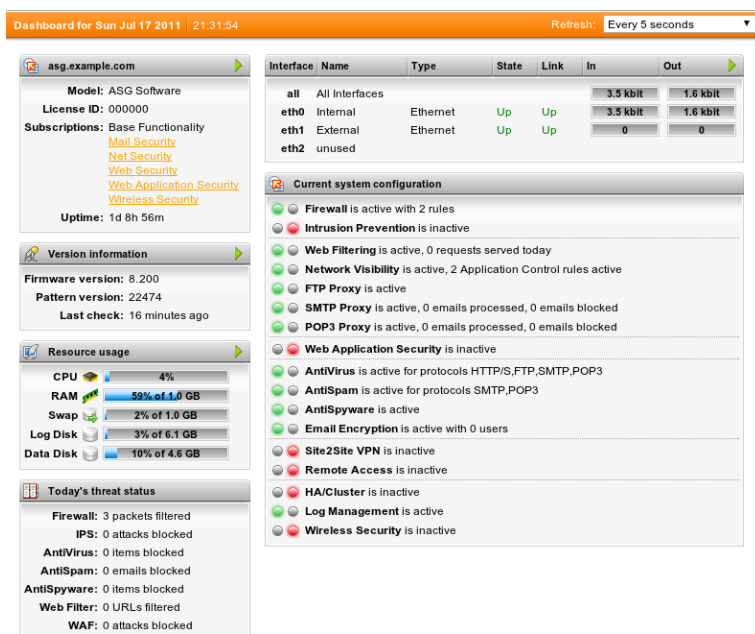


Figure 4 WebAdmin: Dashboard

If you encounter any problems while completing these steps, please contact the support department of your Astaro Security Gateway supplier. For more information, you might also want to visit the following websites:

- [Astaro Support Forum](#)
- [Astaro Knowledgebase](#)

1.5 Backup Restoration

The WebAdmin configuration wizard (see section [Basic Configuration](#)) allows you to restore an existing backup file instead of going through the basic configuration process. Do the following:

1. **Select *Restore existing backup file in the configuration wizard*.**
Select *Restore existing backup file* in the configuration wizard and click *Next*.
You are directed to the upload page.

2. Upload the backup.

Click the folder icon, select the backup file you want to restore, and click *Start Upload*.

3. Restore the backup.

Click *Finish* to restore the backup.

Important Note – You will not be able to use the configuration wizard afterwards.

As soon as the backup has been restored successfully you will be redirected to the login page.

2 WebAdmin

WebAdmin is the web-based administrative interface that allows you to configure every aspect of Astaro Security Gateway. WebAdmin consists of a menu and pages, many of which have multiple tabs. The menu on the left of the screen organizes the features of Astaro Security Gateway in a logical manner. When you select a menu item, such as *Network*, it expands to reveal a submenu and the associated page opens. Note that for some menu items no page is associated. Then, the page of the previously selected menu or submenu item keeps being displayed. You have to select one of the submenu items, which opens the associated page at its first tab.

The procedures in this administration guide direct you to a page by specifying the menu item, submenu item, and the tab, for example: "On the *Interfaces & Routing* > *Interfaces* > *Hardware* tab, configure ..."

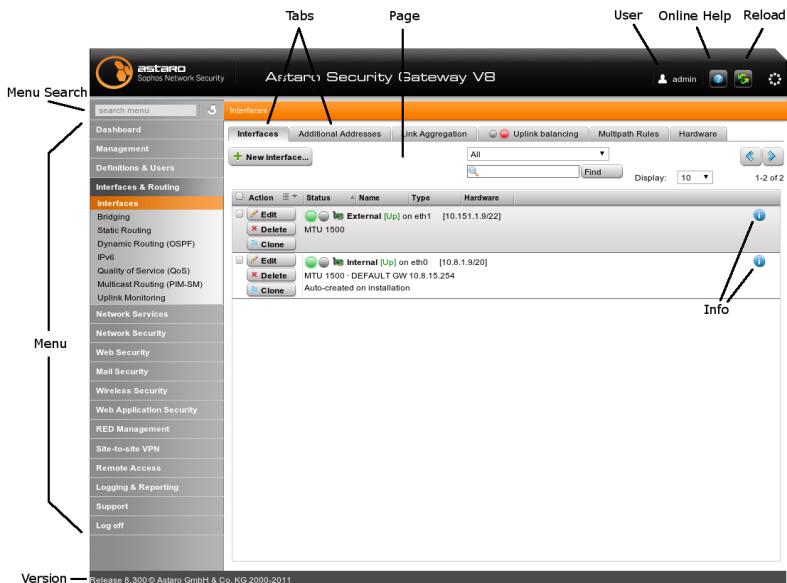


Figure 5 WebAdmin: Overview

2.1 WebAdmin Menu

The WebAdmin menu provides access to all configuration options of Astaro Security Gateway, that is, there is no need for using a command line interface to configure specific parameters.

- **Dashboard:** The Dashboard graphically displays a snapshot of the current operating status of the Astaro Security Gateway unit.
- **Management:** Configure basic system and WebAdmin settings as well as all settings that concern the configuration of the Astaro Security Gateway unit.
- **Definitions & Users:** Configure network, service, and time period definitions as well as user accounts, user groups, and external authentication servers for use with the Astaro Security Gateway unit.
- **Interfaces & Routing:** Configure system facilities such as network interfaces as well as routing options, among other things.
- **Network Services:** Configure network services such as DNS and DHCP, among other things.
- **Network Security:** Configure basic network security features such as fire-wall rules, voice over IP, or intrusion prevention settings.
- **Web Security:** Configure the Web Filter and application control of Astaro Security Gateway unit as well as the FTP proxy.
- **Mail Security:** Configure the SMTP and POP3 proxies of the Astaro Security Gateway unit as well as e-mail encryption.
- **Wireless Security:** Configure wireless access points for the gateway.
- **Web Application Security:** Protect your web servers from attacks like cross-site scripting and SQL injection.
- **RED Management:** Configure your remote Ethernet device (RED) appliances.
- **Site-to-site VPN:** Configure site-to-site Virtual Private Networks.
- **Remote Access:** Configure remote access VPN connections to the Astaro Security Gateway unit.

- **Logging & Reporting:** View log messages and statistics about the utilization of the Astaro Security Gateway unit and configure settings for logging and reporting.
- **Support:** Access to the support tools available at the Astaro Security Gateway unit.
- **Log Off:** Log out of the user interface.

Searching The Menu

Above the menu a search box is located. It lets you search the menu for keywords in order to easily find menus concerning a certain subject. The search function matches the name of menus but additionally allows for hidden indexed aliases and keywords.

As soon as you start typing into the search box, the menu automatically reduces to relevant menu entries only. You can leave the search box at any time and click the menu entry matching your prospect. The reduced menu stays intact, displaying the search results, until you click the reset button next to it.

Tip – You can set focus on the search box via the keyboard shortcut `CTRL+Y`.

2.2 Button Bar

The buttons in the upper right corner of WebAdmin provide access to the following features:

- **User/IP Address:** Shows the currently logged in user and the IP address from which WebAdmin is accessed.
- **Online Help:** Every menu, submenu, and tab has an online help screen that provides context-sensitive information and procedures related to the controls of the current WebAdmin page.

Note - The online help is updated by means of pattern updates and always describes the most recent version of Astaro Security Gateway, which might

cause minor inconsistencies between the online help and the currently installed firmware.

- **Reload:** To request the already displayed WebAdmin page again, always click the *Reload* button.

Note - Never use the reload button of the browser, because otherwise you will be logged out of WebAdmin.

2.3 Lists

Many pages in WebAdmin consist of lists. The buttons on the left of each list item enable you to edit, delete, or clone the item (for more information see section *Buttons and Icons*). To add an item to the list, click the *New ...* button, where "*...*" is a placeholder for the object being created (e.g., Interface). This opens a dialog box where you can define the properties of the new object.

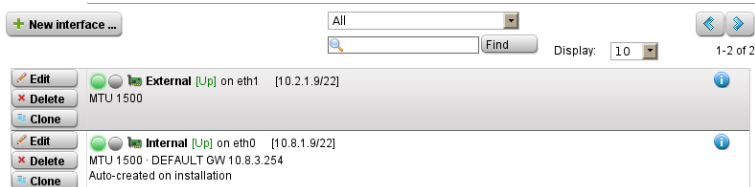


Figure 6 WebAdmin: Example of a List

Each list lets you sort all items according to their type. In addition, the search box lets you search for items specifically. Enter a search string and click *Find*.

Note that lists with more than ten items are split into several chunks, which can be browsed with Next (>) and Previous (<) buttons. However, you can change this setting on the [User Preferences](#) tab.

Tip - Clicking on the Info icon will show all configuration options in which the object is used.

2.4 Searching in Lists

A search box helps you to quickly reduce the number of items displayed in a list. This makes it much easier to find the object(s) you were looking for.

Important Facts

- A search in a list typically scans several fields for the search expression. A search in *Users & Groups* for example considers the username, the real name, the comment, and the first e-mail address. Generally speaking, the search considers all texts which you can see in the list, excluding details displayed via the Info icon.
- The list search is case-insensitive. That means it makes no difference whether you enter upper- or lower-case letters. The search result will contain matches both with upper-case and lower-case letters. Searching explicitly for upper-case or lower-case letters is not possible.
- The list search is based on Perl regular expression syntax (although case-insensitive). Typical search expressions known from e.g. text editors like `*` and `?` as simple wildcard characters or the AND and OR operators *do not* work in list search.

Examples

The following list is a small selection of useful search strings:

Simple string: Matches all words that contain the given string. For example, "inter" matches "Internet", "interface", and "printer".

Beginning of a word: Mark the search expression with a `\b` at the beginning. For example, `\binter` matches "Internet" and "interface" but not "printer".

End of a word: Mark the search expression with a `\b` at the end. For example, `http\b` matches "http" but not "https".

Beginning of an entry: Mark the search expression with a `^` at the beginning. For example, `^inter` matches "Internet Uplink" but not "Uplink Interfaces".

IP addresses: Searching for IP addresses, you need to escape dots with a backslash. For example, `192\.168` matches "192.168".

To search more generally for IP addresses use `\d` which matches any digit. `\d+` matches multiple digits in a row. For example, `\d+\.\d+\.\d+\.\d+` matches any IPv4 address.

Note - It makes sense to rather use an easy, fail-safe search expression which will lead to more matches than to rack your brains for a supposedly more perfect one which can easily lead to unexpected results and wrong conclusions.

You can find a detailed description of regular expressions and their usage in Astaro Security Gateway in the [Astaro Knowledgebase](#).

2.5 Dialog Boxes

Dialog boxes are special windows which are used by WebAdmin to prompt you for entering specific information. The example shows a dialog box for creating a new static route in the *Interfaces & Routing > Static Routing* menu.

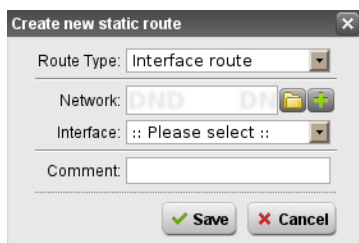


Figure 7 WebAdmin: Example of a Dialog Box




 




Each dialog box can consist of various widgets such as text boxes, checkboxes, and so on. In addition, many dialog boxes offer a drag-and-drop functionality, which is indicated by a special background reading *DND*. Whenever you encounter such a box, you can drag an object into the box. To open the object list from where to drag the objects, click the folder icon that is located right next to the text box. Depending on the configuration option, this opens the list of available networks, interfaces, users/groups, or services. Clicking the green plus icon opens a second dialog box letting you create a new definition. Some widgets that







 are not necessary for a certain configuration are grayed out. In some cases, however, they can still be edited, but having no effect.

Note - You may have noticed the presence of both *Save* and *Apply* buttons in WebAdmin. The *Save* button is used in the context of creating or editing objects in WebAdmin such as static routes or network definitions. It is always accompanied by a *Cancel* button. The *Apply* button, on the other hand, serves to confirm your settings in the back-end, thus promptly activating them.

2.6 Buttons and Icons

WebAdmin has some buttons and functional icons whose usage is described here.

Buttons	Meaning
 View	Shows a dialog window with detailed information on the object.
 Edit	Opens a dialog window to edit properties of the object.
 Delete	Deletes the object. If an object is still in use somewhere, there will be a warning. Not all objects can be deleted if they are in use.
 Clone	Opens a dialog window for creating an object with identical settings/properties. Helps you to create similar objects without having to type all identical settings over and over again.
Functional Icons	Meaning
	Info: Shows all configurations where the object is in use.
	Status: Enables or disables a function. Green when enabled, red when disabled, and amber when configuration is required before enabling.
	Folder: Has two different functions: (1) Opens an object list (see section below) on the left side where you can choose appropriate objects from. (2) Opens a dialog window to upload a file.
	Plus: Opens a dialog box to add a new object of the required type.

Functional Icons	Meaning
	Recycle Bin: Removes an object from the current configuration. The object is however not deleted.
	Import: Opens a dialog window to import text with more than one item or line. Enhances adding multiple items without having to type them individually, e.g. a large blacklist to the URL blacklist. Copy the text from anywhere and enter it using <code>CTRL+V</code> .
	Export: Opens a dialog window to export all existing items. You can select a delimiter to separate the items, which can either be new line, colon, or comma. To export the items as text, mark the whole text in the <i>Exported Text</i> field and press <code>CTRL+C</code> to copy it. You can then paste it into all common applications using <code>CTRL+V</code> , for example a text editor.
	Sort: By using the two arrows, you can sort list elements by moving an element down or up, respectively.
	PDF: Saves the current view of data in a PDF file and then opens a dialog window to download the created file.
	CSV: Saves the current view of data in a CSV (comma-separated values) file and then opens a dialog window to download the created file.

2.7 Object Lists

An object list is a drag-and-drop list which is temporarily displayed on the left side of WebAdmin, covering the main menu.

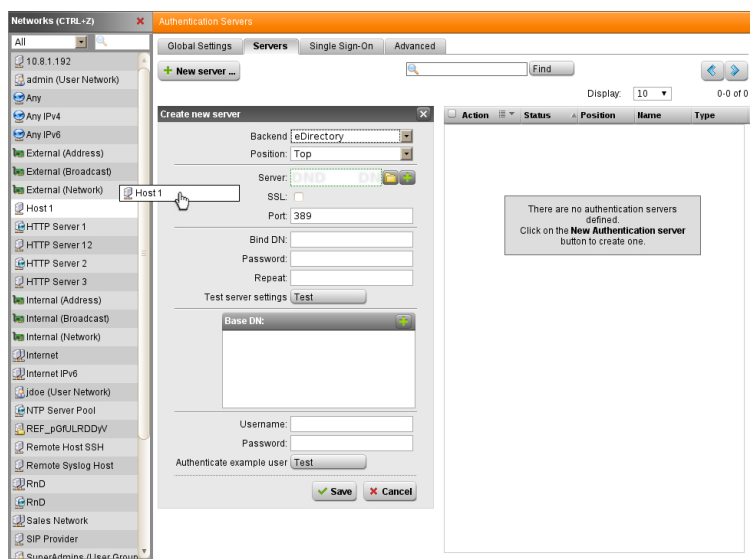


Figure 8 WebAdmin: Dragging an Object From the Object List *Networks*

An object list is opened automatically when you click on the folder icon (see section above), or you can open it manually via a keyboard shortcut (see *Management > WebAdmin Settings > User Preferences*).

The object list gives you quick access to WebAdmin objects like users/groups, interfaces, networks, and services to be able to select them for configuration purposes. Objects are selected simply by dragging and dropping them onto the current configuration.

According to the different existing object types, there are five different types of object lists. Clicking the folder icon will always open the type required by the current configuration.

3 Dashboard

The Dashboard graphically displays a snapshot of the current operating status of Astaro Security Gateway. By default, the Dashboard is updated at intervals of five seconds. You can configure the refresh rate from *Never* to *60 seconds*.

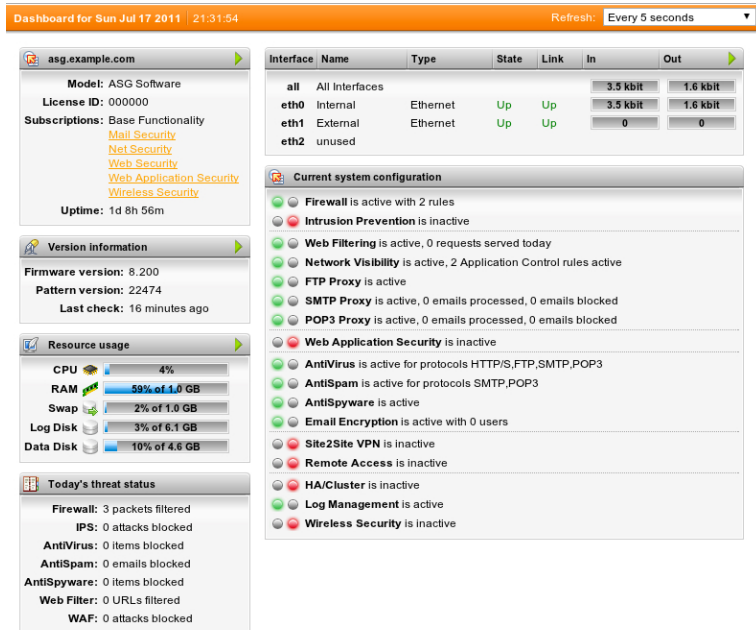


Figure 9 WebAdmin: Example Dashboard of ASG Software V8

The Dashboard displays by default when you log in to WebAdmin and shows the following information:

- **General Information:** Hostname, model, license ID, and uptime of the unit.
- **Version Information:** Information on the currently installed firmware and pattern versions as well as available updates.
- **Resource Usage:** Current system utilization, including the following components:

3 Dashboard

- The CPU utilization in percent
- The RAM utilization in percent
- The swap utilization in percent
- The amount of hard disk space consumed by the log partition in percent
- The amount of hard disk space consumed by the root partition in percent
- The status of the UPS (uninterruptible power supply) module (if available)
- **Today's Threat Status:** A counter for the most relevant security threats detected since midnight:
 - The total of dropped and rejected data packets for which logging is enabled
 - The total of blocked intrusion attempts
 - The total of blocked viruses (all proxies)
 - The total of blocked spam messages (SMTP/POP3)
 - The total of blocked spyware (all proxies)
 - The total of blocked URLs (HTTP/S)
 - The total of blocked web server attacks (WAF)
- **Interfaces:** Name and status of configured network interface cards. In addition, information on the average bit rate of the last 75 seconds for both incoming and outgoing traffic is shown. The values presented are obtained from bit rate averages based on samples that were taken at intervals of 15 seconds. Clicking the traffic icons of an interface opens a Flow Monitor in a new window. The Flow Monitor displays the traffic of the last ten minutes and refreshes automatically at short intervals. For more information on the Flow Monitor see chapter [*Flow Monitor*](#).
- **Current System Configuration:** Enabled/disabled representation of the most relevant security features:
 - **Firewall:** Information about the total of active firewall rules.
 - **Intrusion Prevention:** The intrusion prevention system (IPS) recognizes attacks by means of a signature-based IPS rule set.

3 Dashboard

- **Web Filter:** An application-level gateway for the HTTP/S protocol, featuring a rich set of web filtering techniques for the networks that are allowed to use its services.
- **Network Visibility:** Astaro's layer 7 application control allows to categorize and control network traffic.
- **FTP Proxy:** An application-level gateway for file transfers via the *File Transfer Protocol* (FTP).
- **SMTP Proxy:** An application-level gateway for messages sent via the *Simple Mail Transfer Protocol* (SMTP).
- **POP3 Proxy:** An application-level gateway for messages sent via the *Post Office Protocol 3* (POP3).
- **Web Application Security:** An application-level gateway to protect your web servers from attacks like cross-site scripting and SQL injection.
- **AntiVirus:** Protection of your network from web traffic that carries harmful and dangerous content such as viruses, worms, or other malware.
- **AntiSpam:** Detection of unsolicited spam e-mails and identification of spam transmissions from known or suspected spam purveyors.
- **AntiSpyware:** Protection from spyware infections by means of two different virus scanning engines with constantly updated signature databases and spyware filtering techniques that protects both inbound and outbound traffic.
- **E-mail Encryption:** Encryption, decryption, and digitally signing of e-mails using the S/MIME or OpenPGP standard.
- **Site2Site VPN:** Configuration of site-to-site VPN scenarios.
- **Remote Access:** Configuration of road warrior VPN scenarios.
- **HA/Cluster:** High availability (HA) failover and clustering, that is, the distribution of processing-intensive tasks such as content filtering, virus scanning, intrusion detection, or decryption equally among multiple cluster nodes.
- **Wireless Security:** Configuration of wireless networks and access points.

3.1 Flow Monitor

The Flow Monitor of Astaro Security Gateway is an application which gives quick access to information on network traffic currently passing the interfaces of the ASG. It can be easily accessed via the Dashboard by clicking one of the interfaces at the top right. By clicking *All Interfaces* the Flow Monitor displays the traffic accumulated on all active interfaces. By clicking a single interface, the Flow Monitor displays the traffic of this interface only.

Note – The Flow Monitor opens in a new browser window. As pop-up blockers are likely to block this window it is advisable to deactivate pop-up blockers for WebAdmin.

The Flow Monitor provides two views, a chart and a table, which are described in the next sections. It refreshes every five seconds. You can click the *Pause* button to stop refreshing. After clicking *Continue* to start refreshing again, the Flow Monitor updates to the current traffic information.

Chart View

The Flow Monitor chart displays the network traffic for the past ten minutes. The horizontal axis reflects time, the vertical axis reflects the amount of traffic while dynamically adapting the scale to the throughput.

At the bottom of the chart view a legend is located which refers to the type of traffic passing an interface. Each type of traffic has a different color so that it can be easily distinguished in the chart.

Note – The Flow Monitor displays much more differentiated information on traffic if Network Visibility is enabled (see chapter *Web Security > Application Control > Network Visibility*).

When hovering the mouse cursor on the chart a big dot will appear, which gives detailed information of this part of the chart. The dot is clung to the line of the chart. As you move the mouse cursor the dot follows. In case a chart has several lines, the dot switches between them according to where you move the mouse

cursor. Additionally, the dot changes its color depending on which line its information refer to, which is especially useful with lines running close to each other. The dot provides information on type and size of the traffic at the respective point of time.

Tabular View

The Flow Monitor table provides information on network traffic for the past five seconds:

#: Traffic is ranked based on its current bandwidth usage.

Application: Protocol or name of the network traffic if available. Unclassified traffic is a type of traffic unknown to the system. Clicking an application opens a window which provides information on the server, the port used, bandwidth used per server connection, and total traffic.

Clients: Number of client connections using the application. Clicking a client opens a window which provides information on the client's IP address, bandwidth usage per client connection, and total traffic. Note that with unclassified traffic the number of clients in the table may be higher than the clients displayed in the additional information window. This is due to the fact that the term "unclassified" comprises more than one application. So, there might be only one client in the information window but three clients in the table, the latter one actually being the connections of the single client to three different, unclassified applications.

Bandwidth Usage Now: The bandwidth usage during the last five seconds. Clicking a bandwidth opens a window which provides information on the download and upload rate of the application connection.

Total Traffic: The total of network traffic produced during the "lifetime" of a connection. Example 1: A download started some time in the past and still going on: the whole traffic produced during the time from the beginning of the download will be displayed. Example 2: Several clients using facebook: as long as one client keeps the connection open, the traffic produced by all clients so far adds up to the total traffic displayed.

Clicking a total traffic opens a window which provides information on the overall download and upload rate of the application connection.

Actions: Depending on the application type, there are actions available (except for unclassified traffic).

- **Blocking:** Click the red blocking symbol to block the respective application from now on. This will create a rule on the [Application Control Rules](#) page. This option is unavailable for applications relevant to the flawless operation of Astaro Security Gateway. WebAdmin traffic, for example, cannot be blocked as this might lead to shutting yourself out of WebAdmin. Unclassified traffic cannot be blocked, too.
- **Traffic shaping:** Click the orange-gray shaping symbol to enable traffic shaping of the respective application. A dialog window opens where you are asked to define the rule settings. Click *Save* when you are done. This will create a rule on the [Traffic Selectors](#) page. Traffic shaping is not available when viewing the *all interfaces* Flow Monitor as shaping works interface-based.

4 Management

This chapter describes how to configure basic system settings as well as the settings of the web-based administrative interface of Astaro Security Gateway, *WebAdmin*, among others. The *Overview* page shows statistics of the last WebAdmin sessions including possible changes. Click the *Show* button in the *Changelog* column to view the changes in detail.

The following topics are included in this chapter:

- [System Settings](#)
- [WebAdmin Settings](#)
- [Licensing](#)
- [Up2Date](#)
- [Backup/Restore](#)
- [User Portal](#)
- [Notifications](#)
- [Customization](#)
- [SNMP](#)
- [Central Management](#)
- [High Availability](#)
- [Shutdown/Restart](#)

4.1 System Settings

The tabs under *System Settings* allow you to configure basic settings of your gateway such as hostname, date, and time.

4.1.1 Organizational

Enter the name and location of your organization and an e-mail address to reach the person or group technically responsible for the operation of your Astaro Security Gateway. Note that this data is also used in certificates for IPsec, e-mail encryption and WebAdmin.

4.1.2 Hostname

Enter the hostname of your gateway as a *fully qualified domain name* (FQDN) into this field, for example `ASG.example.com`. A hostname may contain alphanumeric characters, dots, and hyphens. At the end of the hostname there must be a special designator such as `com`, `org`, or `de`. The hostname will be used in notification messages to identify the gateway. It will also appear in status messages sent by the Web Filter. Note that the hostname does not need to be registered in the DNS zone for your domain.

4.1.3 Time and Date

On your gateway, date and time should always be set correctly. This is needed both for getting correct information from the logging and reporting systems and to assure interoperability with other computers on the Internet.

Usually, you do not need to set the time and date manually. By default, automatic synchronization with public Internet time servers is enabled (see section *Synchronize Time with Internet Server* below).

In the rare case that you need to disable synchronization with time servers, you can change the time and date manually. However, when doing so, pay attention to the following caveats:

- Never change the system time from standard time to daylight saving time or vice versa. This change is always automatically covered by your time zone settings even if automatic synchronization with time servers is disabled.
- Never change date or time manually while synchronization with time servers is enabled, because automatic synchronization would typically undo your change right away. In case you must set the date or time manually,

remember to first remove all servers from the *NTP Servers* box in the *Synchronize Time with Internet Server* section below and click *Apply*.

- After manually changing the system time, wait until you see the green confirmation message, stating that the change was successful. Then reboot the system (*Management > Shutdown/Restart*). This is highly recommended as many services rely on the fact that time is changing continuously, not abruptly. Jumps in time therefore might lead to malfunction of various services. This advice holds universally true for all kind of computer systems.
- In rare cases, changing the system time might terminate your WebAdmin session. In case this happens, log in again, check whether the time is now correctly set and restart the system afterwards.

If you operate multiple interconnected gateways that span several time zones, select the same time zone for all devices, for example UTC (Coordinated Universal Time)—this will make log messages much easier to compare.

Note that when you manually change the system time, you will encounter several side-effects, even when having properly restarted the system:

- **Turning the clock forward**
 - Time-based reports will contain no data for the skipped hour. In most graphs, this time span will appear as a straight line in the amount of the latest recorded value.
 - Accounting reports will contain values of 0 for all variables during this time.
- **Turning the clock backward**
 - There is already log data for the corresponding time span in time-based reports.
 - Most diagrams will display the values recorded during this period as compressed.
 - The elapsed time since the last pattern check (as displayed on the Dashboard) shows the value "never", even though the last check was in fact only a few minutes ago.
 - Automatically created certificates on the ASG may become invalid because the beginning of their validity periods would be in the future.

- Accounting reports will retain the values recorded from the future time. Once the time of the reset is reached again, the accounting data will be written again as normal.

Because of these drawbacks the system time should only be set once when setting up the system with only small adjustments being made thereafter. This especially holds true if accounting and reporting data needs to be processed further and accuracy of the data is important.

Set Time And Date

To configure the system time manually select date and time from the respective drop-down lists. Click *Apply* to save your settings.

Set Timezone

To change the system's time zone, select an area or a time zone from the drop-down list. Click *Apply* to save your settings.

Synchronize Time With Internet Server

Changing the time zone does not change the system time, but only how the time is represented in output, for example in logging and reporting data. Thus, it does not disrupt services and does not require a system reboot afterwards. Still, it will affect logging and reporting data similar to changing the time.

To synchronize the system time using a timeserver, select one or more NTP servers. Click *Apply* after you have finished the configuration.

The screenshot shows the 'System Settings' window with the 'Time and Date' tab selected. The window has a title bar 'System Settings' and four tabs: 'Organizational', 'Hostname', 'Time and Date', and 'Shell Access'. The 'Time and Date' tab contains three sections: 'Set Date and Time', 'Set Timezone', and 'Synchronize time with internet server'. The 'Set Date and Time' section has dropdowns for Date (2 August 2011) and Time (16:08), with an 'Apply' button and explanatory text. The 'Set Timezone' section has a dropdown for 'Europe / Berlin' and an 'Apply' button. The 'Synchronize time with internet server' section has a list of 'NTP Servers' with 'NTP Server Pool' selected, a 'Test Configured Servers' button, and an 'Apply' button.

System Settings

Organizational Hostname **Time and Date** Shell Access Reset Configuration or Passwords

Set Date and Time

Date: 2 August 2011
Time: 16 08

Set the clock of the system. This should be the date, time and time zone of the system's location, which may be different from your local time.

After manually changing the date or time, it is recommended to restart the system to ensure continued reliable operation of all services.

✓ Apply

Set Timezone

Time Zone: Europe / Berlin

Set the time zone of the system's location, which may be different from your local time.

✓ Apply

Synchronize time with internet server

NTP Servers:

- NTP Server Pool
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND
- DND

Test Configured Servers

Select one or more NTP (Network Time Protocol) Servers. The system will then synchronize its time and date with these servers.

✓ Apply

Figure 10 System Settings: Configuring Time and Date

NTP Servers: The *NTP Server Pool* is selected by default. This network definition is linked to the big virtual cluster of public timeservers of the *pool.ntp.org* project. In case your Internet service provider operates NTP servers for customers and you have access to these servers, it is recommended to remove the *NTP Server Pool* and use your provider's servers instead. When choosing your own or your provider's servers, using more than one server is useful to improve precision and reliability. The usage of three independent servers is almost always sufficient. Adding more than three servers rarely results in additional improvements, while increasing the total server load. Using both *NTP Server Pool* and your own or your provider's servers is not recommended because it will usually neither improve precision nor reliability.

Test Configured Servers: Click this button if you want to test whether a connection to the selected NTP server(s) can be established from your device and whether it returns usable time data. This will measure the time offset between your system and the servers. Offsets should generally be well below one second if

your system is configured correctly and has been operating in a stable state for some time.

Right after enabling NTP or adding other servers, it is normal to see larger offsets. To avoid large time jumps, NTP will then slowly skew the system time, such that eventually, it will become correct without any jumping. In that situation, please be patient. In particular, in this case, do *not* restart the system. Rather, return to check about an hour later. If the offsets decrease, all is working as it should.

4.1.4 Shell Access

Secure Shell (SSH) is a command-line access mode primarily used to gain remote shell access to the gateway. It is typically used for low-level maintenance or troubleshooting. To access this shell you need an SSH client, which usually comes with most Linux distributions.

Allowed Networks

Use the *Allowed Networks* control to restrict access to this feature to certain networks only. Networks listed here will be able to connect to the SSH service.

Authentication

In this section you can define an authentication method for SSH access and the strictness of access. The following authentication methods are available:

- Password (default)
- Public key
- Password and public key

To use *Public Key Authentication* you need to upload the respective public key(s) into the field *Authorized Keys For Loginuser* for each user allowed to authenticate via their public key(s).

Allow Root Login: You can allow SSH access for the root user. This option is disabled by default as it leads to a higher security risk. When this option is enabled, the root user is able to login via their public key. Upload the public key(s) for the root user into the field *Authorized Keys For Root*.

Click *Apply* to save your settings.

Shell User Passwords

Enter passwords for the default shell accounts `root` and `loginuser`. To change the password for one out of these two accounts only, just leave both input boxes for the other account blank.

Note - To enable SSH shell access, passwords must be set initially. In addition, you can only specify passwords that adhere to the password complexity settings as configured on the *Definitions & Users > Authentication Servers > Advanced* tab. That is, if you have enabled complex passwords, shell user passwords must meet the same requirements.

SSH Daemon Listen Port

This option lets you change the TCP port used for SSH. By default, this is the standard SSH port 22. To change the port, enter an appropriate value in the range from 1024 to 65535 in the *Port Number* box and click *Apply*.

4.1.5 Reset Configuration or Passwords

The options on the *Reset Configuration or Passwords* tab let you delete the passwords of the shell users. In addition, you can execute a factory reset.

Reset System Passwords: Executing this function will reset the passwords of the following users:

- `root` (shell user)
- `loginuser` (shell user)
- `admin` (predefined administrator account)

In addition, to halt the system, select the *Shutdown System Afterwards* option.

Security Note - The next person connecting to the WebAdmin will be presented an *Admin Password Setup* dialog window. Thus, after resetting the passwords, you should usually quickly log out, reload the page in your browser, and set a new admin password.

Besides, shell access will not be possible anymore until you set new shell passwords on the *Management > System Settings > [Shell Access](#)* tab.

Factory Reset: This function resets the device back to the factory default configuration. The following data will be deleted:

- System configuration
- Web Filter cache
- Logs and reporting data
- Databases
- Update packages
- Licenses
- Passwords
- High availability status

However, the version number of Astaro Security Gateway Software will remain the same, that is, all firmware and pattern updates that have been installed will be retained.

Note - Astaro Security Gateway will shut down once a factory reset has been initiated.

4.2 WebAdmin Settings

The tabs under *Management > WebAdmin Settings* allow you to configure basic WebAdmin settings such as access control, the TCP port, user preferences, and the WebAdmin language, among other things.

4.2.1 General

On the *WebAdmin Settings > General* tab you can configure the WebAdmin language and basic access settings.

WebAdmin Language

Select the language of WebAdmin. Note that this setting is global and applies to all users.

WebAdmin Access Configuration

Here you can configure which users and/or networks should have access to WebAdmin.

Allowed Administrators: Astaro Security Gateway can be administered by multiple administrators simultaneously. In the *Allowed Administrators* box you can specify which users or groups should have unlimited read and write access to the WebAdmin interface. By default, this is the group of *SuperAdmins*.

Allowed Networks: The *Allowed Networks* box lets you define the networks that should be able to connect to the WebAdmin interface. For the sake of a smooth installation of the gateway, the default is *Any*. This means that the WebAdmin interface can be accessed from everywhere. Change this setting to your internal network(s) as soon as possible. The most secure solution, however, would be to limit the access to the gateway to only one administrator PC through HTTPS.

Log Access Traffic: If you want to log all WebAdmin access activities in the fire-wall log, select the *Log Access Traffic* checkbox.

4.2.2 Access Control

On the *WebAdmin Settings* > *Access Control* tab you can create WebAdmin roles for specific users. This allows for a fine-grained definition of the rights a WebAdmin user can have.

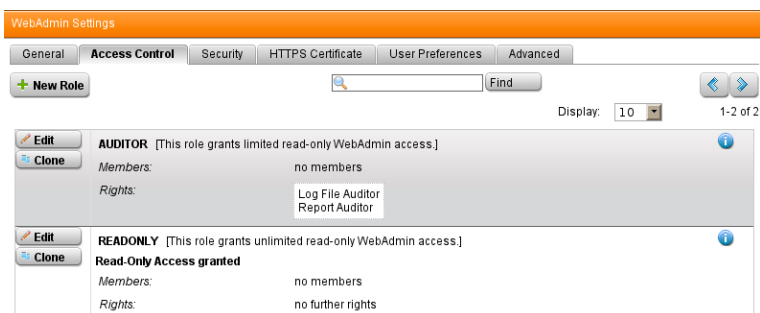


Figure 11 WebAdmin Settings: Configuring Access Control

There are two user roles predefined:

Auditor: Users having this role can view logging and reporting data.

Readonly: Users having this role can view everything in WebAdmin without being able to edit, create, or delete anything.

To assign users or groups one of these roles, click the *Edit* button and add the respective user(s) or group(s) to the *Members* box.

You can create further roles, according to your security policies. Do the following:

1. **On the Access Control tab, click New Role.**

The *Create Role* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this definition.

Members: Add users and groups to this box who are to have this role.

Grant Read-Only Access (optional): Select this checkbox to grant read-only access to all areas of WebAdmin to the given members.

Rights: This box contains different rights levels for the different functions of WebAdmin: auditor and manager. A manager has full administration rights for the respective function(s), whereas an auditor has only viewing rights. You can choose one or more rights by selecting the respective checkbox in front of a right.

Example: You could give the user Jon Doe manager rights for Mail Security and additionally select the checkbox *Grant Read-Only Access*. He would then be able to change settings in the Mail Security section and view all other areas of WebAdmin without being able to change anything there.

Comment (optional): Add a description or other information.

3. **Click Save.**

Your settings will be saved.

To either edit or delete a role, click the corresponding buttons. Note that the *Auditor* and *Readonly* roles cannot be deleted.

4.2.3 Security

Block Password Guessing: This function can be used to prevent password guessing. After a configurable number of failed login attempts (default: 3), the IP address trying to gain WebAdmin access will be blocked for a configurable amount

Networks listed in the *Never Block Networks* box are exempt from this check.

4.2.4 HTTPS Certificate

On the *Management > WebAdmin Settings > HTTPS Certificate* tab you can import the WebAdmin CA certificate into your browser, regenerate the WebAdmin certificate, or choose a signed certificate to use for WebAdmin and User Portal.

During the initial setup of the WebAdmin access you have automatically created a local CA certificate on the gateway. The public key of this CA certificate can be installed into your browser to get rid of the security warnings when accessing the WebAdmin interface.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., `https://192.168.2.100`) to the Trusted Sites, which are configured in IE's *Internet Options > Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

To import the CA certificate, proceed as follows:

1. **On the *HTTPS Certificate* tab, click *Import CA Certificate*.**

The public key of the CA certificate will be exported.

You can either save it to disk or install it into your browser.

2. **Install the certificate** (optional).

The browser will open a dialog box letting you choose to install the certificate immediately.

Note - Due to different system times and time zones the certificate might not be valid directly after its creation. In this case, most browsers will report that the certificate has expired, which is not correct. However, the certificate will automatically become valid after a maximum of 24 hours and will stay valid for 27 years.

Re-generate WebAdmin Certificate

The WebAdmin certificate refers to the hostname you have specified during the initial login. If the hostname has been changed in the meantime, the browser will

display a security warning. To avoid this, you can create a certificate taking the new hostname into account. For that purpose, enter the hostname as desired and click *Apply*. Note that due to the certificate change, to be able to continue working in WebAdmin, you probably need to reload the page via your web browser, accept the new certificate, and log back into WebAdmin.

Choose WebAdmin/User Portal Certificate

If you do not want to import the CA certificate but instead use your own signed certificate for WebAdmin and User Portal, you can select it here. However, for the certificate to be selectable from the drop-down list, you need to upload it first on the *Remote Access > Certificate Management > Certificates* tab in PKCS#12 format, containing the certificate, its CA and its private key. To use the uploaded certificate, select it from the *Certificates* drop-down list and click *Apply*.

4.2.5 User Preferences

On the *Management > WebAdmin Settings > User Preferences* tab you can configure some user preferences such as global shortcuts and items per page for the currently logged in user.

WebAdmin Settings

General Access Control Security HTTPS Certificate **User Preferences** Advanced

WebAdmin shortcuts configuration

Users/Groups: CTRL V Here you can specify shortcuts for each draggable-overlay

Interfaces: CTRL C

Networks: CTRL Z

Set Focus on Searchbox: CTRL Y

Services: CTRL X

Reset to defaults

Apply

Table pager options

Items per page: 10 Here you can specify how many items per page should be shown in the tables

Apply

Astaro News Feed

☒ Disable Astaro News Feed Here you can enable or disable the Astaro News Feed that is shown in the dashboard

Apply

Flash based reporting

☒ Enable Flash based reporting Here you can enable or disable the Flash based reporting

Apply

Figure 12 WebAdmin Settings: Configuring User Preferences

WebAdmin Shortcuts Configuration

Here you can configure keyboard shortcuts to open and close the drag-and-drop object lists used in many configurations (for more information see *WebAdmin > Object List*) or to set the cursor focus on the menu search box (see also *WebAdmin > WebAdmin Menu*). Use the drop-down list to select a different modifier key and the text box to enter a different character. You can also turn off the keyboard shortcut by selecting *Off* from the drop-down list.

If you want to return to the default settings, click the *Reset to Defaults* button. Click *Apply* to save your settings.

Table Pager Options

Here you can globally define the pagination of tables for WebAdmin, i.e. how many items are displayed per page. Click the drop-down list and select a value. Click *Apply* to save your settings.

Astaro News Feed

Astaro News Feed, if enabled, is a small section on the Dashboard where news about Astaro and its products are announced. It is disabled by default. To enable it, unselect the checkbox *Disable Astaro News Feed*. Click *Apply* to save your settings.

Flash-based Reporting

By default, graphs in the reporting sections of Astaro Security Gateway are displayed in Adobe® Flash® animations. You need to have a Flash player plugin installed in your browser to be able to view those reporting graphs. If you do not have a Flash player plugin installed or if you do not want to use Flash, disable Flash-based reporting by unselecting the checkbox *Enable Flash-based Reporting*. The graphs will subsequently be displayed as static images. Note, however, that you will lose some reporting display functionality when Flash-based reporting is disabled. Click *Apply* to save your settings.

4.2.6 Advanced

WebAdmin Idle Timeout

Log Out After: In this field you can specify the period of time (in seconds) how long a WebAdmin session can remain idle before the administrator is forced to log in again. By default, the idle timeout is set to 300 seconds. The range is from 60 to 86,400 seconds.

Log Out on Dashboard: By default, when you have opened the *Dashboard* page of WebAdmin, the auto logout function is disabled. You can, however, select this option to enable the auto logout function for Dashboard, too.

WebAdmin TCP Port

By default, port 4444 is used as WebAdmin TCP port. In the *TCP Port* box you can enter either 443 or any value between 1024 and 65535. However, certain ports are reserved for other services. In particular, you can never use port 10443, and you cannot use the same port you are using for the User Portal or for SSL remote access. Note that you must add the port number to the IP address (separated by a colon) in the browser's address bar when accessing WebAdmin, for example `https://192.168.`

Terms of Use

Your company policies might demand that users accept terms of use when they want to access WebAdmin. Select the checkbox *Display "Terms of Use" After Login* to enforce that users must accept the terms of use each time they log into WebAdmin. Users will then be presented the terms of use after having logged in. If they do not accept them they will be logged out again.

You can change the terms of use text according to your needs. Click *Apply* to save your settings.

4.3 Licensing

The availability of certain features on Astaro Security Gateway is defined by licenses and subscriptions, i.e. the licenses and subscriptions you have purchased with your gateway enable you to use certain features and others not.

In October 2009, Astaro introduced a new licensing model called *OnDemand Licensing* which is going to bit by bit replace the *Classic Licensing*. Classic licenses you have already purchased will, however, stay valid!

4.3.1 How To Obtain A License

Once you have received the activation keys by e-mail after purchasing an Astaro license, you must use these keys in order to create your license or upgrade an existing license. To activate a license, you have to log in to the MyAstaro Portal and visit the license management page. At the top of the page is a form where you can cut and paste the activation key from the e-mail into this field.

MyAstaro Login

Enter your credentials below. If you have forgotten your password, please click on the appropriate button and a new password will be mailed to your inbox.

Your email address:

Password:

Sign up to MyAstaro - Free Membership

Join today and get instant access. The MyAstaro portal allows you to manage your Astaro product licenses and support cases.

Certified partners have exclusive access to the enhanced partner area. For partner access, please either contact your account master or email webmaster@astaro.com. If you are interested in becoming an Astaro partner, then [contact us](#).

webmaster | Privacy | Legal | Contact © 2011 by Astaro GmbH & Co. KG - a Sophos company

Figure 13 MyAstaro Portal

Another form appears asking you to fill in information about the reseller you purchased the license from as well as your own details. The portal tries to pre-fill as much of this form as possible. Also, Astaro collects the ASG hardware serial number on this form if appropriate. After submitting this form, your license is created, and you are forwarded to the license detail page to download the license file.

To actually use the license, you must download the license file to your hard drive and then log in to your WebAdmin installation. In WebAdmin, navigate to the *Management > Licensing > Installation* tab and use the upload function to find the license text file on your hard drive. Upload the license file, and WebAdmin will process it to activate any subscriptions and other settings that the license outlines.

Note - The activation key you received by e-mail cannot be imported into WebAdmin. This key is only used to activate the license. Only the license file can be imported to the ASG.

4.3.2 OnDemand Licensing

Astaro's OnDemand licensing model is easier and much more flexible than the classic licensing model. First, there is a base license, similar to the free home user

license of the classic licensing model, providing basic functions for free—and not anymore for home users only but also for business users. Second, there are three kinds of purchase subscriptions:

- Net Security
- Web Security
- Mail Security

Those can be purchased separately or in combination. Each of the subscriptions enables certain features of the product. The table below gives you an overview which features are enabled with which subscription.

Feature	Base License	Net	Web	Mail	WAS	WS
Management (Back-up, Notifications, SNMP, ACC, ...)	✓					
Local Authentication (Users, Groups)	✓					
Basic Networking (Static Routing, DHCP, DNS, Auto QoS, NTP, ...)	✓					
Firewall/NAT (DNAT, SNAT, ...)	✓					
PPTP & L2TP Remote Access	✓					
Local Logging, standard executive reports	✓					
Intrusion Prevention (Patterns, DoS, Flood, Portscan ...)		✓				
IPsec & SSL Site-to-site VPN, IPsec & SSL Remote Access		✓				

Feature	Base License	Net	Web	Mail	WAS	WS
Advanced Networking (Link Aggregation, link balancing, Policy Routing, OSPF, Multicast, custom QoS, Server Load Balancing, Generic Proxy ...)		✓	(✓)	(✓)		
User Portal		✓	✓	✓		
High Availability		✓	✓	✓		
Remote Auth (AD, eDir, RADIUS, ...)		✓	✓	✓		
Remote Logging, advanced executive reports (archiving, configuration)		✓	✓	✓		
Basic Web Filtering & FTP Proxy			✓			
Web & FTP malware filtering			✓			
Application Control			✓			
Basic SMTP Proxy, Quarantine Report, Mail Manager				✓		
SMTP & POP3 malware filtering				✓		
Web Application Security					✓	
Wireless Security						✓

For more detailed information on subscriptions and their feature set please refer to your certified Astaro Partner or the [Astaro homepage](#).

Up2Dates

Each subscription enables full automatic update support, i.e. you will be automatically informed about new firmware updates. Also, firmware and pattern updates can be downloaded (and installed) automatically.

A base license without any subscriptions supports only limited automatic updates: solely pattern updates such as online help updates and the like will continue to be downloaded and installed automatically. You will, however, not be informed about available firmware updates, and the firmware updates have to be downloaded manually. Announcements for new firmware updates can be found in the [Astaro Up2Date Blog](#).

Support and Maintenance

The base license comes with *Web Support*. You can use the [Astaro Support Forum](#) and the [Astaro Knowledgebase](#).

As soon as you purchase one of the subscriptions you will be automatically upgraded to *Standard Support*, where you can additionally open a support case in [MyAstaro Portal](#) or contact your certified Astaro Partner.

There is also the possibility to purchase a *Premium Support* subscription, which offers 24/7 support with an Astaro Engineer being your contact person.

4.3.3 Classic Licensing

The classic licensing model is going to be replaced by the OnDemand licensing model described above. Classic licensing is explained here for compatibility reasons and because it is not going to be disabled overnight but to be replaced merely bit by bit.

Astaro Security Gateway ships with a 30-day trial license with all features enabled. After expiration, you must install a valid license to further operate Astaro Security Gateway. All licenses (including free home use licenses) are created in the [MyAstaro Portal](#).

Subscriptions

Astaro's Web Filtering functionality, available through an optional subscription package for Astaro Security Gateway, provides content filtering, antivirus, and spyware protection for HTTP/S as well as antivirus capabilities and file extension scanning for FTP.

If the Web Filtering subscription is not available, the following tabs in WebAdmin are disabled:

- *Web Security > HTTP/S > AntiVirus/Malware*
- *Web Security > HTTP/S > URL Filtering*
- *Web Security > HTTP/S > URL Filtering Categories*
- *Web Security > HTTP/S Profiles > Filter Actions*
- *Web Security > FTP > AntiVirus*

Astaro's Mail Security functionality is available through two separate subscriptions for Astaro Security Gateway solutions: Mail Filtering and Mail Encryption. Mail Filtering provides antispam, antivirus, and phishing protection. Mail Encryption, on the other hand, provides OpenPGP and S/MIME encryption and digital signatures for SMTP e-mails.

If the Mail Filtering subscription is not available, the following tabs in WebAdmin are disabled:

- *Mail Security > SMTP > AntiVirus*
- *Mail Security > SMTP > AntiSpam*
- *Mail Security > POP3 > AntiVirus*
- *Mail Security > POP3 > AntiSpam*
- All tabs of the *Mail Security > Encryption* menu

Note - Customers, who in the past purchased either the Mail Filtering or the Mail Encryption subscription, benefit from the subscription merging in that they now can use the features of both subscriptions.

In addition, the following functions are disabled:

- *Mail Security > SMTP > Relaying > Content Scan*
- *Mail Security > SMTP > Advanced > BATV Secret*
- *Mail Security > SMTP > Advanced > Max Message Size*
- *Mail Security > SMTP Profiles*

To indicate that the current license does not cover a subscription feature, a warning message is displayed above the tab.

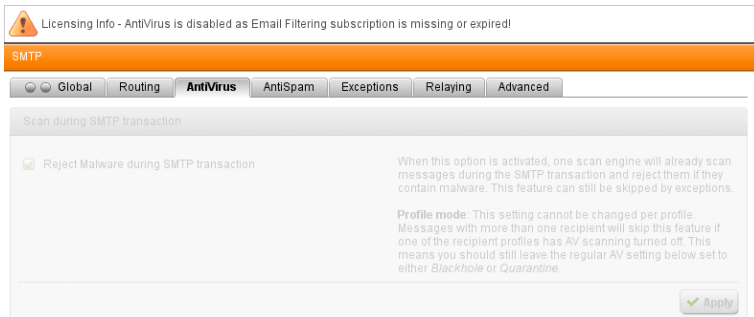


Figure 14 Licensing: Subscription Warning Message

4.3.4 Overview

The Overview tab provides detailed information about your license and is divided into several areas:

- **Base License:** Shows basic license parameters such as owner, ID, or expiration date.
- **Network Security, Mail Security, Web Security, Web Application Security, Wireless Security:** These sections show information for subscriptions, such as whether they have been purchased and are therefore enabled, their expiration date, and a short description of the features they provide.
- **Support Services:** Shows the support level plus the date until it is valid.

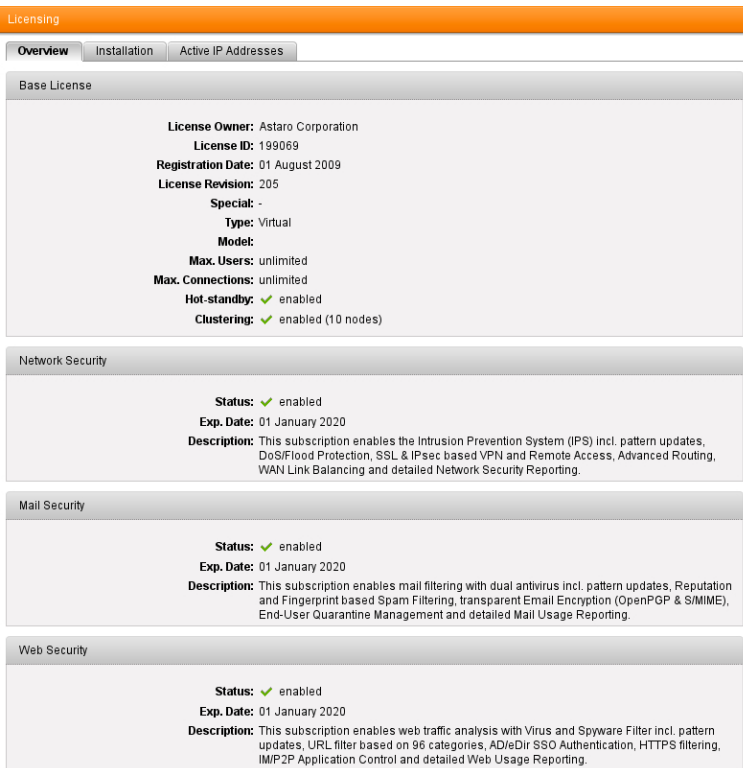


Figure 15 Licensing: Overview (OnDemand Licensing)

4.3.5 Installation

On the *Management > Licensing > Installation* tab you can upload and install a new license.

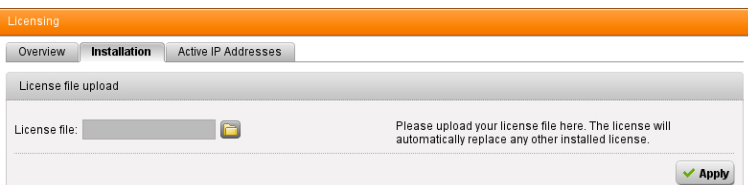


Figure 16 Licensing: Installing a License

To install a license, proceed as follows:

1. **Open the *Upload File* dialog box.**

Click the folder icon next to the *License File* box.

The *Upload File* dialog box opens.

2. **Select the license file.**

Browse to the directory where your license file resides.

Select the license file you want to upload.

3. **Click *Save*.**

Your license file will be uploaded.

4. **Click *Apply*.**

Your license will be installed. Note that the new license will automatically replace any other license already installed.

The installation of the license will take approximately 60 seconds.

4.3.6 Active IP Addresses

If you do not have a license allowing unlimited users (IP addresses), this tab displays information on IP addresses covered by your license. IP addresses that exceed the scope of your license are listed separately. If the limit is exceeded you will receive an e-mail notification at regular intervals.

Note - IP addresses not seen for a period of seven days will automatically be removed from the license counter.

4.4 Up2Date

The *Management > Up2Date* menu allows the configuration of the update service of Astaro Security Gateway. Regularly installed updates keep your gateway up-to-date with the latest bug-fixes, product improvements, and virus patterns. Each update is digitally signed by Astaro—any unsigned or forged update will be rejected.

There are two types of updates available:

- **Firmware updates:** A firmware update contains bug-fixes and feature enhancements for Astaro Security Gateway Software.
- **Pattern updates:** A pattern update keeps the antivirus, antispam, intrusion prevention definitions as well as the online help up-to-date.

In order to download Up2Date packages, the gateway opens a TCP connection to the update servers on port 443—allowing this connection without any adjustment to be made by the administrator. However, if there is another firewall in between, you must explicitly allow the communication via the port 443 TCP to the update servers.

4.4.1 Overview

The *Management > Up2Date > Overview* tab provides a quick overview whether your system is up-to-date. From here, you can install new firmware and pattern updates.



Figure 17 Up2Date: Overview Page

Up2Date Progress

This section is only visible when you have triggered an installation process. Click the button *Watch Up2Date Progress in New Window* to monitor the update progress. If your browser does not suppress pop-up windows, a new window showing

the update progress will be opened. Otherwise you will have to explicitly allow the pop-up window.

Note - A backup will be sent to the standard backup e-mail recipients before an installation process is started.

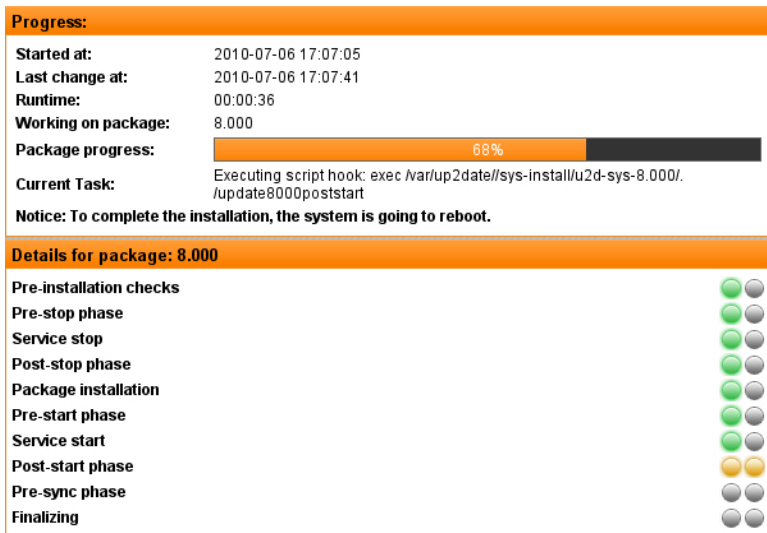


Figure 18 Up2Date: Progress Window

Firmware

The *Firmware* section shows the currently installed firmware version. If an update package is available, a button *Update to Latest Version Now* is displayed. Additionally, you will see a message in the *Available Firmware Up2Dates* section. You can directly download and install the most recent update from here. Once you have clicked *Update To Latest Version Now*, you can watch the update progress in new a window. For this, click the *Reload* button of WebAdmin.

Available Firmware Up2Dates

If you have selected *Manual* on the *Configuration* tab, you can see a *Check for Up2Date Packages Now* button in this section, which you can use to download firmware Up2Date packages manually. If there are more than one Up2Dates available, you can select which one you are going to install. You can use the *Update to Latest Version Now* button in the *Firmware* section if you want to install the most recent

version directly.

There is a *Schedule* button available for each Up2Date with which you can define a specific date and time where an update is to be installed automatically. To cancel a scheduled installation, click *Cancel*.

A note on "implicit" installations: There can be a constellation, where you schedule an Up2Date package which requires an older Up2Date package to be installed first. This Up2Date package will be automatically scheduled for installation before the actual Up2Date package. However, you can define a specific time for this package, too, but you cannot prevent its installation.

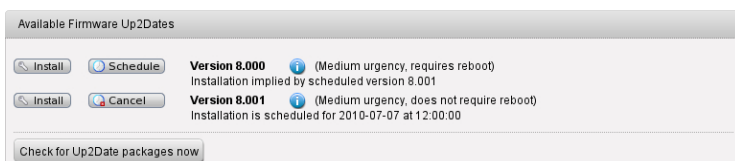


Figure 19 Up2Date: Implicit Installation of Up2Date Packages

Pattern

The *Pattern* section shows the current version of the installed patterns. If you have selected *Manual* on the *Configuration* tab, you can see a *Update Patterns Now* button. Use this button to download and install new patterns if available.

Note - The current pattern version does not need to be identical with the latest available pattern version in order for the ASG unit to be working correctly. A deviation between the current and the latest available pattern version might occur when new patterns are available, which, however, do not apply to the unit you are using. What patterns are downloaded is dependent on your settings and hardware configuration. For example, if you do not use the intrusion prevention feature of Astaro Security Gateway, newly available IPS patterns will not be installed, thus increasing the divergence between the currently installed and the latest available pattern version.

4.4.2 Configuration

By default, new update packages are automatically downloaded to the gateway.

Firmware Download Interval

This option is set to 15 minutes by default, that is Astaro Security Gateway checks every 15 minutes for available firmware updates. Astaro Security Gateway will automatically download (but not install) available firmware update packages. The precise time when this happens is distributed randomly within the limits of the selected interval. You can change the interval up to *Monthly* or you can disable automatic firmware download by selecting *Manual* from the drop-down list. If you select *Manual* you will find a *Check for Up2Date Packages Now* button on the *Overview* tab.

Pattern Download/Installation Interval

This option is set to 15 minutes by default, that is Astaro Security Gateway checks every 15 minutes for available pattern updates. Astaro Security Gateway will automatically download and install available pattern update packages. The precise time when this happens is distributed randomly within the limits of the selected interval. You can change the interval up to *Monthly* or you can disable automatic pattern download and installation by selecting *Manual* from the drop-down list. If you select *Manual* you will find a *Update Patterns Now* button on the *Overview* tab.

4.4.3 Advanced

The *Management > Up2Date > Advanced* tab lets you configure further Up2Date options such as selecting a parent proxy or Up2Date cache for your gateway.

Note – Update packages can be downloaded from [Astaro's FTP server](#).

Manual Up2Date Package Upload: If your gateway does not have direct access to the Internet or an Up2Date cache to download new update packages directly, you can upload the update package manually. To do so, proceed as follows:

1. **Open the *Upload File* dialog box.**

Click the folder icon next to the *Up2Date File* box.

The *Upload File* dialog box opens.

2. **Select the update package.**

Click *Browse* in the *Upload File* dialog box and select the update package you want to upload.

3. **Click *Start Upload*.**

The update package will be uploaded to the gateway.

4. **Click *Apply*.**

Your settings will be saved.

Parent Proxy

A parent proxy is often required in those countries that require Internet access to be routed through a government-approved proxy server. If your security policy requires the use of a parent proxy, you can set it up here by selecting the host definition and port.

Use a Parent Proxy: Select the checkbox to enable parent proxy use. Enter the hostname and the port of the proxy.

This Proxy Requires Authentication: If the parent proxy requires authentication, enter username and password here.

If a parent proxy is configured, Astaro Security Gateway fetches both firmware and pattern Up2Dates from it.

4.5 Backup/Restore

The backup restoring function allows you to save the settings of the gateway to a file on a local disk. This backup file allows you to install a known good configuration on a new or misconfigured system.

Be sure to make a backup after every system change. This will ensure that the most current settings are always available. In addition, keep your backups in a safe place, as it also contains security-relevant data such as certificates and cryptographic keys. After generating a backup, you should always check it for readability. It is also a good idea to use an external program to generate MD5 checksums, for this will allow you to check the integrity of the backup later on.

4.5.1 Backup/Restore

On the *Management > Backup/Restore > Backup/Restore* tab you can create backups, import backups, as well as restore, download, send, and delete existing backups.

Available Backups

This section is only visible if at least one backup has been created before, either by the automatic backup function or manually (see section *Create Backup*).

All backups are listed giving date and time of their creation, their ASG version number, the user who created it, and the comment.

You can decide whether to restore, download, send, or delete a backup.

- **Restore:** Replaces the current system settings by the settings stored in a backup. You will have to login again afterwards. If the selected backup contains all data you can login directly. If the selected backup does not contain all data (see section *Create Backup*) you will have to enter the necessary data during the login procedure. If only the host data has been removed in the selected backup you can add an additional administrative e-mail address if you wish. It will be used where no recipient is given and as additional address where multiple recipients are possible.
 - Restoring backups from USB flash drive: You can also restore unencrypted backup files (file extension `abf`) from a FAT formatted USB flash drive such as a simple USB stick. To restore a backup from a USB flash drive, copy the backup file to the USB flash drive and plug the device into Astaro Security Gateway prior to boot up. If several backup files are stored on the device, the lexicographically first file will be used (numbers precede letters). For example, suppose the backup files `gateway_backup_2007-04-17.abf` and `2006-03-20_gateway_backup.abf` are both stored on the USB flash drive. During the boot up, the second file will be used because it begins with a number, although it is much older than the other one.

In addition, a lock file is created after the successful recovery of a backup, preventing the installation of the same backup over and over again

while the USB flash drive is still being plugged in. However, if you want to install a previous backup once again, you must first reboot with no USB flash drive plugged in. This will delete all lock files. When you now boot with the USB flash drive plugged in again, the same backup can be installed.

- **Download:** Opens a dialog window where you can decide to download the file encrypted (provide password) or unencrypted. Click *Download Backup*. You are prompted to select a location in the file system for the downloaded backup to reside.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options > Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

- **Encrypt Before Downloading:** Before downloading or sending it, you have the option to encrypt the backup. Encryption is realized with Blowfish cipher in CBC mode. Provide a password (second time for verification). You will be asked for this password when importing the backup. The file extension for encrypted backups is *ebf*, for unencrypted backups *abf*.

Note - A backup does include administrator passwords, the high availability passphrase if configured, as well as all RSA keys and X.509 certificates. Since this information is confidential, it is good practice to enable encryption.

- **Send:** Opens a dialog window where you can decide to send the file encrypted (provide password) or unencrypted. Click *Send Now* to send the backup. Recipients will be the standard recipients, that is, the backup will be sent to the address(es) provided on the *Automatic Backups* tab.
 - **Encrypt Before Sending:** See *Encrypt Before Downloading* above.
- **Delete:** Deletes a backup from the list.

Create Backup

Backups are not only useful to restore your system after an (unwanted) change or failure. Moreover, they can be used as templates to set up systems that should have a similar configuration so that those systems are already pre-configured in some way which can save you a lot of time. For that, you can strip certain information from a backup before it is created, e.g. hostname, certificates, etc.

To create a backup with the current system state, proceed as follows:

1. **In the *Create Backup* section, enter a comment** (optional).
The comment will be displayed along with the backup in the backup list.
2. **Make the following settings** (optional):
Remove Host-specific Data: Select this option to create the backup without host-specific data. This includes hostname, SNMP data, HA data, license, and anonymization passwords as well as all certificates, public and private keys, fingerprints and secrets of Mail Security, Web Security, Client Authentication, IPsec, SSL VPN, RED, WebAdmin, Web Application Firewall, and proxies.

Such backups are a convenient means to set up multiple similar systems. There are some things to consider though: 1) After restoring you are presented the basic system setup. 2) Only the first interface is configured, the primary IP address being the one that has been configured during installation. All other interfaces will be disabled and set to IP address 0.0.0.0.

Warning – Although most of the host-specific data is being removed, such a backup template still contains confidential information, such as user passwords. Therefore it is good practice to always encrypt it.

Remove Administrative Mail Addresses: Select this option to additionally remove the administrator e-mail addresses used in various parts of the ASG, e.g. postmaster addresses in Mail Security, notifications, etc. This option is especially useful for IT partners who set up Astaro Security Gateway devices at customers' sites.

3. **Click *Create Backup Now*.**
The backup appears in the list of available backups.

If a backup is created with one or both of the options selected, the backup entry contains a respective additional comment.

Import Backup

To import a backup, click the folder icon and select a backup file to upload, then click *Start Upload*. When importing an encrypted backup file, you must provide the correct passphrase prior to importing the backup. Note that the backup will not instantly be restored. Instead, it will be added to the *Available Backups* list.

4.5.2 Automatic Backups

On the *Management > Backup/Restore > Automatic Backup* tab you can configure several options dealing with the automatic generation of backups. To have backups created automatically, proceed as follows:

1. **Enable automatic backups on the *Automatic Backups* tab.**

You can either click the status icon or the *Enable* button.

The status icon turns green and the *Options* and *Send Backups by E-mail* areas become editable.

2. **Select the interval.**

Automatic backups can be created at various intervals.

You can choose between daily, weekly, and monthly.

3. **Specify the maximum number of backups to be stored.**

Backups are stored up to the number you enter here. Once the maximum has been reached, the oldest backups will be deleted.

Note that this applies to automatically created backups only. Backups created manually and backups created automatically before a system update will not be deleted.

4. **Click *Apply*.**

Your settings will be saved.

To save you the work of backing up your gateway manually, the backup feature supports e-mailing the backup file to a list of defined e-mail addresses.

Recipients: Automatically generated backups will be sent to users contained in the *Recipients* box. Multiple addresses can be added. By default, the first administrator's e-mail address is used.

Encrypt E-Mail Backups: In addition, you have the option to encrypt the backup (Triple DES encryption).

Password: Once you have selected the *Encryption* option, provide a password (second time for verification). You will be prompted for this password when importing the backup.

Automatically created backups will appear in the *Available Backups* list on the *Backup/Restore* tab, marked with the `System` flag indicating the *Creator*. From there, they can be restored, downloaded, or deleted as any backup you have created by yourself.

4.6 User Portal

The User Portal of Astaro Security Gateway is a special browser-based application on the unit providing personalized e-mail and remote access services to authorized users. It can be accessed by browsing to the URL of Astaro Security Gateway, for example, `https://192.168.2.100` (note the HTTPS protocol and the missing port number 4444 you would normally enter for accessing the WebAdmin interface).

Among other things, the User Portal contains the e-mail quarantine, which holds messages that are infected by malicious software, contain suspicious attachments, are identified as spam, or contain certain expressions you have explicitly declared forbidden.

On the login page, users can select a language from the drop-down list located on the right side of the header bar.

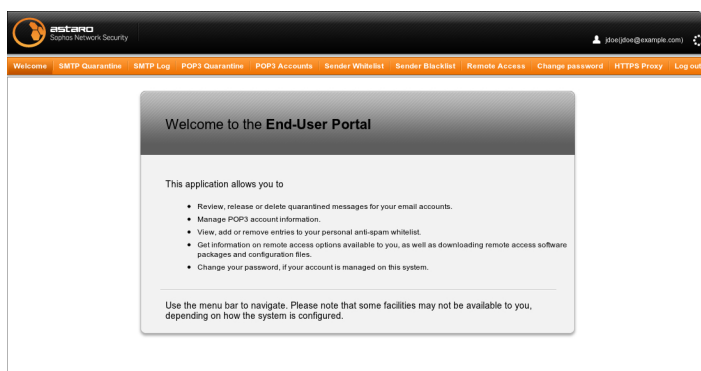


Figure 20 User Portal: Welcome Page

On the User Portal, users have access to the following services:

- **SMTP Quarantine:** Users can view and release messages held in quarantine. Which types of messages they are allowed to release can be determined on the *Mail Security > Quarantine Report > Advanced* tab. (The tab is called *Mail Quarantine* when POP3 is disabled.)
- **SMTP Log:** Here, users can view the SMTP log of their mail traffic. (The tab is called *Mail Log* when POP3 is disabled.)
- **POP3 Quarantine:** Users can view and release messages held in quarantine. Which types of messages they are allowed to release can be determined on the *Mail Security > Quarantine Report > Advanced* tab. (The tab is called *Mail Quarantine* when SMTP is disabled.)
- **POP3 Accounts:** Users can enter their credentials of POP3 accounts they use. Only those spam e-mails will appear in the User Portal for which POP3 account credentials are given. A user for whom POP3 account credentials are stored will receive an individual Quarantine Report for each e-mail address. Note that allowed POP3 servers must be specified on the *Mail Security > POP3 > Advanced* tab.
- **Sender Whitelist:** Here, senders can be whitelisted, thus messages from them are not regarded as spam. However, e-mails with viruses or unscannable e-mails will still be quarantined. Whitelisted senders can be specified by either entering valid e-mail addresses (e.g., `jdoe@example.com`) or all e-mail addresses of a specific domain using an asterisk as wildcard (e.g., `*@example.com`).

- **Sender Blacklist:** Here, you can blacklist e-mail senders, e.g. `phishing@hotmail.com`, or whole domains, e.g. `*@hotmail.com`. The blacklist is applied to both SMTP and POP3 e-mail, if these are in use on the system. To specify a new entry click the Plus icon, enter the address and click the Tick icon to save it.
- **Client Authentication:** Here, users can download the setup file of Astaro Authentication Agent (AAA). The AAA can be used as authentication mode for the Web Filter. The *Client Authentication* tab is only available if Client Authentication is enabled. For more information see *Definitions & Users > Client Authentication*.
- **Remote Access:** Users can download remote access client software and configuration files provided for them. However, the *Remote Access* tab is only available if at least one remote access mode has been enabled for the specific user.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., `https://192.168.2.100`) to the Trusted Sites, which are configured in IE's *Internet Options > Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

- **Change Password:** Users can change the password for accessing the User Portal.
- **HTTPS Proxy:** Users can import the HTTP/S Proxy CA certificate to get rid of error messages when visiting secure websites. After clicking *Import Proxy CA Certificate*, users will be prompted by their browser to trust the CA for different purposes. For more information see *Web Security > Web Filter > HTTPS CAs*.
- **Log Out:** Click here to log out of the User Portal. This is only necessary when you have selected *Remember My Login* at login (which creates a cookie) and you want to explicitly logout and have this cookie deleted. Otherwise, there is no need to use the logout button—closing the browser tab or window is sufficient.

4.6.1 Global

On the *Management > User Portal > Global* tab you can enable the User Portal. Additionally you can specify which networks and which users should be granted access to the User Portal.

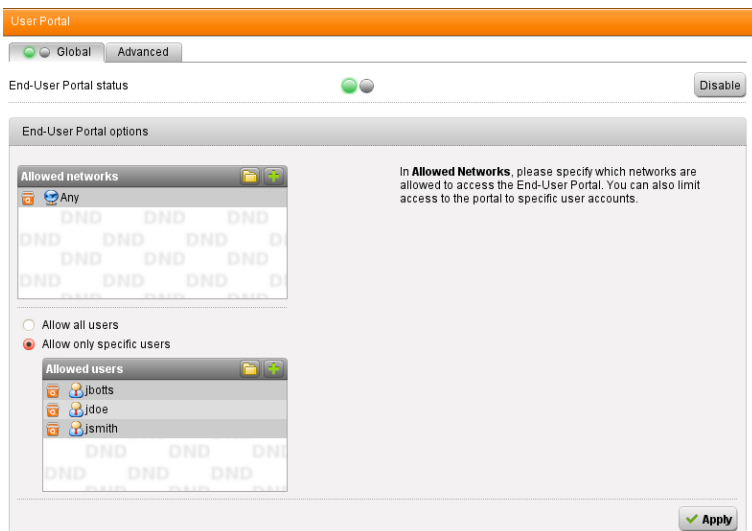


Figure 21 User Portal: Configuring Access to the User Portal

To enable User Portal access, proceed as follows:

- 1. Enable the User Portal.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *User Portal Options* area becomes editable.

- 2. Select the allowed networks.**

Select the networks that should be allowed to access the User Portal.

- 3. Select the allowed users.**

Select the users or user groups that should be able to access the User Portal.

If you do not want to grant access to all users, click *Allow Only Specific Users* and select the users and user groups individually.

4. Click *Apply*.

Your settings will be saved.

4.6.2 Advanced

On the *Advanced* tab you can configure an alternative hostname and port number for the User Portal as well as language and security options.

Language

During login, the User Portal fetches the language settings of the web browser and loads the respective locales to display the portal in the same language as the browser defaults. For browser language settings that are not available for the User Portal, you can select here which language will be the fallback language. Users have additionally the option to select a language on the User Portal login page.

Security

The User Portal uses cookies to track sessions. Persistent cookies permit to return after having closed a session without having to log in again. They can always be deleted from user-side, however, by using the *Log Out* button of the User Portal.

Disable Portal Items

For the features listed here a menu item is displayed in the User Portal when the respective feature has been enabled in WebAdmin. However, here you can define menu items that should *not* be displayed in the User Portal. To do so, select the respective option(s) and click *Apply*.

Network Settings

Hostname: By default, this is the gateway's hostname as given on the *Management > System Settings > Hostname* tab. However, if you want to grant access to the User Portal for users gaining access over the Internet, it might be necessary to enter an alternative hostname here that can be publicly resolved.

Listen Address: Default value is *Any*. When using the web application firewall you need to give a specific interface address for the service to listen for User Portal connections. This is necessary for the User Portal connection handler and the web application firewall to be able to differentiate between the incoming SSL connections.

Port: By default, port 443 for HTTPS is selected. You can change the port to either 80 or any value in the range from 1024 to 65535. Note that you cannot select either 10443 or the *WebAdmin TCP Port*, which is configured on the *Management > WebAdmin Settings > General* tab. Independent of the defined port, the User Portal can always be accessed via HTTPS only.

Welcome Message

You can customize the welcome message of the User Portal. Simple HTML markup and hyperlinks are allowed.

Note – Changing the welcome message is not possible when using a home use license.

4.7 Notifications

Astaro Security Gateway comes with a notification feature that informs you immediately about all sorts of security-relevant events occurring on the gateway, either by e-mail or SNMP trap. All events that might possibly be of interest to an administrator are represented by various error, warning, and information codes. What notifications are sent depends on the selection you have configured on the *Notifications* tab.

4.7.1 Global

On the *Management > Notifications > Global* tab you can configure the sender address (i.e., the *From* address) to be taken for notification e-mails sent by the gateway. By default, this is `do-not-reply@fw-notify.net`. If you want to change this address, it is advisable to enter an e-mail address of your domain, as some mail servers might be configured to check whether a given sender address really exists.

In addition, you can specify the recipients of gateway notifications. By default, this is the administrator's e-mail address you had entered during the initial setup.

Limit Notifications: Some security-relevant events such as detected intrusion attempts will create a lot of notifications, which may quickly clog the notification recipients' e-mail inboxes. For this reason, Astaro Security Gateway has sensible

default values to limit the number of notifications sent per hour. If you disable this option, every security-relevant event will create a notification, provided the event is configured so as to send a notification on the *Management > Notifications > Notifications* tab.

Device Specific Text

Here you can enter a description of the Astaro Security Gateway, e.g. its location, which will be displayed in the notifications sent.

4.7.2 Notifications

Notifications are divided into three categories:

- **CRIT:** Messages informing about critical events that might render the gateway inoperable.
- **WARN:** Warnings about potential problems that need your attention, for example, exceeding thresholds.
- **INFO:** Merely informational messages such as the restart of a system component, for example.

You can select whether you want to send the notification as e-mail or SNMP trap.

4.7.3 Advanced

In case your ASG cannot send e-mails directly, you can configure a smarthost to send the e-mails. Proceed as follows:

1. **Enable External SMTP on the *Management > Notifications > Advanced* tab.**

You can either click the status icon or the *Enable* button.

2. **Enter your smarthost.**

You can use drag-and-drop. The port is preset to the default SMTP port 25.

- **Use TLS:** Select this checkbox if you want to enforce TLS when sending notifications. Note that notifications will not be sent if the smarthost does not support TLS.

3. **Click *Apply*.**

Your settings will be saved.

If the smarthost requires authentication, enter the corresponding username and password for the smarthost in the *Authentication* area below. Click *Apply* to save your settings.

4.8 Customization

The tabs of the *Management > Customization* menu allow you to customize and localize the templates of status messages and e-mail notifications created by Astaro Security Gateway, allowing you to adapt those messages to the policy and corporate identity of your company.

Note – Customization is not possible when using a home use license.

4.8.1 Global

On the *Management > Customization > Global* tab you can customize global displaying options for the system messages presented to users. Note that UTF-8/Unicode is supported.



Figure 22 Customization: Example Blocked Page and Its Customizable Parts

Company Logo

You can upload your own logo/banner (in `jpg` format only), which is used in the following contexts:

- Web Filter messages
- POP3 blocked messages
- Quarantine release status messages (which will appear after a spam e-mail has been released or whitelisted from the quarantine through the Quarantine Report)
- [Quarantine Report](#)

Restrict the image's resolution to a reasonable value (e.g., 100 x 200 pixels).

To upload a banner, proceed as follows:

1. **Open the *Upload File* dialog box.**

Click the folder icon next to the *Upload New Logo* box.

The *Upload File* dialog box opens.

2. **Select the banner.**

Browse to the location where the banner you want to upload resides.

Once you have selected the banner, click *Save*.

3. **Click *Apply*.**

The banner will be uploaded replacing the file already installed.

Custom Company Text

Customize the message that will be displayed beneath the company logo whenever a website was blocked by the virus scanner or the content filter of Astaro Security Gateway. For example, you might want to enter the administrator's contact data here. Note that blocking of a website might have various reasons, for example, if it belongs to a category that is forbidden or classified as spyware, or if a user tries to download a file whose extension is considered critical (e.g., executables). Templates used for these occurrences can be modified on the *Management > Customization > Web Filter* tab.

4.8.2 Web Filter

Customize the templates for warning web pages of the Web Filter of Astaro Security Gateway that will be displayed when attempts to access banned websites are detected, providing different warning notes for each type of transgression. You can translate these templates into other languages or modify them to show

customer support contact information, for example. The following message templates can be customized:

- **Web Filtering Administrator Information:** Here you can enter information about the administrator managing the Web Filter. In addition, you can enter the administrator's e-mail address.
- **Content Blocked by Surf Protection:** This message is displayed when a user had attempted to access a web page whose contents matched a URL category that is configured to be blocked.
- **Content Blocked by Blacklist:** This message is displayed when a user had attempted to retrieve a web page whose contents matched a URL that is blacklisted blacklist. To blacklist URLs, see *Web Security > Web Filtering > [URL Filtering](#)*.
- **Virus Detected:** This message is shown when a file was blocked due to a virus infection.
- **Downloading File:** This message is shown when a file download is in progress.
- **Virus Scanning:** This message is shown while a file is being scanned for malicious content.
- **File Download Completed:** This message is shown after a file has been fully downloaded and scanned.
- **Transparent Mode with Authentication:** This section is only meaningful if you use the Web Filter in *Transparent Mode with Authentication*. The text is displayed on the authentication page where every user needs to log in before they can use the Web Filter. The *Terms of Use* field is empty by default, which means that no disclaimer is presented on the authentication page. However, if you want to add a disclaimer which users have to accept, fill in this field. You can disable the disclaimer again by emptying the *Terms of Use* field.
- **URL Filter Override:** This message is displayed when a page is blocked and the bypass blocking option is enabled for the respective user (see *Web Security > Web Filtering > [URL Filtering](#)*).

4.8.3 Download Manager

If the Web Filter is enabled, the web browser will display the following download pages while downloading content > 1 MB in size and whose content type is no text or image. Note that the download page will not be displayed when video or audio streams are being requested or more than 50 % of the file has been downloaded within five seconds.

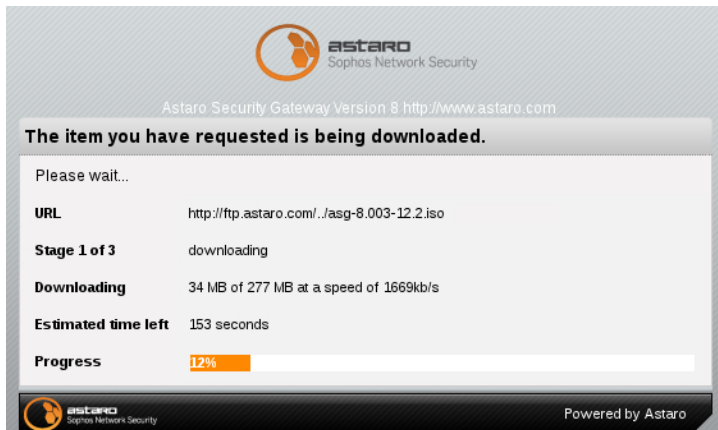


Figure 23 Customization: HTTP Download Page Step 1 of 3



Figure 24 Customization: HTTP Download Page Step 2 of 3

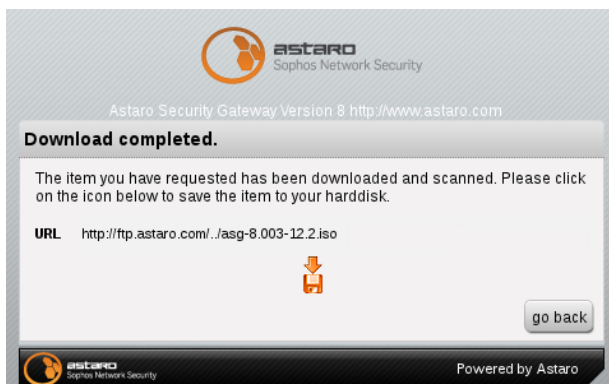


Figure 25 Customization: HTTP Download Page Step 3 of 3

4.8.4 SMTP/POP3 Proxy

Customize the templates to be used in user messages generated by the SMTP/POP3 proxies of Astaro Security Gateway. You can translate these templates into other languages or modify them as to show customer support contact information, for example. The following message templates can be customized:

- **Message Released From Quarantine:** This message is shown when an e-mail was successfully released from the quarantine.
- **Error While Releasing Message From Quarantine:** This message is shown when an error occurred while releasing a message from the quarantine.
- **POP3 Message Blocked:** This message is sent to the recipient when a POP3 e-mail was blocked.

This e-mail was blocked because it is likely to be spam, virus infected, or caught by the expression or file extension scanner.

From:	testuser@vmail.ua
To:	testuser@vmail.ua
Subject:	av4
Reason:	virus
Extra:	Eicar-Test-Signature
Size:	3 KB



Figure 26 Customization: POP3 Proxy Blocked Message

4.9 SNMP

The *Simple Network Management Protocol* (SNMP) is used by network management systems to monitor network-attached devices such as routers, servers, and switches. SNMP allows the administrator to make quick queries about the condition of each monitored network device. You can configure Astaro Security Gateway to reply to SNMP queries or to send SNMP traps to SNMP management tools. The former is achieved with so-called *management information bases* (MIBs). An MIB specifies what information can be queried for which network device. Astaro Security Gateway supports SNMP version 2 and 3 and the following MIBs:

- **DISMAN-EVENT-MIB:** Event Management Information Base
- **HOST-RESOURCES-MIB:** Host Resources Management Information Base
- **IF-MIB:** Interfaces Group Management Information Base
- **IP-FORWARD-MIB:** IP Forwarding Table Management Information Base
- **IP-MIB:** Management Information Base for the *Internet Protocol* (IP)
- **NOTIFICATION-LOG-MIB:** Notification Log Management Information Base
- **RFC1213-MIB:** Management Information Base for Network Management of TCP/IP-based Internet: MIB II
- **SNMPv2-MIB:** Management Information Base for the *Simple Network Management Protocol* (SNMP)
- **TCP-MIB:** Management Information Base for the *Transmission Control Protocol* (TCP)
- **UDP-MIB:** Management Information Base for the *User Datagram Protocol* (UDP)

In order to get Astaro Security Gateway system information, an SNMP manager must be used that has at least the RFC1213-MIB (MIB II) compiled into it.

4.9.1 Query

On the *Management > SNMP > Query* page you can enable the usage of SNMP queries.

The screenshot displays the SNMP configuration page with an orange header. It includes tabs for 'Query' and 'Traps'. A 'Disable' button is in the top right. The 'SNMP queries' section has a status icon. Below are three main sections: 'SNMP Version' with a dropdown set to 'SNMP v3'; 'SNMP access control' featuring an 'Allowed Networks' list with 'External (Network)' selected, and login fields for 'admin'; and 'Device information' with fields for device name, location, and admin email. Each section has an 'Apply' button. At the bottom, there is a 'Download' button for the 'Astaro Notifier MIB'.

Figure 27 SNMP: Configuring SNMP Queries

To configure SNMP queries, proceed as follows:

1. **Enable *SNMP Queries*.**

You can either click the status icon or the *Enable* button.

The sections *SNMP Version* and *SNMP Access Control* become editable.

2. **Select the *SNMP version*.**

In the *SNMP Version* section, select a version from the drop-down list. SNMP version 3 requires authentication.

3. **Select allowed networks.**

Networks listed in the *Allowed Networks* box are able to query the SNMP agent running on Astaro Security Gateway. Note that the access is always read-only.

- **Community String:** When using version 2, enter a community string. An SNMP community string acts as a password that is used to protect access to the SNMP agent. By default, the SNMP community string is "public", but you can change it to any setting that best suits your needs.

Note - Allowed characters for the community string are: (a-z), (A-Z), (0-9), (+), (_), (@), (.), (-), (blank).

- **Username/Password:** When using version 3, authentication is required. Enter a username and password (second time for verification) to enable the remote administrator to send queries. The password must have at least eight characters. SNMP v3 uses SHA for authentication and AES for encryption. Note that username and password are used for both of them.

4. **Click *Apply*.**

Your settings will be saved.

Furthermore, you can enter additional information about the gateway.

Device Information

The *Device Information* text boxes can be used to specify additional information about the gateway such as its name, location, and administrator. This information can be read by SNMP management tools to help identify the gateway.

Note - All SNMP traffic (protocol version 2) between the gateway and the *Allowed Networks* is not encrypted and can be read during the transfer over public networks.

Astaro Notifier MIB

This section allows you to download the Astaro notifier MIB which contains the definitions of the Astaro SNMP notification based on your current settings for the notification traps.

4.9.2 Traps

In the *Traps* tab you can define an SNMP trap server to which notifications of relevant events occurring on the gateway can be sent as SNMP traps. Note that special SNMP monitoring software is needed to display those traps.

The messages that are sent as SNMP traps contain so-called object identifiers (OID), for example, `.1.3.6.1.4.1.9789`, which belong to the private enterprise numbers issued by [IANA](http://iana.org). Note that `.1.3.6.1.4.1` is the iso.org.dod.internet.private.enterprise prefix, while `9789` is Astaro's *Private Enterprise Number*. The OID for notification events is `1500`, to which are appended the OIDs of the type of the notification and the corresponding error code (`000-999`). The following notification types are available:

- `DEBUG = 0`
- `INFO = 1`
- `WARN = 2`
- `CRIT = 3`

Example: The notification "INFO-302: New firmware Up2Date installed" will use the OID `.1.3.6.1.4.1.9789.1500.1.302` and has the following string assigned:

```
[<HOST>] [INFO] [302]
```

Note that `<HOST>` is a placeholder representing the hostname of the system and that only type and error code from the notification's subject field are transmitted.

To select an SNMP trap server, proceed as follows:

1. **Click *New SNMP Trap Sink*.**
The *Create New SNMP Trap Sink* dialog box opens.
2. **Make the following settings:**
Host: The host definition of the SNMP trap server.

Community string: An SNMP community string acts as a password that is used to protect access to querying SNMP messages. By default, the SNMP community string is set to "public". Change it to the string that is configured on the remote SNMP trap server.

Note - Allowed characters for the community string are: (a-z), (A-Z), (0-9), (+), (_), (@), (.), (-), (blank).

Comment (optional): Add a description or other information.

3. **Click Save.**

The new SNMP trap server will be listed on the *Traps* tab.

4.10 Central Management

The pages of the *Central Management* menu let you configure interfaces to management tools that can be used to monitor or remotely administer the gateway.

4.10.1 Astaro Command Center

Astaro Command Center (ACC) is Astaro's central management product. It provides features such as monitoring, configuration, maintenance, inventory, and the possibility of multiple administrators. It is intended to provide a general overview of the state of each Astaro gateway software and appliance installation, their version, current load, license expiration, and critical security events. If desired, you can configure a second ACC server, which is useful in case for example you do the configuration by yourself (first ACC server) but want your machines still to be monitored by a third party, e.g. your MSSP (second ACC server).

The information is accessible via a graphical web-based front-end providing you with various view options for all monitored devices. In addition, ACC includes an inventory system that automatically keeps track of each device. Finally, you can assign different administrative privileges for multiple administrators, thus making ACC the perfect solution for Astaro partners and MSSPs. For more information on Astaro Command Center, please refer to the ACC data sheet, which is available at the [Astaro website](#).

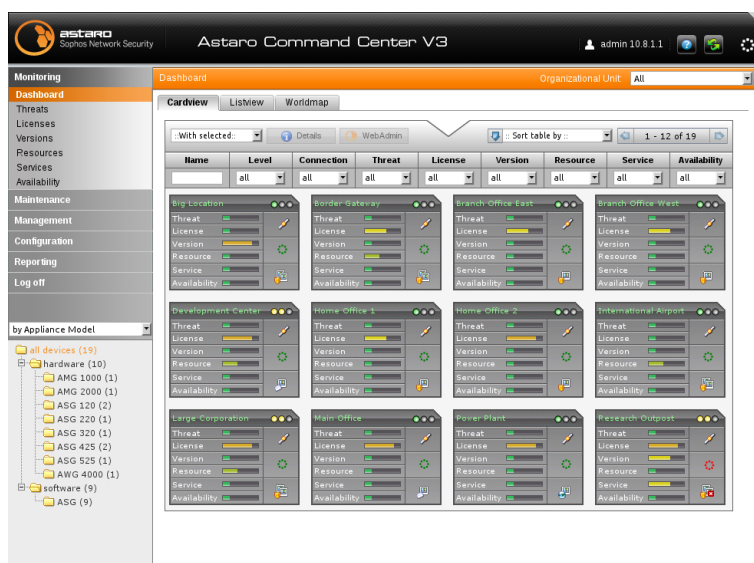


Figure 28 Central Management: Dashboard of Astaro Command Center

Setting Up ACC

To prepare Astaro Security Gateway to be monitored by an ACC server, proceed as follows:

1. **On the *Astaro Command Center* tab, enable ACC.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *ACC Settings* area becomes editable.

2. **Specify the *ACC Host*.**

Select or add the ACC server to which Astaro Security Gateway should connect to.

- **Authentication** (optional): If the ACC requires authentication, select this option and enter the same password (*Shared Secret*) as configured on the ACC server.
- **Use ACC Server as Up2Date Cache** (optional): Up2Date packages can be fetched from a cache located on the ACC server. If you want to use this functionality for your gateway, select the option *Use ACC Server as Up2Date Cache*. Please ensure that the administrator of your

managing ACC has enabled the Up2Date cache functionality on the server accordingly. Note that usage of the Up2Date cache functionality is mutually exclusive with using a parent proxy configuration for Up2Dates.

There are four options which let you decide, which feature areas of your ASG are allowed to be managed by the administrator of the selected ACC. Those options reflect the managing capabilities of the ACC. Please refer to the ACC manual for detailed information. Note that the configuration option is missing for the second ACC, as the devices can be configured only by one ACC.

3. **Click *Apply*.**

Your settings will be saved. Shortly thereafter, Astaro Security Gateway can be monitored and administered by the ACC server selected here.

Note - The communication between the gateway and ACC takes place on port 4433, whereas the Astaro Command Center can be accessed through a browser via the HTTPS protocol on port 4444 for the WebAdmin and on port 4422 for the Gateway Manager interface.

Central Management

Astaro Command Center

ACC Status

Disable

ACC Settings

ACC host:

Astaro Command Center

Please specify the managing ACC's host definition used for connection.

If your ACC has been configured to employ a **Shared Secret** authentication scheme, please provide the same password as specified on the ACC in the respective settings.

To fetch Up2Dates via the specified ACC, activate the **Up2Date Cache** functionality. Please note, this setting overrules Parent Proxy configurations made within the Up2Date section.

☒ Authentication

Shared Secret: ●●●●

☐ Use ACC server as Up2Date Cache

☒ Administration
☒ Reporting
☒ Monitoring
☒ Configuration

Define which feature areas will be accessible to the remote ACC's administrators when centrally managing this device.

Apply

ACC Health

Connection:

Last Contact:

Wed Jul 7 11:15:42 2010

Message:

Login successful

The connection status and last contact of this gateway with its configured ACC is shown here.

There is a small **diagnostic** area which helps to quickly detect if any connection or authentication problems occurred.

For more detailed analysis and your convenience you can use the live log functionality below.

ACC Objects

Cleanup objects

Click here to remove/release objects created via ACC.

Live log

Open live log

Click here to open the **Device Agent** live log.

Figure 29 Central Management: Using an ACC V2 Server

ACC Health

You will be able to see the current connection status and health in the section called *ACC Health*. Reloading the page will update this data.

ACC Objects

This area is disabled (grayed-out) unless there are objects that have been created via an ACC and if this ACC is now disconnected from the Astaro Security Gateway.

96

ASG V8 Administration Guide

ACC-created objects can be network definitions, remote host definitions, IPsec VPN tunnels, etc.

The button *Cleanup Objects* can be pressed to release any objects that were created by the ACC the device has formerly been managed with. These objects are normally locked and can only be viewed on the local device. After pressing the button, the objects become fully accessible and can be reused or deleted by a local administrator.

Note - In case former ACC-created objects are cleaned up, they cannot be re-transformed when reconnecting to that same ACC. This means that if the remote ACC still hosts object definitions for a device which later re-establishes a connection to it, those objects will be deployed to the device again—although local copies will then already exist.

Live Log

You can use the live log to monitor the connection between your Astaro Security Gateway and the ACC. Click the *Open Live Log* button to open the live log in a new window.

4.1 1 High Availability

The main cause for an Internet security system to fail is because of a hardware failure. The ability of any system to continue providing services after a failure is called failover. Astaro Security Gateway provides high availability (HA) failover, allowing you to set up a hot standby system in case the primary system fails (active-passive). Alternatively, you can use Astaro Security Gateway to set up a cluster, which operates by distributing dedicated network traffic to a collection of nodes (active-active) similar to conventional load-balancing approaches in order to get optimal resource utilization and decrease computing time.

The concepts *high availability* and *cluster* as implemented in Astaro Security Gateway are closely related. For a high availability system can be considered a two-node cluster, which is the minimum requirement to provide redundancy.

Each node within the cluster can assume one of the following roles:

- **Master:** The primary system in a hot standby/cluster setup. Within a cluster, the master is responsible for synchronizing and distributing of data.
- **Slave:** The standby system in a hot standby/cluster setup which takes over operations if the master fails.
- **Worker:** A simple cluster node, responsible for data processing only.

All nodes monitor themselves by means of a so-called heart-beat signal, a periodically sent multicast UDP packet used to check if the other nodes are still alive. If any node fails to send this packet due to a technical error, the node will be declared *dead*. Depending on the role the failed node had assumed, the configuration of the setup changes as follows:

- If the master node fails, the slave will take its place and the worker node with the highest ID will become slave.
- If the slave node fails, the worker node with the highest ID will become slave.
- If a worker node fails, you may notice a performance decrease due to the lost processing power. However, the failover capability is not impaired.

Reporting

All reporting data is consolidated on the master node and is synchronized to the other cluster nodes at intervals of five minutes. In case of a takeover, you will therefore lose not more than five minutes of reporting data. However, there is a distinction in the data collection process. The graphs displayed in the *Logging & Reporting > Hardware* tabs only represent the data of the node currently being master. On the other hand, accounting information such as shown on the *Logging & Reporting > Network Usage* page represents data that was collected by all nodes involved. For example, today's CPU usage histogram shows the current processor utilization of the master node. In the case of a takeover, this would then be the data of the slave node. However, information about top accounting services, for example, is a collection of data from all nodes that were involved in the distributed processing of traffic that has passed the unit.

Notes

- The *Address Resolution Protocol* (ARP) is only used by the actual master. That is to say, slave and worker nodes do not send or reply to ARP requests.

- In case of a failover event, the unit that takes over operations performs an ARP announcement (also known as *gratuitous ARP*), which is usually an ARP request intended to update the ARP caches of other hosts which receive the request. Gratuitous ARP is utilized to announce that the IP of the master was moved to the slave.
- All interfaces configured on the master must have a physical link, that is, the port must be properly connected to any network device.

4.1 1.1 Hardware and Software Requirements

The following hardware and software requirements must be met to provide HA fail-over or cluster functionality:

- Valid license with the high availability option enabled (for the stand-by unit you only need an additional base license).
- Two ASG units with identical software versions and hardware or two ASG appliances of the same model.
- Heartbeat-capable Ethernet network cards. Check the HCL to figure out which network cards are supported. The HCL is available at the [Astaro Knowledgebase](#) (use "HCL" as search term).
- Ethernet crossover cable (for connecting master and slave in a hot standby system). ASG appliance models 320, 425, and 525, whose dedicated HA interface is a Gigabit auto-MDX device, can be connected through a standard IEEE 802.3 Ethernet cable as the Ethernet port will automatically exchange send/receive pairs.
- Network switch (for connecting cluster nodes).

4.1 1.2 Status

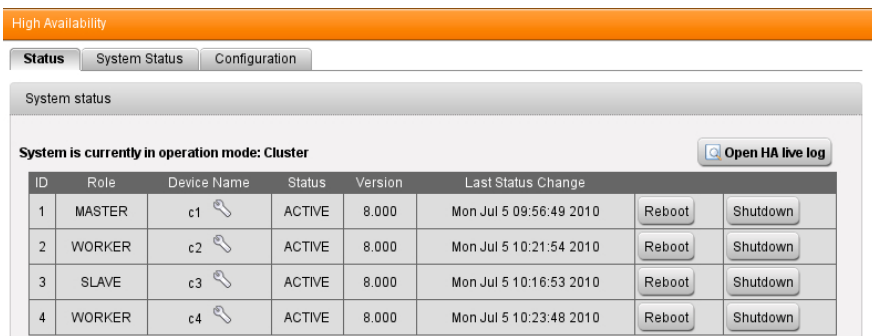


Figure 30 High-Availability: Status Page

The *Management > High Availability > Status* tab lists all devices involved in a hot standby system or cluster and provides the following information:

- **ID:** The device's node ID. In a hot standby system, the node ID is either 1 (master) or 2 (slave).
The node ID in a cluster can range from 1-10, as a cluster can have up to a maximum of 10 nodes.
- **Role:** Each node within the cluster can assume one of the following roles:
 - **MASTER:** The primary system in a hot standby/cluster setup. It is responsible for synchronizing and distributing of data within a cluster.
 - **SLAVE:** The standby system in a hot standby/cluster setup which takes over operations if the master fails.
 - **WORKER:** A simple cluster node, responsible for data processing only.
- **Device Name:** The name of the device.
- **Status:** The state of the device concerning its HA status; can be one of the following:
 - **ACTIVE:** The node is fully operational.
 - **UNLINKED:** One or more interface links are down.
 - **UP2DATE:** An Up2Date is in progress.
 - **UP2DATE-FAILED:** An Up2Date has failed.

- **DEAD:** The node is not reachable.
- **SYNCING:** Data Synchronization is in progress. This status is displayed when a takeover process is going on. The initial synchronizing time is at least 5 minutes. It can, however, be lengthened by all synchronizing-related programs. While a SLAVE is synchronizing and in state *SYNCING*, there is no graceful takeover, e.g. due to link failure on master node.
- **Version:** Version number of Astaro Security Gateway Software installed on the system.
- **Last Status Change:** The time when the last status change occurred.

Reboot/Shutdown: With these buttons, a device can be manually rebooted or shut down.

Remove Node: Use this button to remove a dead cluster node via WebAdmin. All node-specific data like mail quarantine and spool is then taken over by the master.

Click the button *Open HA Live Log* in the upper right corner to open the high availability live log in a separate window.

4.1 1.3 System Status

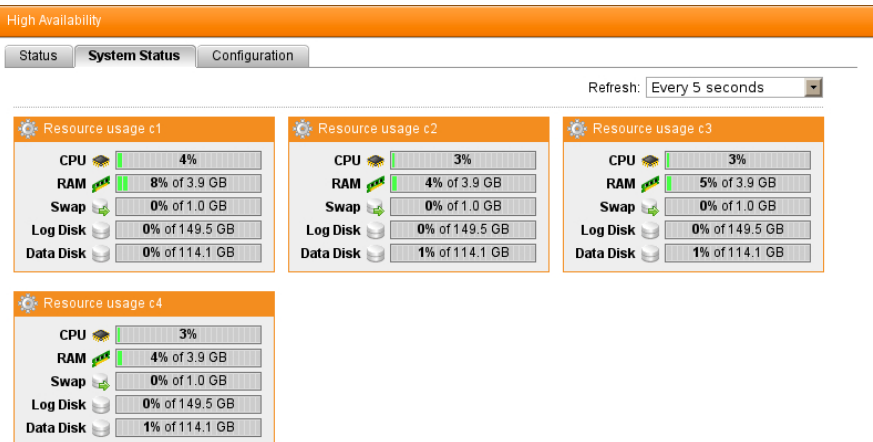


Figure 31 High Availability: Resource Usage of the Single HA or Cluster Devices

The *Management > High Availability > System Status* tab lists all devices involved in a hot standby system or cluster and provides information about the resource usage of each device:

- The CPU utilization in percent
- The RAM utilization in percent
- The swap utilization in percent
- The amount of hard disk space consumed by the log partition in percent
- The amount of hard disk space consumed by the root partition in percent

4.1 1.4 Configuration

The high availability functionality of Astaro Security Gateway covers three basic settings:

- Automatic Configuration
- Hot standby (active-passive)
- Cluster (active-active)

Automatic Configuration: Astaro Security Gateway features a plug-and-play configuration option for ASG appliances that allows the setup of a hot standby system/cluster without requiring reconfiguration or manual installation of devices to be added to the cluster. Simply connect the dedicated HA interfaces (`eth3`) of your ASG appliances with one another, select *Automatic Configuration* for all devices, and you are done.

Note - For *Automatic Configuration* to work, all ASG appliances must be of the same model. For example, you can only use two ASG 320 appliances to set up a HA system; one ASG 220 unit on the one hand and one ASG 320 unit on the other hand cannot be combined.

If you connect two ASG appliances through this dedicated interface, all devices will recognize each other and configure themselves automatically as an HA system—the device with the longer uptime becoming master. If the unlikely case should occur that the uptime is identical, the decision which device is becoming master will be made based on the MAC address.

Using ASG Software, the *Automatic Configuration* option is to be used on dedicated slave systems to automatically join a master or already configured hot standby system/cluster. For that reason, *Automatic Configuration* can be considered a transition mode rather than a high availability operation mode in its own right. For the high availability operation mode will change to *Hot Standby* or *Cluster* as soon as a device with *Automatic Configuration* selected joins a hot standby system or cluster, respectively. The prerequisite, however, for this feature to work is that the option *Autojoin* is enabled on the master system. The *Autojoin* function will make sure that those devices will automatically be added to the hot standby system/cluster whose high availability operation mode is set to *Automatic Configuration*.

Hot Standby (active-passive): Astaro Security Gateway features a hot standby high availability concept consisting of two nodes, which is the minimum required to provide redundancy. One of the major improvements introduced in Astaro Security Gateway Software V8 is that the latency for a takeover could be reduced to less than two seconds. In addition to firewall connection synchronization, the gateway also provides IPsec tunnel synchronization. This means that road warriors as well as remote VPN gateways do not need to re-establish IPsec tunnels after the takeover. Also, objects residing in the quarantine are also synchronized and are still available after a takeover.

Cluster (active-active): To cope with the rising demand of processing large volumes of Internet traffic in real time, Astaro Security Gateway features a clustering functionality that can be employed to distribute processing-intensive tasks such as content filtering, virus scanning, intrusion prevention, or decryption equally among multiple cluster nodes. Without the need of a dedicated hardware-based load balancer, the overall performance of the gateway can be increased considerably.

Note - When configuring a cluster, make sure you have configured the master node first before connecting the remaining units to the switch.

The screenshot displays the 'High Availability' configuration window. At the top, there is an orange header bar labeled 'High Availability'. Below it, three tabs are visible: 'Status', 'System Status', and 'Configuration', with 'Configuration' being the active tab. The 'High availability status' section shows 'Operation mode:' set to 'Cluster (active-active)' in a dropdown menu. The 'Configuration' section contains fields for 'Sync NIC:' (eth3 (Intel Corporation)), 'Device Name:' (c1), 'Device Node ID:' (1), and 'Encryption key:' (with a 'Repeat:' field). An 'Apply' button with a green checkmark is at the bottom right of this section. The 'Advanced' section below it has a checkbox for 'Enable automatic configuration of new devices' (unchecked), 'Preferred Master:' (c1 (1)), and 'Backup interface:' (no backup interface). Another 'Apply' button is at the bottom right of the 'Advanced' section.

Figure 32 High Availability: Configuring a Cluster

To set up the master of hot standby system/cluster, proceed as follows:

1. **Select a high availability operation mode.**

By default, high availability is turned off. The following modes are available:

- Automatic Configuration
- Hot Standby (active-passive)
- Cluster (active-active)

Either select *Hot Standby* or *Cluster*.

Note - If you want to change the high availability operation mode, you must always set the mode back to *Off* before you can change it to either *Automatic Configuration*, *Hot Standby*, or *Cluster*.

2. **Make the following settings:**

Sync NIC: Select the network interface card through which master and slave systems will communicate. If link aggregation is active you can select here a link aggregation interface, too.

Note - Only those interfaces are displayed that have not been configured yet.

The following options can only be configured if you either select *Hot Standby* or *Cluster* as operation mode:

Device Name: Enter a descriptive name for this device.

Device Node ID: Select the node ID of the device. In a case of a failure of the primary system, the node with the highest ID will become master.

Encryption Key: The passphrase with which the communication between master and slave is encrypted (enter the passphrase twice for verification). Maximum key length is 16 characters.

3. **Click Apply.**

The high-availability failover is now active on the master.

4. **Optionally, make the following advanced settings:**

Autojoin: If you have configured a hot standby system/cluster manually, the *Autojoin* function will make sure that those devices will automatically be added to the hot standby system/cluster whose high-availability operation mode is set to *Automatic Configuration*.

Note - In case of a failure of the HA synchronization interface, no configuration is synchronized anymore. The backup interface only prevents master-master situations.

5. **Click Apply.**

Your settings will be saved.

Now, continue setting up the slave system:

1. **Select a high availability operation mode.**

By default, high availability is turned off.

The following modes are available:

- Automatic Configuration
- Hot Standby (active-passive)
- Cluster (active-active)

If you select Automatic Configuration, you only need to select the interface to communicate with the master.

2. **Make the following settings:**

Sync NIC: Select the network interface card through which master and slave systems will communicate. If link aggregation is active you can select here a link aggregation interface, too. The following options can only be configured if you either select *Hot Standby* or *Cluster* as operation mode.

Device Name: Enter a descriptive name for this device.

Device Node ID: Select the node ID of the device. In a case of a failure of the primary system, the node with the highest ID will become master.

Encryption Key: The passphrase with which the communication between master and slave is encrypted (enter the same passphrase as configured on the master). Maximum key length is 16 characters.

3. **Click *Apply*.**

The high-availability failover is now active on the master.

4. **Optionally, make the following advanced settings:**

Autojoin: If you have configured a hot standby system/cluster manually, the *Autojoin* function will make sure that those devices will automatically be added to the hot standby system/cluster whose high-availability operation mode is set to *Automatic Configuration*. However, this option is of no effect on slave systems, so you can leave it enabled, which is the default setting.

Note - In case of a failure of the HA synchronization interface, no configuration is synchronized anymore. The backup interface only prevents master-master situations.

5. **Click *Apply*.**

Your settings will be saved.

The gateway in hot standby mode will be updated at regular intervals over the data transfer connection. Should the active primary system encounter an error, the

secondary will immediately and automatically change to normal mode and take over the primary system's functions.

Note - When you deactivate a hot standby system/cluster, the slave and worker nodes will perform a factory reset and shut down.

More information (especially use cases) can be found in the *HA/Cluster Guide*, which is available at the [Astaro Knowledgebase](#).

Configuration

It is possible to change the synchronization interface in a running configuration. Note that afterwards all nodes are going to reboot.

Advanced

This section allows you to make some advanced settings.

Enable Automatic Configuration of New Devices: This option is active by default and takes care that newly attached devices are going to be configured automatically.

Preferred Master: Here you can define a designated master node by selecting a node from the drop-down list. In case of a failover, the selected node will not stay in Slave mode after the link recovers but instead will switch back to Master mode.

Backup Interface: To prevent that both master and slave become master at the same time (master-master situations), for example, because of a failure of the HA synchronization interface or an unplugged network cable, a backup heartbeat interface can be selected. This additional heartbeat interface can be any of the configured and active Ethernet interfaces. If a backup interface is selected, an additional heartbeat signal is sent via this interface in one direction from the master to the slave to make sure that the master-slave configuration stays intact. If the master-slave connection is disabled and the backup interface becomes involved, the administrator will receive a notification informing that one of the cluster nodes is dead. However, this option is of no effect on slave systems, so you can leave it unconfigured.

4.12 Shutdown and Restart

On this tab you can manually shut down or restart Astaro Security Gateway.

Shutdown: This action allows you to shut down the system and to stop all services in a proper manner. For systems without a monitor or LCD display, the end of the shutdown process is signaled by an endless series of beeps at intervals of one second.

To shut down Astaro Security Gateway, proceed as follows:

1. **Click *Shutdown (Halt) the System Now.***

2. **Confirm the warning message.**

When asked "Really shut down the system?", click *OK*.

The system is going down for halt.

Depending on your hardware and configuration, this process may take several minutes to complete. Only after the system has completely shut down you should turn off the power. If you turn off the power without the system being shut down properly, the system will check the consistency of its file system during the next booting, meaning that the boot-up process will take much longer than usual. In the worst case, data may have been lost.

The system will beep five times in a row to indicate a successful system start.

Restart: This action will shut down the system completely and reboot. Depending on your hardware and configuration, a complete restart can take several minutes.

To restart Astaro Security Gateway, proceed as follows:

1. **Click *Restart (Reboot) the System Now.***

2. **Confirm the warning message.**

When asked "Really restart the system?", click *OK*.

The system is going down for halt and reboot.

5 Definitions & Users

This chapter describes how to configure network, service, and time period definitions used throughout Astaro Security Gateway. The *Definitions Overview* page in WebAdmin shows the number of network definitions according to type as well as the numbers of service definitions according to protocol type.

The pages of the *Definitions & Users* menu allow you to define networks and services that can be used in all other configuration menus in one central place. This allows you to work with the names you define rather than struggling with IP addresses, ports, and network masks. Another benefit of definitions is that you can group individual networks and services together and configure them all at once. If, for example, you assign certain settings to these groups at a later time, these settings will apply to all networks and services contained therein.

Additionally, this chapter describes how to configure user accounts, user groups, and external authentication servers of Astaro Security Gateway as well as authentication for client PCs.


The following topics are included in this chapter:

- [Network Definitions](#)
- [Service Definitions](#)
- [Time Period Definitions](#)
- [Users & Groups](#)
- [Client Authentication](#)
- [Authentication Servers](#)

5.1 Network Definitions

The *Definitions & Users > Network Definitions* page is the central place for defining hosts, networks, and network groups on the ASG. The definitions created here can be used on many other WebAdmin configuration menus.

Tip - When you click on the Info icon of a network definition in the *Network Definitions* list, you can see all configuration options in which the network definition is used.

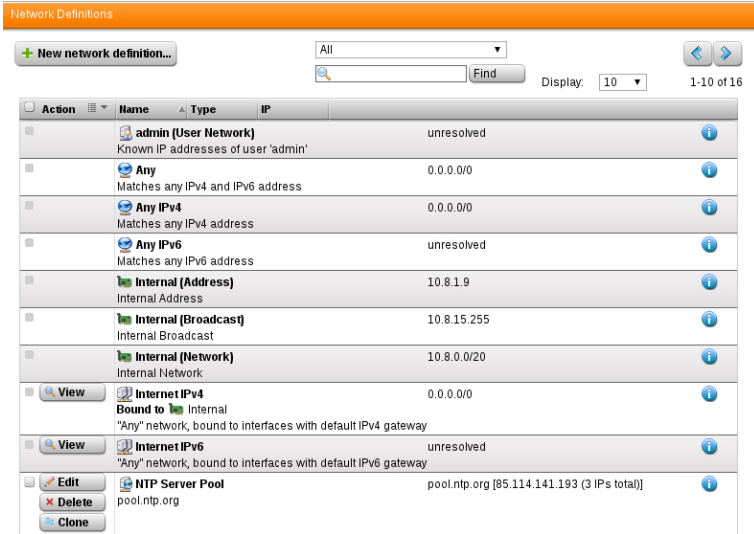

The screenshot shows the 'Network Definitions' window with a table of definitions. The table has columns for Action, Name, Type, and IP. The definitions listed are:

Action	Name	Type	IP
	admin (User Network) Known IP addresses of user 'admin'		unresolved
	Any Matches any IPv4 and IPv6 address		0.0.0.0/0
	Any IPv4 Matches any IPv4 address		0.0.0.0/0
	Any IPv6 Matches any IPv6 address		unresolved
	Internal (Address) Internal Address		10.8.1.9
	Internal (Broadcast) Internal Broadcast		10.8.15.255
	Internal (Network) Internal Network		10.8.0.0/20
View	Internet IPv4 Bound to Internal "Any" network, bound to interfaces with default IPv4 gateway		0.0.0.0/0
View	Internet IPv6 "Any" network, bound to interfaces with default IPv6 gateway		unresolved
Edit Delete Clone	NTP Server Pool pool.ntp.org		pool.ntp.org [85.114.141.193 (3 IPs total)]

Figure 33 Definitions: List of Network Definitions

The network table also contains static networks, which were automatically created by the system and which can neither be edited nor deleted:

- **Interface Address:** A definition of this type will be added for each network interface. It contains the current IP address of the interface. Its name consists of the interface name with "(Address)" appended to it.
- **Interface Broadcast Address:** A definition of this type will be added for each Ethernet-type network interface. It contains the current IPv4 broadcast address of the interface. Its name consists of the interface name with "(Broadcast)" appended to it.
- **Interface Network Address:** A definition of this type will be added for each Ethernet-type network interface. It contains the current IPv4 network of the interface. Its name consists of the interface name with "(Network)" appended to it.

- **Internet:** A network definition bound to the interface which serves as default gateway. Making use of it in your configuration should make the configuration process easier. With *Uplink Balancing* enabled, *Internet* is bound to *uplink interfaces*.

To create a network definition, proceed as follows:

1. **On the *Network Definitions* page, click *New Network Definition*.**
The *Create New Network Definition* dialog box opens.

2. **Make the following settings:**

(Note that further parameters of the network definition will be displayed depending on the selected definition type.)

Name: Enter a descriptive name for this definition.

Type: Select the network definition type. The following types are available:

- **Host:** A single IPv4 address. Provide the following information:
 - **Address:** The IP address of the host (note that you cannot enter the IP address of an configured interface).
 - **Interface** (optional): You can bind the network definition to a certain interface, so that connections to the definition will only be established via this interface.
 - **Comment** (optional): Add a description or other information.
- **DNS Host:** A DNS hostname, dynamically resolved by the system to produce an IP address. DNS hosts are useful when working with dynamic IP endpoints. The system will re-resolve these definitions periodically according to the TTL (Time To Live) values and update the definition with the new IP address (if any). Provide the following information:
 - **Interface** (optional): You can bind the network definition to a certain interface, so that connections to the definition will only be established via this interface.
 - **Hostname:** The hostname you want to resolve.
 - **Comment** (optional): Add a description or other information.
- **DNS Group:** Similar to DNS host, but can cope with multiple RRs (Resource Records) in DNS for a single hostname. It is useful for defining firewall rules and exceptions in transparent proxies.

- **Network:** A standard IPv4 network, consisting of a network address and a netmask. Provide the following information:
 - **Address:** The network address of the network (note that you cannot enter the IP address of a configured interface).
 - **Interface** (optional): You can bind the network definition to a certain interface, so that connections to the definition will only be established via this interface.
 - **Netmask:** The bit mask used to tell how many bits in an octet(s) identify the subnetwork, and how many bits provide room for host addresses.
 - **Comment** (optional): Add a description or other information.
- **Multicast Group:** A network that comprises a defined multicast network range.
 - **Address:** The network address of the multicast network, which must be in the range 224.0.0.0 to 239.255.255.255.
 - **Interface** (optional): You can bind the network definition to a certain interface, so that connections to the definition will only be established via this interface.
 - **Netmask:** The bit mask used to tell how many bits in an octet(s) identify the sub network, and how many bits provide room for host addresses.
 - **Comment** (optional): Add a description or other information.
- **Network Group:** A container that includes a list of other network definitions. You can use them to bundle networks and hosts for better readability of your configuration. Once you have selected *Network Group*, the *Members* box appears where you can add the group members.
- **Availability Group:** A group of hosts and/or DNS hosts sorted by priority. Alive status of all hosts is checked with ICMP pings at a specified interval. The host with the highest priority and an alive status is used in configuration.
 - **Members:** Add the group members.
 - **Check Interval:** Enter a time interval in seconds at which the hosts are ping-checked.

- **Always Resolved:** This option is selected by default, so that if all hosts are unavailable the group will resolve to the host which was last available. Otherwise the group will be set to *unresolved*.

3. **Click Save.**

The new definition appears on the network definition list.

To either edit or delete a network definition, click the corresponding buttons.

5.2 Service Definitions

On the *Definitions & Users > Service Definitions* page you can centrally define and manage services and service groups. Services are definitions of certain types of network traffic and combine information about a protocol such as TCP or UDP as well as protocol-related options such as port numbers. You can use services to determine the types of traffic accepted or denied by the gateway.

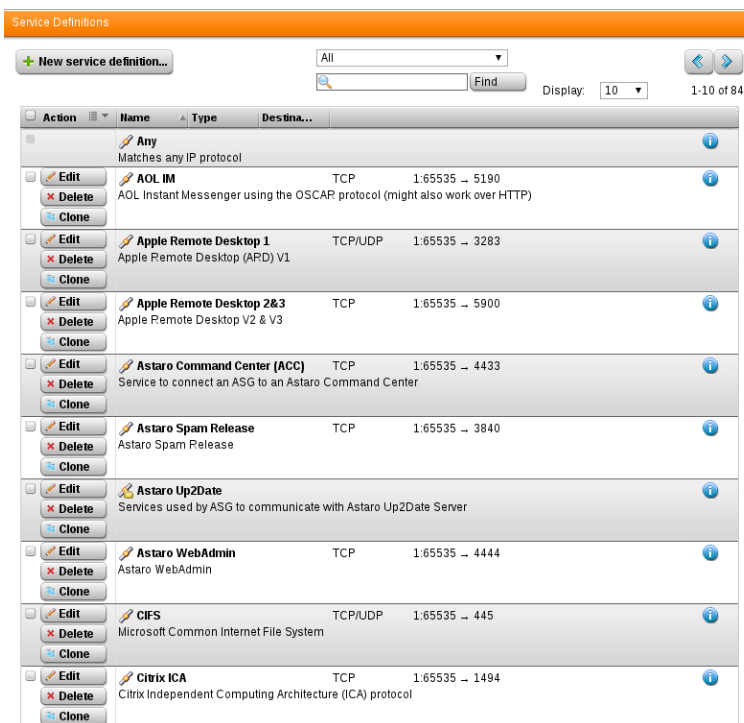


Figure 34 Definitions: List of Service Definitions

Tip - When you click on the Info icon of a service definition in the *Service Definitions* list, you can see all configuration options in which the service definition is used.

To create a service definition, proceed as follows:

1. **On the *Service Definitions* page, click *New Service Definition*.**
The *Create New Service Definition* dialog box opens.
2. **Make the following settings:**
(Note that further parameters of the network definition will be displayed depending on the selected definition type.)

Name: Enter a descriptive name for this definition.

Type of Definition: Select the service type. The following types are available:

- **TCP:** Transmission Control Protocol (TCP) connections use port numbers ranging from 0 to 65535. Lost packets can be recognized through TCP and be requested again. In a TCP connection, the receiver notifies the sender when a data packet was successfully received (connection related protocol). TCP sessions begin with a three way handshake and connections are closed at the end of the session. Provide the following information:
 - **Destination Port:** Enter the destination port either as single port number (e.g., 80) or as a range (e.g., 1024:64000), using a colon as delimiter.
 - **Source Port:** Enter the source port either as single port number (e.g., 80) or as a range (e.g., 1024:64000), using a colon as delimiter.
- **UDP:** The *User Datagram Protocol* (UDP) uses port numbers between 0 and 65535 and is a stateless protocol. Because it does not keep state, UDP is faster than TCP, especially when sending small amounts of data. This statelessness, however, also means that UDP cannot recognize when packets are lost or dropped. The receiving computer does not signal the sender when receiving a data packet. When you have selected *UDP*, the same configuration options can be edited as for TCP.
- **TCP/UDP:** A combination of TCP and UDP appropriate for application protocols that use both sub protocols such as DNS. When you have selected *TCP/UDP*, the same configuration options can be edited as for TCP or UDP.
- **ICMP/ICMPv6:** The *Internet Control Message Protocol* (ICMP) is chiefly used to send error messages, indicating, for example, that a requested service is not available or that a host or router could not be reached. Once you have opted for *ICMP* or *ICMPv6*, select the ICMP code/type. Note that IPv4 firewall rules do not work with ICMPv6 and IPv6 firewall rules do not work with ICMP.
- **IP:** The *Internet Protocol* (IP) is a network and transport protocol used for exchanging data over the Internet. Once you have selected *IP*, provide the number of the protocol to be encapsulated within IP, for example 121 (representing the SMP protocol).

- **ESP:** The *Encapsulating Security Payload* (ESP) is a part of the IPsec tunneling protocol suite that provides encryption services for tunneled data via VPN. Once you have selected ESP or AH, provide the *Security Parameters Index* (SPI), which identifies the security parameters in combination with the IP address. You can either enter a value between 256 and 4,294,967,296 or keep the default setting given as the range from 256 to 4,294,967,296 (using a colon as delimiter), especially when using automatic IPsec key exchange. Note that the numbers 1-255 are reserved by the *Internet Assigned Numbers Authority* (IANA).
- **AH:** The *Authentication Header* (AH) is a part of the IPsec tunneling protocol suite and sits between the IP header and datagram payload to maintain information integrity, but not secrecy.
- **Group:** A container that includes a list of other service definitions. You can use them to bundle service definitions for better readability of your configuration. Once you have selected *Group*, the *Members* dialog box opens where you can add group members (i.e., other service definitions).

Comment (optional): Add a description or other information.

3. **Click Save.**

The new definition appears on the service definition list.

To either edit or delete a definition, click the corresponding buttons.

Note - The type of definition cannot be changed afterwards. If you want to change the type of definition, you must delete the service definition and create a new one with the desired settings.

5.3 Time Period Definitions

On the *Definitions & Users > Time Period Definitions* page you can define single or recurring time slots that can in turn be used to limit firewall rules or content filter profile assignments to specific time ranges.

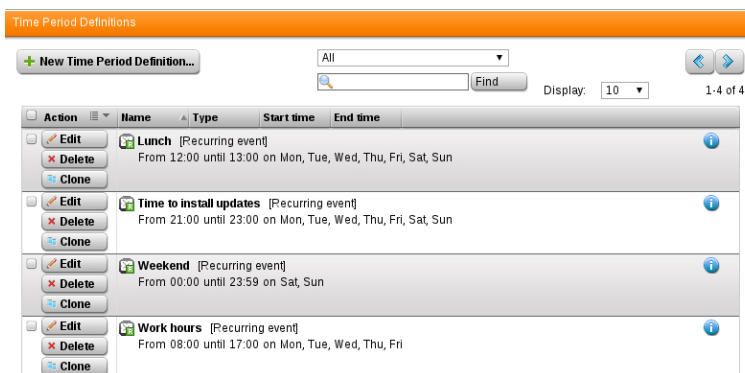


Figure 35 Definitions: List of Time Events Definitions

Tip - When you click on the Info icon of a time period definition in the *Time Period Definitions* list, you can see all configuration options in which the time period definition is used.

To create a time period definition, proceed as follows:

1. **On the *Time Period Definitions* tab, click *New Time Period Definition*.**

The *Create New Time Period Definition* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this time period definition.

Type: Select the time period definition type. The following types are available:

- **Recurring Event:** These events will be repeated periodically. You can select the start time, the end time, and the weekdays on which the time period definition should be applied. Start and stop dates cannot be selected for this type.
- **Single Event:** These events will only take place once. You can both select a start date/time and an end date/time. As these definitions do not recur, the option *Weekdays* cannot be selected for this type.
- **Comment (optional):** Add a description or other information.

3. **Click *Save*.**

The new time period definition appears on the *Time Period Definitions* list.

To either edit or delete a time period definition, click the corresponding buttons.

Note - You can only delete time period definition that are not used in either a firewall rule or within a [filter assignment](#).

5.4 Users & Groups

The *Definitions & Users > Users & Groups* menu lets you create users and groups for WebAdmin access as well as for remote access, User Portal access, e-mail usage etc.

5.4.1 Users

On the *Definitions & Users > Users & Groups > Users* tab you can add user accounts to the gateway. In its factory default configuration, Astaro Security Gateway has one administrator called *admin*.

Tip - When you click on the Info icon of a user definition in the *Users* list, you can see all configuration options in which the user definition is used.

When you specify an e-mail address in the *New User* dialog box, an X.509 certificate for this user will be generated simultaneously while creating the user definition, using the e-mail address as the certificate's VPNID. On the other hand, if no e-mail address is specified, a certificate will be created with the user's *Distinguished Name* (DN) as VPN ID. That way, if a user is authenticated by means of a back-end group such as eDirectory, a certificate will be created even if no e-mail address is set in the corresponding back-end user object.

Because the VPN ID of each certificate must be unique, each user definition must have a different and unique e-mail address. Creating a user definition with an e-mail address already present in the system will fail. The certificates can be used for various [remote access](#) methods supported by Astaro Security Gateway with the exception of PPTP, L2TP over IPsec using PSK, and native IPsec using RSA or PSK.

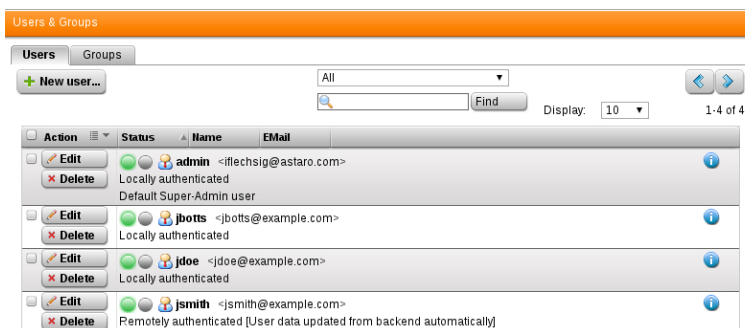


Figure 36 Users: List of Users

To add a user account, proceed as follows:

1. **On the *Users* tab, click *New User*.**

The *Create New User* dialog box opens.

2. **Make the following settings:**

Username: Enter a descriptive name for this user (e.g. jdoe).

Real Name: Enter the user's real name (e.g. John Doe).

E-mail Address: Enter the user's primary e-mail address.

Additional E-mail Addresses (optional): Enter additional e-mail addresses of this user. Spam e-mails sent to any of these addresses will be listed in an individual Quarantine Report for each e-mail address, which is sent to the primary e-mail address specified above.

Authentication: Select the authentication method. The following methods are available:

- **Local:** Select to authenticate the user locally on the gateway.
- **Remote:** Select to authenticate the user using one of the external authentication methods supported by Astaro Security Gateway. For more information, see *Definitions & Users > Authentication Servers*.
- **None:** Select to prevent the user from authentication completely. This is useful, for example, to disable a user temporarily without the need to delete the user definition altogether.

Password: Enter a user password (second time for verification). Only available if you selected *Local* as authentication method. Note that Basic User Authentication does not support umlauts.

Backend Sync: Some basic settings of the user definition such as the real name or the user's e-mail address can be updated automatically by synchronizing the data with external back-end authentication servers (only available if you selected *Remote* as authentication method).

Note - Currently, only data with Active Directory and eDirectory servers can be synchronized.

X.509 Certificate: Once the user definition has been created, you can assign an X.509 certificate for this user when editing the user definition. By default, this is the certificate that was automatically generated upon creating the user definition. However, you can also assign a third-party certificate, which you can upload on the *Remote Access > Certificate Management > Certificates* tab.

Use Static Remote Access IP (optional): Select if you want to assign a static IP address for a user gaining remote access instead of assigning a dynamic IP address from an IP address pool. For IPsec users behind a NAT router, for example, it is mandatory to use a static remote access IP address.

Note - The static remote access IP can only be used for remote access through PPTP, L2TP, and IPsec. It cannot be used, however, for remote access through SSL.

Comment (optional): Add a description or other information.

3. **Make optionally advanced settings.**

Users can create and maintain their own e-mail whitelist and blacklist (see chapter [User Portal](#)). You can view those lists here and, if necessary, modify them.

4. **Click Save.**

The new user account appears on the *Users* list.

If you want to make this user a regular administrator having access to the web-based administrative interface WebAdmin, add the user to the group of

SuperAdmins, which is configured on the *Definitions & Users > Users & Groups > Groups* tab in WebAdmin.

Note - If you have deleted a user object and want to create a user object with the same name, make sure you have also deleted the certificate associated with this user on the *Remote Access > Certificate Management > Certificates* tab. Otherwise you will get an error message stating that an item with that name already exists.

5.4.2 Groups

On the *Definitions & Users > Users & Groups > Groups* page you can add user groups to the gateway. In its factory default configuration, Astaro Security Gateway has one user group called *SuperAdmins*. If you want to assign administrative privileges to users, that is, granting access to WebAdmin, add them to the group of *SuperAdmins*; this group should not be deleted.

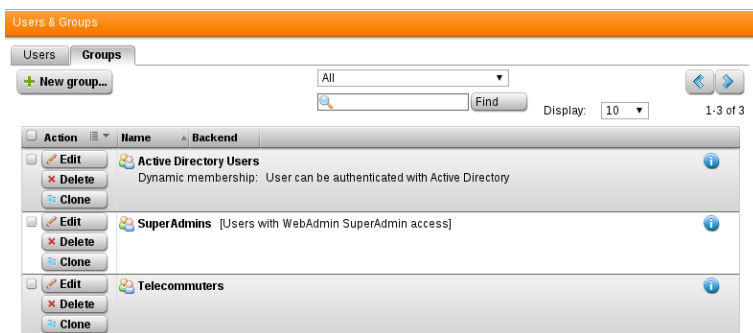


Figure 37 Groups: List of Groups

Tip - When you click on a group definition in the *Groups* list, you can see all configuration options in which the group definition is used.

To add a user group, proceed as follows:

1. **On the *Groups* tab, click *New Group*.**
The *Create New Group* dialog box opens.

2. Make the following settings:

Group Name: Enter a descriptive name for this group. Note that this name does not need to correspond to the names of your back-end groups.

Group Type: Select the type of the group. You can choose between a group of static members and two group types promoting dynamic membership.

- **Static Members:** Select the local users who shall become member of this group.
- **IPsec X509 DN Mask:** Users are dynamically added to an IPsec X509 DN group definition if they have successfully logged in to the gateway through an IPsec connection and if specific parameters of their distinguished names match the values specified in the *DN Mask* box.
- **Backend Membership:** Users are dynamically added to a group definition if they have been successfully authenticated by one of the supported authentication mechanisms. To proceed, select the appropriate back-end authentication type:
 - **Active Directory:** An Active Directory user group of the gateway provides group memberships to members of Active Directory server user groups configured on a Windows network. Enter the name of the Active Directory server groups the user is a member of. For more information, see *Definitions & Users > Authentication Servers > [Servers](#)*.
 - **eDirectory:** An eDirectory user group of the gateway provides group memberships to members of eDirectory user groups configured on an eDirectory network. Enter the name of the eDirectory groups the user is a member of. For more information, see *Definitions & Users > Authentication Servers > [Servers](#)*.
 - **RADIUS:** Users are automatically added to a RADIUS back-end group when they have been successfully authenticated using the RADIUS authentication method.
 - **TACACS+:** Users are automatically added to a TACACS+ back-end group when they have been successfully authenticated using the TACACS+ authentication method.

- **LDAP:** Users are automatically added to an LDAP back-end group when they have been successfully authenticated using the LDAP authentication method.

Limit to Backend Group(s) Membership (optional): For all X.500-based directory services you can restrict the membership to various groups present on your back-end server if you do not want all users of the selected back-end server to be included in this group definition. The group(s) you enter here once selected this option must match a *Common Name* as configured on your back-end server. Note that if you select this option for an Active Directory back-end, you can omit the `CN=` prefix. If you select this option for an eDirectory back-end, you can use the eDirectory browser that lets you conveniently select the eDirectory groups that should be included in this group definition. However, if you do not use the eDirectory browser, make sure to include the `CN=` prefix when entering eDirectory containers.

Check an LDAP Attribute (optional): If you do not want all users of the selected back-end LDAP server to be included in this group definition, you can select this checkbox to restrict the membership to those users matching a certain LDAP attribute present on your back-end server. This attribute is then used as an LDAP search filter. For example, you could enter `groupMembership` as attribute with `CN=Sales,O=Example` as its value. That way you could include all users belonging to the sales department of your company into the group definition.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new user group appears on the *Groups* list.

To either edit or delete a group, click the corresponding buttons.

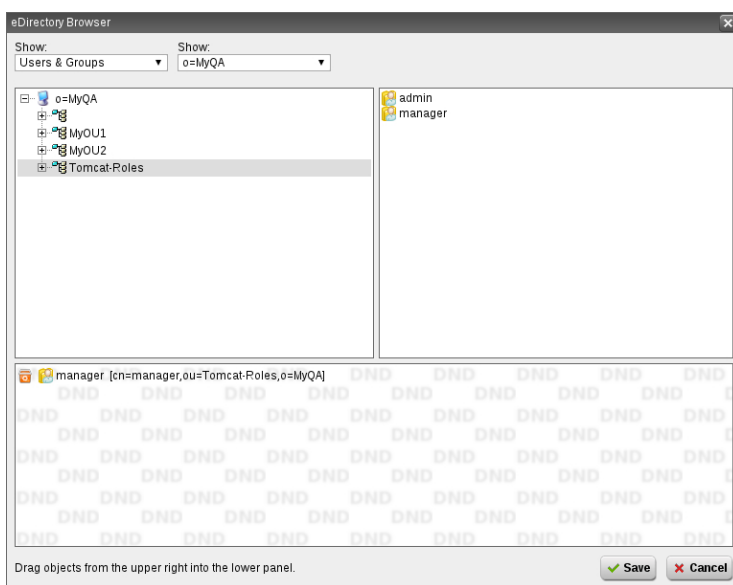


Figure 38 Groups: eDirectory Browser of Astaro Security Gateway

5.5 Client Authentication

Astaro provides an authentication client for Windows so that users directly authenticate at the ASG. This gives you user-based control on web surfing and network traffic by, for example, creating firewall rules based on user networks or group networks. Additionally, wherever possible, IP addresses, hostnames, and the like are replaced by usernames to provide a better readability of reporting data and objects.

Users who want or should use Client Authentication need to install the Astaro Authentication Agent (AAA) on their client PC. The AAA can be downloaded either via this WebAdmin page or via the User Portal. Note that only users who are within the user group of the Client Authentication configuration will find a download link on their User Portal page.

To configure Client Authentication, do the following:

1. **On the *Client Authentication* tab, enable Client Authentication.**
You can either click the status icon or the *Enable* button.

The status icon turns green and the *Client Authentication Options* area becomes editable.

2. **Select the allowed networks.**

Select the networks that should use Client Authentication. Note that those networks need to be directly connected to the ASG for Client Authentication to work.

3. **Select the allowed users and groups.**

Select or add single users and groups into the *Allowed Users and Groups* box. This can be also your already existing authentication group, e.g. an Active Directory user group.

4. **Click *Apply*.**

Your settings will be saved.

Client Authentication is now available for the selected networks.

Client Authentication Program

When Client Authentication is enabled, you can download the Astaro Authentication Agent (AAA) here. You can either distribute the AAA manually or have your users download the client from the User Portal.

The AAA can be used as authentication mode for the Web Filter. For more information see chapter *Web Security > Web Filtering > Global*.

5.6 Authentication Servers

On the *Definitions & Users > Authentication Servers* page databases and back-end servers of external user authentication services can be managed. External user authentication allows you to validate user accounts against existing user databases or directory services on other servers of your network. Authentication services currently supported are:

- Novell's eDirectory
- Microsoft's Active Directory
- RADIUS
- TACACS+
- LDAP

5.6.1 Global Settings

The *Definitions & Users > Authentication Servers > Global Settings* tab lets you configure basic authentication options. The following options are available:

Create Users Automatically: When this option is selected, Astaro Security Gateway will automatically create a user object whenever an unknown user of a configured back-end group successfully authenticates against one of the various authentication services supported by Astaro Security Gateway. For example, if you configure a RADIUS back-end group and you select this group in the *Allowed Auditors* box on the *Management > WebAdmin Settings > Access Control* tab, Astaro Security Gateway will automatically create a user definition for a RADIUS user who has successfully logged in to WebAdmin.

- **Automatic User Creation for Facilities:** Automatic user creation can be enabled or disabled for specific services. Users are only created for enabled services. This option is not available—and automatic user creation is disabled for all facilities—when the *Create Users Automatically* option is not selected.

Note - This feature does not work for Active Directory *Single Sign-On* (SSO).

Those user objects are also needed to grant access to the User Portal of Astaro Security Gateway. In addition, for all user objects created automatically an SSL certificate will be generated. Note, however, that automatic user creation will fail in case of an e-mail address conflict, for the user definition to be created automatically must not have configured an e-mail address that is already present on the system. All e-mail addresses must be unique within the system because they are used as identifiers for SSL certificates.

Important Note - Authentication (i.e., the action of determining who a user is) and authorization (i.e., the action of determining what a user is allowed to do) for a user whose user object was created automatically are always done on the remote back-end server/directory service. Therefore, automatically created user objects in Astaro Security Gateway are useless if the corresponding back-end server is not available or if the user object has been deleted on the remote site.

Note also that except for Active Directory *Single Sign-On* (SSO) Astaro Security Gateway caches user authentication data it has retrieved from a remote authentication server for 300 seconds. For this reason, changes made to the remote user settings will only take effect after the cache has expired.

Authentication Cache

Every time Astaro Security Gateway gets a user request, e.g., `http`, from a yet unknown user and authentication is required, the Astaro User Authentication (AUA) writes an entry to the authentication cache. Over time, in environments with frequently changing users it can be reasonable to empty the cache from time to time. Also, if you want to force an immediate new authentication for all users. Use the button *Flush Authentication Cache* to empty the authentication cache. An authentication is valid for 300 seconds. During this time, other authentication requests by the same user are looked up directly in the cache. This technique takes load off back-end authentication services like eDirectory.

Note - Flushing the cache does not affect users that are remotely logged on.

Live Log

Open Live Log: Click the button to see the log of the *Astaro User Authentication* (AUA) in a new window.

5.6.2 Servers

On the *Definitions & Users > Authentication Servers > Servers* tab, you can create one or more authentication servers, such as [eDirectory](#), [Active Directory](#), [LDAP](#), [RADIUS](#), and [TACACS+](#).

5.6.2.1 eDirectory

Novell eDirectory is an X.500 compatible directory service for centrally managing access to resources on multiple servers and computers within a given network. eDirectory is a hierarchical, object-oriented database that represents all the assets in an organization in a logical tree. Those assets can include people, servers, workstations, applications, printers, services, groups, and so on.

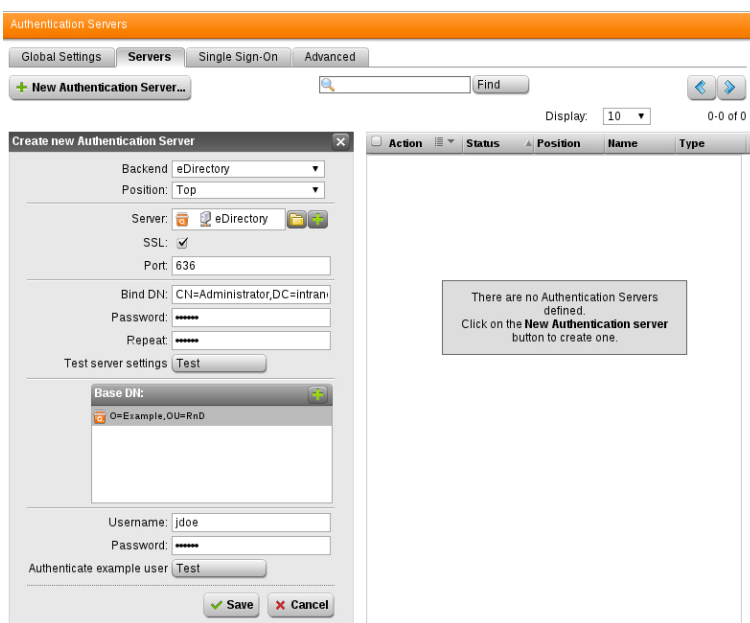


Figure 39 Authentication: Configuring eDirectory

To configure eDirectory authentication, proceed as follows:

1. **On the *Servers* tab, click *New Authentication Server*.**

The dialog box *Create New Authentication Server* opens.

2. **Make the following settings:**

Backend: Select *eDirectory* as back-end directory service.

Position: Select a position for the back-end server. Back-end servers with lower numbers will be queried first. For better performance, make sure that the back-end server that is likely to get the most requests is on top of the list.

Server: Select (or add) an eDirectory server.

SSL: Select this option to enable SSL data transfer. The *Port* will then change from 389 (LDAP) to 636 (Idaps = LDAP over SSL).

Port: Enter the port of the eDirectory server. By default, this is port 389.

Bind DN: The *Distinguished Name* (DN) of the user to bind to the server with. This user is needed if anonymous queries to the eDirectory server are not allowed. Note that the user must have sufficient privileges to obtain all relevant user object information from the eDirectory server in order to authenticate users. eDirectory users, groups, and containers can be specified by the full distinguished name in LDAP notation, using commas as delimiters (e.g., `CN=adminimator,DC=intranet,DC=example,DC=com`).

Password: Enter the password of the bind user (second time for verification).

Test Server Settings: Pressing the *Test* button performs a bind test with the configured server. This verifies that the settings on this tab are correct, and the server is up and accepts connections. The button is only available when you have saved the server settings by clicking the *Apply* button.

Base DN: The starting point relative to the root of the LDAP tree where the users are included who are to be authenticated. Note that the base DN must be specified by the full distinguished name (FDN) in LDAP notation, using commas as delimiters (e.g., `O=Example,OU=RnD`). Base DN may be empty. In this case, the base DN is automatically retrieved from the directory.

Username: Enter the username of a test user to perform a regular authentication.

Password: Enter the password of the test user.

Authenticate Example User: Click the *Test* button to start the authentication test for the test user. This verifies that all server settings are correct, the server is up and accepting connections, and users can be successfully authenticated.

3. **Click Save.**

The server will be displayed in the *Servers* list.

5.6.2.2 Active Directory

Active Directory (AD) is Microsoft's implementation of a directory service and is a central component of Windows 2000/2003 servers. It stores information about a broad range of resources residing on a network, including users, groups, computers, printers, applications, services, and any type of user-defined objects. As

such it provides a means of centrally organizing, managing, and controlling access to these resources.

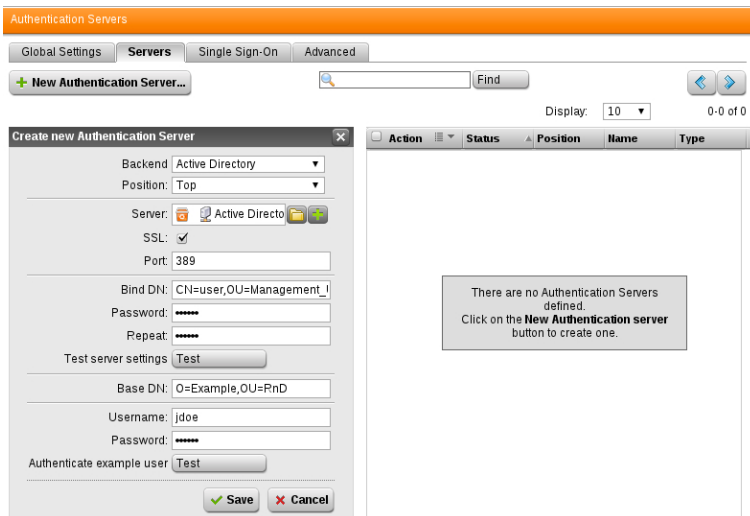


Figure 40 Authentication: Configuring Active Directory User Authentication

The Active Directory authentication method allows you to register Astaro Security Gateway at a Windows domain, thus creating an object for Astaro Security Gateway on the primary *domain controller* (DC). The ASG is then able to query user and group information from the domain.

To configure Active Directory authentication, proceed as follows:

1. **On the *Servers* tab, click *New Authentication Server*.**

The dialog box *Create New Authentication Server* opens.

2. **Make the following settings:**

Backend: Select *Active Directory* as back-end directory service.

Position: Select a position for the back-end server. Back-end servers with lower numbers will be queried first. For better performance, make sure that the back-end server that is likely to get the most requests is on top of the list.

Server: Select (or add) an Active Directory server.

SSL: Select this option to enable SSL data transfer. The *Port* will then change from 389 (LDAP) to 636 (ldaps = LDAP over SSL).

Port: Enter the port of the Active Directory server. By default, this is port 389.

Test Server Settings: Pressing the *Test* button performs a bind test with the configured server. This verifies that the settings on this tab are correct, and the server is up and accepts connections. The button is only available when you have saved the server settings by clicking the *Apply* button.

Bind DN: The full *Distinguished Name* (DN) of the user to bind to the server with in LDAP notation. This user is needed if anonymous queries to the Active Directory server are not allowed. The bind user must have sufficient privileges to obtain all relevant user object information from the Active Directory server in order to authenticate users; a requirement usually met by the administrator of the domain.

Each DN consists of one or more *Relative Distinguished Names* (RDN) constructed from some attributes of the Active Directory user object and includes its username, the node where it resides, and the top-level DN of the server, all specified in LDAP notation and separated by commas.

- The username must be the name of the user who is able to access the directory and is to be specified by the **CN** designator (e.g., **CN=user**). While using a popular account with domain permissions, such as "admin" is possible, it is highly recommended for best practices that the user not have admin rights, as it is sufficient for them to have read permission on all objects of the subtree starting at the given base DN.
- The information of the node where the user object resides must include all subnodes between the root node and the user object and is usually comprised of so-called *organizational units* and *common name* components. Organizational units (indicated by the combined folder/book icon in the Microsoft Management Console) are to be specified by the **OU** designator. Note that the order of the nodes is from the lowest to the highest node, that is, the more specific elements come first (e.g., **OU=Management_US,OU=Management**). On the other hand, default Active Directory containers (indicated by a simple folder icon)

such as the pre-defined *Users* node are to be specified using the CN designator (e.g., CN=Users).

- The top-level DN of the server can consist of several domain components, each specified by the DC designator. Note that the domain components are given in the same order as the domain name (for example, if the domain name is `example.com`, the DN part would be `DC=example,DC=com`).

An example bind user DN for a user named `administrator` whose object is stored in the `Users` container in a domain called `example.com` would look like this: `CN=administrator,CN=Users,DC=example,DC=com`

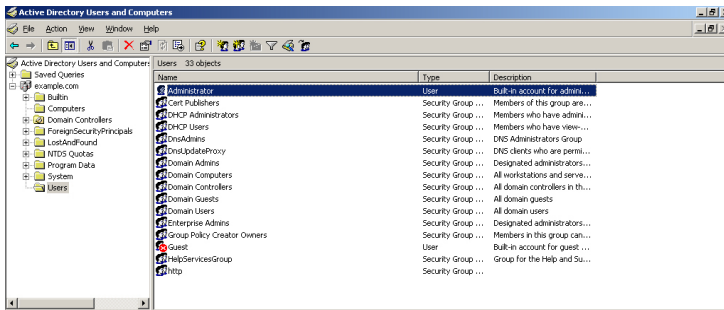


Figure 41 Authentication: Microsoft Management Console

Now, suppose you create an organizational unit called *Management* with the subnode *Management_US* and move the administrator user object into it, the DN of the administrator would change to: `CN=administrator,OU=Management_US,OU=Management,DC=example,DC=com`

Password: The password of the bind user (second time for verification).

Test Server Settings: Pressing the *Test* button performs a bind test with the configured server. This verifies that the settings on this tab are correct, and the server is up and accepts connections. The button is only available when you have saved the server settings by clicking the *Apply* button.

Base DN: The starting point relative to the root of the LDAP tree where the users are included who are to be authenticated. Note that the base DN must be specified by the full distinguished name (FDN) in LDAP notation, using

commas as delimiters (e.g., `O=Example,OU=RnD`). Base DN may be empty. In this case, the base DN is automatically retrieved from the directory.

Username: Enter the username of a test user to perform a regular authentication.

Password: Enter the password of the test user.

Authenticate Example User: Click the *Test* button to start the authentication test for the test user. This verifies that all server settings are correct, the server is up and accepting connections, and users can be successfully authenticated.

3. **Click Save.**

The server will be displayed in the *Servers* list.

5.6.2.3 LDAP

LDAP, an abbreviation for *Lightweight Directory Access Protocol*, is a networking protocol for querying and modifying directory services based on the X.500 standard. Astaro Security Gateway uses the LDAP protocol to authenticate users for several of its services, allowing or denying access based on attributes or group memberships configured on the LDAP server.

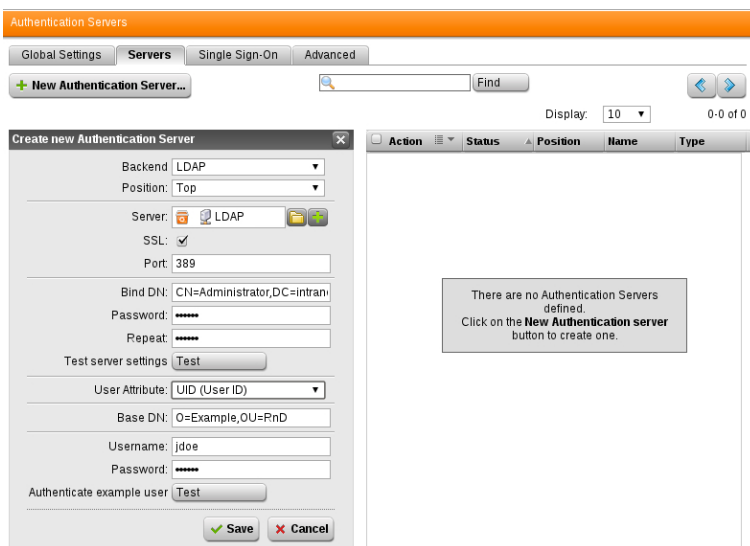


Figure 42 Authentication: Configuring LDAP

To configure LDAP authentication, proceed as follows:

1. **On the *Servers* tab, click *New Authentication Server*.**

The dialog box *Create New Authentication Server* opens.

2. **Make the following settings:**

Backend: Select *LDAP* as back-end directory service.

Position: Select a position for the back-end server. Back-end servers with lower numbers will be queried first. For better performance, make sure that the back-end server that is likely to get the most requests is on top of the list.

Server: Select (or add) an LDAP server.

SSL: Select this option to enable SSL data transfer. The *Port* will then change from 389 (LDAP) to 636 (Idaps = LDAP over SSL).

Port: Enter the port of the LDAP server. By default, this is port 389.

Bind DN: The *Distinguished Name* (DN) of the user to bind to the server with. This user is mandatory. For security reasons, anonymous queries to the LDAP server are not supported. Note that the user must have sufficient

privileges to obtain all relevant user object information from the LDAP server in order to authenticate users. LDAP users, groups, and containers can be specified by the full distinguished name in LDAP notation, using commas as delimiters (e.g., `CN=administrator,DC=intranet,DC=example,DC=com`).

Password: Enter the password of the bind user (second time for verification).

Test Server Settings: Pressing the *Test* button performs a bind test with the configured server. This verifies that the settings in this tab are correct, and the server is up and accepts connections. The button is only available when you have saved the server settings by clicking the *Apply* button.

User Attribute: Select the user attribute that is to be used as the filter for searching the LDAP directory. The user attribute contains the actual login name each user is prompted for, for example by remote access services. The following user attributes can be selected:

- CN (Common Name)
- SN (Surname)
- UID (User ID)

If usernames in your LDAP directory are not stored in any of these forms, select `<<Custom>>` from the list and enter your custom attribute into the *Custom* field below. Note that this attribute must be configured on your LDAP directory.

Base DN: The starting point relative to the root of the LDAP tree where the users are included who are to be authenticated. Note that the base DN must be specified by the full distinguished name (FDN) in LDAP notation, using commas as delimiters (e.g., `O=Example,OU=RnD`). Base DN may be empty. In this case, the base DN is automatically retrieved from the directory.

Username: Enter the username of a test user to perform a regular authentication.

Password: Enter the password of the test user.

Authenticate Example User: Click the *Test* button to start the authentication test for the test user. This verifies that all server settings are cor-

rect, the server is up and accepting connections, and users can be successfully authenticated.

3. **Click Save.**

The server will be displayed in the *Servers* list.

5.6.2.4 RADIUS

RADIUS, the acronym of *Remote Authentication Dial In User Service* is a widespread protocol for allowing network devices such as routers to authenticate users against a central database. In addition to user information, RADIUS can store technical information used by network devices, such as supported protocols, IP addresses, routing information, and so on. This information constitutes a user profile, which is stored in a file or database on the RADIUS server.

The RADIUS protocol is very flexible, and servers are available for most operating systems. The RADIUS implementation on the ASG allows you to configure access rights on the basis of proxies and users. Before you can use RADIUS authentication, you must have a running RADIUS server on the network. As passwords are transmitted in clear text (unencrypted), place the RADIUS server inside the same network as your ASG and make sure that the ASG and server are on the same switch.

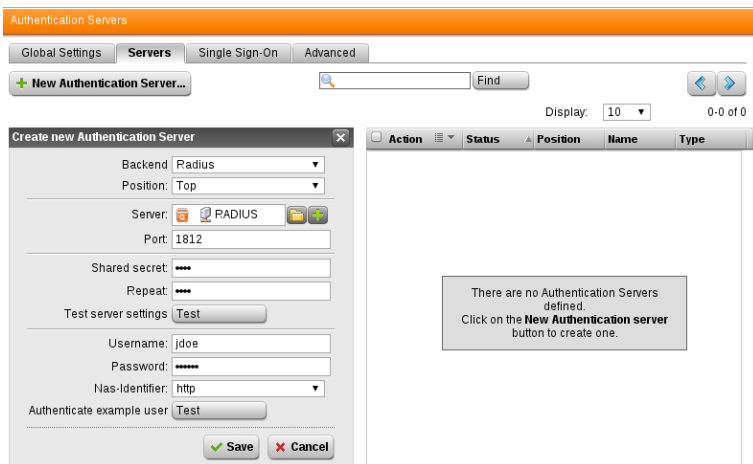


Figure 43 Authentication: Configuring RADIUS

To configure RADIUS authentication, proceed as follows:

1. **On the *Servers* tab, click *New Authentication Server*.**

The dialog box *Create New Authentication Server* opens.

2. **Make the following settings:**

Backend: Select *RADIUS* as back-end directory service.

Position: Select a position for the back-end server. Back-end servers with lower numbers will be queried first. For better performance, make sure that the back-end server that is likely to get the most requests is on top of the list.

Server: Select (or add) a RADIUS server.

Port: Enter the port of the RADIUS server. By default, this is port 1812.

Shared Secret: The shared secret is a text string that serves as a password between a RADIUS client and a RADIUS server. Enter the shared secret (second time for verification).

Test Server Settings: Pressing the *Test* button performs a bind test with the configured server. This verifies that the settings in this tab are correct, and the server is up and accepts connections.

Username: Enter the username of a test user to perform a regular authentication.

Password: Enter the password of the test user.

NAS Identifier: Select the appropriate NAS identifier from the list. For more information see the Note and the table below.

Authenticate Example User: Click the *Test* button to start the authentication test for the test user. This verifies that all server settings are correct, the server is up and accepting connections, and users can be successfully authenticated.

3. **Click *Save*.**

The new server will be displayed in the *Servers* list.

Note - Each user authentication service of Astaro Security Gateway such as PPTP or L2TP querying the RADIUS server sends a different identifier (NAS identifier) to the RADIUS server. For example, the PPTP service sends the NAS identifier `pptp` to the RADIUS server when trying to authenticate this user. That way,

the various services can be differentiated on the RADIUS server, which is useful for authorization purposes, that is, the granting of specific types of service to a user. Below you can find the list of user authentication services and their corresponding NAS identifier.

User Authentication Service	NAS Identifier
SSL VPN	ssl
PPTP	pptp
IPsec	ipsec
L2TP over IPsec	l2tp
SMTP proxy	smtp
User Portal	portal
WebAdmin	webadmin
SOCKS proxy	socks
Web Filter	http
Authentication Client	agent

Table 1: RADIUS NAS Identifiers

5.6.2.5 TACACS+

TACACS+ (the acronym of *Terminal Access Controller Access Control System*) is a proprietary protocol by Cisco Systems, Inc. and provides detailed accounting information and administrative control over authentication and authorization processes. Whereas RADIUS combines authentication and authorization in a user profile, TACACS+ separates these operations. Another difference is that TACACS+ utilizes the TCP protocol (port 49) while RADIUS uses the UDP protocol.

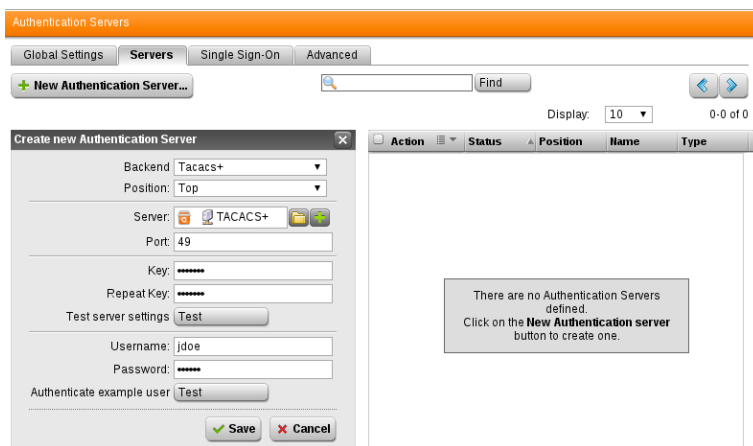


Figure 44 Authentication: Configuring TACACS+ User Authentication

To configure TACACS+ authentication, proceed as follows:

1. **On the Servers tab, click *New Authentication Server*.**

The dialog box *Create New Authentication Server* opens.

2. **Make the following settings:**

Backend: Select *TACACS+* as back-end directory service.

Position: Select a position for the back-end server. Back-end servers with lower numbers will be queried first. For better performance, make sure that the back-end server that is likely to get the most requests is on top of the list.

Server: Select (or add) a TACACS+ server.

Port: Enter the port of the TACACS+ server. By default, this is port 49.

Key: Enter the authentication and encryption key for all TACACS+ communication between Astaro Security Gateway and the TACACS+ server. The value for the key to be entered here should match the one configured on the TACACS+ server. Enter the key (second time for verification).

Test Server Settings: Pressing the *Test* button performs a bind test with the configured server. This verifies that the settings in this tab are correct, and the server is up and accepts connections. The button is only available when you have saved the server settings by clicking the *Apply* button.

Username: Enter the username of a test user to perform a regular authentication.

Password: Enter the password of the test user.

Authenticate Example User: Click the *Test* button to start the authentication test for the test user. This verifies that all server settings are correct, the server is up and accepting connections, and users can be successfully authenticated.

3. Click Save.

The server will be displayed in the *Servers* list.

5.6.3 Single Sign-On

On the *Definitions & Users > Authentication Servers > Single Sign-On* tab you can configure single sign-on functionality for Active Directory and/or eDirectory.

The screenshot shows the 'Authentication Servers' configuration window with the 'Single Sign-On' tab selected. The window is divided into two main sections: 'Active Directory Single-Sign-On (SSO)' and 'eDirectory Single-Sign-On (SSO)'.
 In the 'Active Directory' section, the status is 'Joined domain VWIN1.VINET.QA'. There are input fields for 'Domain' (VWIN1.VINET.QA), 'Admin username' (Administrator), 'Password' (masked with asterisks), and 'Repeat' (masked with asterisks). A green 'Apply' button is at the bottom right.
 In the 'eDirectory' section, the status is 'SSO is not used in any http profiles.'. There is a 'Server' dropdown menu currently showing 'no servers available'. Below it is a 'Sync Interval' field set to '20'. A green 'Apply' button is at the bottom right.

Figure 45 Authentication: Configuring Single Sign-On

Active Directory Single Sign-On (SSO)

Note that the Active Directory SSO facility is currently only used with the Web Filter to provide single sign-on with browsers that support NTLMv2 or Kerberos authentication.

To activate the single sign-on functionality, the ASG must join the Active Directory domain. In order for the domain joining to work, the following prerequisites must be met:

- The time zone on the gateway and the domain controller (DC) must be the same.
- There MUST NOT be a time difference of more than five minutes between the gateway clock and the DC clock.
- The ASG hostname must exist in the ADDNS system.
- The ASG must use the AD DNS as forwarder, or must have a DNS request route for the AD domain which points to the AD DNS server.

To configure Active Directory SSO, do the following:

1. **Create an Active Directory server on the Servers tab.**

2. **Make the following settings:**

Domain: Name of the domain (for example `intranet.mycompany.com`). The ASG searches all DCs retrievable via DNS.

Admin Username: User with administrative privileges who is allowed to add computers to that domain (usually "Administrator").

Password: The password of the admin user (second time for verification).

3. **Click Apply.**

Your settings will be saved.

Note on Kerberos authentication support: In order for opportunistic SSO Kerberos support to work, the clients MUST use the FQDN hostname of the ASG in their proxy settings—using the IP address will not work. NTLMv2 mode is not affected by this requirement, and will automatically be used if it is not met, or if the browser does not support Kerberos authentication.

eDirectory Single Sign-On (SSO)

Here, you can configure SSO for eDirectory. If you have configured *eDirectory SSO* as authentication method in *Web Security > Web Filtering*, the eDirectory server selected here will be used.

To configure eDirectory SSO, do the following:

1. **Create an eDirectory server on the Servers tab.**
2. **Select an eDirectory server.**
Select the eDirectory server from the drop-down list for which you want to enable SSO.
3. **Click *Apply*.**
Your settings will be saved.

5.6.4 Advanced

Password Complexity

Using this option, you can force the use of strong passwords for administrators or locally registered users having administrative privileges. You can configure password complexity to adhere to the following security requirements:

- Minimum password length, default is eight characters
- Require at least one lowercase character
- Require at least one uppercase character
- Require at least one numeral
- Require at least one non-alphanumeric character

To enable the selected password properties select the *Require complex passwords* checkbox and click *Apply*.

Prefetch Directory Users

Users from eDirectory or Active Directory can be synchronized with the ASG. This will pre-create user objects on the ASG such that these user objects already exist, when the user logs in. The synchronization process can run weekly or daily.

To enable prefetching, make the following settings:

Server: The drop-down list contains servers that have been created on the *Servers* tab. Select a server for which you want to enable prefetching.

Prefetch Interval: Select an interval to prefetch users. To run the synchronization weekly, select the day of the week when synchronization should start. To run the synchronization daily, select *Daily*.

Prefetch Time: Select a time to prefetch users.

eDirectory/Active Directory Groups: To specify which groups should be pre-created, enter the groups here. You can use the integrated LDAP browser to select these groups.

Enable Backend Sync on Login (optional): Select this option if user information shall be fetched from the directory during login of an yet unknown user.

Click *Apply* to save your settings.

Prefetch Now: Click this button to start prefetching immediately.

Open: Click this button to open the prefetch live log.

6 Interfaces & Routing

This chapter describes how to configure interfaces and network-specific settings in Astaro Security Gateway. The *Network Statistics* page in WebAdmin provides an overview of today's top ten accounting services, top source hosts, and concurrent connections. Each of the sections contains a *Details* link. Clicking the link redirects you to the respective reporting section of WebAdmin, where you can find more statistical information.

The following topics are included in this chapter:

- [Interfaces](#)
- [Bridging](#)
- [Quality of Service \(QoS\)](#)
- [Uplink Monitoring](#)
- [IPv6](#)
- [Static Routing](#)
- [Dynamic Routing \(OSPF\)](#)
- [Border Gateway Protocol](#)
- [Multicast Routing \(PIM-SM\)](#)

6.1 Interfaces

A gateway requires at least two network interface cards to connect an internal LAN to an external one (e.g., the Internet) in a secure fashion. In the following examples, the network card `eth0` is always the interface connected to the internal network. Network card `eth1` is the interface connected to the external network (for example, to the Internet). These interfaces are also called the trusted and untrusted interfaces, respectively.

Network cards are automatically recognized during the installation. With the Software Appliance, if new network cards are added later, a new installation will be necessary. To reinstall the system, simply make a backup of your configuration, install the software, and restore your backup.

The gateway must be the only point of contact between internal and external networks. All data must pass through the ASG. We strongly recommend against connecting both internal and external interfaces to one hub or switch, except if the switch is configured as a VLAN switch. There might be wrong ARP resolutions (Address Resolution Protocol), also known as "ARP clash", which cannot be administered by all operating systems (for example, such as those from Microsoft). Therefore, one physical network segment has to be used for each gateway network interface.

The *Interfaces* menu allows you to configure and manage all network cards installed on the ASG and also all interfaces with the external network (Internet) and interfaces to the internal networks (LAN, DMZ).

Note - While planning your network topology and configuring the ASG, take care to note which interface is connected to which network. In most configurations, the network interface with SysID `eth1` is chosen as the connection to the external network. In order to install the high availability (HA) failover, the selected network cards on both systems must have the same SysID. Installing the HA failover is described in more detail on page [High Availability](#).

The following sections explain how to manage and configure different interface types on the tabs *Interfaces*, *Additional Addresses*, *Link Aggregation*, *Uplink Balancing*, *Multipath Rules*, and *Hardware*.

6.1.1 Interfaces

On the *Interfaces* tab you can configure network cards and virtual interfaces. The list shows the already defined interfaces with their symbolic name, hardware device, and current addresses. The interface status is also displayed. By clicking the status icon, you can activate and deactivate interfaces.

Tip - When you click the Info icon of an interface definition in the *Interfaces* list, you can see all configuration options in which the interface definition is used.

Newly added interfaces may show up as *Down* while they are in the process of being set up. You can select to edit and delete interfaces by clicking the respective buttons.

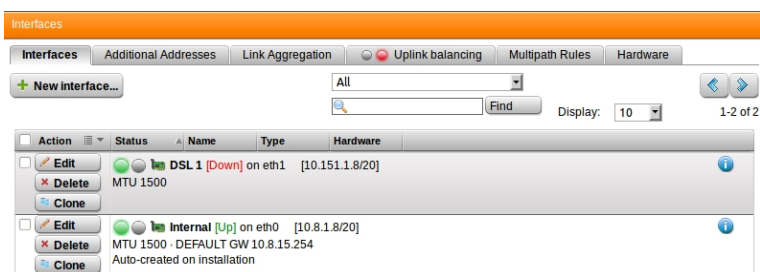


Figure 46 Interfaces: Configuring Interfaces

6.1.1.1 Automatic Interface Network Definitions

Each interface on your gateway has a symbolic name and a hardware device assigned to it. The symbolic name is used when you reference an interface in other configuration settings. For each interface, a matching set of network definitions is automatically created by the gateway:

- A definition containing the current IP address of the interface, its name consisting of the interface name and the (*Address*) suffix.
- A definition containing the network attached to the interface, its name consisting of the interface name and the (*Network*) suffix. This definition is not created for *Point-to-Point* (PPP) type interfaces.
- A definition containing the broadcast address of the interface, its name consisting of the interface name and the (*Broadcast*) suffix. This definition is not created for *Point-to-Point* (PPP) type interfaces.

When the interface uses a dynamic address allocation scheme (such as DHCP or remote assignment), these definitions are automatically updated. All settings referring to these definitions, for example firewall and NAT rules, will also automatically be updated with the changed addresses.

One interface with the symbolic name *Internal* is already predefined. It is the management interface and will typically be used as the "internal" gateway interface. If you want to rename it, you should do so right after the installation.

6.1.1.2 Interface Types

The following list shows which interface types can be added to the gateway, and what type of hardware is needed to support them:

3G/UMTS: This is an interface based on a USB modem stick. The stick needs to be plugged in and the ASG needs to be rebooted before interface creation.

Ethernet Standard: This is a normal Ethernet interface, with 10, 100, or 1000 Mbit/s bandwidth.

Ethernet VLAN: VLAN (Virtual LAN) is a method to have multiple layer-2 separated network segments on a single hardware interface. Every segment is identified by a "tag", which is just an integer number. When you add a VLAN interface, you will create a "hardware" device that can be used to add additional interfaces (aliases), too. PPPoE and PPPoA devices cannot be run over VLAN virtual hardware.

Cable Modem (DHCP): This is a standard Ethernet interface with DHCP.

DSL (PPPoE): PPP over Ethernet. A DSL PPPoE device lets you attach your gateway to *PPP-over-Ethernet* compatible DSL lines. These devices require a dedicated Ethernet connection (they cannot co-exist with other interfaces on the same hardware). You must attach a DSL modem to the interfaces network segment. The network parameters for these device types can be assigned by the remote station (typically, your ISP). In addition, you need to enter username and password for your ISP account.

DSL (PPPoA/PPTP): PPP over ATM. A DSL PPPoA device lets you attach your gateway to *PPP-over-ATM* compatible DSL lines. These devices use the PPT protocol to tunnel IP packets. They require a dedicated Ethernet connection (they cannot co-exist with other interfaces on the same hardware). You must attach a DSL modem to the interfaces network segment. The network parameters for these device types can be assigned by the remote station (typically, your ISP). In addition, you need to enter username and password for your ISP account. You also need to enter the IP address of your modem. This address is usually hardwired in the modem and cannot be changed. To communicate with the modem, you have to enter a NIC IP address and netmask. The modem's IP address must be inside the network defined by these parameters. The *Ping Address* must be a host on the other side of the PPTP link that responds to ICMP ping requests. You can try to use the DNS server of your ISP. If this address cannot be pinged, the connection is assumed to be dead, and will be reinitiated.

Modem (PPP): This type of interface lets you connect the ASG to the Internet through a PPP modem. For the configuration you need a serial interface and an external modem on the ASG. And you also need the DSL access data including username and password. You will get these data from your (ISP).

6.1.1.3 3G/UMTS

To configure a network card for a standard Ethernet connection to an internal or external network, you must configure the network card with an IP address and net-mask.

To configure a standard Ethernet interface, proceed as follows:

1. **On the *Interfaces* tab, click *New Interface*.** The *Create New Interface* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the interface.

Type: Select *Ethernet Standard* from the drop-down list.

Hardware: Select a USB modem stick from the drop-down list. Note that you need to reboot after you plugged the USB stick in.

Network: Select the mobile network type, which is either *GSM/W-CDMA* or *CDMA*.

IPv4 Default GW (optional): Select this option if you want to use the default gateway of your provider.

PIN (optional): Enter the PIN of the SIM card if a PIN is configured.

APN Autoselect: (optional): By default, the APN (Access Point Name) used is retrieved from the USB modem stick. If you unselect the checkbox, enter APN information into the *APN* field.

Username/Password (optional): If required, enter a username and password for the mobile network.

Dial String (optional): If your provider uses a different dial string, enter it here. Default is *99#.

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

Init String: Enter the string to initialize the USB modem stick. Remember that it might become necessary to adjust the init string to the USB modem stick. In this case, the init string can be gathered from the associated USB

modem stick manual. If you do not have the required documentation available, keep the default setting *ATZ*.

Reset String: Enter the reset string for the USB modem stick. Keep in mind that it might be necessary to adjust the reset string to the USB modem stick. In this case you can gather it from the associated USB modem stick manual. If you do not have the required documentation available, keep the default setting *ATZ*.

MTU: Enter the maximum transmission unit for the interface in bytes. You must enter a value fitting your interface type here if you want to use traffic management. A sensible value for the interface type is entered by default. Changing this setting should only be done by technically adept users. Entering wrong values here can render the interface unusable. An MTU size greater than 1500 bytes must be supported by the network operator and the network card (e.g., Gigabit interface). By default, an MTU of 1500 bytes is set for the *3G/UMTS* interface type.

Asymmetric (optional): Select this option if your connection's uplink and downlink bandwidth are not identical and you want the Dashboard to reflect this. Then, two textboxes are displayed, allowing you to enter the maximum uplink bandwidth in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

Displayed Max (optional): Here you can enter the maximum downlink bandwidth of your connection, if you want the Dashboard to reflect it. The bandwidth can be given in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

4. **Click Save.**

The system will now check the settings for validity. After a successful check the new interface will appear in the interface list. The interface is not yet enabled (status icon is red).

5. **Enable the interface.**

Click the status icon to activate the interface.

The interface is now enabled (status icon is green). The interface might still be displayed as being *Down*. The system requires a short time to configure

Once the *Up* message appears, the interface is fully operable.

To show only interfaces of a certain type, select the type of the interfaces you want to have displayed from the drop-down list. To either edit or delete an interface, click the corresponding buttons.

6.1.1.4 Ethernet Standard

To configure a network card for a standard Ethernet connection to an internal or external network, you must configure the network card with an IP address and net-mask.

To configure a standard Ethernet interface, proceed as follows:

1. **On the *Interfaces* tab, click *New Interface*.** The *Create New Interface* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the interface.

Type: Select *Ethernet Standard* from the drop-down list.

Hardware: Select an interface from the drop-down list.

Tip - For an external connection (e.g., to the Internet) choose the network card with SysID eth1. Please note that one network card cannot be used as both an *Ethernet Standard* interface and a *PPP over Ethernet (PPPoE DSL)* or *PPTP over Ethernet (PPPoA DSL)* connection simultaneously.

IPv4/IPv6 Address: Enter the IP address of the interface.

Netmask: Select a network mask (IPv4) or enter an IPv6 network mask.

IPv4/IPv6 Default GW (optional): Select this option if you want to use a statically defined default gateway.

Default GW IP (optional): Enter the IP address of the default gateway.

Note – You can configure an interface to have an IPv4 and an IPv6 address simultaneously.

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

MTU: Enter the maximum transmission unit for the interface in bytes. You must enter a value fitting your interface type here if you want to use traffic management. A sensible value for the interface type is entered by default. Changing this setting should only be done by technically adept users. Entering wrong values here can render the interface unusable. An MTU size greater than 1500 bytes must be supported by the network operator and the network card (e.g., Gigabit interface). By default, an MTU of 1500 bytes is set for the *Ethernet Standard* interface type.

Proxy ARP: To enable the function, select the checkbox. By default, the *Proxy ARP* function is disabled (Off).

This option is available on broadcast-type interfaces. When you switch it on, the gateway will "attract" traffic on that interface for hosts "behind" it and pass it on. It will do that for all hosts that it has a direct interface route for. This allows you to build "transparent" network bridging while still doing fire-walling. Another use for this feature is when your ISP's router just puts your "official" network on its Ethernet interface (does not use a host route).

Asymmetric (optional): Select this option if your connection's uplink and downlink bandwidth are not identical and you want the Dashboard to reflect this. Then, two textboxes are displayed, allowing you to enter the maximum uplink bandwidth in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

Displayed Max (optional): Here you can enter the maximum downlink bandwidth of your connection, if you want the Dashboard to reflect it. The bandwidth can be given in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

4. **Click Save.**

The system will now check the settings for validity. After a successful check the new interface will appear in the interface list. The interface is not yet enabled (status icon is red).

5. **Enable the interface.**

Click the status icon to activate the interface.

The interface is now enabled (status icon is green). The interface might still be displayed as being *Down*. The system requires a short time to configure and load the settings. Once the *Up* message appears, the interface is fully operable.

To show only interfaces of a certain type, select the type of the interfaces you want to have displayed from the drop-down list. To either edit or delete an interface, click the corresponding buttons.

6.1.1.5 Ethernet VLAN

In order to connect the ASG to the virtual LANs, the system requires a network card with a tag-capable driver. A tag is a 4-byte header attached to packets as part of the Ethernet header. The tag contains the number of the VLAN that the packet should be sent to: the VLAN number is a 12-bit number, allowing up to 4095 virtual LANs. In WebAdmin this number is referred to as the *VLAN tag*.

Note - Astaro maintains a list of supported tag-capable network interface cards. The *Hardware Compatibility List (HCL)* is available at the [Astaro Knowledgebase](#). Use "HCL" as search term to locate the corresponding page.

To configure an Ethernet VLAN interface, proceed as follows:

1. **On the *Interfaces* tab, click *New Interface*.**
The *Create New Interface* dialog box opens.
2. **Make the following settings:**
 - Name:** Enter a descriptive name for the interface.
 - Type:** Select *Ethernet VLAN* from the drop-down list.
 - Hardware:** Select an interface from the drop-down list.
 - VLAN Tag:** Enter the VLAN tag to use for this interface.
 - IPv4/IPv6 Address:** Enter the IP address of the interface.
 - Netmask:** Select a network mask (IPv4) or enter an IPv6 network mask.
 - IPv4/IPv6 Default GW** (optional): Select this option if you want to use a statically defined default gateway.
 - Default GW IP** (optional): Enter the IP address of the default gateway.

Note – You can configure an interface to have an IPv4 and an IPv6 address simultaneously.

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

MTU: Enter the maximum transmission unit for the interface in bytes. You must enter a value fitting your interface type here if you want to use traffic management. A sensible value for the interface type is entered by default. Changing this setting should only be done by technically adept users. Entering wrong values here can render the interface unusable. An MTU size greater than 1500 bytes must be supported by the network operator and the network card (e.g., Gigabit interface). By default, an MTU of 1500 bytes is set for the *Ethernet VLAN* interface type.

Proxy ARP: To enable the function, select the checkbox. By default, the *Proxy ARP* function is disabled (Off).

This option is available on broadcast-type interfaces. When you switch it on, the gateway will "attract" traffic on that interface for hosts "behind" it and pass it on. It will do that for all hosts that it has a direct interface route for. This allows you to build "transparent" network bridging while still doing fire-walling. Another use for this feature is when your ISP's router just puts your "official" network on its Ethernet interface (does not use a host route).

Asymmetric (optional): Select this option if your connection's uplink and downlink bandwidth are not identical and you want the Dashboard to reflect this. Then, two textboxes are displayed, allowing you to enter the maximum uplink bandwidth in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

Displayed Max (optional): Here you can enter the maximum downlink bandwidth of your connection, if you want the Dashboard to reflect it. The bandwidth can be given in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

4. **Click Save.**

The system will now check the settings for validity. After a successful check the new interface will appear in the interface list. The interface is not yet enabled (status icon is red).

5. **Enable the interface.**

Click the status icon to activate the interface.

The interface is now enabled (status icon is green). The interface might still be displayed as being *Down*. The system requires a short time to configure and load the settings. Once the *Up* message appears, the interface is fully operable.

To show only interfaces of a certain type, select the type of the interfaces you want to have displayed from the drop-down list. To either edit or delete an interface, click the corresponding buttons.

6.1.1.6 Cable Modem (DHCP)

To configure a *Cable Modem (DHCP)* interface, proceed as follows:

1. **On the *Interfaces* tab, click *New Interface*.**

The *Create New Interface* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the interface.

Type: Select *Cable Modem (DHCP)* from the drop-down list.

Hardware: Select an interface from the drop-down list.

Tip - For an external connection (e.g., to the Internet) choose the network card with SysID `eth1`. Please note that one network card cannot be used as both a *Cable Modem (DHCP)* and a *PPP over Ethernet (PPPoE-DSL)* or *PPTP over Ethernet (PPPoA-DSL)* connection simultaneously.

IPv4 Default GW (optional): Select this option if you want to use the default gateway of your provider.

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

Hostname: If your ISP requires to receive the hostname of your system, enter it here.

MTU: Enter the maximum transmission unit for the interface in bytes. You must enter a value fitting your interface type here if you want to use traffic management. A sensible value for the interface type is entered by default. Changing this setting should only be done by technically adept users. Entering wrong values here can render the interface unusable. An MTU size greater than 1500 bytes must be supported by the network operator and the network card (e.g., Gigabit interface). By default, an MTU of 1500 bytes is set for the *Cable Modem* interface type.

Proxy ARP: To enable the function, select the checkbox. By default, the *Proxy ARP* function is disabled (Off).

This option is available on broadcast-type interfaces. When you switch it on, the gateway will "attract" traffic on that interface for hosts "behind" it and pass it on. It will do that for all hosts that it has a direct interface route for. This allows you to build "transparent" network bridging while still doing fire-wallling. Another use for this feature is when your ISP's router just puts your "official" network on its Ethernet interface (does not use a host route).

Asymmetric (optional): Select this option if your connection's uplink and downlink bandwidth are not identical and you want the Dashboard to reflect this. Then, two textboxes are displayed, allowing you to enter the maximum uplink bandwidth in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

Displayed Max (optional): Here you can enter the maximum downlink bandwidth of your connection, if you want the Dashboard to reflect it. The bandwidth can be given in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

4. **Click Save.**

The system will now check the settings for validity. After a successful check the new interface will appear in the interface list. The interface is not yet enabled (status icon is red).

5. **Enable the interface.**

Click the status icon to activate the interface.

The interface is now enabled (status icon is green). The interface might still be displayed as being *Down*. The system requires a short time to configure and load the settings. Once the *Up* message appears, the interface is fully operable.

To show only interfaces of a certain type, select the type of the interfaces you want to have displayed from the drop-down list. To either edit or delete an interface, click the corresponding buttons.

6.1.1.7 DSL (PPPoE)

The configuration will require the DSL connection information, including user-name and password, provided by your ISP. VDSL is also supported by this interface type.

Note - Once the DSL connection is activated, the ASG will be connected to your ISP 24 hours a day. You should therefore ensure that your ISP bills on a flat-rate or bandwidth-based system rather than based on connection time.

To configure a DSL (PPPoE) interface, proceed as follows:

1. **On the *Interfaces* tab, click *New Interface*.**

The *Create New Interface* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the interface.

Type: Select *DSL (PPPoE)* from the drop-down list.

Hardware: Select an interface from the drop-down list.

VDSL: Select this checkbox if and only if your connection is a VDSL connection. The *MTU* changes to 1476.

Static PPPoE IP (optional): Select the checkbox if you have a static IP address assigned by your ISP, and enter the IP address and corresponding netmask into the appearing textboxes.

- **IPv4/IPv6 Address:** Enter the IP address of the interface.
- **Netmask:** Select a netmask from the drop-down list and/or enter an IPv6 netmask.

Note – You can configure an interface to have an IPv4 and an IPv6 address simultaneously.

IPv4/IPv6 Default GW (optional): Select this option if you want to use the default gateway of your provider.

Username: Enter the username, provided by your ISP.

Password: Enter the password, provided by your ISP.

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

Daily Reconnect: Define at what time you want the connection to close and reopen. You can select either *Never* or pick a specific time.

Reconnect Delay: Here you can change the reconnect delay. By default, it is set to *5 Seconds*. If your ISP demands a longer delay you can set it to *One Minute* or *Fifteen Minutes*.

MTU: Enter the maximum transmission unit for the interface in bytes. You must enter a value fitting your interface type here if you want to use traffic management. A sensible value for the interface type is entered by default. Changing this setting should only be done by technically adept users. Entering wrong values here can render the interface unusable. An MTU size greater than 1500 bytes must be supported by the network operator and the network card (e.g., Gigabit interface). By default, an MTU of 1492 bytes is set for the *DSL (PPPoE)* interface type.

Asymmetric (optional): Select this option if your connection's uplink and downlink bandwidth are not identical and you want the Dashboard to reflect this. Then, two textboxes are displayed, allowing you to enter the maximum uplink bandwidth in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

Displayed Max (optional): Here you can enter the maximum downlink bandwidth of your connection, if you want the Dashboard to reflect it. The bandwidth can be given in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

4. **Click Save.**

The system will now check the settings for validity. After a successful check the new interface will appear in the interface list. The interface is not yet enabled (status icon is red).

5. **Enable the interface.**

Click the status icon to activate the interface.

The interface is now enabled (status icon is green). The interface might still be displayed as being *Down*. The system requires a short time to configure and load the settings. Once the *Up* message appears, the interface is fully operable.

To show only interfaces of a certain type, select the type of the interfaces you want to have displayed from the drop-down list. To either edit or delete an interface, click the corresponding buttons.

6.1.1.8 DSL (PPPoA/PPTP)

To configure a connection using the *PPP over ATM Protocol* (PPPoA), you will need an unused Ethernet interface on the ASG as well as an external ADSL modem with an Ethernet port. The connection to the Internet proceeds through two separate connections. Between the ASG and the ADSL modem, a connection using the *PPTP over Ethernet Protocol* is established. The ADSL modem is, in turn, connected to the ISP using the *PPP over ATM Dialing Protocol*.

The configuration will require the DSL connection information, including user-name and password, provided by your Internet Service Provider (ISP).

Note - Once the DSL connection is activated, the ASG will be connected to your ISP 24 hours a day. You should therefore ensure that your ISP bills on a flat-rate or bandwidth-based system rather than based on connection time.

To configure a DSL (PPPoA/PPTP) interface, proceed as follows:

1. **On the *Interfaces* tab, click *New Interface*.** The *Create New Interface* dialog box opens.
2. **Make the following settings:**
Name: Enter a descriptive name for the interface.
Type: Select *DSL (PPPoA/PPTP)* from the drop-down list.

Hardware: Select an interface from the drop-down list.

IPv4 Default GW (optional): Select this option if you want to use the default gateway of your provider.

Username: Enter the username, provided by your ISP.

Password Enter the password, provided by your ISP.

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

Modem IP: Enter the IP address of your ADSL modem here. This address will usually be provided by your ISP or the modem hardware and cannot be changed. Example: 10.0.0.138 (with AonSpeed).

NIC Address: Enter the IP address of the network card on the ASG which is attached to the modem here. This address must be in the same subnet as the modem. Example: 10.0.0.140 (with AonSpeed).

NIC Netmask: Enter the network mask to use here.
Example: 255.255.255.0 (with AonSpeed).

Ping Address (optional): Enter the IP address of a host on the Internet that responds to ICMP ping requests. In order to test the connection between the ASG and the external network, you have to enter an IP address of a host on the other side of the PPTP link. You can try to use the DNS server of your ISP. The ASG will send ping requests to this host: if no answer is received, the connection will be broken.

MTU: Enter the maximum transmission unit for the interface in bytes. You must enter a value fitting your interface type here if you want to use traffic management. A sensible value for the interface type is entered by default. Changing this setting should only be done by technically adept users. Entering wrong values here can render the interface unusable. An MTU size greater than 1500 bytes must be supported by the network operator and the network card (e.g., Gigabit interface). By default, an MTU of 1492 bytes is set for the *DSL (PPPoA)* interface type.

Daily Reconnect: Define at what time you want the connection to close and reopen. You can select either *Never* or pick a specific time.

Reconnect Delay: Here you can change the reconnect delay. By default, it is set to *5 Seconds*. If your ISP demands a longer delay you can set it to *One Minute* or *Fifteen Minutes*.

Asymmetric (optional): Select this option if your connection's uplink and downlink bandwidth are not identical and you want the Dashboard to reflect this. Then, two textboxes are displayed, allowing you to enter the maximum uplink bandwidth in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

Displayed Max (optional): Here you can enter the maximum downlink bandwidth of your connection, if you want the Dashboard to reflect it. The bandwidth can be given in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

4. **Click Save.**

The system will now check the settings for validity. After a successful check the new interface will appear in the interface list. The interface is not yet enabled (status icon is red).

5. **Enable the interface.**

Click the status icon to activate the interface.

The interface is now enabled (status icon is green). The interface might still be displayed as being *Down*. The system requires a short time to configure and load the settings. Once the *Up* message appears, the interface is fully operable.

To show only interfaces of a certain type, select the type of the interfaces you want to have displayed from the drop-down list. To either edit or delete an interface, click the corresponding buttons.

6.1.1.9 Modem (PPP)

For the configuration you need a serial interface and an external PPP modem on the ASG. And you also need the DSL access data including username and password. You will get these data from your Internet Service Provider (ISP).

To configure a *Modem (PPP)* interface, proceed as follows:

1. **On the *Interfaces* tab, click *New Interface*.**

The *Create New Interface* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the interface.

Type: Select *Modem (PPP)* from the drop-down list.

Hardware: Select an interface from the drop-down list.

IPv4 Default GW (optional): Select this option if you want to use the default gateway of your provider.

Username: Enter the username, provided by your ISP.

Password: Enter the password, provided by your ISP.

Dial String: Enter the phone number. Example: 5551230

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

Line Speed: Set the speed in bits per seconds for the connection between the ASG and the modem. Common values are 57,600 Bits/s and 115,200 Bits/s.

Flow Control: Select the method to control the data flow.

If the data is transferred via the serial connection it might happen that the system cannot process incoming data fast enough. To ensure that no data is lost, this method of controlling the data flow becomes necessary. With the serial connection two methods are available:

- *Hardware* signals
- *Software* signals

Since in a PPP connection all eight bits are used for the data transfer line and the transferred data contains the bytes of the command signs *Control S* and *Control Q*, we recommend keeping the default setting *Hardware* and using a serial connection cable.

Init String: Enter the string to initialize the modem. Remember that it might become necessary to adjust the init string to the modem. In this case, the init string can be gathered from the associated modem manual. If you do not have the required documentation available, keep the default setting *ATZ*.

Reset String: Enter the reset string for the modem. Keep in mind that it might be necessary to adjust the reset string to the modem. In this case you can gather it from the associated modem manual. If you do not have the required documentation available, keep the default setting *ATZ*.

MTU: Enter the maximum transmission unit for the interface in bytes. You must enter a value fitting your interface type here if you want to use traffic management. A sensible value for the interface type is entered by default. Changing this setting should only be done by technically adept users. Entering wrong values here can render the interface unusable. An MTU size greater than 1500 bytes must be supported by the network operator and the network card (e.g., Gigabit interface). By default, an MTU of 1492 bytes is set for the *Modem (PPP)* interface type.

Asymmetric (optional): Select this option if your connection's uplink and downlink bandwidth are not identical and you want the Dashboard to reflect this. Then, two textboxes are displayed, allowing you to enter the maximum uplink bandwidth in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

Displayed Max (optional): Here you can enter the maximum downlink bandwidth of your connection, if you want the Dashboard to reflect it. The bandwidth can be given in either MB/s or KB/s. Select the appropriate unit from the drop-down list.

4. **Click Save.**

The system will now check the settings for validity. After a successful check the new interface will appear in the interface list. The interface is not yet enabled (status icon is red).

5. **Enable the interface.**

Click the status icon to activate the interface.

The interface is now enabled (status icon is green). The interface might still be displayed as being *Down*. The system requires a short time to configure and load the settings. Once the *Up* message appears, the interface is fully operable.

To show only interfaces of a certain type, select the type of the interfaces you want to have displayed from the drop-down list. To either edit or delete an interface, click the corresponding buttons.

6.1.2 Additional Addresses

One network card can be configured with additional IP addresses (also called *aliases*). This function allows you to manage multiple logical networks on one physical network card. It can also be used to assign further addresses to an ASG running NAT (Network Address Translation).

To configure additional addresses on standard Ethernet interfaces, proceed as follows:

1. **On the *Additional Addresses* tab, click *New Additional Address*.**

The *Create New Additional Address* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the new additional address.

On Interface: Select an interface from the drop-down list to which the address is to be assigned.

IPv4/IPv6 Address: Enter the IP address of the interface.

Netmask: Select a netmask from the drop-down list and/or enter an IPv6 netmask.

Note – You can configure an interface to have an IPv4 and an IPv6 address simultaneously.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The system will now check the settings for validity. After a successful check the new interface will appear in the interface list. The interface is not yet enabled (status icon is red).

4. **Enable the additional address.**

Click the status icon to activate the additional address.

The additional address is now enabled (status icon is green). The additional address might still be displayed as being *Down*. The system requires a short time to configure and load the settings. Once the *Up* message appears, the additional address is fully operable.

To either edit or delete an additional address, click the corresponding buttons.

6.1.3 Link Aggregation

Link aggregation, which is also known as "port trunking" or "NIC bonding", allows you to aggregate multiple Ethernet network ports into one virtual interface. The aggregated ports appear as a single IP address to your system. Link aggregation is useful to increase the link speed beyond the speed of any one single NIC or to provide basic failover and fault tolerance by redundancy in the event any port or switch fails. All traffic that was being routed over the failed port or switch is automatically re-routed to use one of the remaining ports or switches. This failover is completely transparent to the system using the connection.

Note - In a high-availability environment, Ethernet connections can even be on different HA units.

You can define up to four different link aggregation groups. Per group a maximum of four Ethernet interfaces is allowed. A group can consist of only one interface.

To create a link aggregation group (LAG), proceed as follows:

1. **For each LAG, select the interfaces you want to add.**

A group can consist of a configured interface and/or one or more unconfigured interfaces.

To use a configured interface, select it from the *Convert Interface* drop-down list. To use unconfigured interfaces, select the respective checkbox(es).

2. **Enable the LAG.**

Activate a group by clicking the button *Enable this group*.

Once the link aggregation group has been configured, a new LAG interface (e.g., `lag0`) becomes available for selection if you are going to create an interface definition on the *Interfaces* tab. On top of the bonding interface you can create one of the following:

- Ethernet Standard
- Ethernet VLAN
- Cable Modem (DHCP)
- Alias interfaces

To disable a LAG, clear the checkboxes of the interfaces that make up the LAG, click *Update this Group*, and confirm the warning message. The status of the LAG interface is shown on the *Support > Advanced > Interfaces Table* tab.

6.1.4 Uplink Balancing

With the uplink balancing function you can combine more than one Internet uplink, either for having backup uplinks available or for using load balancing among multiple uplinks. Combining up to eight different uplinks is supported.

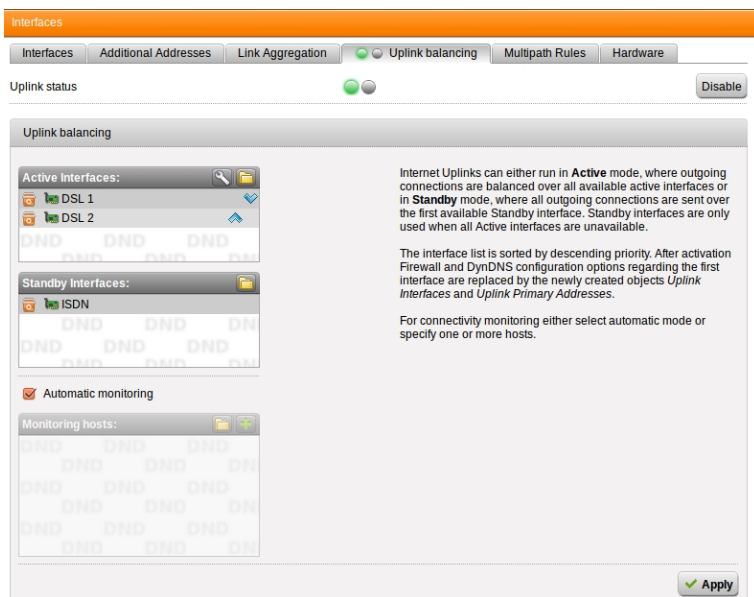


Figure 47 Interfaces: Configuring Uplink Balancing

To use uplink balancing, proceed as follows:

1. **Enable uplink balancing.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Uplink Balancing* area becomes editable.

2. **Select active interfaces.**

Add one or more interfaces by clicking the folder icon and dragging interfaces from the object list. With multiple interfaces, traffic will be automatically balanced between them. If one of the interfaces is unavailable, traffic will be taken over by the remaining interface(s).

Note - The sequence of the interfaces is important, both with active and standby interfaces: In case of an unresponsive server, the first interface following this interface is selected. You can change the interface sequence by clicking the blue arrows in the respective box.

Using the Scheduler button on the box header, you can set individual balancing behavior and interface persistence of the active interfaces:

Weight: Weight can be set from 0 to 100 and specifies how much traffic is processed by an interface relative to all other interfaces. A weighted round robin algorithm is used for this, a higher value meaning that more traffic is routed to the respective interface. The values are evaluated relative to each other so they need not add up to 100. Instead, you can have a configuration for example, where interface 1 has value 100, interface 2 has value 50 and interface 3 has value 0. Here, interface 2 gets only half the traffic of interface 1, whereas interface 3 only comes into action when none of the other interfaces is available. A value of zero means that always another interface with a higher value is chosen if available.

Persistence: Interface persistence is a technique which ensures that subsequent connections from a client are always routed over the same uplink interface. Persistence has a default timeout of one hour.

3. **Select standby interfaces** (optional).

Here, you can optionally add failover interfaces that should only come into action if all active interfaces become unavailable.

Note - You can define a maximum of 32 interfaces of active and standby interfaces together.

4. **Enable monitoring** (optional):

By default *Automatic Monitoring* is enabled to detect possible interface failures. This means that the health of all uplink balancing interfaces is monitored by having them ping a random host on the Internet at an interval of 15 seconds. If a host does not ping anymore the respective interface is regarded as dead and not used anymore for distribution.

You can define the hosts to ping by the server pool yourself:

1. **Deselect the *Automatic Monitoring* checkbox.**

The *Monitoring Hosts* box becomes editable.

2. **Add hosts to ping.**

Select or add one or more hosts that you want to ping instead of random hosts.

5. **Click *Apply*.**

Your settings will be saved.

A new virtual network interface named *Uplink Interfaces* is automatically created and now available for use by other functions of the Astaro Security Gateway, e.g. IPsec rules. The virtual network interface *Uplink Interfaces* comprises all uplink interfaces added to the interface list.

Additionally, a new network group named *Uplink Primary Addresses* is automatically created and now available for use by other functions of the Astaro Security Gateway, e.g. firewall rules. It refers to the primary addresses of all *Uplink Interfaces*.

In case of an interface failure, open VPN tunnels can be automatically re-established over the next available interface provided DynDNS is used or the remote server accepts the IP addresses of all uplink interfaces. As a prerequisite, the IPsec rule must use the *Uplink Interfaces* as *Local Interface*.

6.1.5 Multipath Rules

On the *Interfaces & Routing > Interfaces > Multipath Rules* tab you can set rules for uplink balancing. The rules are applied to the active interfaces on the *Uplink Balancing* tab. If all active interfaces fail and the passive interfaces take over, the multipath rules are then applied to the passive interfaces. Of course, the rules are only applied when there is more than one interface (active or passive) to balance traffic between. Generally, all services are balanced without the need of creating

multipath rules. Only, multipath rules allow you to additionally define the balancing of specific traffic.

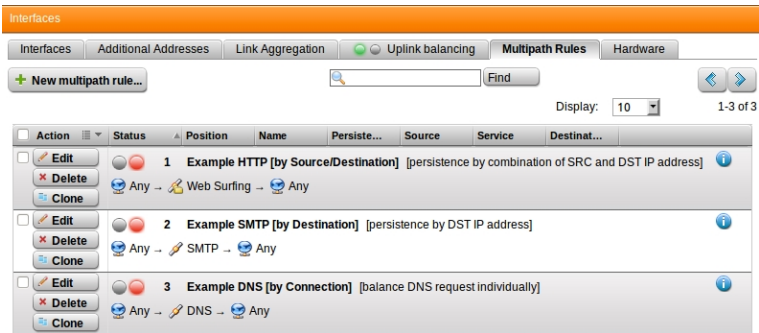


Figure 48 Interfaces: Multipath Rules

To create a multipath rule, proceed as follows:

1. **On the *Multipath Rules* tab, click *New Multipath Rule*.**

The *Create New Multipath Rule* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the multipath rule.

Source: Select or add a source IP address or network to match.

Service: Select or add the network service to match.

Destination: Select or add a destination IP address or network that should be used for routing.

Itf. Persistence: *Interface persistence* is a technique which ensures that subsequent connections from a client are always routed over the same uplink interface. Persistence has a default timeout of one hour. You can decide what should be the basis for persistence:

- **By Connection:** Each connection is balanced independently.
- **By Source (Default):** Balancing is based on the source IP address.
- **By Destination:** Balancing is based on the destination IP address.
- **By Source/Destination:** Balancing is based on the source/destination IP address combination.

- **By Interface:** Select an interface from the *Bind Interface* drop-down list. All traffic applying to the rule will be routed over this interface. In case of an interface failure and no other matching rules the connection falls back to default behavior.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new multipath rule is added to the *Multipath Rules* list. To either edit or delete a rule, click the corresponding buttons.

4. **Enable the rule.**

The new multipath rule is disabled by default. Click the status icon to activate the rule.

The rule is now enabled (status icon is green).

6.1.6 Hardware

The *Interfaces & Routing > Interfaces > Hardware* tab lists all configured interfaces showing information such as the Ethernet mode of operation or the MAC address. For each interface, autonegotiation can be enabled or disabled.

Autonegotiation: Usually, the Ethernet mode of operation (100BASE-T full-duplex, 100BASE-T full-duplex, 100BASE-T half-duplex, 10BASE-T full-duplex, 10BASE-T half-duplex, and so on) between two network devices is automatically negotiated by choosing the best possible mode of operation supported by both devices, where higher speed (e.g. 1000 Mbit/sec) is preferred over lower speed (e.g. 100 Mbit/sec), and full duplex is preferred over half duplex at the same speed.

Caution - For proper 1000 Mbit/sec operation, autonegotiation is always required and mandatory by IEEE Std 802.3ab. Thus, be careful to never switch *Auto Negotiation* off for any interface with *Link mode 1000BASE-T*. The timing of your network link may fail, causing service degradation or failure. For 100 Mbit/sec and 10 Mbit/sec operation, autonegotiation is optional, but still recommended for use whenever possible.

Autonegotiation is enabled by default. In the rare case that you need to switch it off, click the *Edit* button of the corresponding interface card and change the

setting in the appearing dialog window *Edit NIC Parameters* via the drop-down list *Link Mode*. Click *Save* to save your changes.

Caution – Be careful when disabling autonegotiation, as this might lead to mismatches, resulting in a significant performance decrease or even disconnect. If the respective network interface card is your interface to WebAdmin you may lose access to WebAdmin!

In case one of your interfaces lost its network link due to manipulation of autonegotiation or speed settings, just changing the settings back will typically not bring the interface back to normal operation: Changing autonegotiation or speed settings on disconnected interfaces is not reliable. Therefore first switch on autonegotiation and then reboot the ASG to bring back normal operation.

HA Link Monitoring: If high availability is enabled, all configured interfaces are monitored for link status. In case of a link failure, a takeover is triggered. If a configured interface is not always connected (e.g. management interface) please disable HA link monitoring for the corresponding interface. Otherwise all HA nodes will stay in status UNLINKED. To disable HA link monitoring click the *Edit* button of the corresponding interface card and change the setting in the appearing dialog window *Edit NIC Parameters*. Click *Save* to save your changes.

Set Virtual MAC: Sometimes it is useful to be able to change the MAC address of a device. For example, there are some ISPs where the modem must be reset when the device connected to it changes and by that the MAC address of that device. By setting the MAC address to the value of the former device, a reset of the modem can be avoided.

The ASG, however, does not overwrite the original MAC address of the device but instead sets a virtual MAC address. To do so, click the *Edit* button of the corresponding interface card. In the appearing dialog window *Edit NIC Parameters*, select the checkbox *Set Virtual MAC* and enter a valid MAC address. Click *Save* to save your changes.

To restore the original MAC address, click the *Edit* button of the corresponding interface card. In the appearing dialog window *Edit NIC Parameters*, unselect the checkbox *Set Virtual MAC*. Click *Save* to save your changes.

6.2 Bridging

Bridging is a packet forwarding technique primarily used in Ethernet networks. Unlike routing, bridging makes no assumptions about where in a network a particular address is located. Instead, it depends on broadcasting to locate unknown devices.

Through bridging, several Ethernet networks or segments can be connected to each other. The data packets are forwarded through bridging tables, which assign the MAC addresses to a bridge port. The resulting bridge will transparently pass traffic across the bridge interfaces.

Note - Such traffic must explicitly be allowed by means of appropriate firewall rules.

6.2.1 Status

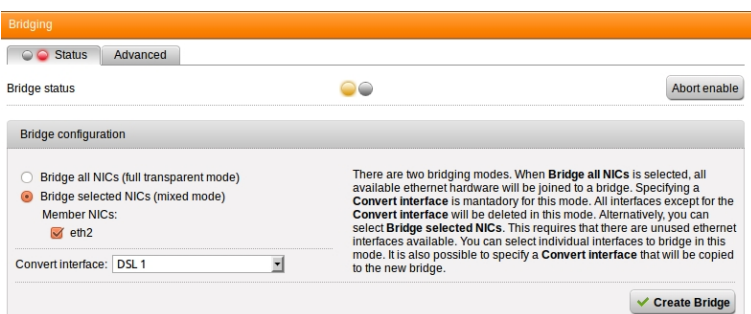


Figure 49 Bridging: Configuring a Bridge

To configure a bridge, proceed as follows:

1. **Enable bridging on the Status tab.**

On the *Interfaces & Routing > Bridging > Status* tab, either click the status icon or the *Enable* button.

The status icon turns amber and the *Bridge Configuration* area becomes editable.

2. Select the bridging mode.

You can choose between two bridging modes:

- **Bridge all NICs:** Select this option to have all available Ethernet network interface cards joined to a bridge. Specifying a *Convert Interface* is mandatory with this mode. All interfaces except for the converted interface will be deleted.
- **Bridge Selected NICs:** You can select individual NICs that should form the bridge. This requires that there are unused network interface cards available. Select one or more of them to form the bridge. It is also possible to specify a *Convert Interface* that will be copied to the new bridge.

3. Select the interface that should be converted to a bridge.

Only an already configured interface can be selected. The bridge will inherit the address settings of that interface, as well as alias addresses and VLAN settings.

4. Click **Create Bridge**.

The network interfaces are being combined and the bridge is being activated (status icon shows green).

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

Once the bridge has been configured, the converted interface appears as a bridge device with SysID `br0` on the *Interfaces & Routing > Interfaces* tab. All interfaces that are members of the bridge are displayed in the *Bridge Configuration* area. To remove an interface from the bridge, clear its checkbox and click *Update Bridge*.

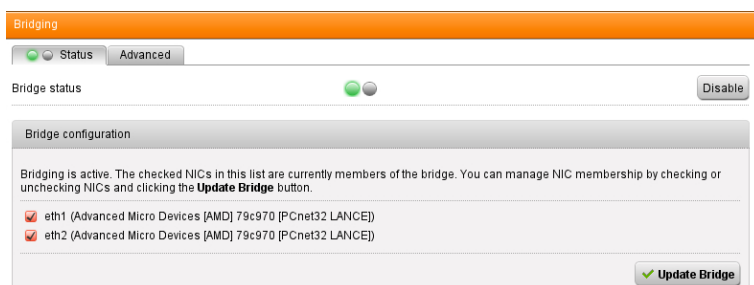


Figure 50 Bridging: Bridging Enabled

To remove the bridge, proceed as follows:

1. **On the *Status* tab, click *Disable*.**

The status icon turns amber.

2. **Click *Confirm Removal of Bridge*.**

The status icon turns red. The bridge has been successfully removed.

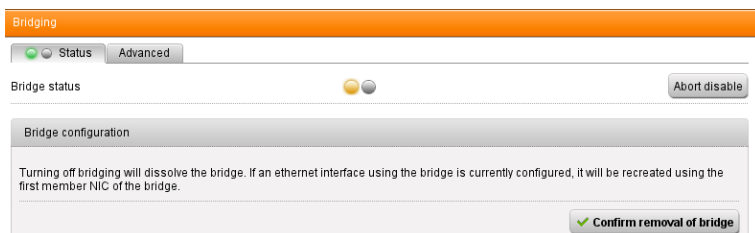


Figure 51 Bridging: Disabling Bridging

6.2.2 Advanced

On the *Interfaces & Routing > Bridging > Advanced* tab, the following bridging options can be configured:

Allow ARP broadcasts: This function allows you to configure whether global ARP broadcasts should be forwarded by the bridge. If enabled, the bridge will allow broadcasts to the MAC destination address `FF:FF:FF:FF:FF:FF`. This, however, could be used by an alleged attacker to gather various information about the network cards employed within the respective network segment or even the security product itself. Therefore, the default setting is not to let such broadcasts pass the bridge.

Ageing Timeout: The amount of time in seconds after which an inactive MAC address will be deleted. The default time is 300 seconds.

Allow IPv6 Pass Through: Enabling this option will allow IPv6 traffic to pass the bridge without any inspection.

6.3 Quality of Service (QoS)

Generally speaking, *Quality of Service* (QoS) refers to control mechanisms to provide better service to selected network traffic, and to provide priority in terms of guaranteed bandwidths in particular. In Astaro Security Gateway, priority traffic is

configured on the *Quality of Service (QoS)* tabs, where you can reserve guaranteed bandwidths for certain types of outbound network traffic passing between two points in the network, whereas shaping of inbound traffic is optimized internally by various techniques such as *Stochastic Fairness Queuing (SFQ)* or *Random Early Detection (RED)*.

6.3.1 Status

The *Quality of Service (QoS)* > *Status* tab lists the interfaces for which QoS can be configured. By default, QoS is disabled for each interface.

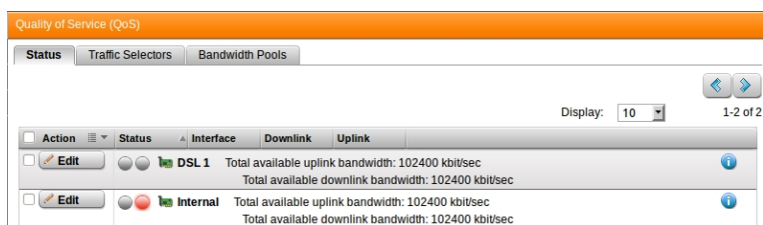


Figure 52 QoS: Status Page

For each interface click *Edit* to configure the uplink and downlink bandwidth (in Kbit/s) provided by your ISP. For example, for a 5 Mbit/s Internet connection for both uplink and downlink, enter 5120).

If you have a fluctuating bandwidth, enter the lowest value that is guaranteed by your ISP. For example, if you have a 5 Mbit/s Internet connection for both uplink and downlink with a variation of 0.8 Mbit/s, enter 4300 Kbit/s. Note that if the available bandwidth becomes temporarily higher than the configured lowest guaranteed value, the gateway can make a projection taking the new bandwidth into account, so that the percentage bandwidth for the priority traffic will be increased as well; unfortunately, this does not work vice versa.

Limit Uplink: Selecting this option tells the QoS function to use the configured downlink and uplink bandwidth as the calculation base for prioritizing traffic that passes this interface. The *Limit Uplink* option is selected by default and should be used for the following interface types:

- Standard Ethernet interface (with a router sitting in between the gateway and the Internet—the bandwidth provided by the router is known)

- Ethernet VLAN interface (with a router sitting in between the gateway and the Internet—the bandwidth provided by the router is known)
- DSL (PPPoE)
- DSL (PPPoA)
- Modem (PPP)

Clear the *Limit Uplink* checkbox for these interfaces whose traffic shaping calculation base can be determined by the maximum speed of the interface. However, this only applies to the following interface types:

- Standard Ethernet interface (directly connected to the Internet)
- Ethernet VLAN interface (directly connected to the Internet)
- Cable Modem (DHCP)

For interfaces with no specific uplink limit given, the QoS function shapes the entire traffic proportionally. For example, if you have configured 512 Kbit/s for VoIP traffic on a Cable Modem interface and the available bandwidth has decreased by half, then 256 Kbit/s would be used for this traffic (note that proportional shaping works in both directions in contrast to interfaces that rely on a fix maximum limit).

Download Equalizer: If enabled, *Stochastic Fairness Queuing* (SFQ) and *Random Early Detection* (RED) queuing algorithms will avoid network congestion. In case the configured downlink speed is reached, packets from the most downlink consuming stream will be dropped.

Upload Optimizer: If enabled, this option will automatically prioritize outgoing TCP connection establishments (TCP packets with *SYN* flag set), acknowledgment packets of TCP connections (TCP packets with *ACK* flag set and a packet length between 40 and 60 bytes) and DNS lookups (UDP packets on port 53).

6.3.2 Traffic Selectors

A traffic selector can be regarded as a QoS definition which describes certain types of network traffic to be handled by QoS. These definitions later get used inside the bandwidth pool definition. There you can define how this traffic gets handled by QoS, like limiting the overall bandwidth or guarantee a certain amount of minimum bandwidth.

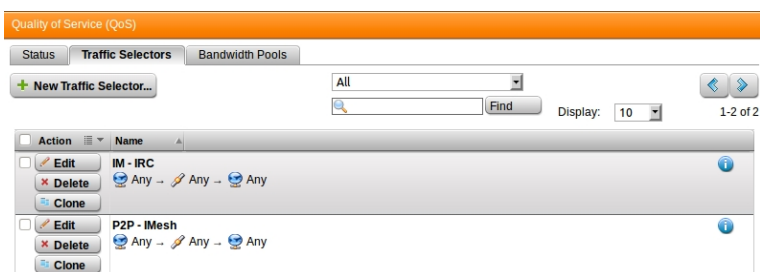


Figure 53 QoS: Traffic Selectors

To create a traffic selector, proceed as follows:

1. **On the *Traffic Selector* tab, click *New Traffic Selector*.**

The *Create New Traffic Selector* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this traffic selector.

Selector Type: You can define the following types:

- **Traffic Selector:** Using a traffic selector, traffic will be shaped based on a single service or a service group.
- **Application Selector:** Using an application selector, traffic will be shaped based on applications, i.e. which traffic belongs to which application, independent from the port or service used.
- **Group:** You can group different service and application selectors into one traffic selector rule. To define a group, there must be some already defined single selectors.

Source: Select the source network for which you want to enable QoS.

Service: Only with *Traffic Selector*. Select the network service for which you want to enable QoS. You can select among various predefined services and service groups. For example, select VoIP protocols (SIP and H.323) if you want to reserve a fixed bandwidth for VoIP connections.

Destination: Select the destination network for which you want to enable QoS.

TOS/DSCP: Only with *Traffic Selector*. Select if you want to use the *TOS/DSCP* field in the IP header to mark priority traffic. For example, in large

VoIP installations, the TOS/DSCP flag is often used to mark VoIP traffic. If you do not want to reserve a fixed bandwidth for VoIP connections based on VoIP protocols, select the TOS bits or DSCP bits used within your VoIP environment.

- **TOS-bits:** If you select TOS bits (Type of Service), you can choose between the following settings:
 - Normal service
 - Minimize monetary cost
 - Maximize reliability
 - Maximize throughput
 - Minimize delay
- **DSCP-bits:** If you select DSCP bits (Differentiated Services Code Point), you can either specify a single *DSCP Value* (an integer in the range from 0-63) or select a predefined value from the *DSCP Class* list (e.g., *BE default dscp (000000)*).

Control By: Only with *Application Selector*. Select whether to shape traffic based on its application type or by a dynamic filter based on categories.

- **Applications:** The traffic is shaped application-based. Select one or more applications in the box *Control These Applications*.
- **Dynamic Filter:** The traffic is shaped category-based. Select one or more categories in the box *Control These Categories*.

Control These Applications/Categories: Only with *Application Selector*. Click the folder icon to select applications/categories. A dialog window opens, which is described in detail in the next section.

Productivity: Only with *Dynamic Filter*. Reflects the productivity score you have chosen.

Risk: Only with *Dynamic Filter*. Reflects the risk score you have chosen.

Note – Some applications cannot be shaped. This is necessary to ensure a flawless operation of Astaro Security Gateway. Such applications miss a

checkbox in the application table of the *Select Application* dialog window, e.g. *WebAdmin*, *Teredo* and *SixXs* (for IPv6 traffic), *Portal* (for User Portal traffic), and some more. When using dynamic filters, shaping of those applications is also prevented automatically.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new selector appears on the *Traffic Selectors* list.

If you defined many traffic selectors, you can combine multiple selectors inside a single traffic selector group, to make the configuration more convenient.

This traffic selector or traffic selector group can now be used in each bandwidth pool. These pools can be defined on the *Bandwidth Pools* tab.

The Select Application or Category Dialog Window

When creating application control rules you need to choose applications or application categories from a dialog window called *Select one or more Applications/Categories to control*.

The table in the lower part of the dialog window displays the applications you can choose from or which belong to a defined category. By default, all applications are displayed.

The upper part of the dialog window provides three configuration options to limit the number of applications in the table:

- **Category:** Applications are grouped by category. This list contains all available categories. By default, all categories are selected, which means that the table below displays all applications available. If you want to limit the displayed applications to certain categories, click into the category list and select only one or more categories relevant to you.
- **Productivity:** Applications are also classified by their productivity impact which means how much they influence productivity. Example: Salesforce, a typical business software, has the score 5 which means its usage adds to productivity. On the contrary, Farmville, an online game, has the score 1 which means its usage is counterproductive. The network service DNS has the score 3 which means its productivity impact is neutral.

- **Risk:** Applications are also classified by the risk they carry when used with regard to malware, virus infections, or attacks. A higher number means a higher risk.

Tip – Each application has an Info icon which, when clicked, displays a description of the respective application. You can search the table by using the search box in the table header.

Now, depending on the type of control you selected in the *Create New Traffic Selector* dialog window, do the following:

- Control by dynamic filter: Simply click *Apply* to adopt the selected applications to your rule.
- Control by application: From the table, select the applications you want to control by clicking the checkbox in front. Click *Apply* to adopt the selected applications to your rule.

After clicking *Apply*, the dialog window closes and you can continue to edit the settings of your traffic selector rule.

6.3.3 Bandwidth Pools

On the *Quality of Service > Bandwidth Pools* tab you can define and manage bandwidth pools for bandwidth management.

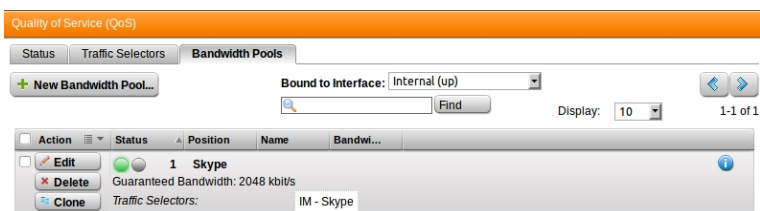


Figure 54 QoS: Bandwidth Pools

To create a bandwidth pool, proceed as follows:

1. **On the *Bandwidth Pools* tab, select an interface.**
From the drop-down list, select the interface for which you want to create a bandwidth pool.

2. **Click *New Bandwidth Pool*.**

The *Create New Bandwidth Pool* dialog box opens.

3. **Make the following settings:**

Name: Enter a descriptive name for this bandwidth pool.

Position: The position number, defining the priority of the bandwidth pool. Lower numbers have higher priority. Bandwidth pools are matched in ascending order. Once a bandwidth pool has matched, bandwidth pools with a higher number will not be evaluated anymore. Place the more specific pools at the top of the list to make sure that more vague pools match last. For example, if you have configured a traffic selector for web traffic (HTTP) in general and for web traffic to a particular host, place the bandwidth pool that uses the latter traffic selector on top of the bandwidth pool list, that is, select position 1 for it. Note that this priority processing cannot be applied if the traffic selectors involved are assigned to different QoS-enabled interfaces.

4. **Bandwidth:** Enter the uplink bandwidth (in Kbit) you want to reserve for this bandwidth pool. For example, if you want to reserve 1 Mbit/s for a particular type of traffic, enter 1024.

Note - You can only assign up to 90 % of the entire available bandwidth to a bandwidth pool. The gateway always reserves 10 % of the bandwidth for so-called unshaped traffic. To stay with the example above, if your uplink Internet connection is 5 Mbit/s and you want to assign as much bandwidth as possible to VoIP traffic, you can at most enter a value of 4608 Kbit/s.

Specify Upper Bandwidth Limit: The value you entered in the *Bandwidth* field above represents the guaranteed bandwidth to be reserved for a specific kind of traffic. However, a bandwidth pool usually allocates more bandwidth for its traffic if available. If you want a particular traffic not to consume more than a certain amount of your bandwidth, select this option to restrict the allocation of bandwidth to be used by this bandwidth pool to an upper limit.

Traffic Selector: Select the traffic selector you want to use for this bandwidth pool.

Comment (optional): Add a description or other information.

5. **Click Save.**

The new bandwidth pool appears on the list *Bandwidth Pools*.

6.4 Uplink Monitoring

The menu *Interfaces & Routing > Uplink Monitoring* gives you the possibility to monitor your uplink connection and to define certain actions which will be automatically applied in case the connection status changes.

For example, you can automatically turn on a backup VPN tunnel using another link, or disable an alias IP address so that it will trigger a monitoring service.

6.4.1 Global

On the *Uplink Monitoring > Global* tab you can enable or disable uplink monitoring.

To enable uplink monitoring, either click the *Enable* button or the status icon. The status icon turns green. The *Uplink Status* section will either display *ONLINE* if the uplink connection is established, or *OFFLINE* if the uplink connection is down. To cancel the configuration, click *Abort Enable* or the amber colored status icon.

6.4.2 Actions

On the *Interfaces & Routing > Uplink Monitoring > Actions* tab you can define actions that will be automatically applied in case the uplink connection status changes. For example, you might want to disable an additional address, when your uplink connection is down.

To create a new action, do the following:

1. **On the *Actions* tab, click *New Action*.**

The dialog window *Create New Action If Uplink Goes Offline* opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the action.

Type: Select the connection type for which you want to define an action.

- **IPsec Tunnel:** Select this option from the drop-down list if you want to define an action for an IPsec tunnel.
- **Additional Address:** Select this option from the drop-down list if you want to define an action for an additional address.

IPsec Tunnel: (Only available with Type *IPsec Tunnel*.) If there are any IPsec tunnels defined, you can select one of them here. For more information on IPsec tunnels see chapter *Remote Access* > [*IPsec*](#).

Add. Address: (Only available with Type *Additional Address*.) If there are any additional addresses defined, you can select one of them here. For more information on additional addresses see chapter *Interfaces & Routing* > *Interfaces* > [*Additional Addresses*](#).

Action: You can either select *Enable* or *Disable* here, which means that, in case of an uplink interruption, the above selected IPsec tunnel or additional address is going to be enabled or disabled.

Comment (optional): Add a description or other information.

3. **Click Save.**

The action will be saved and applied in case the uplink connection is interrupted.

To either edit or delete an action, click the corresponding buttons.

6.4.3 Advanced

On the *Uplink Monitoring* > *Advanced* tab you can disable automatic monitoring of the uplink connection and define one or more hosts instead which are used for monitoring. These hosts will then be pinged in certain periods and if none of them is reachable, the uplink connection is regarded as down. Subsequently, the actions defined on the *Actions* tab will be carried out.

To use your own hosts for monitoring, do the following:

1. **Unselect the checkbox *Automatic Monitoring*.**
The object box *Monitoring Hosts* becomes editable.
2. **Add one or more hosts to the *Monitoring Hosts* box.**
You can either select the host(s) from the object list or create new hosts.

3. Click **Apply** to save your settings.

Your settings will be saved. The hosts defined will now be used for monitoring.

6.5 IPv6

Starting with version 8, Astaro Security Gateway supports IPv6, the successor of IPv4.

The following functions of Administration Guide fully or partly support IPv6.

- Access to WebAdmin and User Portal
- SSH
- NTP
- SNMP
- Interface Types: Ethernet Standard, PPPoE, Ethernet VLAN, (Cable Modem/Dhclient limited)
- DNS
- DHCP server
- BGP
- OSPF
- IPS
- Firewall
- ICMP
- Web Filter
- SMTP
- IPsec (Site-to-site only)
- Syslog server

6.5.1 Global

On the *IPv6 > Global* tab you can enable IPv6 support for Astaro Security Gateway. Moreover, if enabled, IPv6 information is provided here, e.g. status information.

IPv6 support is disabled by default. To enable IPv6, do the following:

1. **On the *Global* tab, enable IPv6.**

You can either click the status icon or the *Enable* button.

The status icon turns green. If IPv6 has never been enabled or configured before, the *Connectivity* area displays the string *None*.

As soon as IPv6 is enabled, you will find several network and other object definitions referring explicitly to IPv6 around WebAdmin. You can generally use them as you are used to from IPv4 objects.

Note – If IPv6 is enabled, the icons of network objects and the like bear an additional mark that tells you whether the respective object is an IPv6 object or IPv4 object or both.

6.5.2 Prefix Advertisements

On the *IPv6 > Prefix Advertisements* tab you can configure your Astaro Security Gateway to assign clients an IPv6 address prefix which in turn enables them to pick an IPv6 address by themselves. Prefix advertisement (or router advertisement) is an IPv6 feature where routers (or in this case the Administration Guide) behave like a DHCP server in IPv4, in a way. However, the routers do not assign IPs directly to clients. Instead, clients in an IPv6 network assign themselves a so-called link-local address for the primary communication with the router. The router then tells the client the prefix for its network segment. Subsequently, the clients generate an IP address consisting of the prefix and their MAC address.

To create a new prefix, do the following:

1. **On the *Prefix Advertisements* tab, click *New Prefix*.**

The dialog window *Create New Prefix* opens.

2. **Make the following settings:**

Interface: Select an interface that has an IPv6 address with a 64 bit net-mask configured.

DNS Server 1/2 (optional): The IPv6 addresses of the DNS servers.

Domain (optional): Enter the domain name that will be transmitted to the clients (e.g., `intranet.example.com`).

Valid Lifetime: The time the prefix is to be valid. Default is 30 days.

Preferred Lifetime: The time after which another prefix, whose preferred lifetime has not yet expired, is to be selected by the client. Default is 7 days.

Other Config (optional): This option is selected by default. It ensures that a given DNS server and domain name are additionally announced via DHCPv6 for the given prefix. This is useful since, at the moment, there are too few clients which are able to fetch the DNS information from the prefix advertisement ([RFC 5006](#) / [RFC 6106](#)). Note that this DHCPv6 configuration is hidden and therefore not visible or editable via the DHCP configuration menu. This option is mandatory for IPv6 to work under Windows Vista/7.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new prefix configuration appears on the *Prefix Advertisements* list.

6.5.3 6to4

On the *IPv6 > 6to4* tab you can configure your Astaro Security Gateway to automatically tunnel IPv6 addresses over an existing IPv4 network. With 6to4, every IPv4 address has a /48 prefix from the IPv6 network to which it is mapped. The resulting IPv6 address consists of the prefix 2002 and the IPv4 address in hexadecimal notation.

Note – You can either have 6to4 enabled or *Tunnel Broker*.

To enable IP address tunneling for a certain interface, do the following:

1. **On the 6to4 tab, enable 6to4.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *6to4* area and the *Advanced* area become editable.

2. **Select an interface.**

Select an interface from the *Interface* drop-down list which has a public IPv6 address configured.

3. **Click *Apply*.**

Your settings will be saved. The interface status is displayed on the *Global* tab.

Advanced

You can change the *Server Address* to use a different 6to4 relay server.

Click *Apply* to save your settings.

6.5.4 Tunnel Broker

On the *IPv6 > Tunnel Broker* tab you can enable the use of a tunnel broker. Tunnel brokerage is a service offered by some ISPs which allows you to access the Internet using an IPv6 address.

Note – You can either have *6to4* enabled or *Tunnel Broker*.

Astaro Security Gateway supports the following tunnel brokers:

- Teredo (only anonymous)
- Freenet6 (by [GoGo6](#)) (anonymous or with user account)
- [SixXS](#) (user account necessary)

To use a tunnel broker, do the following:

1. **On the *Tunnel Broker* tab, enable the use of tunnel broker.**

You can either click the status icon or the *Enable* button.

The status icon turns green and the *Tunnel Broker* area and the *Advanced* area become editable. The tunnel broker is immediately active using anonymous authentication at Teredo. The connection status is displayed on the *Global* tab.

Tunnel Broker

You can change the default tunnel broker settings.

Authentication: Select an authentication method from the drop-down list.

- **Anonymous:** Using this method you do not need a user account at the respective broker. The IP address assigned will be, however, temporary.
- **User:** You need to register at the respective broker to get a user account.

Broker: You can select another broker from the drop-down list.

Username (only available with *User*): Provide your username for the respective broker.

Password (only available with *User*): Provide your password for the username.

Click *Apply* to save your settings.

Advanced

Here you can provide another server address for your selected tunnel broker.

Click *Apply* to save your settings.

6.6 Static Routing

Every computer connected to a network uses a routing table to determine the path along which an outbound data packet must be sent to reach its destination. For example, the routing table contains the information whether the destination address is on the local network or if the data packet must be forwarded to a router. If a router is involved, the table contains information about which router is to be used for which network.

Two types of routes can be added to the routing table of Astaro Security Gateway: standard static routes and policy routes. With static routes, the routing target is exclusively determined by the packet's destination address. With policy routes, however, it is possible to make routing decisions based on the source interface, source address, service, or destination address.

Note - You do not need to set additional routes for networks attached to the gateway's interfaces, as well as default routes. The system inserts these routes automatically.

6.6.1 Standard Static Routes

The system automatically inserts routing entries into the routing table for networks that are directly connected to the system. Manual entries are necessary in those cases where there is an additional router which is to be accessed via a specific network. Routes for networks, that are not directly connected and that are inserted to the routing table via a command or a configuration file, are called static routes.

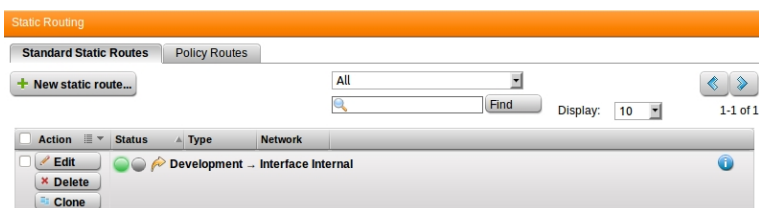


Figure 55 Static Routing: Static Routes Table

To add a standard static route, proceed as follows:

1. **Click *New Static Route*.**

The *Create New Static Route* dialog box opens.

2. **Make the following settings:**

Route Type: The following route types are available:

- **Interface Route:** Packets are sent out on a particular interface. This is useful in two cases. First, for routing on dynamic interfaces (PPP), because in this case the IP address of the gateway is unknown. Second, for defining a default route having a gateway located outside the directly connected networks.
- **Gateway Route:** Packets are sent to a particular host (gateway).

- **Blackhole Route:** Packets are discarded silently. This is useful in connection with OSPF or other dynamic adaptive routing protocols to avoid routing loops, route flapping, and the like.

Network: Select the destination networks of data packets the gateway must intercept.

Interface: Select the interface through which the data packets will leave the gateway (only available if you selected *Interface Route* as route type).

Gateway: Select the gateway/router to which the gateway will forward data packets (only available if you selected *Gateway Route* as route type).

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced setting:**

Metric: Enter a metric value which can be an integer from 0 to 4294967295 with a default of 5. The metric value is used to distinguish and prioritize routes to the same destination. A lower metric value is preferred over a higher metric value. IPsec routes automatically have the metric 0.

4. **Click Save.**

The new route appears on the *Standard Static Route* list.

5. **Enable the route.**

Click the status icon to activate the route.

To either edit or delete a route, click the corresponding buttons.

6.6.2 Policy Routes

When a router receives a data packet, it normally decides where to forward it based on the destination address in the packet, which is then used to look up an entry in a routing table. However, in some cases, there may be a need to forward the packet based on other criteria. Policy-based routing allows for forwarding or routing of data packets according to your own policies.

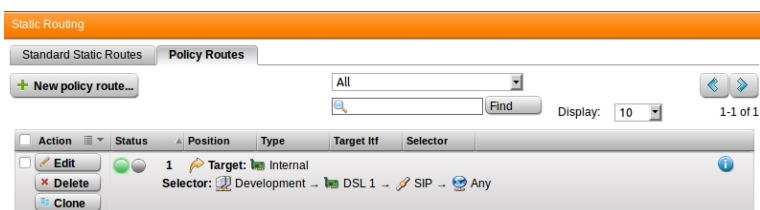


Figure 56 Static Routing: Policy Routes Table

To add a policy route, proceed as follows:

1. **Click *New Policy Route*.**

The *Create New Policy Route* dialog box opens.

2. **Make the following settings:**

Position: The position number, defining the priority of the policy route. Lower numbers have higher priority. Routes are matched in ascending order. Once a route has matched, routes with a higher number will not be evaluated anymore.

Route Type: The following route types are available:

- **Interface Route:** Packets are sent out on a particular interface. This is useful in two cases. First, for routing on dynamic interfaces (PPP), because in this case the IP address of the gateway is unknown. Second, for defining a default route having a gateway located outside the directly connected networks.
- **Gateway Route:** Packets are sent to a particular host (gateway).

Source Interface: The interface on which the data packet to be routed has arrived. The *Any* setting applies to all interfaces.

Source Network: The source network of the data packets to be routed. The *Any* setting applies to all networks.

Service: The service definition that matches the data packet to be routed. The drop-down list contains all predefined services as well as the services you have defined yourself. These services allow you to specify precisely which kind of traffic should be processed. The *Any* setting matches any combination of protocols and source and destination ports.

Destination Network: The destination network of the data packets to be routed. The *Any* setting applies to all networks.

Target Interface: The interface for the data packets to be sent to (only available if you selected *Interface Route* as route type).

Gateway: Select the gateway/router to which the gateway will forward data packets (only available if you selected *Gateway Route* as route type).

Comment (optional): Add a description or other information.

3. **Click Save.**

The new route appears on the *Policy Routes* list.

4. **Enable the route.**

Click the status icon to activate the route.

To either edit or delete a route, click the corresponding buttons.

6.7 Dynamic Routing (OSPF)

The *Open Shortest Path First* (OSPF) protocol is a link-state hierarchical routing protocol primarily used within larger autonomous system networks. Astaro Security Gateway supports OSPF version 2. Compared to other routing protocols, OSPF uses cost as its routing metric. The cost of an OSPF-enabled interface is an indication of the overhead required to send packets across a certain interface. The cost of an interface is inversely proportional to the bandwidth of that interface. Therefore, a higher bandwidth indicates a lower cost. For example, there is more overhead (higher cost) and time delays involved in crossing a 56 Kbit/s serial line than crossing a 10 Mbit/s Ethernet line.

The OSPF specification does not specify how the cost of an attached network should be computed—this is left to the vendor. Therefore you are free to define your own computation formula. However, if your OSPF network is adjacent to other networks that have cost already defined, you are advised to apply the same computation base.

By default, the cost of an interface is calculated based on the bandwidth. Cisco, for example, computes the cost by dividing 10^8 through the bandwidth of the interface in bits per second. Using this formula, it will cost $10^8/10000000 = 10$ to

cross a 10 Mbit/s Ethernet line, whereas it will cost $10^8/1544000 = 64$ to cross a 1.544 Mbit/s line (T1) (note that the cost is rounded down to the nearest integer).

6.7.1 Global

On the *Interfaces & Routing > Dynamic Routing (OSPF) > Global* tab you can make the basic settings for OSPF. Before you can enable the OSPF function, you must have at least one OSPF area configured (on the *Area* tab).

Caution - Configuring the OSPF function of Astaro Security Gateway requires a technically adept and experienced administrator who is familiar with the OSPF protocol. The descriptions of configuration options given here are by far not sufficient to provide a comprehensive understanding of the OSPF protocol. You are thus advised to use this feature with caution, as a misconfiguration may render your network inoperable.

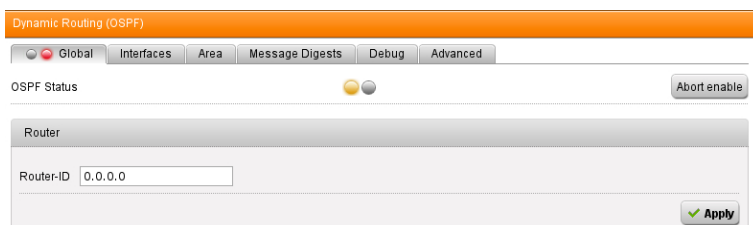


Figure 57 OSPF: Enabling OSPF

To configure OSPF, proceed as follows:

1. **On the *Area* tab, create at least one OSPF area.**

2. **On the *Global* tab, enable OSPF.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Router* area becomes editable.

3. **Enter the router ID.**

Enter a unique router ID to identify the Astaro Security Gateway device to other OSPF routers.

4. **Click *Apply*.**

Your settings will be saved.

To disable OSPF click the status icon or *Disable*.

6.7.2 Area

An OSPF network is divided into areas. These are logical groupings of routers whose information may be summarized towards the rest of the network. Areas are identified by a 32-bit ID in dot-decimal notation similar to the notation of IP addresses.

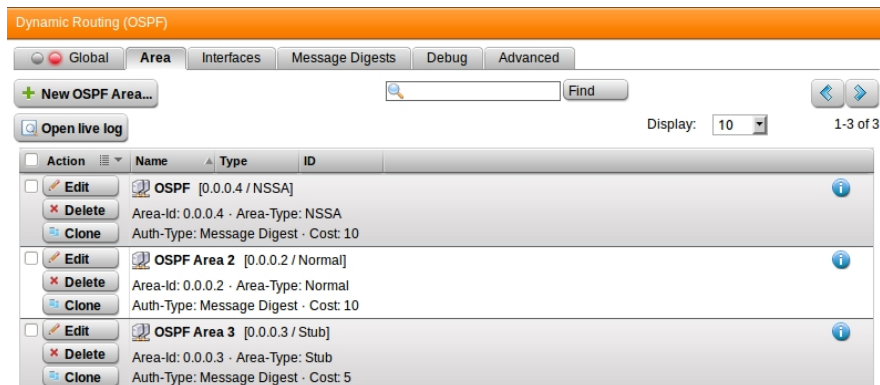


Figure 58 OSPF: Overview of Configured Areas

Altogether, there are six types of OSPF areas:

- **Backbone:** The area with ID 0 (or 0.0.0.0) is reserved for the OSPF network backbone, which forms the core of an OSPF network—all other areas are connected to it.
- **Normal:** A normal or regular area has a unique ID ranging from 1 (or 0.0.0.1) to 4,294,967,295 (or 255.255.255.255). Normal areas handle external routes by flooding them bi-directionally across the *Area Border Router* (ABR). Note that external routes are defined as routes which were distributed in OSPF from another routing protocol.
- **Stub:** Typically, a stub area does not have direct connections to any external networks. Injecting external routes into a stub area is unnecessary because all traffic to external networks must be routed through an *Area Border Router* (ABR). Therefore, a stub area substitutes a default route for external routes to send traffic to external networks.

- **Stub No-Summary:** A *Stub No-Summary* or *totally stubby area* is similar to a stub area, however this area does not allow so-called summary routes, that is, it restricts type 3 summary link state advertisements (LSAs) from flowing into the area.
- **NSSA:** A not-so-stubby area (NSSA) is a type of stub area that in contrast to stub areas can support external connections. Note that NSSAs do not support virtual links.
- **NSSA No-Summary:** A *NSSA No-Summary* is similar to a NSSA, however this area does not allow so-called summary routes, that is, it restricts type 3 summary link state advertisements (LSAs) from flowing into the area.

To create an OSPF area, proceed as follows:

1. **On the Area tab, click New OSPF Area.**

The *Create New OSPF Area* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the area.

Area ID: Enter the ID of the area in dot-decimal notation (e.g., 0.0.0.1 for a normal area or 0.0.0.0 for the backbone area).

Area Type: Select an area type (see description above) to specify the characteristics of the network that will be assigned to the area in question.

Auth-Type: Select the authentication type used for all OSPF packets sent and received through the interfaces in the area. The following authentication types are available:

- **MD5:** Select to enable MD5 authentication. MD5 (Message-Digest algorithm 5) is a widely-used cryptographic hash function with a 128-bit hash value.
- **Plain-Text:** Select to enable plain-text authentication. The password is transmitted in clear text over the network.
- **Off:** Select to disable authentication.

Connect Via Interface: Select an OSPF-enabled interface. Note that to specify an OSPF-enabled interface here it must have been created on the *Interfaces* tab first.

Connect Virtual Links: All areas in an OSPF *autonomous system* (AS) must be physically connected to the backbone area (area 0). In some cases where this physical connection is not possible, you can use a virtual link to connect to the backbone through a non-backbone area. In the *Connect Virtual Links* box, enter the router ID associated with the virtual link neighbor in decimal dot notation (e.g., 10.0.0.8).

Cost: The cost of sending or receiving a data packet in this area. Valid values for cost are in the range from 1 to 65535.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new area definition appears on the *Area* tab.

To either edit or delete an OSPF area, click the corresponding buttons.

Open Live Log: The OSPF Live Log log all activities on the OSPF interface. Click the button to open the live log in a new window.

6.7.3 Interfaces

On the *Interfaces & Routing > Dynamic Routing (OSPF) > Interfaces* tab you can create interface definitions to be used within an OSPF area. Each definition contains various parameters that are specific for OSPF-enabled interfaces.

To create an OSPF interface definition, proceed as follows:

1. **On the *Interfaces* tab, click *New OSPF Interface*.**

The *Create New OSPF Interface* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this interface.

Interface: Select the interface to associate with this OSPF interface definition.

Auth-Type: Select the authentication type used for all OSPF packets sent and received through this interface. The following authentication types are available:

- **MD5:** Select to enable MD5 authentication. MD5 (Message-Digest algorithm 5) is a widely-used cryptographic hash function with a 128-bit

hash value.

- **Plain-Text:** Select to enable plain-text authentication. The password is transmitted in clear text over the network.
- **Off:** Select to disable authentication.

Message Digest: Select the message digest (MD) to specify that MD5 authentication is used for this OSPF interface. Note that to select a message digest here it must have been created on the *Message Digests* tab first.

Cost: The cost of sending a data packet on this interface. Valid values for cost are in the range from 1 to 65535.

Advanced Options (optional): Selecting the *Advanced Options* checkbox will reveal further configuration options:

- **Hello Interval:** Specify the period of time (in seconds) that Astaro Security Gateway waits between sending *Hello* packets through this interface. The default value is ten seconds.
- **Retransmit Interval:** Specify the period of time (in seconds) between link state advertisement (LSA) retransmissions for the interface when an acknowledgment for the LSA is not received. The default value is five seconds.
- **Dead Interval:** Specify the period of time (in seconds) Astaro Security Gateway waits to receive a *Hello* data packet through the interface. The default value is 40 seconds. By convention, the *Dead Interval* value is four times greater than the value for the *Hello Interval*.
- **Priority:** Specify the router priority, which is an 8-bit number ranging from 1 to 255 primarily used in determining the designated router (DR) for the particular network. The default value is 1.
- **Transmit Delay:** Specify the estimated period of time (in seconds) it takes to transmit a link state update packet on the interface. The range is from 1 to 65535 seconds; the default value is 1.

Comment (optional): Add a description or other information.

3. **Click Save.**

The OSPF interface definition appears on the *Interfaces* tab.

To either edit or delete an OSPF interface, click the corresponding buttons.

Open Live Log: The OSPF live log logs all activities on the OSPF interface. Click the button to open the live log in a new window.

6.7.4 Message Digests

On the *Interfaces & Routing > Dynamic Routing (OSPF) > Message Digests* tab so-called message digest keys can be generated. Message digest keys are needed to enable MD5 authentication with OSPF. MD5 authentication uses the password to generate a message digest, which is a 128-bit checksum of the data packet and password. The message digest is sent with the data packet along with a key ID associated with the password.

Note - The receiving routers must be configured with an identical message digest key.

To create a message digest key, proceed as follows:

1. **On the *Message Digest* tab, click *New Message Digest Key*.**
The *Create New Message Digest Key* dialog box opens.
2. **Make the following settings:**
ID: Enter the key identifier for this message digest key; the range is from 1 to 255.
MD5-key: Enter the associated password, which must be a string of up to 16 alphanumeric characters.
3. **Click *Save*.**
The new key appears on the *Message Digests* list.

To either edit or delete a digest key, click the corresponding buttons.

6.7.5 Debug

The *Interfaces & Routing > Dynamic Routing (OSPF) > Debug* tab shows detailed information about relevant OSPF parameters in a separate browser window. The following information is available:

- **Show IP OSPF Neighbor:** Used to display OSPF neighbor information on a per-interface basis.

- **Show IP OSPF Routes:** Used to display the current state of the routing table.
- **Show IP OSPF Interface:** Used to display OSPF-related interface information.
- **Show IP OSPF Database:** Used to display lists of information related to the OSPF database for a specific router.
- **Show IP OSPF Border-Routers:** Used to display the internal OSPF routing table entries to an *Area Border Router* (ABR) and *Autonomous System Boundary Router* (ASBR).

6.7.6 Advanced

On the *Interfaces & Routing > Dynamic Routing (OSPF) > Advanced* tab further OSPF-related configuration options are located concerning the injection (redistribution) of routing information from a domain other than OSPF into the OSPF domain.

Note - Policy routes cannot be redistributed.

Redistribute Connected: Select if you want to redistribute routes of directly connected networks; the default metric (cost) value is 10.

Redistribute Static: Select if you want to redistribute static routes and IPsec routes; the default metric (cost) value is 10.

Note - IPsec tunnels must have strict routing disabled to be redistributed (see chapter [Connections](#)).

Announce Default Route: Select if you want to redistribute a default route into the OSPF domain.

Note - A default route will be advertised into the OSPF domain regardless of whether it has a route to 0.0.0.0/0.

Link Detection: Select if routes on interfaces should only be announced if an interface link is detected.

6.8 Border Gateway Protocol

The Border Gateway Protocol (BGP) is a routing protocol used mainly by Internet Service Providers (ISP) to enable communication between multiple autonomous systems (AS), that is between multiple ISPs, thus being the backbone of the Internet. An autonomous system is a collection of connected IP networks controlled by one or more ISPs and connected via an internal routing protocol (e.g. IGP). BGP is described as path vector protocol and, in contrast to IGP, makes routing decisions based on path, network policies, and/or rulesets. For this reason it can be regarded as a reachability protocol rather than a routing protocol.

Each ISP (or other network provider) must have an officially registered Autonomous System Number (ASN) to identify themselves on the network. Although an ISP may support multiple autonomous systems internally, to the Internet only the routing protocol is relevant. ASN with a number of the range 64512-65534 are private and can only be used internally.

BGP uses TCP as the transport protocol, on port 179.

When BGP is used between routers of a single AS it's called interior BGP (iBGP); when it is used between routers of different AS it is called exterior BGP (eBGP).

A strength of eBGP is that it prevents routing loops, that is an IP packet never passes an AS twice. This is accomplished in the following way: An eBGP router maintains a complete list of all AS an IP packet needs to pass to reach a certain network segment. When sending, it shares that information with neighbor eBGP routers which in turn update their routing list if necessary. When an eBGP finds that it is already on such an UPDATE list it does not add itself again.

6.8.1 Global

On the *Border Gateway Protocol > Global* page, you can enable and disable BGP for the ASG.

1. **To be able to enable BGP, create at least one neighbor on the *Neighbor* page.**
2. **On the *Global* page, click the *Enable* button.**

The status icon turns amber and the *BGP System* section becomes editable.

3. **Make the following settings:**

AS Number: Enter the Autonomous System Number (ASN) of your system.

Router ID: Enter an IPv4 address as router ID which is sent to neighbors during session initialization.

Networks: Add or select the networks that should be announced to the neighbors by the system.

4. **Click *Apply*.**

The status icon turns green and BGP becomes active. After a short time, the *BGP Summary* section displays status information.

6.8.2 Systems

On the *Border Gateway Protocol > Advanced* page you can create an environment with multiple autonomous systems.

Note – This page is only accessible if you enable the use of multiple AS on the *Advanced* page.

To create a new BGP system, do the following:

1. **On the *Systems* page, click *New BGP System*.**

The *Create a new BGP System* dialog window opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the system.

ASN: Enter the Autonomous System Number (ASN) of your system.

Router ID: Enter an IPv4 address as router ID which is sent to neighbors during session initialization.

Neighbor: Select the checkboxes of those neighbors who belong to the AS of this system. Note that you need to create the neighbors beforehand on the *Neighbor* page.

Networks: Add or select the networks that should be announced by the system.

Install Routes: This option is enabled by default and should only be disabled if you want a BGP router to know the routes but not to actively take part in the BGP routing process. If there are multiple AS systems where this option is selected, filter lists must be created to ensure that there are no duplicate networks. Otherwise the routing behavior for identical networks is undefined.

3. **Click Save.**

The system appears on the *Systems* list.

6.8.3 Neighbor

On the *Border Gateway Protocol > Neighbor* page, you can create one or more BGP neighbor routers. A neighbor router (or peer router) builds the connection between multiple autonomous systems (AS) or within a single AS. During the first communication, two neighbors exchange their BGP routing tables. After that they send each other updates about changes in the routing table. Keepalive packets are sent to ensure that the connection is up. In case of errors, notifications packets are sent.

Policy routing in BGP differentiates between inbound and outbound policies. This is why defined route maps and filter lists can be applied separately for inbound and outbound traffic.

You need to create at least one neighbor router to be able to enable BGP on the *Global* page.

To create a new BGP neighbor, do the following:

1. **On the *Neighbor* page, click *New BGP Neighbor*.**

The *Create a new BGP neighbor* dialog window opens.

2. **Make the following settings:**

Name: Enter the name of the BGP neighbor router.

Host: Add or select the host definition of the neighbor. The defined IP address must be reachable from the ASG.

Remote ASN: Enter the Autonomous System Number (ASN) of the neighbor.

Authentication: If the neighbor requires authentication, select *TCP MD5 Signature* from the drop-down list and enter the password which must correspond to the password the neighbor has set.

3. **Make the following advanced settings, if applicable:**

Route In/Out: If you have defined a route map, you can select it here. With *In* or *Out* you define whether to apply the route map to ingoing or outgoing announcements.

Filter In/Out: If you have defined a filter list, you can select it here. With *In* or *Out* you define whether to apply the filter to ingoing or outgoing announcements.

Next-Hop-Self: In an iBGP network, when a router announces an external eBGP network internally, iBGP routers with no direct external connection will not know how to route packets to that network. Selecting this option, the eBGP router announces itself as next hop to reach the external network.

Soft-Reconfiguration: Enabled by default. This option enables storing updates sent by the neighbor.

Default Originate: Sends the default route 0.0.0.0 to the neighbor. The neighbor uses this route only if he needs to reach a network that is not in his routing table.

Weight: Cisco-specific option. Sets a generic weight for all routes learned from this neighbor. You can enter a value between 0 and 65535. The route with the highest weight is preferred to reach a particular network. The weight given here overrides route map weight.

4. **Click Save.**

The neighbor appears on the *Neighbor* list.

6.8.4 Route Map

In BGP, route-map is a command to set conditions for redistributing routes and to enable policy routing. On the *Border Gateway Protocol > Route Map* page, you can create route maps for particular networks, setting metric, weight, and/or preference values.

The best path algorithm, which decides which route to take, works as follows:

1. Weight is checked.*
2. Local preference is checked.*
3. Local route is checked.
4. AS path length is checked.
5. Origin is checked.
6. Metric is checked.*

This is only a short description. Since the calculation of the best path is very complex, please refer to pertinent documentation for detailed information which is available on the Internet.

The items followed by an asterisk (*) can be directly configured.

To create a BGP route map, do the following:

1. **On the *Route Map* page, click *New BGP Route Map*.**

The *Create a new BGP Route Map* dialog window opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the route map.

Match By: Select whether the route map should match the IP address of a particular router or a whole AS.

- **IP Address:** In the *Networks* box, add or select hosts or networks the filter should apply to.
- **AS Number:** In the *AS Regex* box, use BGP regular expressions to define AS numbers the filter should apply to. Example: `_100_` matches any route going through AS100.

Networks: Add or select networks and/or hosts the route map should apply to.

Metric: By default, a router dynamically learns route metrics. However, you can set your own metric value which can be an integer from 0 to 4294967295. A lower metric value is preferred over a higher metric value.

Weight: Weight is used to select a best path. It is specified for a specific router and it is not propagated. When multiple routes to the same destination exist, routes with a higher weight value are preferred. Weight is

based on the first matched AS path and can be an integer from 0 to 4294967295.

Note – If a neighbor has been given a weight, it overrides the route map weight if the route to a specified network matches.

Preference: You can set a preference value for the AS path which is sent only to all routers in the local AS. Preference (or local preference) tells the routers in an AS which path has to be preferred to reach a certain network outside the AS. It can be an integer from 0 to 4294967295 and the default is 100.

AS Prepend: AS path prepending is used if preference settings for some reason do not suffice to avoid a certain route, for example a backup route which should only be taken in case the main route is unavailable. It allows you to extend the AS path attribute by repeating your own AS number, e.g. 65002 65002 65002. This influences the BGP route selection since the shortest AS path is preferred. Note that route maps with AS prepend set need to be selected in the *Route Out* field of a neighbor to work as intended.

3. **Click Save.**

The route map appears on the *Route Map* list.

You can now use the route map on a neighbor definition.

6.8.5 Filter List

On the *Border Gateway Protocol > Filter List* page you can create filter lists used to regulate traffic between networks based on IP address or AS number.

To create a filter list, do the following:

1. **On the *Filter List* page, click *New BGP Filter List*.**

The *Create a new BGP Filter List* dialog window opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the filter list.

Filter By: Select whether the filter should match the IP address of a particular router or a whole AS.

- **IP Address:** In the *Networks* box, add or select hosts or networks the filter should apply to.
- **AS Number:** In the *AS Regex* box, use BGP regular expressions to define AS numbers the filter should apply to. Example: `_100_` matches any route going through AS100.

Networks: Add or select networks and/or hosts that should be denied or permitted information on certain networks.

Action: From the drop-down list, select an action that should be taken if a filter matches. You can either deny or permit traffic.

- **Deny:** If you deny a network for a particular neighbor via the *Filter In* field on the *Neighbor* page, the ASG will ignore announcements for that network. If you do the same via the *Filter Out* field, the ASG will not send announcements to that neighbor for that network.
- **Permit:** If you permit a network for a particular neighbor via the *Filter In* field on the *Neighbor* page, the ASG will receive announcements for that network only. If you do the same via the *Filter Out* field, the ASG will send announcements to that neighbor for that network only, but not for any other network you might have defined on the *Global* or *Systems* page.

3. **Click Save.**

The filter list appears on the *Filter List* list.

You can now use the filter list on a neighbor definition.

6.8.6 Advanced

On the *Border Gateway Protocol > Advanced* page you can make some additional settings for BGP and you can access BGP debug information windows.

Allow Multiple Autonomous Systems

Allow Multiple AS: Select this checkbox if you want to configure multiple AS. This will enable the *Systems* page, where you can then add multiple AS instead of the *BGP Systems* section on the *Global* page. The *Global* page will display information for all AS.

Strict IP Address Match

Strict IP Address Match: Select this checkbox to strictly match IP addresses. Example: 10.0.0.0/8 will only match 10.0.0.0/8, but not 10.0.1.0/24.

BGP Debug

This section provides access to three debug information windows. Click a button to open a window. The name of a button corresponds to the BGP command you would normally invoke on the command line. The window will then display the result of that command in form of a command line output.

Show IP BGP Neighbor: Displays information on the neighbors of the ASG. Check that the link state for each neighbor is *Established*.

Show IP BGP Unicast: Displays the current BGP routing table which gives the preferred paths. This is especially useful to get an overview of your metric, weight, and preference settings and their impact.

Show IP BGP Summary: Displays the status of all BGP connections. This information is also displayed in the *BGP Summary* section on the *Global* page.

6.9 Multicast Routing (PIM-SM)

The menu *Interfaces & Routing > Multicast Routing (PIM-SM)* enables you to configure *Protocol Independent Multicast Sparse Mode* (PIM-SM) for use on your network. PIM is a protocol to dynamically route multicast packages in networks. Multicast is a technique to deliver packages that are to be received by more than one client efficiently using as little traffic as possible. Normally, packets for more than one client are simply copied and sent to every client individually, multiplying the consumed bandwidth by the number of users. Thus servers which have a lot of clients requesting the same packages at the same time, like e.g. servers for streaming content, need a lot of bandwidth.

Multicast, in contrast, saves bandwidth by sending packets only once over each link of the network. To achieve this, multicast includes adequately configured routers in the decision when to create copies on the way from the server (sender)

to the client (receiver). The routers use PIM-SM to keep track of active multicast receiver(s) and use this information to configure routing.

A rough scheme of PIM-SM communication is as follows: A sender starts transmitting its multicast data. The multicast router for the sender registers via PIM-SM with the RP router which in turn sends a join message to the sender's router. Multicast packets now flow from the sender to the RP router. A receiver registers itself via an IGMP broadcast for this multicast group at its local PIM-SM router. This router sends a join request for the receiver towards the RP router, which then in turn forwards multicast traffic to the receiver.

Multicast has its own IP address range which is 224.0.0.0/4.

6.9.1 Global

On the *Multicast Routing (PIM-SM) > Global* tab you can enable and disable PIM. The *Routing Daemon Settings* area displays the status of interfaces and routers involved.



Figure 59 PIM-SM: Example Configuration

Before you can enable PIM you need to define at least two interfaces to serve as PIM interfaces on the *Interfaces* tab and one router on the *RP Routers* tab.

To enable PIM-SM, do the following:

1. **On the *Global* tab enable PIM-SM.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Routing Daemon Settings* becomes editable.

2. **Make the following settings:**

Active PIM-SM Interfaces: Select at least two interfaces to use for PIM-SM. Interfaces can be configured on the *Interfaces* tab.

Active PIM-SM RP Routers: Select at least one RP router to use for PIM-SM. RP routers can be defined on the *RP Routers* tab.

3. **Click *Apply*.**

Your settings will be saved. PIM-SM communication is now active in your network.

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

To disable PIM-SM click the status icon or the *Disable* button.

Live Log

Click the *Open Live Log* button to open the PIM live log in a new window.

6.9.2 Interfaces

On the *Multicast Routing (PIM-SM)* > *Interfaces* tab you can define over which interfaces of Astaro Security Gateway multicast communication should take place.

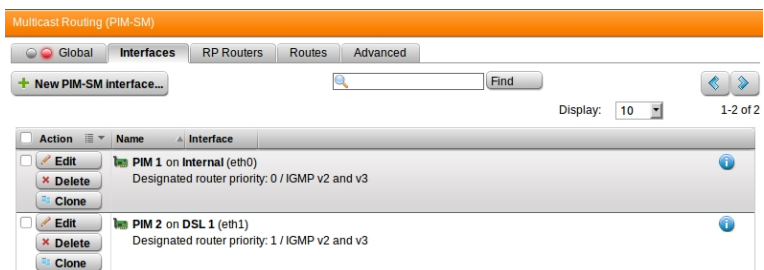


Figure 60 PIM-SM: Interfaces List

To create a new PIM-SM interface, do the following:

1. **On the *Interfaces* tab, click *New PIM-SM Interface*.**

The dialog window *Create a New PIM-SM Interface* opens.

2. **Make the following settings:**

Name: Enter a descriptive name for PIM-SM interface.

Interface: Select an interface that is to accept PIM and IGMP network traffic.

DR priority (optional): Enter a number that defines the designated router (DR) priority for the interface. The router with the highest priority honors IGMP requests if more than one PIM-SM routers are present on the same network segment. Numbers from 0 to 2^{32} are possible. If you do not provide a priority, 0 is used by default.

IGMP: Select the version of the *Internet Group Management Protocol* that is to be supported. IGMP is used by recipients to establish multicast group memberships.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new PIM-SM interface is added to the interfaces list.

To either edit or delete a PIM-SM interface, click the corresponding buttons.

6.9.3 RP Routers

In order to be able to use multicast on your network you need to configure one or more rendezvous point routers (RP routers). An RP router accepts registrations both from multicast receivers and senders. An RP router is a regular PIM-SM router that is chosen to be the RP router for certain multicast groups as well. All PIM-SM routers must agree on which router is to be the RP router.

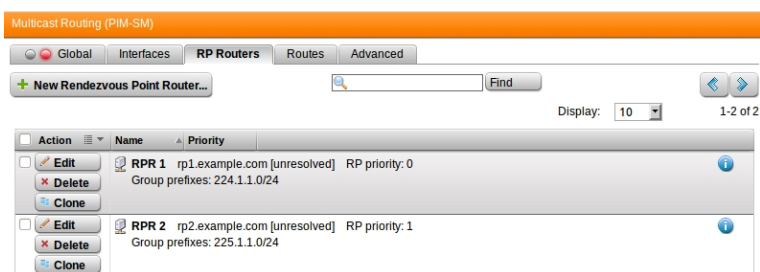


Figure 61 PIM-SM: List of Rendezvous Point Routers

To create an RP router, do the following:

1. **On the *RP Routers* tab, click *New Rendezvous Point Router*.**

The dialog window *Create a New RP Router* opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the RP router.

Host: Create (or select) the host that should act as rendezvous point router.

Priority: Enter a number that defines the priority of the RP router. Join messages are sent to the RP router with the lowest priority. Numbers from 0 to 255 are possible. If you do not provide a priority, 0 is used by default.

Multicast Group Prefixes: Enter the multicast group the RP router is responsible for. You can define group prefixes like 224.1.1.0/24 if the RP is responsible for more than one multicast group. The multicast group (prefix) must be within the multicast address range which is 224.0.0.0/4.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new RP router is added to the routers list.

To either edit or delete an RP router, click the corresponding buttons.

6.9.4 Routes

You need to set up a continuous communication route between receivers and sender(s). If recipient, sender and/or RP router are not within the same network segment, you will need to create a route to enable communication between them.

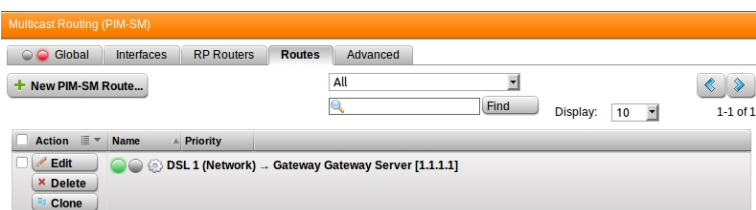


Figure 62 PIM-SM: Routes List

To create a PIM-SM route, do the following:

1. **On the *Routes* tab, click *New PIM-SM route*.**
The dialog window *Create a New PIM-SM Route* opens.
2. **Make the following settings:**
Route Type: The following route types are available:

- **Interface Route:** Packets are sent out on a particular interface. This is useful in two cases. First, for routing on dynamic interfaces (PPP), because in this case the IP address of the gateway is unknown. Second, for defining a default route having a gateway located outside the directly connected networks.
- **Gateway Route:** Packets are sent to a particular host (gateway).

Network: Select the destination address range where the PIM traffic is to be routed to.

Gateway: Select the gateway/router to which the gateway will forward data packets (only available if you selected *Gateway Route* as route type).

Interface: Select the interface to which the gateway will forward data packets (only available if you selected *Interface Route* as route type).

Comment (optional): Add a description or other information.

3. **Click *Save*.**
The new PIM-SM route is added to the routes list.

To either edit or delete a PIM-SM route, click the corresponding buttons.

6.9.5 Advanced

On the *Interfaces & Routing > Multicast Routing (PIM-SM) > Advanced* tab you can configure some advanced settings for PIM.

Shortest Path Tree Settings

In some networks the PIM communication route between sender, RP, and recipient is not the shortest network path possible. The option *Enable Switch to Shortest Path Tree* allows to move an existing communication between sender and recipient to the shortest path available, omitting the RP as moderator, when a certain traffic threshold is reached.

Auto Firewall Settings

With this option enabled, the system will automatically create all necessary firewall rules needed to forward multicast traffic for the specified multicast groups.

Debug Settings

Select the option *Enable Debug Mode* to see additional debugging information in the PIM-SM routing daemon log.

7 Network Services

This chapter describes how to configure several network services of Astaro Security Gateway for your network.

The following topics are included in this chapter:

- [DNS](#)
- [DHCP](#)
- [NTP](#)

7.1 DNS

The tabs of the *Network Services > DNS* menu contain miscellaneous configuration options, all related to the *Domain Name System* (DNS), a system primarily used to translate domain names (computer hostnames) to IP addresses.

7.1.1 Global

On the *Network Services > DNS > Global* tab you can specify the networks that are to be allowed to use the gateway as a recursive DNS resolver. Typically, you will select your internal networks here.

Note - If you already run an internal DNS server, for example as part of Active Directory, you should leave this box empty.

Flush Resolver Cache

The DNS proxy uses a cache for its records. Each record has an expiration date (TTL, time-to-live) at which it will be deleted, which is normally one day. However, you can empty the cache manually e.g. if you want recent changes in DNS records to take effect immediately, not having to wait for the TTL to expire. To empty the cache, click *Flush Resolver Cache Now*.

7.1.2 Forwarders

On the *Network Services > DNS > Forwarders* tab you can specify so-called DNS forwarders. A DNS forwarder is a *Domain Name System* (DNS) server on a network used to forward DNS queries for external DNS names to DNS servers outside of that network. If possible, add a DNS forwarder to your configuration. This should be a host "near" your site, preferably one provided by your Internet provider. It will be used as a "parent" cache. This will speed up DNS requests considerably. If you do not specify a forwarding name server, the root DNS servers will be queried for zone information first, taking a longer time to complete requests.

To create a DNS forwarder, proceed as follows:

1. **Select a DNS forwarder.**

Select or add a DNS forwarder.

Use Forwarders Assigned By ISP (optional): Select the *Use Forwarders Assigned by ISP* checkbox to forward DNS queries to the DNS servers of your ISP. When this box is checked, all forwarders automatically assigned by your ISP will be listed in the line below the box.

2. **Click *Apply*.**

Your settings will be saved.

7.1.3 Request Routing

Suppose you run your own internal DNS server, this server could be used as an alternate server to resolve DNS queries for a domain you do not want to be resolved by DNS forwarders. On the *Network Services > DNS > Request Routing* tab you can define routes to your own DNS servers.

To create a DNS request route, proceed as follows:

1. **On the *Request Routing* tab, click *New DNS Request Route*.**

The *Create New DNS Request Route* dialog box opens.

2. **Make the following settings:**

Domain: Enter the domain for which you want to use an alternate DNS server.

Target Servers: Select one or more DNS servers to use for resolving the domain entered above.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new route appears on the *DNS Request Route* list and is immediately active.

To either edit or delete a DNS request route, click the corresponding buttons.

7.1.4 Static Entries

If you do not want to set up your own DNS server but need a static DNS mapping for a few hosts of your network, you can enter these mappings here. Note that this only scales for a limited number of entries and is by no means intended as a replacement of a fully operable DNS server.

To create a static mapping, proceed as follows:

1. **On the *Static Entries* tab, click *New Static DNS Mapping*.**

The *Create New Static DNS Mapping* dialog box opens.

2. **Make the following settings:**

Hostname: Enter the fully qualified domain name (FQDN) of the host for which you want to define a static DNS mapping.

IPv4 Address: Enter the IPv4 address of that host.

IPv6 Address: Enter the IPv6 address of that host.

Reverse DNS: Select the checkbox to enable the mapping of the host's IP address to its name. Note that although several names can map to the same IP address, one IP address can only ever map to one name.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new mapping appears on the *Static Entries* list.

To either edit or delete a static entry, click the corresponding buttons.

7.1.5 DynDNS

Dynamic DNS, or DynDNS for short, is a domain name service which allows static Internet domain names to be assigned to a computer with a varying IP address. You can sign up for the DynDNS service at the [DynDNS website](#) to get a DNS alias that will automatically be updated when your uplink IP address changes. Once you have registered to this service, you will receive a hostname, username, and password, which are necessary for the configuration.

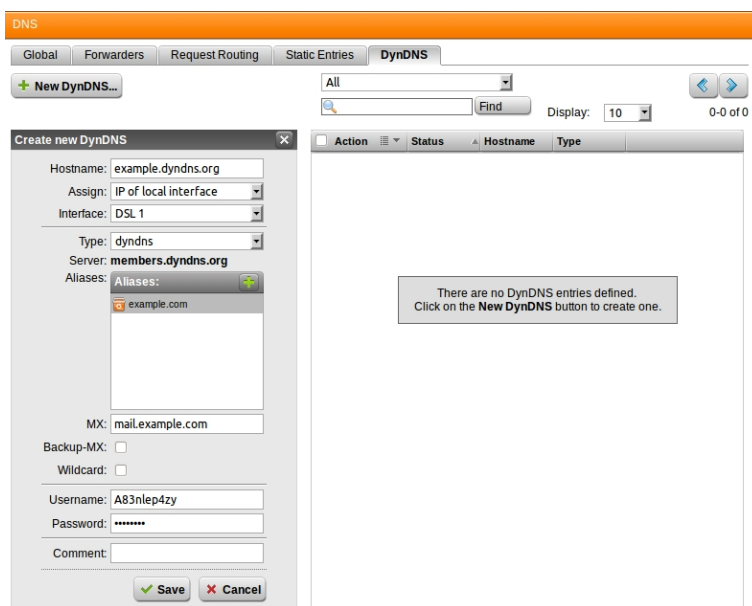


Figure 63 DNS: Configuring DynDNS

To configure DynDNS, proceed as follows:

1. **On the *DynDNS* tab, click *New DynDNS*.**
The *Create New DynDNS* dialog box opens.
2. **Make the following settings:**
Hostname: Enter the domain you received from your DynDNS service provider (e.g., `example.dyndns.org`). Note that you need not adhere to a particular syntax for the hostname to be entered here. What you must enter

here exclusively depends on what your DynDNS service provider requires. Apart from that, you can also use your DynDNS hostname as the gateway's main hostname, which, however, is not mandatory.

Assign: Define the IP the DynDNS name is to be associated with. Selecting *IP of Local Interface* is useful when the interface in question has a public IP address. Typically, you will use this option for your DSL uplink. When you select *First Public IP on the Default Route* no interface needs to be specified. Instead, your ASG will send a WWW request to a public DynDNS server which in return will respond with the public IP you are currently using. This is useful when your ASG does not have a public IP address but is located inside a private network, connected to the Internet via a masquerading router.

Interface: Select the interface for which you want to use the DynDNS service, most likely this will be your external interface connected to the Internet.

Type: The following DynDNS types are available:

- **DynDNS:** Select this option if you are using DynDNS' standard DNS service.
- **DynDNS-custom:** Select this option if you are using DynDNS' custom DNS service. Custom DNS is designed primarily to work with domains owned or registered by yourself.

Aliases (optional): Use this dialog box to enter additional hostnames which should point to the same IP address as the main hostname above (e.g., `mail.example.com`, `example.com`).

MX (optional): Mail exchangers are used for directing mail to specific servers other than the one a hostname points to (only available if you selected *DynDNS* as *DynDNS Type*). MX records serve a specific purpose: they let you specify the host (server) to which mail for a specific domain should be sent. For example, if you enter `mail.example.com` as Mail Exchanger, mail addressed to `user@example.com` would be delivered to the host `mail.example.com`.

Backup-MX (optional): Select this checkbox only if the hostname named in the *Hostname* text box is to serve as main mail exchanger. Then the host-

name from the *MX* text box will only be advertised as a backup mail exchanger.

Wildcard (optional): Select this option if you want subdomains to point to the same IP address as your registered domain (only available if you selected *DynDNS* as *DynDNS Type*). Using this option an asterisk (*) will be added to your domain serving as a wildcard (e.g., *.example.dyndns.org), thus making sure that, for example, www.example.dyndns.org will point to the same address as example.dyndns.org.

Username: Enter the username you received from the DynDNS service provider.

Password: Enter the password you received from the DynDNS service provider.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new DynDNS appears on the *DynDNS* list. The service is still disabled (status icon is red).

4. **Enable DynDNS.**

Click the status icon to enable the DynDNS service.

The service is now enabled (status icon is green).

To either edit or delete a DynDNS, click the corresponding buttons.

You can use multiple DynDNS objects at the same time. When all settings for two hostnames are identical, it is recommended to use the *Aliases* option—instead of creating two distinct objects.

7.2 DHCP

The *Dynamic Host Configuration Protocol* (DHCP) automatically distributes addresses from a defined IP address pool to client computers. It is designed to simplify network configuration on large networks, and to prevent address conflicts. DHCP distributes IP addresses, default gateway information, and DNS configuration information to its clients.

In addition to simplifying the configuration of client computers and allowing mobile computers to move painlessly between networks, DHCP helps to localize and troubleshoot IP address-related problems, as these are mostly issues with the configuration of the DHCP server itself. It also allows for a more effective use of address space, especially when not all computers are active at the same time, as addresses can be distributed as needed and reused when unneeded.

7.2.1 Servers

The tab *Network Services > DHCP > Server* allows to configure a DHCP server. Astaro Security Gateway provides the DHCP service for the connected network. The DHCP server can be used to assign basic network parameters to your clients. You can run the DHCP service on multiple interfaces, with each interface having its own configuration set.

To configure a DHCP server, proceed as follows:

1. **On the Servers tab, click *New DHCP Server*.**

The *Create New DHCP Server* dialog box opens.

2. **Make the following settings:**

Interface: The interface from which the IP addresses should be assigned to the clients. You can only select an already configured interface.

Range Start/End: The IP range to be used as an address pool on that interface. By default, the configured address area of the network card will appear in the text boxes. The range must be inside the network attached to the interface.

DNS Server 1/2: The IP addresses of the DNS servers.

Default Gateway: The IP address of the default gateway.

Note – Both wireless access points and RED appliances need the default gateway to be within the same subnet as the interface they are connected to.

Domain (optional): Enter the domain name that will be transmitted to the clients (e.g., `intranet.example.com`).

Lease Time: Each IP address assigned by the DHCP server expires after a certain interval. Here you can define this interval in seconds. The default is 86400 seconds (one day). The minimum is 600 seconds (10 minutes) and the maximum is 2592000 seconds (one month).

Clients with Static Mappings Only (optional): Select this option to have the DHCP server assign IP addresses only to clients that have an entry on the *Static Mappings* tab.

WINS Node Type: *Windows Internet Naming Service* (WINS) is Microsoft's implementation of *NetBIOS Name Server* (NBNS) on Windows, a name server and service for NetBIOS computer names. A WINS server acts as a database that matches computer names with IP addresses, thus allowing computers using NetBIOS to take advantage of the TCP/IP network. The following WINS node types are available:

- **Do not set:** The WINS node type is not set and will be chosen by the client.
- **B-node (no WINS):** B-node systems use broadcasts only.
- **P-node (WINS only):** P-node systems use only point-to-point name queries to a Windows name server (WINS).
- **M-node (Broadcast, then WINS):** M-node systems broadcast first, then query the name server.
- **H-node (WINS, then Broadcast):** H-node systems query the name server first, then broadcast.

WINS Server: Depending on your WINS node type selection, this text box appears. Enter the IP address of the WINS server.

Enable HTTP Proxy Auto Configuration: Select this option if you want to provide a PAC file for automatic proxy configuration of browsers. For more information see chapter *Web Security > Web Filtering > Advanced*, section *Proxy Auto Configuration*.

Note – HTTP proxy auto configuration is currently not supported with IPv6 by Microsoft Windows.

Comment (optional): Add a description or other information.

3. Click **Save**.

The new DHCP server definition appears on the DHCP server list and is immediately active.

To either edit or delete a DHCP server definition, click the corresponding buttons.

7.2.2 Relay

The *Network Services > DHCP > Relay* tab allows you to configure a DHCP relay. The DHCP service is provided by a separate DHCP server and the ASG works as a relay. The DHCP relay can be used to forward DHCP requests and responses across network segments. You need to specify the DHCP server and a list of interfaces between which DHCP traffic shall be forwarded.

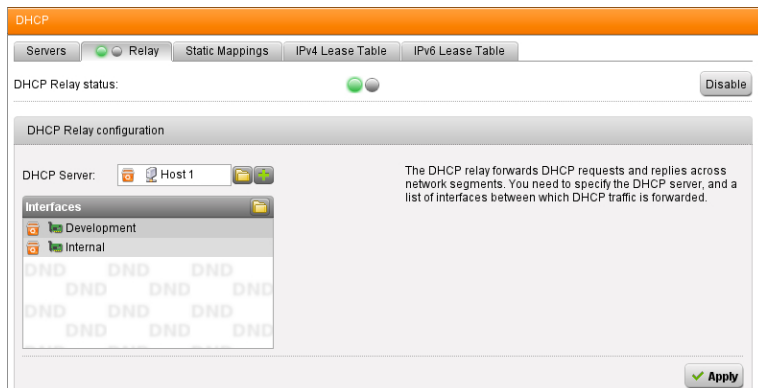


Figure 64 DHCP: Configuring a DHCP Relay

To configure a DHCP relay, proceed as follows:

1. On the **Relay** tab, enable **DHCP Relay**.

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *DHCP Relay Configuration* area becomes editable.

2. Select the **DHCP server**.

3. Select an **interface**.

DHCP requests arriving on these interfaces will be forwarded to the selected DHCP server.

4. Click *Apply*.

Your settings will be saved.

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

7.2.3 Static Mappings

On the *Network Services > DHCP > Static Mappings* tab you can assign static MAC address to IP addresses mappings for some or all clients. For that purpose, you need a configured DHCP server and the MAC address of the client's network card. The MAC addresses are usually specified in a format consisting of six groups of two hexadecimal digits, separated by colons (e.g., 00:04:76:16:EA:62).

Note - To avoid an IP address clash between regularly assigned addresses from the DHCP pool and those statically mapped make sure that the latter are not in the scope of the DHCP pool. For example, a static mapping of 192.168.0.200 could result in two systems receiving the same IP address if the DHCP pool is 192.168.0.100 – 192.168.0.210.

To create a static MAC/IP address mapping, proceed as follows:

1. On the *Static Mappings* tab, click *New DHCP Mapping*.

The *Create New Mapping* dialog box opens.

2. Make the following settings:

DHCP Server: Enter the DHCP server to be used for static MAC/IP mappings.

MAC Address: Enter the MAC address of the client's network interface card.

IP Address: Enter the IP address of the client. The IP address must be within the address range of the network interface card.

Comment (optional): Add a description or other information.

3. Click *Save*.

The new mapping appears on the *Static Mappings* list.

To either edit or delete a static MAC/IP mapping, click the corresponding buttons.

7.2.4 IPv4 Lease Table

Using DHCP, a client no longer owns an IP address, but rather *leases* it from the DHCP server, which gives permission for a client to use the address for a period of time.

Hostname	MAC address	IPv4 address	Lease start	Lease expiry	Add static mapping
[unknown]	[unknown]	10.8.1.1	2010/06/21 12:21:14 UTC	2010/06/21 12:21:14 UTC	New mapping
L041	00:1c:25:72:0f:83	10.8.1.2	2010/06/21 12:21:33 UTC	2010/06/22 12:21:33 UTC	New mapping
cs6	[unknown]	10.8.1.3	2010/06/21 12:21:51 UTC	2010/06/21 12:21:51 UTC	New mapping

Figure 65 DHCP: IPv4 Lease Table

The lease table on the *Network Services > DHCP > IPv4 Lease Table* tab shows the current leases issued by the DHCP server, including information about the start date and the date when the lease will expire.

Add Static Mapping

You can use an existing lease as template for a new static MAC/IP mapping, by using the *New Mapping* button in the *Add Static Mapping* column of the table. Do the following:

1. **Click the button *New Mapping*.**
The dialog window *Add Mapping* opens.
2. **Make the following settings:**
 - MAC Address** (optional): Change the MAC address only if you want to assign the static mapping to a host different from your selection.
 - IPv4 Address:** Change the IP address to an address outside the DHCP pool range.
 - Comment** (optional): Add a description or other information.
 - Create DNS Mapping** (optional): Select the checkbox to automatically create a static DNS mapping for the host (see *Network Services > DNS > Static Entries*). If you provide a *Hostname*, this mapping will use it.

Create Network Host Object (optional): Select the checkbox to automatically create a host object (see *Definitions & Users > Network Definitions*). If you provide a *Hostname*, this will be the object's name.

Hostname (optional): For convenience, it is recommended that you provide a name for the host. Otherwise the objects will be listed as "[unknown]".

3. **Click Save.**

Your settings will be saved.

Note - When converting a lease to a static mapping you should change the IP address so that it is no longer inside the scope of the DHCP pool. However, if you change the IP address, the address used by the client will not change immediately, but only when it tries to renew its lease for the next time.

7.2.5 IPv6 Lease Table

Using DHCP, a client no longer owns an IP address, but rather *leases* it from the DHCP server, which gives permission for a client to use the address for a period of time.

DHCP					
Servers	Relay	Static Mappings	IPv4 Lease Table	IPv6 Lease Table	
DUID address	IPv6 address	Lease start		Lease expiry	Add static mapping
00:01:00:01:12:58:4a:bb:00:50:56:b2:75:70	fec0::a02:f2a2	2010/06/21 12:57:03 UTC		2010/07/21 12:57:03 UTC	New mapping

Figure 66 DHCP: IPv6 Lease Table

The lease table on the *Network Services > DHCP > IPv6 Lease Table* tab shows the current leases issued by the DHCP server, including information about the start date and the date when the lease will expire.

Note – Leases that have been granted via prefix advertisements are not shown in the table.

Add Static Mapping

You can use an existing lease as template for a new static MAC/IP mapping, by using the *New Mapping* button in the *Add Static Mapping* column of the table. Do the following:

1. **Click the button *New Mapping*.**

The dialog window *Add Mapping* opens.

2. **Make the following settings:**

DUID Address (optional): Change the DUID address only if you want to assign the static mapping to a host different from your selection.

IPv6 Address: Change the IP address to an address outside the DHCP pool range.

Comment (optional): Add a description or other information.

Create DNS Mapping (optional): Select the checkbox to automatically create a static DNS mapping for the host (see *Network Services > DNS > Static Entries*). If you provide a *Hostname*, this mapping will use it.

Create Network Definition For Host (optional): Select the checkbox to automatically create a network definition for the host object (see *Definitions & Users > Network Definitions*). If you provide a *Hostname*, this will be the object's name.

Hostname (optional): For convenience, it is recommended that you provide a name for the host. Otherwise the objects will be listed as "[unknown]".

3. **Click *Save*.**

Your settings will be saved.

Note - When converting a lease to a static mapping you should change the IP address so that it is no longer inside the scope of the DHCP pool. However, if you change the IP address, the address used by the client will not change immediately, but only when it tries to renew its lease for the next time.

7.3 NTP

The menu *Network Services > NTP* allows you to configure an NTP server for the connected networks. The *Network Time Protocol* (NTP) is a protocol used for synchronizing the clocks of computer systems over IP networks. Instead of just synchronizing the time of Astaro Security Gateway, which can be configured on the *Management > System Settings > Time and Date* tab, you can explicitly allow certain networks to use this service as well.

To enable the use of NTP time synchronization for specific network, proceed as follows:

1. **Enable the NTP server.**

You can either click the status icon or the *Enable* button.

2. **Select *Allowed Networks*.**

Select the networks that should be allowed to access the NTP server.

3. **Click *Apply*.**

Your settings will be saved.

8 Network Security

This chapter describes how to configure basic network security features of Astaro Security Gateway. The *Network Security Statistics* page in WebAdmin shows an overview of intrusion prevention events and dropped data packets for both source and destination hosts. Each of the sections contains a *Details* link. Clicking the link redirects you to the respective reporting section of WebAdmin, where you can find more statistical information.

The following topics are included in this chapter:

- [Firewall](#)
- [NAT \(Network Address Translation\)](#)
- [Intrusion Prevention](#)
- [Server Load Balancing](#)
- [VoIP \(Voice over IP\)](#)
- [Advanced Settings](#)

8.1 Firewall

The menu *Network Security > Firewall* allows you to define and manage firewall rules of the gateway. Generally speaking, the firewall is the central part of the gateway which functions in a networked environment to prevent some communications forbidden by the security policy. The default security policy of Astaro Security Gateway states that all network traffic is to be blocked and logged, except for automatically generated rule sets that are necessary for other software components of the gateway to work. However, those auto-generated rule sets are not shown on the *Firewall > Rules* tab. This policy requires you to define explicitly which data traffic is allowed to pass the gateway.

8.1.1 Rules

On the *Network Security > Firewall > Rules* you can manage the firewall rule set. All newly defined firewall rules are disabled by default once added to the rules

table. Activated firewall rules are applied in the given order until the first rule matches. The processing order is determined by the position number, so if you change the order of the rules by their position numbers, the processing order will change as well.

Caution - Once a firewall rule matched, all other rules will be ignored. For that reason, the sequence of rules is very important. Never place a rule such as *Any (Source) – Any (Service) – Any (Destination) – Allow (Action)* at the top of the rule table, as this will allow each packet to traverse the gateway in both directions, ignoring all other rules that may follow.

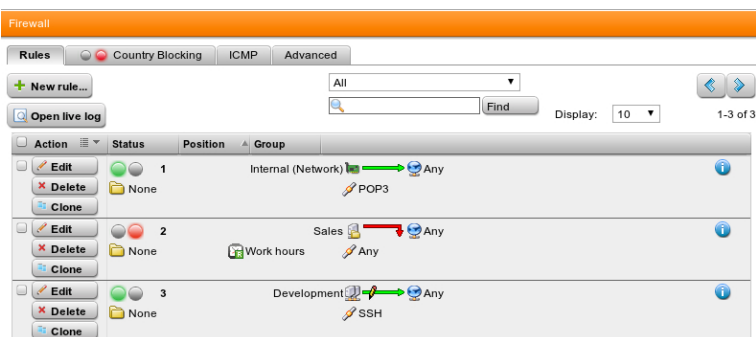


Figure 67 Firewall: Rule Table

To create a firewall rule, proceed as follows:

1. **On the *Rules* tab, click *New Rule*.**

The *Create New Rule* dialog box opens.

2. **Make the following settings:**

Group: The *Group* option is useful to group firewall rules logically for better readability of the firewall rule set. Grouping is only used for display purposes, it does not affect rule matching.

Position: The position number, defining the priority of the rule. Lower numbers have higher priority. Rules are matched in ascending order. Once a rule has matched, rules with a higher number will not be evaluated anymore.

Source: The source network definition, describing from which host(s) or networks the packets are originating.

Service: The service definition that describes the protocol(s) and, in case of TCP or UDP, the source and destination port(s) of the packets.

Destination: The destination network definition, describing the target host(s) or network(s) of the packets.

Action: The action that describes what to do with traffic that matches the rule. The following actions can be selected:

- **Allow:** The connection is allowed and traffic is forwarded.
- **Deny:** Packets matching a rule with this action will be silently dropped.
- **Reject:** Connection requests matching rules with this action will be actively rejected. The sender will be informed via an ICMP message.

Time Period: By default, no time period definition is selected, meaning that the rule is always valid. If you select a time period definition, the rule will only be valid at the time specified by the time period definition. For more information, see [Time Period Definitions](#).

Log Traffic: If you select this option, logging is enabled and packets matching the rule are logged in the firewall log.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new rule appears on the *Rules* list.

4. **Enable the rule.**

Click the status icon to activate the rule.


To either edit or delete a rule, click the corresponding buttons.

Open Live Log: This will open a pop-up window containing a real-time log of filtered packets, whose regularly updating display shows recent network activity. The background color indicates which action has been applied:

- Red: The package was dropped.
- Yellow: The package was rejected.
- Green: The package was allowed.
- Gray: The action could not be determined.

The live log also contains information about which firewall rule caused a packet to be rejected. Such information is essential for rule debugging.

Using the search function, you can filter the firewall log for specific entries. The search function even allows to negate expressions by typing a dash in front of the expression, e.g. `-WebAdmin` which will successively hide all lines containing this expression.

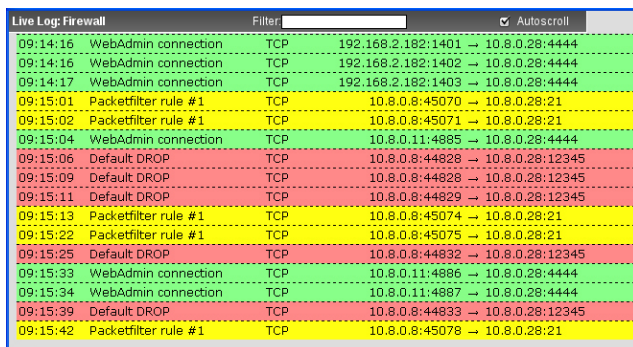

Live Log: Firewall		Filter	<input checked="" type="checkbox"/> Autoscroll
09:14:16	WebAdmin connection	TCP	192.168.2.182:1401 → 10.8.0.28:4444
09:14:16	WebAdmin connection	TCP	192.168.2.182:1402 → 10.8.0.28:4444
09:14:17	WebAdmin connection	TCP	192.168.2.182:1403 → 10.8.0.28:4444
09:15:01	Packetfilter rule #1	TCP	10.8.0.8:45070 → 10.8.0.28:21
09:15:02	Packetfilter rule #1	TCP	10.8.0.8:45071 → 10.8.0.28:21
09:15:04	WebAdmin connection	TCP	10.8.0.11:4885 → 10.8.0.28:4444
09:15:06	Default DROP	TCP	10.8.0.8:44828 → 10.8.0.28:12345
09:15:09	Default DROP	TCP	10.8.0.8:44828 → 10.8.0.28:12345
09:15:11	Default DROP	TCP	10.8.0.8:44829 → 10.8.0.28:12345
09:15:13	Packetfilter rule #1	TCP	10.8.0.8:45074 → 10.8.0.28:21
09:15:22	Packetfilter rule #1	TCP	10.8.0.8:45075 → 10.8.0.28:21
09:15:25	Default DROP	TCP	10.8.0.8:44832 → 10.8.0.28:12345
09:15:33	WebAdmin connection	TCP	10.8.0.11:4886 → 10.8.0.28:4444
09:15:34	WebAdmin connection	TCP	10.8.0.11:4887 → 10.8.0.28:4444
09:15:39	Default DROP	TCP	10.8.0.8:44833 → 10.8.0.28:12345
09:15:42	Packetfilter rule #1	TCP	10.8.0.8:45078 → 10.8.0.28:21

Figure 68 Firewall: Live Log

Selecting the *Autoscroll* checkbox will automatically scroll down the window's scrollbar to always show the most recent results.

Below are some basic hints for configuring the firewall:

- Dropped Broadcasts:** By default, all broadcasts are dropped, which in addition will not be logged (for more information, see [Advanced](#)). This is useful for networks with many computers utilizing NetBIOS (for example, Microsoft Windows operating systems), because broadcasts will rapidly clutter up your firewall log file. To define a broadcast drop rule manually, group the definitions of the broadcast addresses of all attached networks, add another "global_broadcast" definition of `255.255.255.255/255.255.255.255`, then add a rule to drop all traffic to these addresses on top of your firewall configuration. On broadcast-heavy networks, this also has the benefit of increasing the system performance.
- Rejecting IDENT Traffic:** If you do not want to use the IDENT reverse proxy, you can actively reject traffic to port 113 (IDENT) of your internal networks. This may prevent longer timeouts on services that use IDENT, such as FTP, IRC, and SMTP.

Note - If you use masquerading, IDENT requests for masqueraded networks will arrive on the masquerading interface.

- Since NAT will change the addresses of network packets, it has implications on the firewall functionality.
 - DNAT is applied *before* the firewall. This means that the firewall will "see" the already translated packets. You must take this into account when adding rules for DNAT related services.
 - SNAT and Masquerading is applied *after* the firewall. This means that the firewall still "sees" the untranslated packets with the original source addresses.

The control panels in the table header can be used to filter firewall rules for specific criteria to rearrange rules for better readability. If you have defined groups you can select a group from the drop-down menu and thus see all rules that belong to this group. Using the search field you can look for a keyword or just a string to see the rules related to it. The search comprises a rule's source, destination, service, group name, and comment.

8.1.2 Country Blocking

On the *Network Security > Firewall > Country Blocking* tab you can enable blocking of traffic coming from or going to a certain country. You can either block single countries or whole continents. The blocking is based on the GeoIP information of the host's IP address.

Note – Country blocking is currently not supported for IP version 6.

To enable country blocking, proceed as follows:

1. **Enable country blocking.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Countries* section becomes editable.

2. **Select a location to block.**

Select one or more locations whose incoming or outgoing traffic is to be blocked completely. You can select countries by selecting the checkbox in

front of them or whole continents by selecting the checkbox in the header of a continent section.

3. **Click *Apply*.**

Your settings will be saved. Traffic from and to selected locations will be blocked now.

Tip – You can collapse a continent section by clicking the window icon in the top right of the header bar. Clicking the window icon again expands the continent section.

8.1.3 ICMP

On the *Network Security > Firewall > ICMP* tab you can configure the settings for the *Internet Control Message Protocol (ICMP)*. ICMP is used to exchange connection-related status information between hosts. ICMP is important for testing network connectivity or troubleshooting network problems.

Allowing any ICMP traffic on this tab will override ICMP settings being made in the firewall. If you only want to allow ICMP for certain hosts or networks, you should use the *Firewall > Rules* tab instead.

Global ICMP Settings

The following global ICMP options are available:

- **Allow ICMP on Gateway:** This option enables the gateway to respond to ICMP packets of any kind.
- **Allow ICMP through Gateway:** This option enables the forwarding of all ICMP packets through the gateway.
- **Log ICMP Redirects:** ICMP redirects are sent from one router to another to find a better route for a packet's destination. Routers then change their routing tables and forward the packet to the same destination via the supposedly better route. If you select this option, all ICMP redirects received by the gateway will be logged in the firewall log.

Ping Settings

The program *ping* is a computer network tool used to test whether a particular host is reachable across an IP network. Ping works by sending ICMP *echo request*

packets to the target host and listening for ICMP *echo response* replies. Using interval timing and response rate, ping estimates the round-trip time and packet loss rate between hosts.

The following ping options are available:

- **Gateway Is Ping Visible:** The gateway responds to ICMP *echo request* packets. This feature is enabled by default.
- **Ping From Gateway:** You can use the ping command on the gateway. This feature is enabled by default.
- **Gateway Forwards Pings:** The gateway forwards ICMP *echo request* and *echo response* packets.

Traceroute Settings

The program *traceroute* is a computer network tool used to determine the route taken by packets across an IP network. It lists the IP addresses of the routers that were involved in transporting the packet. If the packet's route cannot be determined within a certain time frame, traceroute will report an asterisk (*) instead of the IP address. After a certain number of failures, the check will end. An interruption of the check can have many causes, but most likely it is caused by a firewall along the network path that blocks traceroute packets.

The following traceroute options are available:

- **Gateway Is Traceroute Visible:** The gateway responds to traceroute packets.
- **Gateway Forwards Traceroute:** The gateway forwards traceroute packets.

Note - In addition, the UDP ports for UNIX traceroute applications are opened, too.

8.1.4 Advanced

The *Network Security > Firewall > Advanced* tab contains advanced settings for the firewall and the NAT rules.

Connection Tracking Helpers

So-called connection tracking helpers enable protocols that use multiple network connections to work with firewall or NAT rules. All connections handled by the firewall are tracked by the *conntrack* kernel module, a process better known as *connection tracking*. Some protocols such as FTP and IRC require several ports to be opened, and hence require special connection tracking helpers supporting them to operate correctly. These helpers are special kernel modules that help identify additional connections by marking them as being related to the initial connection, usually by reading the related addresses out of the data stream.

For example, for FTP connections to work properly, the FTP *conntrack* helper must be selected. This is due to the specifics of the FTP protocol, which first establishes a single connection that is called the FTP control connection. When commands are issued through this connection, other ports are opened to carry the rest of the data (e.g., downloads or uploads) related to that specific command. The problem is that the gateway will not know about these extra ports, since they were negotiated dynamically. Therefore, the gateway will be unable to know that it should let the server connect to the client over these specific ports (active FTP connections) or to let clients on the Internet connect to the FTP server (passive FTP connections).

This is where the FTP *conntrack* helper becomes effective. This special helper is added to the connection tracking module and will scan the control connection (usually on port 21) for specific information. When it runs into the correct information, it will add that specific information to a list of expected connections as being related to the control connection. This in return enables the gateway to track both the initial FTP connection as well as all related connections properly.

Connection tracking helpers are available for the following protocols:

- FTP
- IRC (for DCC)
- PPTP
- TFTP

Note - The PPTP helper module needs to be loaded if you want to offer PPTP VPN services on the gateway. Otherwise PPTP sessions cannot be established. The

reason for this is that PPTP first establishes a TCP port 1723 connection before switching to *Generic Routing Encapsulation* (GRE) communication, which is a separate IP protocol. If the PPTP helper module is not loaded, all GRE packets will be blocked by the gateway. Alternatively, if you do not want to use the PPTP helper module, you can manually add firewall rules allowing GRE packets for incoming and outgoing traffic.

Protocol Handling

Enable TCP Window Scaling: The TCP receive window (RWin) size is the amount of received data (in bytes) that can be buffered during a connection. The sending host can send only that amount of data before it must wait for an acknowledgment and window update from the receiving host. For more efficient use of high bandwidth networks, a larger TCP window size may be used. However, the TCP window size field controls the flow of data and is limited to 2 bytes, or a window size of 65535 bytes. Since the size field cannot be expanded, a scaling factor is used. TCP window scaling is a kernel option of the TCP/IP stack and can be used to increase the maximum window size from 65535 bytes to 1 Gigabyte. Window scaling is enabled by default. However, since some network devices such as routers, load balancers, gateways, and so on still do not fully support window scaling, depending on your environment it might be necessary to turn it off.

Use Strict TCP Session Handling: By default, the system can "pick up" existing TCP connections that are not currently handled in the connection tracking table due to a network facility reset. This means that interactive sessions such as SSH and Telnet will not quit when a network interface is temporarily unavailable. Once this option is enabled, a new three-way handshake will always be necessary to re-establish such sessions. It is generally recommended to leave this option turned off.

Validate Packet Length: If enabled, the firewall will check the data packets for minimal length if the ICMP, TCP, or UDP protocol is used. If the data packets are smaller than the minimal values, they will be blocked and a record will be written to the firewall log.

Spoof Protection: By default, spoof protection is disabled. You can choose between the following settings:

- **Normal:** The gateway will drop and log packets which either have the same source IP address as the interface itself or which arrive on an interface which has a source IP of a network assigned to another of its interfaces.
- **Strict:** The gateway will also drop and log all packets which have a destination IP for an interface but arriving on an interface other than assigned, that is, if it arrives on an interface for which it is not destined. For example, those packets will be dropped that were sent from an external network to the IP address of the internal interface which is supposed to accept packets from the internal network only.

Logging Options

Log FTP Data Connections: The ASG will log the FTP data connections of (file and directory listings). The log records are marked by the string "FTP data".

Log Unique DNS Requests: The ASG will log all outgoing requests to DNS servers as well as their outcome. The log records are marked by the string "DNS request".

Log Dropped Broadcasts: By default, the firewall drops all broadcasts, which in addition will not be logged. However, if you need broadcasts to be logged in the firewall log, for example, for audit purposes, select this option.

8.2 NAT

The menu *Network Security > NAT* allows you to define and manage NAT rules of the gateway. *Network Address Translation* (NAT) is the process of rewriting the source and/or destination addresses of IP packets as they pass through a router or gateway. Most systems using NAT do so in order to enable multiple hosts on a private network to access the Internet using a single public IP address. When a client sends an IP packet to the router, NAT translates the sending address to a different, public IP address before forwarding the packet to the Internet. When a response packet is received, NAT translates the public address into the original address and forwards it to the client. Depending on system resources, NAT can handle arbitrarily large internal networks.

8.2.1 Masquerading

Masquerading is a special case of *Source Network Address Translation* (SNAT) and allows you to masquerade an internal network (typically, your LAN with private address space) behind a single, official IP address on a network interface (typically, your external interface connected to the Internet). SNAT is more generic as it allows to map multiple source addresses to several destination addresses.

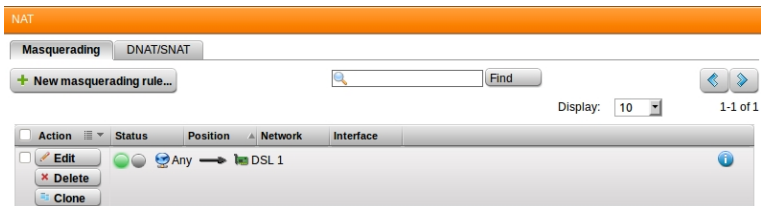


Figure 69 NAT: List of Masquerading Rules

Note - The source address is only translated if the packet leaves the gateway system via the specified interface. Note further that the new source address is always the current IP address of that interface (meaning that this address can be dynamic).

To create a masquerading rule, proceed as follows:

1. **On the *Masquerading* tab, click *New Masquerading Rule*.**
The *Create New Masquerading Rule* dialog box opens.
2. **Make the following settings:**
 - Network:** Select the (internal) network you want to masquerade.
 - Interface:** Select the (external) interface that is connected to the Internet.
 - Use Address:** If the interface you selected has more than one IP address assigned (see *Interfaces & Routing > Interfaces > [Additional Addresses](#)*), you can define here which IP address is to be used for masquerading.
 - Comment** (optional): Add a description or other information.
3. **Click *Save*.**
The new masquerading rule appears on the *Masquerading* rule list.

4. Enable the masquerading rule.

Click the status icon to activate the masquerading rule.

To either edit or delete a rule, click the corresponding buttons.

Note - You need to allow traffic from the internal network to the Internet in the firewall if you want your clients to access external servers.

IPsec packets are never affected by masquerading rules. To translate the source address of IPsec packets create an SNAT or Full NAT rule.

8.2.2 DNAT/SNAT

Destination Network Address Translation (DNAT) and *Source Network Address Translation (SNAT)* are both special cases of NAT. With SNAT, the IP address of the computer which initiated the connection is rewritten, while with its counterpart DNAT, the destination addresses of data packets are rewritten. DNAT is especially useful when an internal network uses private IP addresses, but an administrator wants to make some services available to the outside.

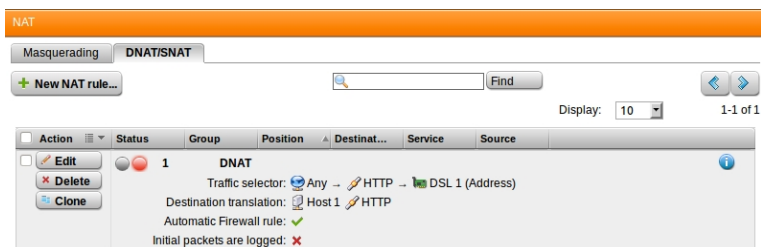


Figure 70 NAT: List of DNAT/SNAT Rules

This is best demonstrated with an example. Suppose your internal network uses the address space 192.168.0.0/255.255.255.0 and a web server running at IP address 192.168.0.20 port 80 should be available to Internet-based clients. Because the 192.168. address space is private, the Internet-based clients cannot send packets directly to the web server. It is, however, possible for them to communicate with the external (public) address of the ASG. DNAT can, in this case, take packets addressed to port 80 of the system's address and forward them to the internal web server.

Note - PPTP VPN Access is incompatible with DNAT.

In contrast to masquerading, which is dynamic, SNAT uses static address translation, that is, every internal address is translated to its own externally visible IP address.

Note - By default, port 443 (HTTPS) is used for the User Portal. If you plan to forward port 443 to an internal server, you need to change the TCP port of the User Portal to another value (e.g., 1443) on the *Management > User Portal > Advanced* tab.

Because DNAT is done before firewalling, you must ensure that appropriate firewall rules are defined. For more information, see *Network Security > Firewall > Rules*.

To define a DNAT/SNAT rule, proceed as follows:

1. **On the *DNAT/SNAT* tab, click *New NAT Rule*.**

The *Create New NAT Rule* dialog box opens.

2. **Make the following settings:**

Group: Groups are useful to combine various NAT rules logically for better readability. A group can be any text string.

Position: The position number, defining the priority of the rule. Lower numbers have higher priority. Rules are matched in ascending order. Once a rule has matched, rules with a higher number will not be evaluated anymore.

Traffic Source: The original source address of the packet (this can be either a single host or an entire network).

Traffic Service: The original service type of the packet (consisting of source and destination ports as well as a protocol type).

Note - A traffic service can only be translated when the corresponding addresses are translated as well. In addition, a service can only be translated to another service when the two services use the same protocol.

Traffic Destination: The original destination address of the packet (this can be either a single host or an entire network).

NAT Mode: Select the network address translation mode. Depending on your selection, various options will be displayed. The following modes are available:

- **No NAT:** This option can be regarded as a kind of exception rule. For example, if you have a NAT rule for a defined network you can create a *No NAT* rule for certain hosts inside this network. Those hosts will then be exempted from NAT .
- **DNAT (Destination):** If you select *DNAT*, choose a destination host/network and destination service, that is, the new destination address and service of the packet.
- **SNAT (Source):** If you select *SNAT*, choose a source host/network and source service, that is, the new source address and service of the packet.
- **Full NAT:** If you select *Full NAT*, choose a destination host/network plus destination service and a source host/network plus source service.

Log Initial Packets (optional): Select this option to write the initializing packet of a communication to the firewall log. Whenever the NAT rule is used, you will then find a message in the firewall log saying "Connection using NAT". This option works for stateful as well as stateless protocols.

Automatic Firewall Rules (optional): Select this option to automatically generate firewall rules.

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

Only available with *SNAT* or *Full NAT* mode.

Rule Applies to IPsec Packets: Select this option if you want to apply the rule to traffic which is going to be processed by IPsec. By default this option is not selected, thus IPsec traffic is excluded from source network address translation.

4. **Click Save.**

The new rule appears on the *DNAT/SNAT* list.

5. Enable the NAT rule.

Click the status icon to activate the NAT rule.

To either edit or delete a rule, click the corresponding buttons.

8.3 Intrusion Prevention

On the menu *Network Security > Intrusion Prevention* you can define and manage IPS rules of the gateway. The *Intrusion Prevention system* (IPS) recognizes attacks by means of a signature-based IPS rule set. The system analyzes the complete traffic and automatically blocks attacks before they can reach the network. The existing rule set and attack patterns are updated through the pattern updates. New IPS attack pattern signatures are automatically imported to the rule set as IPS rules.

8.3.1 Global

On the *Network Security > Intrusion Prevention > Global* tab you can activate the *Intrusion Prevention System* (IPS) of Astaro Security Gateway.

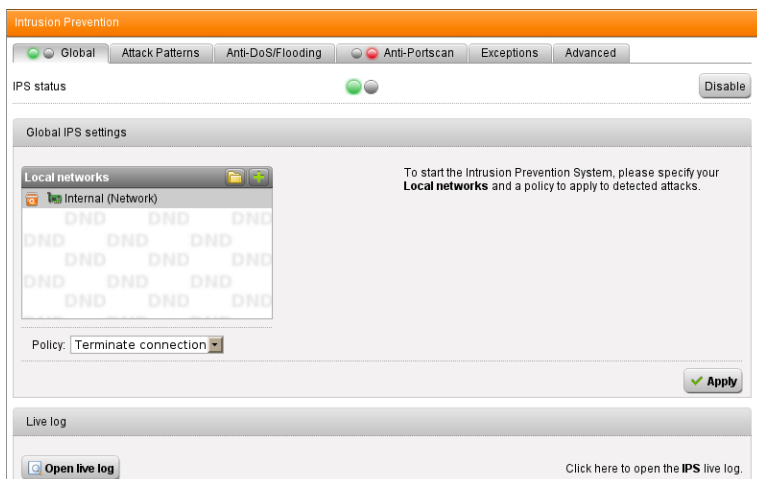


Figure 71 IPS: Enabling Intrusion Prevention

To enable IPS, proceed as follows:

1. **Enable the intrusion prevention system.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Global IPS Settings* area becomes editable.

2. **Make the following settings:**

Local Networks: Select the networks that should be protected by the intrusion prevention system. If no local network is selected, intrusion prevention will automatically be deactivated and no traffic is monitored.

Policy: Select the security policy that the intrusion prevention system should use if a blocking rule detects an IPS attack signature.

- **Drop Silently:** The data packet will be dropped without any further action.
- **Terminate Connection:** A terminating data packet (*RST* for TCP and *ICMP Port Unreachable* for UDP connections) will be sent to both communication partners to close the connection.

Note - By default, *Drop Silently* is selected. There is usually no need to change this, especially as terminating data packets can be used by an alleged intruder to draw conclusions about the gateway.

3. **Click *Apply*.**

Your settings will be saved.

Live Log

The intrusion prevention live log can be used to monitor the selected IPS rules.

Click the button to open the live log in a new window.

8.3.2 Attack Patterns

The *Network Security > Intrusion Prevention > Attack Patterns* tab contains IPS rules grouped according to common attack patterns. Attack patterns have been combined as follows:

- **Operating System Specific Attacks:** Attacks trying to exploit operating system related weaknesses.

- **Attacks Against Servers:** Attacks targeted at all sorts of servers (for example, web servers, mail servers, and so on).
- **Attacks Against Client Software:** Attacks aimed at client software such as web browsers, multimedia players, and so on.
- **Protocol Anomaly:** Attack patterns look out for network anomalies.
- **Malware:** Software designed to infiltrate or damage a computer system without the owner's informed consent (for example, trojans, DoS communication tools, and the like).

To improve performance, you should clear the checkboxes that do not apply to services or software employed in your local networks. For example, if you do not operate a web server in your local network, you can cancel the selection for *HTTP Servers*.

For each group, the following settings are available:

Action: By default, each rule in a group has an action associated with it. You can choose between the following actions:

- **Drop:** The default setting. If an alleged attack attempt has been determined, the causing data packets will be dropped.
- **Alert:** Unlike the *Drop* setting, critical data packets are allowed to pass the gateway but will create an alert message in the IPS log.

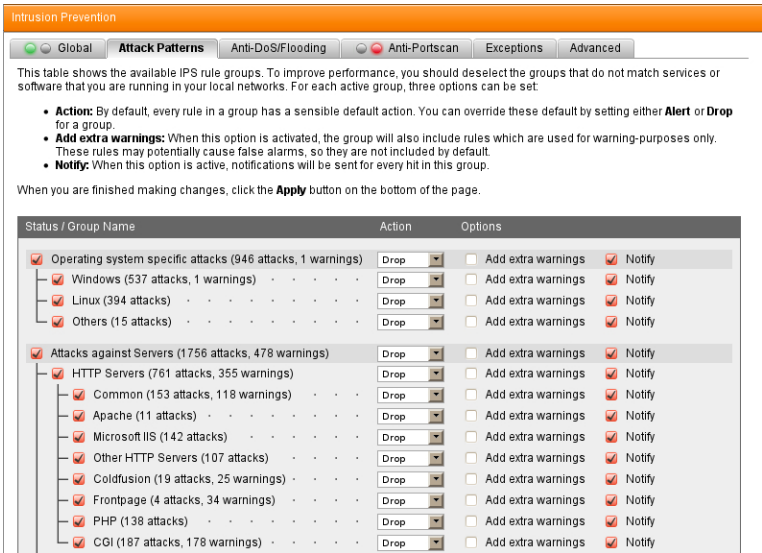


Figure 72 IPS: Attack Patterns

Note - To change the settings for individual IPS rules, use the *Modified Rules* box on the *Intrusion Prevention > Advanced* tab. A detailed list of IPS rules used in Astaro Security Gateway V8 is available at the [Astaro website](#).

Add Extra Warnings: When this option is selected, each group will include additional rules increasing the IPS detection rate. Note that these rules are more general and vague than the explicit attack patterns and will therefore likely produce more alerts. For that reason, the default action for these rules is *Alert*, which cannot be configured.

Notify: When this option is selected, a notification is sent to the administrator for every IPS event matching this group. Note that this option only takes effect if you have enabled the notification feature for the intrusion prevention system on the *Management > Notifications > Notifications* tab. In addition, what type of notification (i.e., e-mail or SNMP trap) is to be sent depends on the settings made there. Note further that it might take up to five minutes before changes of the notification settings will become effective.

8.3.3 Anti-DoS/Flooding

On the *Anti-DoS/Flooding* tab you can configure certain options aimed at defending *Denial of Service* (DoS) and *Distributed Denial of Service* (DDoS) attacks.

Generally speaking, DoS and DDoS attacks try to make a computer resource unavailable for legitimate requests. In the simplest case, the attacker overloads the server with useless packets in order to overload its performance. Since a large bandwidth is required for such attacks, more and more attackers start using so-called *SYN flood attacks*, which do not aim at overloading the bandwidth, but at blocking the system resources. For this purpose, they send so-called SYN packets to the TCP port of the service often with a forged sender address, thus causing the server to spawn a half-open connection by sending back a TCP/SYN-ACK packet, and waiting for an TCP/ACK packet in response from the sender address. However, because the sender address is forged, the response never comes. These half-open connections saturate the number of available connections the server is able to make, keeping it from responding to legitimate requests.

Such attacks, however, can be prevented by limiting the amount of SYN (TCP), UDP, and ICMP packets being sent into your network over a certain period of time.

TCP SYN Flood Protection

To enable SYN (TCP) flood protection, proceed as follows:

1. **On the *Anti-DoS/Flooding* tab, select the checkbox *Use TCP SYN Flood Protection*.**
2. **Make the following settings:**
Mode: The following modes are available:
 - **Both Source and Destination Addresses:** Select this option if you want to drop SYN packets that match both source and destination IP address. First, SYN packets are filtered that match the source IP address. Second, if there are still too many requests they will additionally be filtered according to the destination IP address. This mode is set as default.
 - **Destination Address Only:** Select this option if you want to drop SYN packets according to the destination IP address only.

- **Source Address Only:** Select this option if you want to drop SYN packets according to the source IP address only.

Logging: This option lets you select the log level. The following levels are available:

- **Off:** Select this log level if you want to turn logging completely off.
- **Limited:** Select this log level to limit logging to five packets per seconds. This level is set as default.
- **Everything:** Select this log level if you want verbose logging for all SYN (TCP) connection attempts. Note that SYN (TCP) flood attacks may lead to extensive logging.

Source Packet Rate: Here you can specify the rate of packets per second that is allowed for source IP addresses.

Destination Packet Rate: Here you can specify the rate of packets per second that is allowed for destination IP addresses.

Note - It is important to enter reasonable values here, for if you set the rate too high, your web server, for instance, might fail because it cannot deal with such an amount of SYN (TCP) packets. On the other hand, if you set the rate too low, your gateway might show some unpredictable behavior by blocking regular SYN (TCP) requests. Reasonable settings for every system heavily depend on your hardware. Therefore, replace the default values by numbers that are appropriate for your system.

3. **Click *Apply*.**

Your settings will be saved.

UDP Flood Protection

UDP Flood Protection detects and blocks UDP packet floods.

The configuration of *UDP Flood Protection* is identical to *TCP SYN Flood Protection*.

ICMP Flood Protection

ICMP Flood Protection detects and blocks ICMP packet floods.

The configuration of *ICMP Flood Protection* is identical to *TCP SYN Flood Protection*.

8.3.4 Anti-Portscan

The *Network Security > Intrusion Prevention > Anti-Portscan* tab lets you configure general portscan detection options.

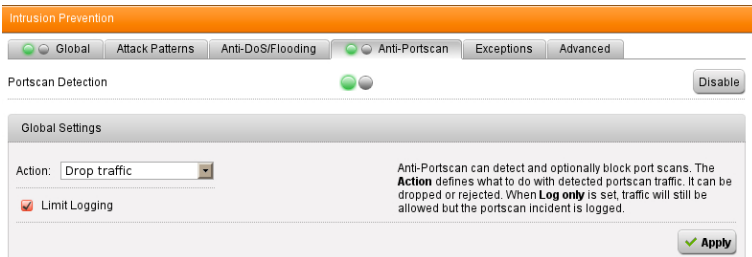


Figure 73 IPS: Configuring Portscan Protection

Portscans are used by hackers to probe secured systems for available services: In order to intrude into a system or to start a DoS attack, attackers need information on network services. If this information is available, attackers might take advantage of the security deficiencies of these services. Network services using the TCP and UDP Internet protocols can be accessed via special ports and this port assignment is generally known, for example the SMTP service is assigned to the TCP port 25. Ports that are used by the services are referred to as open, since it is possible to establish a connection to them, whereas unused ports are referred to as closed; every attempt to connect with them will fail. Attackers try to find the open ports with the help of a particular software tool, a port scanner. This program tries to connect with several ports on the destination computer. If it is successful, the tool displays the relevant ports as open and the attackers have the necessary information, showing which network services are available on the destination computer.

Since there are 65535 distinct and usable port numbers for the TCP and UDP Internet protocols, the ports are scanned at very short intervals. If the gateway detects an unusually large number of attempts to connect to services, especially if these attempts come from the same source address, the gateway is most likely being port scanned. If an alleged attacker performs a scan of hosts or services on your network, the portscan detection feature will recognize this. As an option, further portscans from the same source address can be blocked automatically.

Technically speaking, a portscan is detected when a detection score of 21 points in a time range of 300 ms for one individual source IP address is exceeded. The detection score is calculated as follows:

- Scan of a TCP destination port less than 1024 = 3 points
- Scan of a TCP destination port greater or equal 1024 = 1 point

To enable portscan detection, proceed as follows:

1. **On the *Anti-Portscan* tab, enable *Portscan Detection*.**

You can either click the status icon or the *Enable* button.

The status icon turns green and the *Global Settings* area becomes editable.

2. **Make the following settings:**

Action: The following actions are available:

- **Log Event Only:** No measures are taken against the portscan. The event will be logged only.
- **Drop Traffic:** Further packets of the portscan will be silently dropped. A port scanner will report these ports as filtered.
- **Reject Traffic:** Further packets of the portscan will be dropped and an ICMP "destination unreachable/port unreachable" response will be sent to the originator. A port scanner will report these ports as closed.

Limit Logging: Enable this option to limit the amount of log messages. A portscan detection may generate many logs while the portscan is being carried out. For example, each SYN packet that is regarded as belonging to the portscan will generate an entry in the firewall log. Selecting this option will restrict logging to five lines per second.

3. **Click *Apply*.**

Your settings will be saved.

8.3.5 Exceptions

On the *Network Security > Intrusion Prevention > Exceptions* tab you can define source and destination networks that should be excluded from intrusion prevention.

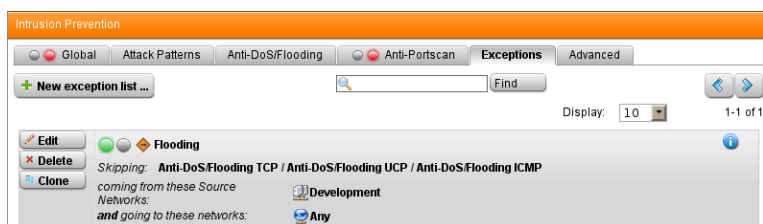


Figure 74 IPS: Exceptions List

To create an exception, proceed as follows:

1. **On the *Exceptions* tab, click *New Exception List*.**

The *Create Exception List* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this exception.

Skip These Checks: Select the security checks that should be skipped:

- **Intrusion Prevention:** When you select this option, the IPS of Astaro Security Gateway will be disabled.
- **Portscan Protection:** Selecting this option disables the protection from attacks aimed at searching your network hosts for open ports.
- **TCP SYN Flood Protection:** Once selected, the protection from TCP SYN flooding attacks will be disabled.
- **UDP Flood Protection:** Once selected, the protection from UDP flooding attacks will be disabled.
- **ICMP Flood Protection:** Once selected, the protection from ICMP flooding attacks will be disabled.

For All Requests: Select at least one condition for which the security checks are to be skipped. You can logically combine several conditions by selecting either *And* or *Or* from the drop-down list in front of a condition. The following conditions can be set:

- **Coming from These Source Networks:** Select to add source hosts/networks that should be exempt from the security checks of this exception rule. Enter the respective hosts or networks in the *Hosts/Networks* dialog box that opens after selecting the condition.

- **Using These Services:** Select to add services that should be exempt from the security checks of this exception rule. Add the respective services to the *Services* dialog box that opens after selecting the condition.
- **Going to These Destinations:** Select to add hosts/networks that should be exempt from the security checks of this exception rule. Enter the respective hosts or networks in the *Destinations* dialog box that opens after selecting the condition.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new exception appears on the *Exceptions* list.

To either edit or delete an exception, click the corresponding buttons.

Note - If you want to except intrusion prevention for packets with the destination address of the gateway, selecting *Any* in the *Destinations* dialog box will not succeed. You must instead select an interface definition of the gateway that contains the gateway's IP address, for example, *Internal (Address)* if you want to exclude intrusion prevention for the gateway's internal address.

8.3.6 Advanced

On the *Network Security > Intrusion Prevention > Advanced* tab you can configure manual modifications to each IPS rule overwriting the default policy, which is taken from the attack pattern groups. Such modifications should be configured by experienced users only.

To create a modified rule, proceed as follows:

1. **In the *Modified Rules* box, click the plus icon.**

The *Modify Rule* dialog box opens.

2. **Make the following settings:**

Rule ID: Enter the ID of the rule you want to modify. To look up the rule ID, go to the list of IPS rules at the Astaro website (available both in [HTML](#) and [XML](#) format). In addition, they can either be determined from the IPS log or the IPS report.

Disable this Rule: When you select this option, the rule of the respective ID will be disabled.

If you do *not* select this option, however, the following two options are available:

- **Disable Notifications:** Selecting this option will not trigger a notification in case the rule in question was applied.
- **Action:** The action each rule is associated with it. You can choose between the following actions:
 - **Drop:** If an alleged attack attempt has been determined, the causing data packets will be dropped.
 - **Alert:** Unlike the *Drop* setting, critical data packets are allowed to pass the gateway but will create an alert message in the IPS log.

3. Click **Save**.

The rule appears in the *Modified Rules* box. Please note that you also need to click *Apply* on the bottom of the page to commit the changes.

Note - If you add a rule ID to the *Modified Rules* box and set the action to *Alert*, for example, this modification will only take effect if the group to which the rule belongs is enabled on the *Attack Patterns* tab. If the corresponding attack pattern group is disabled, modifications to individual IPS rules will have no effect.

Performance Tuning

In addition, to increase the performance of the intrusion prevention system and to minimize the amount of false positive alerts, you can limit the scope of IPS rules to only some of your internal servers. For example, suppose you have activated the *HTTP Servers* group on the *Attack Patterns* tab and you have selected a particular HTTP server here. Then, even if the intrusion prevention system recognizes an attack against an HTTP server, the associated action (*Drop* or *Alert*) will only be applied if the IP address of the affected server matches the IP address of the HTTP server selected here.

You can limit the scope of IPS rules for the following server types:

- **HTTP:** All attack pattern groups subsumed under *HTTP Servers*
- **DNS:** Attack pattern group *DNS*

- **SMTP:** Attack pattern groups *Exchange* and *Sendmail*
- **SQL:** All attack pattern groups subsumed under *Database Servers*

8.4 Server Load Balancing

With the server load balancing function you can distribute incoming connections (e.g., SMTP or HTTP traffic) to several servers behind the gateway. Balancing is based on the source IP address with a persistence time of one hour. If the interval between two requests from the same source IP address exceeds that interval, the balancing is redetermined. The traffic distribution is based on a simple round-robin algorithm.

All servers from the server pool are monitored either by ICMP ping, TCP connection establishment, or HTTP/S requests. In case of a failure the affected server is not used anymore for distribution, any possible source IP persistence is overruled.

Note - A return code of HTTP/S requests must either be 1xx Informational, 2xx Success, 3xx Redirection, or 4xx Client Error. All other return codes are taken as failure.

8.4.1 Balancing Rules

On the *Network Security > Server Load Balancing > Balancing Rules* tab you can create load balancing rules for Astaro Security Gateway Software. After having created a rule, you can additionally define weight distribution between servers and set interface persistence.

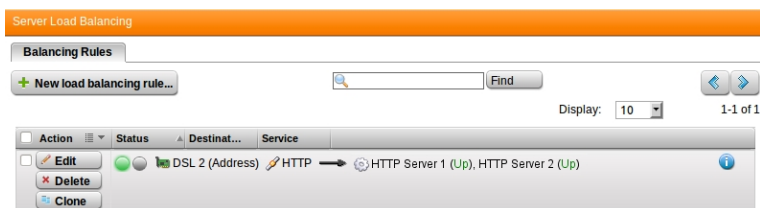


Figure 75 Server Load Balancing: List of Balancing Rules

To create a load balancing rule, proceed as follows:

1. **On the *Balancing Rules* tab, click *New Load Balancing Rule*.**

The *Create New Load Balancing Rule* dialog box opens.

2. **Make the following settings:**

Service: Select the network service you want to balance.

Virtual Server: The original target host of the incoming traffic. Typically, the address will be the same as the gateway's external address.

Real Servers: The hosts that will in turn accept traffic for the service.

Check Type: Select either *TCP* (TCP connection establishment), *UDP* (UDP connection establishment), *Ping* (ICMP Ping), *HTTP Host* (HTTP requests), or *HTTPS Hosts* (HTTPS requests) for service monitoring. When using *UDP* a ping request will be sent initially which, if successful, is followed by a UDP packet with a payload of 0. If ping does not succeed or the ICMP port is unreachable, the server is regarded as down. For *HTTP* and *HTTPS* requests enter a *Check URL*, which can either be with or without hostname, e.g. `index.html` or `http://www.example.com/index.html`.

Check Interval: Enter a check interval in seconds. The default is 15 seconds, i.e. every 15 seconds the health status of all real servers is checked.

Automatic Firewall Rules (optional): Select this checkbox to automatically generate firewall rules. These rules allow forwarding traffic from any host to the real servers.

Shutdown Virtual Server Address (optional): If and only if you use an additional address as virtual server for load balancing (see chapter [Additional Addresses](#)) this checkbox can be enabled. In case all real servers become unavailable that additional address interface will be automatically shut down.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new rule appears on the *Balancing Rules* list. It is disabled by default (status icon is red).

4. **Enable the load balancing rule.**

Click the status icon to enable the rule.

The status icon turns green.

To either edit or delete a load balancing rule, click the corresponding buttons.

Example: Suppose that you have two HTTP servers in your DMZ with the IP addresses 192.168.66.10 and 192.168.66.20, respectively. Assumed further you want to distribute HTTP traffic arriving on the external interface of your gateway equally to both servers. To set up a load balancing rule, select or create a host definition for each server. You may call them *http_server_1* and *http_server_2*. Then, in the *Create New Load Balancing Rule* dialog box, select *HTTP* as *Service*. In addition, select the external address of the gateway as *Virtual Server*. Finally, put the host definitions into the *Real Servers* box.

Weight Distribution and Interface Persistence

To distribute weight between the load balancing servers and/or to set interface persistence of them, do the following:

1. **Click the *Edit* button of a load balancing rule.**
The *Edit Load Balancing Rule* dialog box opens.
2. **Click the *Scheduler* button on the header of the *Real Servers* box.**
The *Edit Scheduler* dialog box opens.
3. **Make the following settings:**
Weight: Weight can be set from 0 to 100 and specifies how much traffic is processed by a server relative to all other servers. A weighted round robin algorithm is used for this, a higher value meaning more traffic is routed to the respective server. The values are evaluated relative to each other so they need not add up to 100. Instead, you can have a configuration for example, where server 1 has value 100, server 2 has value 50 and server 3 has value 0. Here, server 2 gets only half the traffic of server 1, whereas server 3 only comes into action when none of the other servers is available. A value of zero means that always another server with a higher value is chosen if available.
Persistence: Interface persistence is a technique which ensures that subsequent connections from a client are always routed over the same uplink interface. Persistence has a default timeout of one hour. You can also disable interface persistence for this balancing rule.
4. **Click *Save*.**
The *Edit Scheduler* dialog box closes and your settings are saved.

5. Click Save.

The *Edit Load Balancing Rule* dialog box closes.

8.5 VoIP

Voice over Internet Protocol (VoIP) is the routing of voice conversations over the Internet or through any other IP-based network. Astaro Security Gateway offers support for the most frequently employed protocols used to carry voice signals over the IP network:

- [SIP](#)
- [H.323](#)

8.5.1 SIP

The *Session Initiation Protocol* (SIP) is a signalization protocol for the setup, modification, and termination of sessions between two or several communication partners. It is primarily used in setting up and tearing down voice or video calls. SIP uses TCP on port 5060 to negotiate which dynamic port range is to be used between the endpoints when setting up a call. Since opening all ports within the dynamic range would cause a severe security issue, the gateway is able to handle SIP traffic on an intelligent basis. This is achieved by means of a special connection tracking helper monitoring the control channel to determine which dynamic ports are being used and then only allowing these ports to pass traffic when the control channel is busy. For that purpose you must specify both a SIP server and a client network definition in order to create appropriate firewall rules enabling the communication via the SIP protocol.



Figure 76 VoIP SIP: Enabling VoIP SIP

To enable support for the SIP protocol, proceed as follows:

1. **On the *SIP* tab, enable SIP protocol support.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Global SIP Settings* area becomes editable.

2. **Make the following settings:**

SIP Server Networks: Here you can select the SIP server (provided by your ISP) the SIP clients should be allowed to connect to; for security reasons, do not select *Any*.

SIP Client Networks: Select the hosts/networks of the SIP clients that should be allowed to initiate or respond to a SIP communication. A SIP client is an endpoint in the LAN that participates in real-time, two-way communications with another SIP client.

Enable Strict Mode (optional): Select this option to enhance security. However, if you are facing connection problems with your ISP, disable strict mode.

3. **Click *Apply*.**

Your settings will be saved.

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

8.5.2 H.323

H.323 is an international multimedia communications protocol standard published by the *International Telecommunications Union (ITU-T)* and defines the protocols to provide audio-visual communication sessions on any packet-switched network. H.323 is commonly used in *Voice over IP (VoIP)* and IP-based videoconferencing.

H.323 uses TCP on port 1720 to negotiate which dynamic port range is to be used between the endpoints when setting up a call. Since opening all ports within the dynamic range would cause a severe security issue, the gateway is able to allow H.323-related traffic on an intelligent basis. This is achieved by means of a special connection tracking helper monitoring the control channel to determine which dynamic ports are being used and then only allowing these ports to pass traffic when the control channel is busy. For that purpose you must specify both an H.323 gatekeeper and a client network definition in order to create appropriate firewall rules enabling the communication via the H.323 protocol.

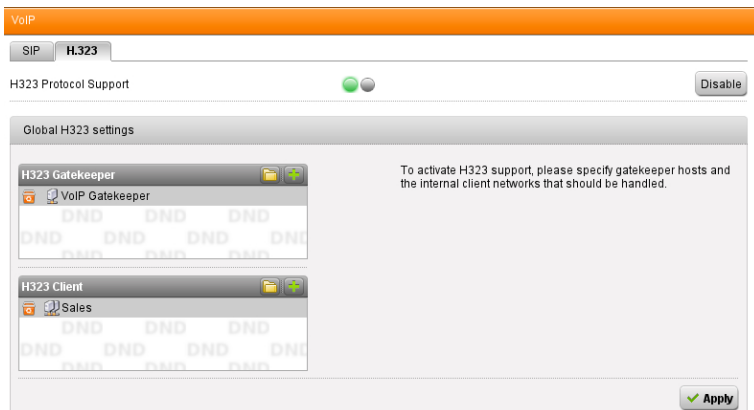


Figure 77 VoIP H.323: Enabling VoIP H.323

To enable support for the H.323 protocol, proceed as follows:

1. **On the *H.323* tab, enable H.323 protocol support.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Global H.323 Settings* area becomes editable.

2. **Make the following settings:**

H.323 Gatekeeper: Select an H.323 gatekeeper. An H.323 gatekeeper controls all H.323 clients (endpoints such as Microsoft's NetMeeting) in its zone. More specifically, it acts as a monitor of all H.323 calls within its zone on the LAN. Its most important task is to translate between symbolic alias addresses and IP addresses.

H.323 Client: Here you can select the host/network to and from which H.323 connections are initiated. An H.323 client is an endpoint in the LAN that participates in real-time, two-way communications with another H.323 client.

Enable Strict Mode (optional): Select this option to enhance security. However, if you are facing connection problems with your ISP, disable strict mode.

3. **Click *Apply*.**

Your settings will be saved.

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

8.6 Advanced

The tabs of the *Network Security > Advanced* menu let you configure additional network security features such as a generic proxy, SOCKS proxy, and IDENT reverse proxy.

8.6.1 Generic Proxy

A generic proxy, also known as a port forwarder, combines both features of DNAT and masquerading, forwarding all incoming traffic for a specific service to an arbitrary server. The difference to standard DNAT, however, is that a generic proxy also replaces the source IP address of a request with the IP address of the interface for outgoing connections. In addition, the destination (target) port number can be changed as well.

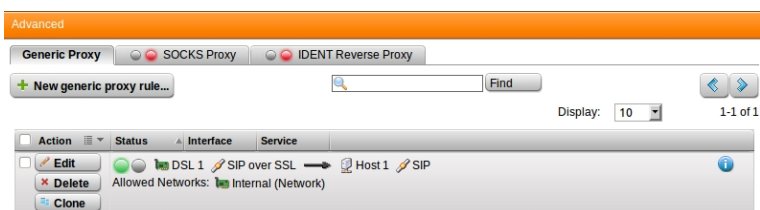


Figure 78 Generic Proxy: Rules List

To add a generic proxy rule, proceed as follows:

1. **On the *Generic Proxy* tab, click *New Generic Proxy Rule*.**
The *Create New Generic Proxy Rule* dialog box opens.
2. **Make the following settings:**
 - Interface:** Select the interface for incoming connections.
 - Service:** Select the service definition of the traffic to be proxied.
 - Host:** Select the target host where the traffic should be forwarded to.
 - Service:** Select the target service of the traffic to be proxied.
 - Allowed Networks:** Select the networks to which port forwarding should be applied.
 - Comment** (optional): Add a description or other information.
3. **Click *Save*.**
The new rule appears on the *Generic Proxy* rule list.
4. **Activate the generic proxy rule.**
Click the status icon to enable the rule.

The rule is now enabled (status icon is green).

To either edit or delete a rule, click the corresponding buttons.

8.6.2 SOCKS Proxy

SOCKS is a versatile Internet protocol that allows client-server applications to transparently use the services of a network firewall. It is used by many client applications behind a firewall to communicate with hosts on the Internet. Examples are IRC/Instant Messaging clients, FTP clients, and Windows SSH/Telnet clients. Those clients behind a firewall wanting to access exterior servers connect to a

SOCKS proxy server instead. This proxy server controls the eligibility of the client to access the external server and passes the request on to the server. Your client application must explicitly support the SOCKS 4 or SOCKS 5 protocol versions.

The default port for SOCKS is 1080. Almost all clients have implemented this default port setting, so it normally does not have to be configured. The differences between SOCKS and NAT are that SOCKS also allows "bind" requests (listening on a port on behalf of a client—a feature which is supported by very few clients only) and that SOCKS 5 allows user authentication.

When enabling the SOCKS proxy, you must define one or more networks which should have access to the proxy. When you require user authentication, you can also select the users or groups that should be allowed to use the SOCKS proxy.

Note - Without user authentication, the SOCKS proxy can be used with both the SOCKS 4 and SOCKS 5 protocols. When user authentication is selected, only SOCKS 5 will work. If you want the proxy to resolve hostnames in SOCKS 5 mode, you must also activate the DNS proxy, because otherwise DNS resolution will fail.

To configure the SOCKS proxy, proceed as follows:

1. **On the *SOCKS Proxy* tab, enable the SOCKS proxy.**

You can either click the status icon or the *Enable* button.

The status icon turns green and the *SOCKS Proxy Options* area becomes editable.

2. **Make the following settings:**

Allowed Networks: Select the networks that should be allowed to use the SOCKS proxy.

Enable User Authentication: If you select this option, users must provide a username and password to log in to the SOCKS proxy. Because only SOCKS 5 supports user authentication, SOCKS 4 is automatically disabled.

Allowed Users: Select the users or groups that should be allowed to use the SOCKS proxy.

3. **Click *Apply*.**

Your settings will be saved.

8.6.3 IDENT Reverse Proxy

The IDENT protocol is used by remote servers for a simple verification of the identity of accessing clients. Although this protocol is unencrypted and can easily be spoofed, many services still use (and sometimes require) the IDENT protocol.

To configure the IDENT relay, proceed as follows:

1. **On the *IDENT Reverse Proxy* tab, enable the IDENT relay.**

You can either click the status icon or the *Enable* button.

The status icon turns green and the *Global Settings* area becomes editable.

2. **Make the following settings:**

Forward to Internal Hosts (optional): Since IDENT queries are not covered by the gateway's connection tracking, they will get "stuck" if masquerading is used. You can select the *Forward to Internal Hosts* option to pass on IDENT queries to masqueraded hosts behind the gateway. Note that the actual IP connection will not be forwarded. Instead, the gateway will in turn ask the internal client for an IDENT reply and will forward that string to the requesting server. This scheme will work with most "mini-IDENT" servers built into popular IRC and FTP clients.

Default Response: The gateway offers support for answering IDENT requests when you enable the IDENT relay. The system will always reply with the string entered in the *Default Response* box, regardless of the local service that has initiated the connection.

3. **Click *Apply*.**

Your settings will be saved.

9 Web Security

This chapter describes how to configure basic web security features of Astaro Security Gateway.

The following topics are included in this chapter:

- [Web Filtering](#)
- [Web Filtering Profiles](#)
- [Application Control](#)
- [FTP Proxy](#)

The *Web Security Statistics* page in WebAdmin provides an overview of the most surfed domains according to time and traffic as well as for the top users surfing. In addition, the top blocked website categories are shown. Each of the sections contains a *Details* link. Clicking the link redirects you to the respective reporting section of WebAdmin, where you can find more statistical information.

Note - The collection of web surfing data is session-based. To achieve good approximations all data for top domains and users is gathered as follows: each web request is logged by taking the traffic volume and the duration between requests into account. If for a period of five minutes of inactivity no requests are recorded for either a user or a domain, the session is considered closed. To take into account that users might still view a web page within five minutes of inactivity, one minute is always added to the *Time Spent* values. Note further that reporting data is updated every 15 minutes.

When clients try to request invalid URLs, the Web Filter will log the request but will not be able to serve it. Those links will be counted with error on the *Web Security Statistics* page. This is not an error of the reporting or the Web Filter; in most cases, those errors occur because invalid or malformed links are placed in web content by the page creator.

9.1 Web Filtering

The tabs of the *Web Security > Web Filtering* menu allow you to configure Astaro Security Gateway Software as an HTTP/S caching proxy. In addition to simple caching services, the HTTP/S proxy of Astaro Security Gateway features a rich set of web filtering techniques for the networks that are allowed to use its services. This includes preventing virus and spyware infections by means of two different virus scanning engines with constantly updated signature databases and spyware filtering techniques that protects both inbound and outbound traffic. Moreover, Astaro Security Gateway can control access to various web pages by employing sophisticated website categorization, using the world's largest real-time URL database.

9.1.1 Global

On the *Web Security > Web Filtering > Global* tab you can make the global settings for the Web Filter.

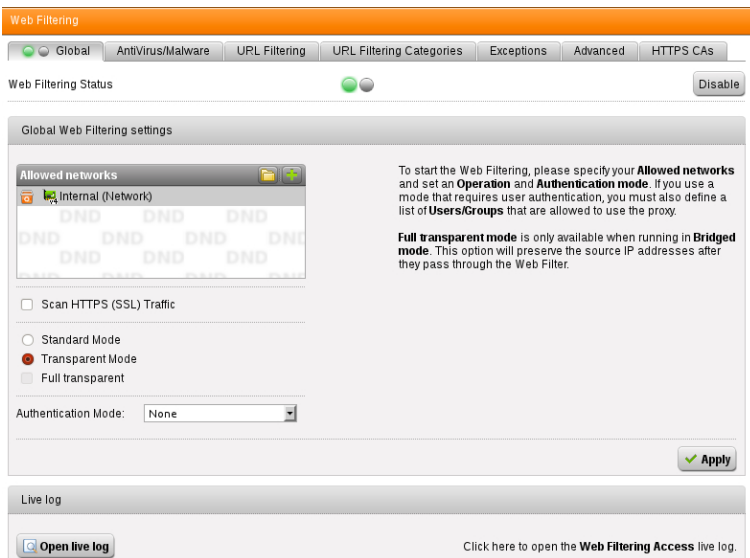


Figure 79 Web Filter: Global Settings

To configure the Web Filter, proceed as follows:

1. **On the *Global* tab, enable the Web Filter.**
You can either click the status icon or the *Enable* button.

The status icon turns green and the *Global HTTP Settings* area becomes editable.
2. **Select the allowed networks.**
Select the networks that should be allowed to use the Web Filter. By default, the Web Filter listens for client requests on TCP port 8080 and allows any client from the networks listed in the *Allowed Networks* box to connect.
3. **Scan HTTPS (SSL) Traffic.**
Select the checkbox to not only scan HTTP traffic but HTTPS traffic, too.
4. **Select a mode of operation.**
Note that when you select an operation mode that requires user authentication, you need to select the users and groups that shall be allowed to use the Web Filter. The following modes of operation are available:

- **Standard:** In standard mode, the Web Filter will listen for client requests on port 8080 by default and will allow any client from the networks listed in *Allowed Network* box to connect. When used in this mode, clients must have specified the Web Filter as HTTP proxy in their browser configuration.

Select an authentication mode:

- **None:** Select to not use any authentication.
- **Active Directory SSO:** Select when you have configured *Active Directory Single Sign-On (SSO)* on the *Definitions & Users > Authentication Servers > Servers* tab. This has the effect that NTLM user authentication will be used to authenticate clients. Note that this is only guaranteed to work with Internet Explorer. When used in this mode, clients must have specified the Web Filter as HTTP proxy in their browser configuration. You can select or add users and/or groups to the *Users/Groups* text box who are to be allowed to use the Web Filter.
- **Agent:** Select to use the Astaro Authentication Agent (AAA). Users need to start the agent and authenticate in order to be able to use the Web Filter. You can select or add users and/or groups to the *Users/Groups* text box who are to be allowed to use the Web Filter.
- **Apple OpenDirectory SSO:** Select when you have configured *LDAP* on the *Definitions & Users > Authentication Servers > Servers* tab and you are using Apple OpenDirectory. Additionally, you have to upload a MAC OS X Single Sign-On Kerberos keyfile on the *Web Security > Web Filtering > Advanced* tab for the Web Filter to work properly. When the Web Filter is used in this mode, clients must have specified the Web Filter in their browser configuration. You can select or add users and/or groups to the *Users/Groups* text box who are to be allowed to use the Web Filter. Note that the Safari browser does not support SSO.
- **Basic User Authentication:** In this mode, each client must authenticate itself against the Web Filter before using it. For more information about which authentication methods are supported, see *Definitions & Users > Authentication Servers*. When used in this mode, clients must have specified the Web Filter as HTTP

proxy in their browser configuration. You can select or add users and/or groups to the *Users/Groups* text box who are to be allowed to use the Web Filter.

- **eDirectory SSO:** Select when you have configured *eDirectory* on the *Definitions & Users > Authentication Servers > Servers* tab. When used in this mode, clients must have specified the Web Filter as HTTP proxy in their browser configuration. You can select or add users and/or groups to the *Users/Groups* text box who are to be allowed to use the Web Filter.

Note - For eDirectory and Active Directory Single-Sign-On (SSO) modes, the Web Filter caches accessing IP addresses and credentials for up to fifteen minutes, for Apple Open-Directory SSO it caches only the group information. This is done to reduce the load on the authentication servers. However it also means that changes to users, groups, or the login status of accessing users may take up to fifteen minutes to be reflected by the Web Filter.

- **Transparent:** In transparent mode, all connections made by client browser applications on port 80 (port 443, respectively, if SSL is used) are intercepted and redirected to the Web Filter without client-side configuration. The client is entirely unaware of the Web Filter server. The advantage of this mode is that no additional administration or client-side configuration is necessary, the disadvantage however is that only HTTP (port 80) requests can be processed. Thus, when you select *Transparent* as mode, the client's proxy settings will become ineffective.

Full Transparent Mode (optional): Select the checkbox *Full Transparent Mode* to preserve the client source IP instead of replacing it by the gateway's IP. This is useful if your clients use public IP addresses that should not be disguised by the Web Filter. The option is only meaningful and therefore only available when running in bridged mode.

Note - In transparent mode, the Web Filter will strip NTLM authentication headers from HTTP requests. Furthermore, the Web Filter cannot handle FTP requests in this mode. If your clients want to access such services, you must open the port (21) in the firewall. Note further that some web servers transmit some data, in particular streaming video and audio, over a port different from port 80. These requests will not be noticed when the Web Filter operates in transparent mode. To support such traffic, you must either use a different mode or enter an explicit firewall rule allowing them.

Select an authentication mode:

- **None:** Select to not use any authentication.
- **Agent:** Select to use the Astaro Authentication Agent (AAA). Users need to start the agent and authenticate in order to be able to use the Web Filter. You can select or add users and/or groups to the *Users/Groups* text box who are to be allowed to use the Web Filter.
- **Browser:** When selected the users will be presented a login dialog window in their browser to authenticate themselves at the Web Filter.

5. Click *Apply*.

Your settings will be saved.

Important Note - When SSL scanning is enabled in combination with the transparent mode, certain SSL connections are destined to fail, e.g. SSL VPN tunnels. To enable SSL VPN connections, add the respective target host to the *Transparent Mode Skiplist* (see *Web Security > Web Filtering > [Advanced](#)*). Furthermore, to access hosts with a self-signed certificate you need to create an exception for those hosts, selecting the option *Certificate Trust Check*. The proxy will then not check their certificates.

9.1.2 AntiVirus/Malware

On the *Web Security > Web Filtering > AntiVirus/Malware* tab you can configure those options aiming at protecting your network from web traffic that carries

harmful and dangerous content such as viruses, worms, or other malware.

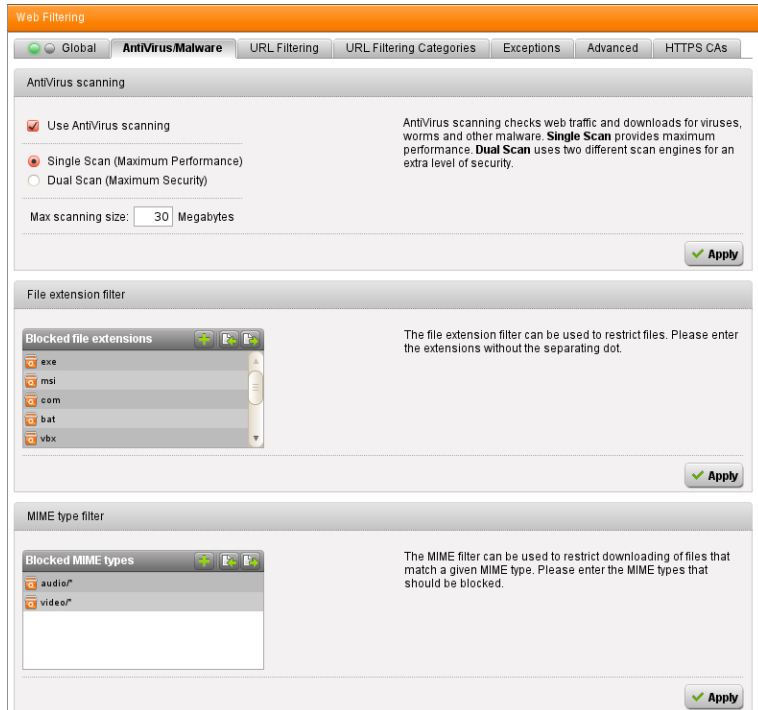


Figure 80 Web Filter: Configuring AntiVirus and Malware Settings

AntiVirus Scanning

Select the option *Use AntiVirus Scanning* to have inbound and outbound web traffic scanned. Astaro Security Gateway features several antivirus engines for best security.

- **Single Scan:** Default setting; provides maximum performance.
- **Dual Scan:** Provides maximum recognition rate by scanning all web traffic twice using different virus scanners.

Max Scanning Size: Specify the maximum size of files to be scanned by the anti-virus engine(s). Files exceeding this size will be exempt from scanning.

Click *Apply* to save your settings.

File Extension Filter

This feature filters certain types of files based on their extensions (e.g., executable binaries) from web traffic that have a file extension listed in the *Blocked File Extensions* box. You can add additional file extensions or delete file extensions that are not to be blocked. To add a file extension, click the plus icon in the *Blocked File Extensions* box and enter the file extension you want to block, for example `exe` (without the delimiting dot).

Click *Apply* to save your settings.

Note - Encrypted `zip` archives cannot be scanned for malicious content and will pass through the virus scanner. To protect your network from malware included in encrypted `zip` files you might want to consider blocking the `zip` file extension altogether.

MIME Type Filter

To add a MIME type that shall be blocked, click the plus icon in the *Blocked MIME Types* box and enter the MIME type (e.g., `image/gif`). It is possible to use wildcards (*) here, e.g. `audio/*`.

Active Content Removal

In the *Active Content Removal* area you can configure the automatic elimination of specific web content such as embedded objects (e.g., multimedia files) in web pages. You can make the following settings:

- **Remove Embedded Objects:** When selected, this feature will remove all `<OBJECT>` tags from HTML pages, stripping off dynamic content such as ActiveX, Flash, or Java from incoming HTTP traffic.
- **Disable JavaScript:** When selected, this feature will disable all `<SCRIPT>` tags in HTML pages, resulting in the deactivation of functions that are embedded in or included from HTML pages.

9.1.3 URL Filtering

On the *Web Security > Web Filtering > URL Filtering* tab you can configure your default settings for controlling access to certain kinds of websites.

Note - The whitelist is always queried first, i.e. each website request is compared with the whitelist and if no match can be found the request is compared to the blacklist. If a match with the blacklist is found, the website is blocked.

The screenshot shows the 'Web Filtering' configuration window with the 'URL Filtering' tab selected. The interface includes a description of the URL content filter, radio buttons for 'Allow' (selected) and 'Block' content, and checkboxes for blocking spyware and URLs with low reputation. A list of website categories to block is provided, including Community Education Religion, Criminal Activities, Drugs, Entertainment/Culture, Extremistic Sites, Finance/Investing, Games/Gambles, IT, Information and Communication, Job Search, Lifestyle, Locomotion, Medicine, Nudity, Ordering, Private Homepages, Suspicious, and Weapons. There are also input fields for Google SafeSearch, Bing SafeSearch, and Yahoo SafeSearch, all set to 'Off'. On the right, there are three lists: 'Additional URLs/sites to block' with a regex pattern, 'Always allow these URLs/sites' with a regex pattern, and 'Users/Groups allowed to bypass blocking' with 'SuperAdmins' listed. An 'Apply' button is at the bottom right.

Web Filtering

Global AntiVirus/Malware **URL Filtering** URL Filtering Categories Exceptions Advanced HTTPS CAS

URL filter

The URL content filter allows you to regulate which type of web content users are allowed to access. You can either **allow** all content by default and then selectively deny access to certain content types or sites, or you can **block** everything by default and only selectively allow certain content types or sites.

☒ **Allow** content that does not match the criteria below.
☐ **Block** content that does not match the criteria below.

☒ Block Spyware infection and communication

☐ Block URLs with a reputation below a threshold of:

Block these website categories:

- ☐ Community Education Religion
- ☐ Criminal Activities
- ☐ Drugs
- ☐ Entertainment/ Culture
- ☐ Extremistic Sites
- ☐ Finance/Investing
- ☐ Games/Gambles
- ☐ IT
- ☐ Information and Communication
- ☐ Job Search
- ☐ Lifestyle
- ☐ Locomotion
- ☐ Medicine
- ☐ Nudity
- ☐ Ordering
- ☐ Private Homepages
- ☐ Suspicious
- ☐ Weapons

☐ **Block** access to uncategorized websites

Google SafeSearch: Off
 Bing SafeSearch: Off
 Yahoo SafeSearch: Off

Additional URLs/sites to block

https?://[w-].*ebay:[a-z]*

Always allow these URLs/sites

*https?://.*wikipedia.org

Users/Groups allowed to bypass blocking

SuperAdmins

Apply

Figure 81 Web Filter: Configuring URL Filtering

You can make the following settings:

- **Allow/Block selection:** Decide whether your selection of website categories should be allowed or blocked. The following options are available:
 - **Allow Content that Does not Match the Criteria Below:** If this option is selected, your selection of website categories will be blocked while all other categories not selected will be allowed.
 - **Block Content that Does not Match the Criteria Below:** If this option is selected, all website categories except the ones you selected will be blocked.

The default option is *Allow*. When you switch to *Block*, note that the options below are subsequently "inverted" in their meaning which is displayed by a change of wording from *Block* to *Allow* and vice versa, respectively.

Note - For accessing the categorization database, TCP port 6000 or TCP port 80 needs to be open in upstream firewalls. If you have a parent proxy configured, all requests to the database will be sent through the parent proxy.

- **Block Spyware Infection and Communication:** Spyware is malicious software that can probe systems and reports user behavior to an advertiser without the user's knowledge. Selecting this option will detect and block spyware on the way from the server to the client. This prevents computers within your network from getting infected by new spyware. Moreover, activating this feature will detect and block traffic from already installed spyware applications. That way, gathered user information will no longer be submitted to the Internet. Note that this option is only available if the first option on the page is set to *Allow*.

Note - The spyware category cannot be assigned to any of the 18 available groups, therefore protection from spyware purveyors can only be enabled by selecting the *Block Spyware Infection and Communication* checkbox.

- **Block URLs with a Reputation Below a Threshold of:** Websites can be classified as either *Trusted*, *Neutral*, *Suspicious*, or *malicious*, the latter not being listed (since it would allow for all kind of sites which is equivalent to not using the threshold option at all). Unclassified websites are referred to as *Unverified*. You can determine which reputation a website must have to be accessible from your network. Websites below the selected threshold will

be blocked. Note that this option is only available if the first option on the page is set to *Allow*. For more information on website reputations please refer to <http://www.trustedsource.org>.

- **Block these Website Categories:** Select the website categories that should be blocked. Note that this option changes to *Allow these Website Categories* if the first option on the page is set to *Block*. The mapping between the website categories to be selected here and their underlying sub-categories can be changed on the *Web Security > Web Filtering > URL Filtering Categories* tab.

Note - If you are of the opinion that a website is wrongly categorized, you can use the following [URL report form](#) to suggest new categories.

- **Block Access to Uncategorized Websites:** Enabling this option will prevent the browser from opening websites of unknown content. This function can be considered as a fallback security mechanism in case a potentially unwanted website has not yet been categorized as such. One benefit of this function is to protect the user from so-called *phishing* attacks. Usually, phishing e-mails contain suspicious links to faked websites, tricking the user into revealing personal and confidential information. If not already classified as harmful, those links are either of category *Uncategorized* or *Suspicious*. By selecting this option, those categories will be blocked. Thus, even if a phishing message has been delivered, the user won't be able to open the fraudulent URL. Note that this option changes to *Allow Access to Uncategorized Websites* if the first option on the page is set to *Block*.
- **Additional URLs/Sites to Block:** If you want to block a specific URL or website regardless of its category, enter it here. This has the effect that websites listed here can be blocked even if they belong to a category you want to allow. Regular expressions are allowed here (e.g. `^https?:/*.*wikipedia\.org`). To block exactly one URL enter the complete URL (e.g. `http://www\.wikipedia\.org`). Note that expressions such as `wikipedia\.org` do not only match the URL but also search results and parts of similar URLs which may lead to unwanted blocking behavior. Note that this option changes to *Additional URLs/Sites to Allow* if the first option on the page is set to *Block*.

- **Always Allow these URLs/Sites:** If you explicitly want to allow a specific URL or website regardless of its category or an entry in the block list, enter it here. Regular expressions are allowed here (e.g. `^https?://.*wikipedia\.org`). To allow exactly one URL, enter the complete URL (e.g. `http://www.wikipedia\.org`). Note that expressions such as `wikipedia\.org` do not only match the URL but also search results and parts of similar URLs which may lead to unwanted blocking behavior. Note that this option changes to *Always Block these URLs/Sites* if the first option on the page is set to *Block*.
- **Users/Groups Allowed to Bypass Blocking:** If you want to give certain users or groups the permission to access pages which are blocked by default, add them to this drag-and-drop box. Subsequently, blocked pages will contain a button called *Unblock URL*. Clicking the button opens a page where users can enter their credentials and a reason why they want to access the blocked page. If they are listed in the bypass blocking box, either directly or via a group, they will be able to access the blocked page. The bypassing will be logged and is part of the reporting (see *Logging & Reporting* > *Web Security* > *Blocked Usage*).
- **SafeSearch:** You can enforce the usage of SafeSearch for the search engines Google, Bing, and Yahoo. The SafeSearch filter removes content from search results that is not appropriate for children, such as offending or illegal material. If enabled, users surfing via the Web Filter are unable to turn the filter off.

9.1.4 URL Filtering Categories

On the *Web Security* > *Web Filtering* > *URL Filtering Categories* tab you can customize the mapping of website categories to category groups, which can be selected on the *URL Filtering* tab. Astaro Security Gateway can identify and block access to 60 different categories of websites. Sophisticated URL classification methods ensure accuracy and completeness in identifying questionable websites. If a user requests a web page that is not included in the database, the URL is sent to the web crawlers and classified automatically.

Note - If you are of the opinion that a website is wrongly categorized, you can use the following [URL report form](#) to suggest new categories.

To assign website categories to a category group, proceed as follows:

1. **Click *Edit* in the category group you want to edit.**
The *Edit Filter Category* dialog box opens.
2. **Select the subcategories.**
Select or clear the checkboxes of the subcategories you want to add to or remove from the group.
3. **Click *Save*.**
The group will be updated with your settings.

Alternatively, you can also create a new filter category. Proceed as follows:

1. **Click the *New Filter Category* button on the top of the page.**
The *Create Filter Category* dialog box opens.
2. **Enter a name.**
Enter a descriptive name for the new filter category.
3. **Select the subcategories.**
Select the checkboxes of the subcategories you want to add to the group.
4. **Click *Save*.**
The group will be updated with your settings.

To either edit or delete a category, click the corresponding buttons.

9.1.5 Exceptions

On the *Web Security > Web Filtering > Exceptions* tab you can define whitelist client networks, users/groups, and domains. All entries contained in these lists can be excluded from certain web security services.

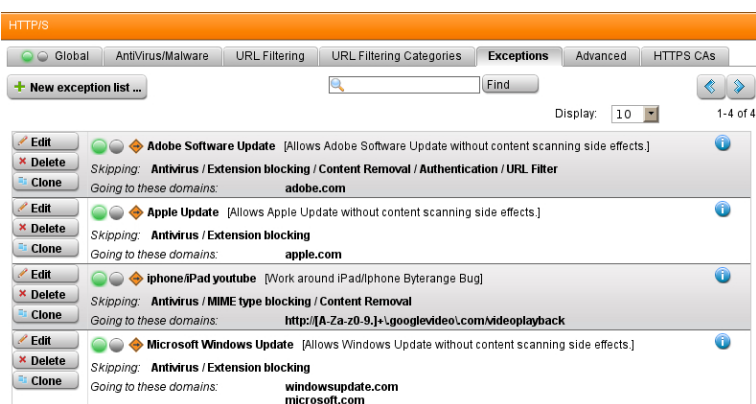


Figure 82 Web Filter: Exceptions List

To create an exception, proceed as follows:

1. **On the *Exceptions* tab, click *New Exception List*.** The *Create Exception List* dialog box opens.
2. **Make the following settings:**
Name: Enter a descriptive name for this exception.

Comment (optional): Add a description or other information.

Skip These Checks: Select the security checks that should be skipped:

- **Authentication:** If the Web Filter runs in *Authentication* mode, you can skip authentication for the source hosts/networks or target domains.
- **Caching:** Select to disable caching for specific domains or source hosts/networks.
- **AntiVirus:** Select to disable virus scanning, which checks messages for unwanted content such as viruses, trojan horses and the like.
- **Extension Blocking:** Select to disable the file extension filter, which can be used to block content that contains certain types of files based on their extensions.
- **MIME Type Blocking:** Select to disable the MIME type filter, which can be used to block content that has a certain MIME type.

- **URL Filter:** Select to disable the URL filter, which controls the access to certain kinds of websites.
- **Content Removal:** Select to bypass the removal of special content in web pages such as embedded objects (e.g., multimedia files) or JavaScript.
- **SSL Scanning:** Select to skip SSL scanning for the web page in request. This is useful with online banking websites or with websites that do not play well with SSL interception. Note that for technical reasons this option does not work for any transparent Web Filter mode. With transparent mode, use the *Transparent Skiplist* instead (see section [Advanced](#)). In standard mode, exceptions can only be made based on the destination host or IP address depending on what the client sends. With exceptions based on categories, instead of the whole URL, only the hostname will be classified.
- **Certificate Trust Check:** Select to skip the trust check of the HTTPS server certificate. Note that, when the Web Filter works in transparent mode with authentication, skipping the certificate trust check based on a users/groups match (*For All Requests Coming From These Users/Groups*) is technically impossible.
- **Certificate Date Check:** Select to skip the check of whether the HTTPS certificate's date is valid.

The following two options are useful if there are persons or members of e.g. a works council whose activities must not be logged at all:

- **Accessed Pages:** Select to not log pages that have been accessed. Those page requests will also be excluded from reporting.
- **Blocked Pages:** Select to not log pages that have been blocked. Those page requests will also be excluded from reporting.

For All Requests: Select at least one condition for which the security checks are to be skipped. You can logically combine several conditions by selecting either *And* or *Or* from the drop-down list in front of a condition. The following conditions can be set:

- **Coming from These Source Networks:** Select to add source hosts/networks that should be exempt from the security checks of this exception rule. Enter the respective hosts or networks in the

Hosts/Networks dialog box that opens after selecting the condition.

- **Matching These URLs:** Select to add target domains that should be exempt from the security checks of this exception rule. Add the respective domains to the *Target Domains* dialog box that opens after selecting the condition. Example: `^https?:\/\/[^\.]*\.domain\.com` matches HTTP(S) connections to all subdomains of the domain.

Note – When using *Transparent* mode with SSL scanning enabled, you need to enter the target domain(s) as IP addresses. Otherwise the exception will fail for technical reasons.

- **Coming from These Users/Groups:** Select to add users or user groups that should be exempt from the security checks of this exception rule. Enter the respective users or groups in the *Users/Groups* dialog box that opens after selecting the condition. Also, in Standard mode, matching for certain users/groups does not work due to the missing authentication.
- **Going to These Categories of Websites:** Select to skip security checks for certain categories. Select then the categories from the list that opens after selecting the condition.

3. Click **Save**.

The new exception appears on the *Exceptions* list.

To either edit or delete an exception, click the corresponding buttons.

9.1.6 Advanced

The *Web Security > Web Filtering > Advanced* tab contains various other configuration options of the Web Filter such as caching or port settings.

Streaming Settings

Bypass Content Scanning for Streaming Content: When this option is active, typical audio and video streaming content is not subject to content scanning. Disabling this option will effectively disable most media streams, since they cannot be scanned in a reasonable timeframe. It is therefore recommended to leave this option turned on.

Transparent Mode Skiplist

Using this option is only meaningful if the Web Filter runs in transparent mode. Hosts and networks listed in the *Skip Transparent Mode Hosts/Nets* boxes will not be subject to the transparent interception of HTTP traffic. There is one box for source and one for destination hosts/networks. To allow HTTP traffic (without proxy) for these hosts and networks, select the *Allow HTTP Traffic for Listed Hosts/Nets* checkbox. If you do not select this checkbox, you must define specific firewall rules for the hosts and networks listed here.

Proxy Auto Configuration

The proxy auto configuration is a feature that enables you to centrally provide a proxy auto configuration file (PAC file) which can be fetched by browsers. The browsers will in turn configure their proxy settings according to the details outlined in the PAC file.

The PAC file is named *wpad.dat*, has the MIME type `application/x-ns-proxy-autoconfig` and will be provided by the ASG. It contains the information you enter into the text box, for example:

```
function FindProxyForURL(url, host)
{ return "PROXY proxy.example.com:8080; DIRECT"; }
```

The function above instructs the browser to redirect all page requests to the proxy of the server `proxy.example.com` on port 8080. If the proxy is not reachable, a direct connection to the Internet will be established.

The hostname can also be written as a variable called `${asg_hostname}`. This is especially useful when you want to deploy the same PAC file to several ASGs using Astaro Command Center. The variable will then be instantiated with the hostname of the respective ASG. Using the variable in the example above would look like the following:

```
function FindProxyForURL(url, host)
{ return "PROXY ${asg_hostname}:8080; DIRECT"; }
```

To provide the PAC file for your network, you have the following possibilities:

- Providing via browser configuration: If you select the option *Enable Proxy Auto Configuration*, the PAC file will be available via the ASG Web Filter under the URL of the following type: `http://IP-of-ASG:8080/wpad.dat`. To use this

file, enter its URL in the automatic proxy configuration setting of those browsers which are to use the proxy.

- Providing via DHCP: You can have your DHCP server(s) hand out the URL of the PAC file together with the client IP address. To do that, select the option *Enable HTTP Proxy Auto Configuration* in your DHCP server configuration (see chapter *Network Services* > [DHCP](#)). A browser will then automatically fetch the PAC file and configure its settings accordingly.

Note – Providing via DHCP works with Microsoft's Internet Explorer only. Regarding all other browsers you need to provide the PAC file manually.

Misc Settings

Web Filtering Port: Here you can define the port number that the Web Filter will use for client requests. The default is 8080.

Note - This only applies if you do not operate the proxy in transparent mode.

Log Accessed Pages: Select to log accessed URLs along with username and client IP of the request.

Log Blocked Pages: Select to log blocked URLs along with username and client IP of the request.

Note – The log options can be also set individually by means of an exception (see chapter *Web Filtering* > [Exceptions](#)) or a filter action for profiles (see chapter *Web Filtering Profiles* > [Filter Actions](#)).

Block Unscannable and Encrypted Files: Select this option to block files that could not be scanned. The reason for that may be, among other things, that files are encrypted or corrupt.

MIME Blocking Inspects HTTP Body: Not only the HTTP header but also the HTTP body is checked for blocked MIME types. Note that turning on this feature may have a negative impact on performance.

Allowed Target Services: In the *Allowed Target Services* box you can select the target services the Web Filter should be allowed to access. The default setting consists of target services (ports) that are usually safe to connect to and which are

typically used by browsers, namely *HTTP* (port 80), *HTTPS* (port 443), *FTP* (port 21), *LDAP* (port 389), *LDAP-SSL* (port 636), *Web Filter* (port 8080), *Astaro Spam Release* (ports 3840–4840), and *Astaro WebAdmin* (port 4444).

Default Charset: This option affects how the proxy displays filenames in the *Download Manager* window. URLs (and filenames that they may reference) that are encoded in foreign charsets will be converted to UTF-8 from the charset specified here unless the server sends a different charset. If you are in a country or region that uses a double-byte charset, you should set this option to the "native" charset for that country or region.

Search Domain: You can add an additional domain here, which will be searched when the first DNS lookup returns no result ("NXDOMAIN"). Then, a second DNS request is initiated which appends the domain given here to the original host-name. Example: A user enters `http://wiki`, meaning to address *wiki.intranet.example.com*. However, the URL can only be resolved when you enter `intranet.example.com` into the *Search Domain* field.

Authentication Timeout: This option allows you to set the number of seconds between user authentication prompts when using the transparent user authentication feature.

Authentication Realm: The authentication realm is the name of the source which a browser displays along with the authentication request when the proxy works in *Basic User Authentication* mode. It defines the protection space according to [RFC 2617](#). You can give any string here.

HTTP/S Parent Proxy Routing

A parent proxy is often required in those countries that require Internet access to be routed through a government-approved proxy server. If your security policy requires the use of one or more parent proxies, you can add or select them here.

If the box is empty you need to create a parent proxy definition first. Do the following:

1. **Click the Plus icon in the box header.**
The *Add Parent Proxy* dialog box opens.
2. **Make the following settings:**
Name: Enter a descriptive name for this parent proxy.
Comment (optional): Add a description or other information.

Use Proxy for These Hosts: Add hosts to this box for which the parent proxy is to be used, e.g. `*.wikipedia.org`. Note that you can use pattern matching here. Regular expressions, however, are not allowed. If you leave the box empty, an asterisk (*) is automatically added when clicking *Save*, which matches all hosts. Such a proxy definition can therefore be regarded as a fallback proxy which matches when none of the other proxies, if existent, do.

Parent Proxy: Select or add the network definition of the parent proxy.

Port: The default port for the connection to the parent proxy is 8080. If your parent proxy requires a different port, you can change it here.

Proxy Requires Authentication: If the parent proxy requires authentication, select the checkbox and enter username and password in the appearing textboxes.

3. **Click Save.**

The new parent proxy appears on the *Parent Proxies* box.

The proxy can now be used in filter actions or globally. To edit or delete parent proxy definitions, go to the *Web Filtering Profiles > Parent Proxies* tab.

Enable the usage of parent proxies by selecting the checkbox in front of the respective proxy. If you selected more than one proxy, you can sort the proxies via the blue arrows. Selected parent proxies are applied in the given order until the first proxy matches. The processing order is determined by the position number, so if you change the order of the proxies by their position numbers, the processing order will change as well.

You can make the usage of parent proxies also profile-based (for more information see chapter *Web Filtering Profiles > Filter Actions*).

Parent Proxies and Website Categorization

When you want to get database updates and to do categorization lookups via a parent proxy you need to specify the following hosts for that parent proxy:

- `list.smartfilter.com` (with local categorization database)
- `cffs*.astaro.com` (with TCP categorization)

If you have one parent proxy configured to match all hosts (*), specifying those hosts is unnecessary. Note that you can also define different parent proxies for

certain hosts and have the last parent proxy match all hosts (*). Then only that traffic is routed via the last parent proxy where all other parent proxies do not match.

HTTP Caching

Enable Caching: When this option is enabled, the Web Filter keeps an on-disk object cache to speed up requests to frequently visited web pages.

Cache SSL Content: With this option enabled, SSL-encrypted data will be stored unencrypted on disk as well.

Cache Content that Contains Cookies: Cookies are often used for authentication purposes. With this option enabled, HTTP answers containing cookies will be cached as well. This may be critical, as users requesting the same page are likely to get the cached page, containing the cookie of another user.

Important Note - Caching SSL and/or cookie content is an important security issue as the content is readable by every user with SuperAdmin rights.

Clear Cache: You can delete all cached pages by clicking *Clear Cache*.

MAC OS X Single Sign-On

When you are using *Apple OpenDirectory SSO* as authentication method, you need to upload a MAC OS X Single Sign-On Kerberos keyfile for authentication to work properly. Generate that keyfile and upload it by clicking *Upload Keyfile*. For more information on how to generate that keyfile please refer to the Kerberos documentation.

9.1.7 HTTPS CAs

On the *Web Security > Web Filtering > HTTPS CAs* tab you can manage Signing and Verification Certificate Authorities (CAs) for HTTPS connections.

Signing CA

In this area you can upload your Signing CA certificate, regenerate the Signing CA certificate, or download the existing Signing CA certificate. By default, the Signing CA certificate is created according to the information provided during setup, i.e. it is consistent with the information on the *Management > System Settings > Organizational* tab—unless there have been any changes applied since.

To upload a new Signing CA certificate, proceed as follows:

1. **Click the button *Upload*.**

The *Upload PKCS#12 Certificate File* dialog box opens.

2. **Browse for the certificate to upload.**

Click the folder icon next to the *File* box, click *Browse* in the opening *Upload File* dialog box, select the certificate to upload and click *Save*.

You can only upload certificates in PKCS#12 format which are password protected.

3. **Enter the password.**

Enter the password twice into the corresponding fields and click *Save*.

The new Signing CA certificate will be installed.

To regenerate your Signing CA certificate, proceed as follows:

1. **Click the button *Regenerate*.**

The *Create New Signing CA* dialog box opens.

2. **Change the information.**

Change the given information according to your needs and click *Save*.

The new Signing CA certificate will be generated. The Signing CA information in the *Signing CA* area will change accordingly.

To download the Signing CA certificate, proceed as follows:

1. **Click the button *Download*.**

The *Download Certificate File* dialog box opens.

2. **Select the file format to download.**

You can choose between two different formats:

- **PKCS#12:** This format will be encrypted, so enter an export password.
- **PEM:** Unencrypted format.

3. **Click *Save*.**

The file will be saved.

If you use certificates for your internal web servers signed by a custom CA, it is advisable to upload this CA certificate to WebAdmin as Trusted Certificate Authority. Otherwise users will be prompted with an error message by the Web Filter claiming to be confronted with an untrustworthy server certificate.

To facilitate supplying client PCs with the proxy CA certificate, users can download

the certificate themselves via <http://passthrough.fw-notify.net/cacert.pem> and install it in their browser. The website request is directly accepted and processed by the proxy. It is therefore necessary to enable the Web Filter on the *Web Filtering > Global* tab first.

Note - In case the proxy's operation mode is not *Transparent Mode* the proxy has to be enabled in the user's browser. Otherwise the certificate download link will not be accessible.

Alternatively, if the User Portal is enabled, users can download the proxy CA certificate from the User Portal, tab *HTTPS Proxy*.

Preventing HTTPS Problems

When using HTTPS, Windows system programs like Windows Update and Windows Defender will not be able to establish connections because they are run with `system user` rights. However, this user, by default, does not trust the proxy CA. It is therefore necessary to import the HTTPS proxy CA certificate for the system user. Do the following:

1. **In Windows, open the *Microsoft Management Console (mmc)*.**
2. **Click on the *File* menu and then *Add/Remove Snap-in*.**
The *Add or Remove Snap-ins* dialog window opens.
3. **Click *Add* at the bottom of the window.**
The dialog window *Add Standalone Snap-In* opens.
4. **Select *Certificates* from the list and click *Add*.**
A wizard appears.
5. **Select *Computer account* and click *Next*.**
6. **Make sure that *Local computer* is selected and click *Finish* and then *Close*.**
The first dialog window now contains the item *Certificates (Local Computer)*.
7. **Click *OK*.**
The dialog window closes and the Console Root now contains the item *Certificates (Local Computer)*.
8. **In the *Console Root* window on the left open *Certificates > Trusted Root Certification Authorities*, right-click *Certificates* and select *All***

Tasks > Import from the context menu.

The import dialog wizard opens.

9. Click *Next*.

The next wizard step is displayed.

10. Browse to the previously downloaded HTTPS proxy CA certificate, click *Open* and then *Next*.

The next wizard step is displayed.

11. Make sure that *Place all certificates in the following store* is selected and click *Next* and *Close*.

The wizard reports the import success.

12. Confirm the wizard's message.

The proxy CA certificate is now displayed among the trusted certificates.

13. Save the changes.

Click on the *File* menu and then *Save* to save the changes on the Console Root.

After importing, the CA is system-widely accepted and connection problems resulting from the HTTPS proxy should not occur.

Verification CAs

This area allows you to manage Verifications CAs. Those are Certificate Authorities you trust in the first place, i.e. websites presenting valid certificates signed by these CAs are regarded trustworthy by the HTTPS proxy.

Local Verification CAs: You can upload Verification CAs additionally to the CA list below. Proceed as follows:

1. Click the folder icon next to the *Upload Local CA* field.

The *Upload File* dialog box opens.

2. Select the certificate to upload.

Click *Browse* and select the CA certificate to upload.

3. Upload the certificate.

Click *Start Upload* to upload the selected CA certificate.

The certificate will be installed and displayed in the *Local Verification CAs* area.

Global Verification CAs: The list of Verification CAs shown here is identical to the Verification CAs pre-installed by Mozilla Firefox. However, you can disable one or all Verification CAs of the list if you do not regard them as trustworthy. To revoke a CA's certificate click its status icon. The status icon turns red and the HTTPS proxy will no longer accept websites signed by this CA.

Tip - Click the blue information icon to see the fingerprint of a CA.

The HTTPS proxy will present a "Blocked Content" error page to a client if the CA is unknown or disabled. However, you can create an exception for such pages: either via the *Create Exception* link on the error page of the Web Filter or via the *Web Security > Web Filtering > Exceptions* tab.

Note - When clicking the *Create Exception* link on the Web Filter error page a login dialog window is presented. Only users with admin rights are allowed to create exceptions.

9.2 Web Filtering Profiles

Astaro Security Gateway features a Web Filter designed and optimized for controlling what web content is available on a particular network. It thus prevents persons from viewing content which you may consider objectionable. You can configure the Web Filter to apply globally to selected networks. Alternatively, you can create individual Web Filtering profiles that can be used to enforce various security policies to be applied to different segments of your network. That way you can define different content filtering policies for the various departments within your organization, even with varying user authentication methods.

This chapter describes how to add filter actions and how to use them in the Web Filtering profiles framework of Astaro Security Gateway. You are advised to configure the *Web Filtering Profiles* tabs from backward to forward. That is to say, begin with specifying your filter actions first, which are then assigned to particular users and user groups in so-called filter assignments, which in turn are taken to configure the actual Web Filtering profiles.

9.2.1 Overview

Note - To configure Web Filtering profiles, the Web Filtering must be enabled.

The flowchart shows how filter actions, filter assignments, and Web Filtering profiles interact. If an HTTP request comes in, the Web Filter first determines which Web Filtering profile must be applied. This is entirely dependent on the source IP address of the request. The first profile that matches the source IP of the request will be used. All other Web Filtering profiles that may exist will be ignored.

Internally, all profiles are stored in a single file with the default profile being at the bottom of the list. In the beginning, when no other HTTP profile is configured, the default profile is the only one present. When you start adding individual web filtering profiles and sort them using the *Position* drop-down list, the default profile will stay at the end of list, thus making sure that it will always be applied last.

The default profile, however, is *not* a profile to be explicitly configured on the *Web Security > Web Filtering Profiles* tabs. Instead, it is automatically created when you globally configure the Web Filter on the *Web Security > Web Filtering* tabs. The *Allowed Networks* to be configured on the *Web Security > Web Filtering > Global* tab correspond to the *Source Networks* of a web filtering profile. The settings in the *Users/Groups* box (located on *Web Security > Web Filtering > Global* tab when operation mode *Basic User Authentication* is selected) become the default filter assignment, while the settings on the *Web Security > Web Filtering > URL Filtering* tab correspond to a filter action. Finally, if not even the default profile matches, the HTTP request will be blocked.

It is then checked which filter assignment is associated with this web filtering profile. If no filter assignment matches, the fallback action will be applied to the request. The fallback action is a special filter action that should reflect the security policy of your company. If you must adhere to a strict security policy, you could create a filter action that blocks all web traffic without exception.

To provide different levels of protection for various users within the same network segment, you only need to configure one single web filtering profile with different filter assignments associated. What is allowed for specific users is dependent upon the order of the selected filter assignments. For that reason it does not make

sense to configure two profiles with exactly the same source networks, as the second profile will never be used.

9.2.2 Proxy Profiles

Proxy profiles can be used to create various content filtering policies, enabling you to apply different policies to different addresses of your network. That way you can define different policies for the various departments within your organization. In addition, each proxy profile can have its own user authentication method.

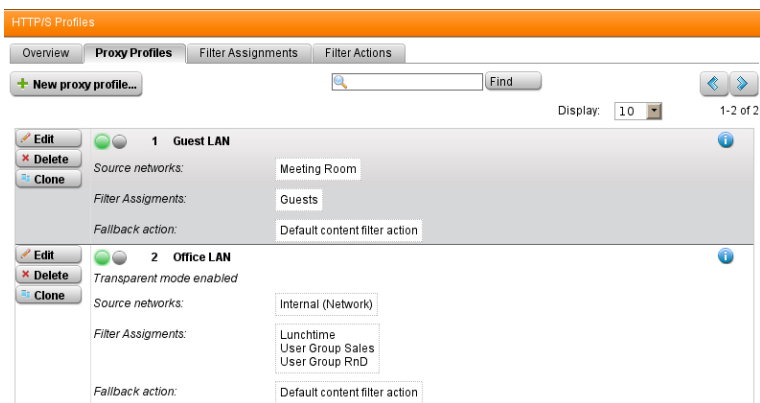


Figure 83 Web Filtering Profiles: List of Profiles

To create a proxy profile, proceed as follows:

1. **Click *New Proxy Profile*.**
The *Create Proxy Profile* dialog box opens.
2. **Make the following settings:**
Name: Enter a descriptive name for this profile.

Position: The position number, defining the priority of the proxy profile. Lower numbers have higher priority. Proxy profiles are matched in ascending order. Once a proxy profile has matched, proxy profiles with a higher number will not be evaluated anymore. Place the more specific profiles at the top of the list to make sure that less restrictive profiles match last.

Source Networks: Select the networks that should use this proxy profile (note that this field is mandatory).

Caution - Make sure to not select source networks here that are used in other proxy profiles because this may lead to an inconsistent mapping between content filter actions and users/groups, possibly allowing users who reside in a certain network segment to open websites you do not want them to access.

Filter Assignments: Select a filter assignment. A filter assignment is a set of web security configuration settings that can be used to assign different levels of protection to various users/groups at various times (for more information, see *Web Security > Web Filtering Profiles > Filter Assignments*). Note that you can select multiple filter assignments. In addition, you can specify which filter assignment should be applied first. This is useful, for example, if you want to assign different filter assignments for the same users or user groups to be applied at different times. Generally speaking, place the more specific assignments at the top of the list to make sure that the least restrictive assignments match last. For this, use the blue arrows that appear after you have selected at least two filters.

Note - You can also select a *Default Filter Assignment*, which has assigned the *Default Filter Action* to the users/groups configured on the *Web Filtering > Global* tab, provided the Web Filter runs in either *Basic User Authentication*, *Active Directory SSO*, or *eDirectory SSO* mode. Note further that you can use a filter assignment that has users and groups selected even when you set the operation mode to *Standard* or *Transparent*, but in that case, the users and groups will be ignored and only the time period definitions specified in the filter assignment will be taken into account when using this proxy profile.

Fallback Action: The fallback action is a special filter action that should reflect the security policy of your company and will be applied to the request if none of the selected filter assignments matches. For example, if you must adhere to a strict security policy, you could create a special filter action as fallback that blocks all web traffic without exception. By the way, the *Default Filter Action* you can select here corresponds to the settings of the *Web Security > Web Filtering > URL Filtering* tab.

Operation Mode: For each proxy profile, you can select among several user authentication methods. Different proxy profiles can have different authentication methods, but only one user authentication method can be used for each proxy profile. You can even select a different operation mode than configured on the *Web Filtering > Global* tab. Note, however, that authentication will only work as expected if the authentication mode selected here matches the authentication mode of all user and group objects used in all filter assignments. The following operation modes are available:

- **Standard:** In standard mode, the Web Filter will listen for client requests on port 8080 by default and will allow any client from the networks listed in *Allowed Networks* box to connect. When used in this mode, clients must have specified the Web Filter as HTTP proxy in their browser configuration.
- **Active Directory SSO:** Select when you have configured *Active Directory Single Sign-On* (SSO) on the *Definitions & Users > Authentication Servers > Servers* tab. This has the effect that NTLM user authentication will be used to authenticate clients. Note that this is only guaranteed to work with Internet Explorer. When used in this mode, clients must have specified the Web Filter as HTTP proxy in their browser configuration.
- **Apple OpenDirectory SSO:** Select when you have configured *LDAP* on the *Definitions & Users > Authentication Servers > Servers* tab and you are using Apple OpenDirectory. Additionally, you have to upload a MAC OS X Single Sign-On Kerberos keyfile on the *Web Security > Web Filtering > Advanced* tab for the proxy to work properly. When the Web Filter is used in this mode, clients must have specified the Web Filter in their browser configuration. Note that the Safari browser does not support SSO.
- **Basic User Authentication:** In this mode, each client must authenticate itself against the proxy before using it. For more information about which authentication methods are supported, see *Definitions & Users > [Authentication Servers](#)*. When used in this mode, clients must have specified the Web Filter as HTTP proxy in their browser configuration.
- **eDirectory SSO:** Select when you have configured *eDirectory* on the *Definitions & Users > Authentication Servers > Servers* tab. When

used in this mode, clients must have specified the Web Filter as HTTP proxy in their browser configuration.

- **Transparent:** In transparent mode, all connections made by client browser applications on port 80 (port 443, respectively, if SSL is used) are intercepted and redirected to the proxy without client-side configuration. The client is entirely unaware of the proxy server. The advantage of this mode is that no additional administration or client-side configuration is necessary, the disadvantage however is that only HTTP (port 80) requests can be processed. Thus, when you select *Transparent* as mode, the client's proxy settings will become ineffective.

Full Transparent Mode (optional): Select the checkbox *Full Transparent Mode* to preserve the client source IP instead of replacing it by the gateway's IP. This is useful if your clients use public IP addresses that should not be disguised by the proxy.

Note - In transparent mode, the proxy will strip NTLM authentication headers from HTTP requests. Furthermore, the proxy cannot handle FTP requests in this mode. If your clients want to access such services, you must open the port (21) in the firewall. Note further that some web servers transmit some data, in particular streaming video and audio, over a port different from port 80. These requests will not be noticed when the proxy operates in transparent mode. To support such traffic, you must either use a different mode or enter an explicit firewall rule allowing them.

- **Transparent with Authentication:** Use this mode to force users to authenticate while the proxy is working transparently. When users open a website for the first time, they will be presented an authentication user-portal-like webpage where they have to fill in username and password. This mode allows for username-based tracking, reporting, and surfing without client-side browser configuration. Moreover, you can enable a disclaimer that is additionally displayed on that dialog window and needs to be accepted by users to be able to go on. For more information on the disclaimer, please refer to chapter *Management > Customization > [Web Filter](#)*.

Scan HTTPS (SSL) Traffic: Select the checkbox to not only scan HTTP traffic but HTTPS traffic, too.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new profile appears on the *Proxy Profiles* list.

To either edit or delete a proxy profile, click the corresponding buttons.

9.2.3 Filter Assignments

On the *Web Filtering Profiles > Filter Assignment* tab you can assign filter actions to particular users and user groups. While a filter action rather refers to the "What" by defining which websites or categories of websites should be blocked, a filter assignment refers to the "Who" and "When" by assigning those actions to users and user groups at specific times.

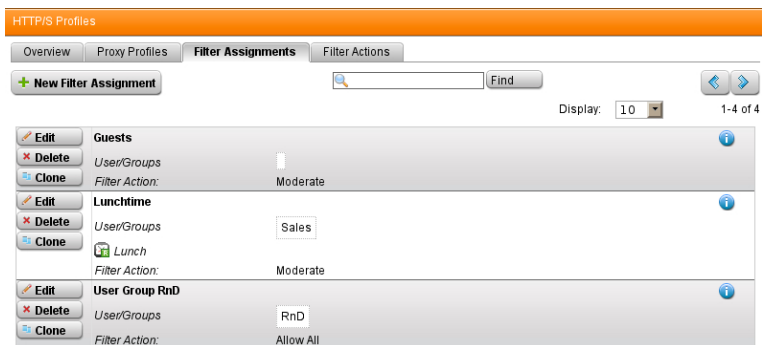


Figure 84 Web Filtering Profiles: List of Filter Assignments

Note - Various settings you have configured on the *Web Security > Web Filtering > AntiVirus/Malware* tab (AntiVirus scanning, file extension filter, MIME type filter, content removal) and the *URL Filtering* tab (categories, blocked URLs) are stored as a *Default Filter Action*, which can be selected from the *Filter Action* drop-down list below.

To create a filter assignment, proceed as follows:

1. **Click *New Filter Assignment*.**

The *Create New Filter Assignment* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this assignment.

Users/Groups: Select the users and groups that should use a specific filter action. Note that your new filter assignment should only be added to Web Filtering profiles using the same authentication mode as the users and groups you select here.

Time Period: Time periods are single or recurring time slots that can be used to limit firewall rules or filter profiles to specific time ranges. For more information, see *Definitions & Users > Time Period Definitions*.

Filter Action: Select the filter action you want to assign to the users and user groups defined above.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new assignment appears on the *Filter Assignments* list.

To either edit or delete a filter assignment, click the corresponding buttons.

Each filter assignment can be selected when creating a Web Filtering profile.

9.2.4 Filter Actions

On the *Web Filtering Profiles > Filter Actions* tab you can create and edit a set of web security configuration settings that can be used to customize different types and levels of protection. Filter actions can be assigned to different users and user groups, providing a flexible way to control web access.

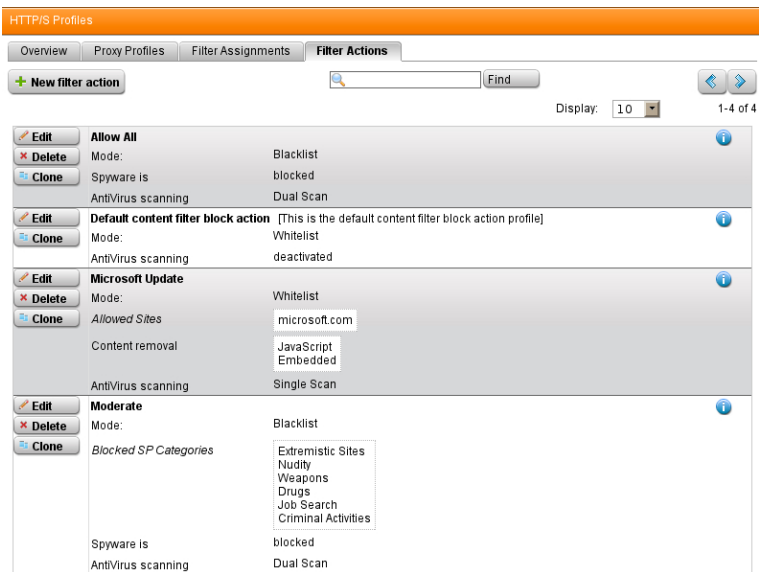


Figure 85 Web Filtering Profiles: List of Filter Actions

To create a filter action, proceed as follows:

1. **Click *New Filter Action*.**

The *Create New Filter Action* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this action.

Mode: Select whether your selection of websites should be blocked or allowed. The following options are available:

- **Allow By Default:** If this option is selected, your selection of websites will be blocked while all other websites will be allowed.
- **Block By Default:** If this option is selected, all websites except the ones you selected will be blocked.

Threshold: Websites can be classified as either *Trusted*, *Neutral*, or *Suspicious*. Unclassified websites are referred to as *Unverified*. You can determine which reputation a website must have to be accessible from your network. Websites below the selected threshold will be blocked.

Block Spyware Communication: Selecting this option will detect and block spyware on the way from the server to the client. This prevents computers within your network from getting infected by new spyware. Moreover, activating this feature will detect and block traffic from already installed spyware applications. That way, gathered user information will no longer be submitted to the Internet. Note that this option is not available if you change the mode to *Block By Default*.

Block these Website Categories: Select the website categories that should be blocked. Note that this option is changed to *Allow these Website Categories* if *Mode* is set to *Block by Default* above.

Block Uncategorized Sites: Enabling this option will prevent the browser from opening websites of unknown content. This function can be considered as a fallback security mechanism in case a potentially unwanted website has not yet been categorized as such. Note that this option is changed to *Allow Uncategorized Sites* if *Mode* is set to *Block by Default* above.

Block these URLs/Sites: Enter the URL of sites to be blocked.

Always Allow these URLs/Sites: Enter the URL of sites to be always allowed.

SafeSearch: You can enforce the usage of SafeSearch for the search engines Google, Bing, and Yahoo. The SafeSearch filter removes content from search results that is not appropriate for children, such as offending or illegal material. If enabled, users surfing via the Web Filter are unable to turn the filter off.

Blocked File Extensions: By specifying a file extension, you can block certain types of files based on their extensions (e.g., executable binaries). To add a file extension, click the plus icon in the *Blocked File Extensions* box and enter the extension you want to block, for example `exe` (without the delimiting dot).

Blocked MIME Types: To add a MIME type that shall be blocked, click the plus icon in the *Blocked MIME Types* box and enter the MIME type (e.g., `image/gif`).

Content Removal: When selected, the *Remove JavaScript* and *Remove Embedded* options become visible. Using these options you can configure whether `<SCRIPT>` and `<OBJECT>` tags shall be removed from HTML pages, on

the one hand deactivating JavaScript functions that are embedded in or included from HTML pages, on the other hand stripping off dynamic content such as ActiveX, Flash or Java applets from the incoming HTTP/S traffic.

Use AntiVirus Scanning: When selecting this option, inbound web traffic is scanned for malicious content. Astaro Security Gateway features several antivirus engines for best security.

Max Scanning Size: Specify the maximum size of files to be scanned by the antivirus engine(s). Files exceeding this size will be exempt from scanning.

The following two options are useful if there are persons or members of e.g. a works council whose activities must not be logged at all:

- **Log Accessed Pages:** Unselect to exclude accessed pages from logging and reporting.
- **Log Blocked Pages:** Unselect to exclude blocked pages from logging and reporting.

Parent Proxies: You can decide to use one or more parent proxies. If the box is empty, you need to create a parent proxy definition on the *Parent Proxies* tab first. Select the checkbox in front of a parent proxy definition in order to enable its use. With several proxies, you can sort them by clicking the blue arrows. Selected parent proxies are applied in the given order until the first proxy matches. The processing order is determined by the position number, so if you change the order of the proxies by their position numbers, the processing order will change as well.

3. **Click Save.**

The new filter action appears on the *Filter Actions* list.

To either edit or delete a filter action, click the corresponding buttons.

Each filter action can be selected when creating a filter assignment or Web Filtering profile.

Note - You can see here also the *Default Content Filter Block Action* which by default blocks every HTTP/S request that does not match any other filter action or the settings in the *Web Filtering* menu.

9.2.5 Parent Proxies

A parent proxy is often required in those countries that require Internet access to be routed through a government-approved proxy server. On the *Web Security > Web Filtering Profiles > Parent Proxies* page you can configure the usage of parent proxies, globally and profile-based. Parent proxies always need to be configured on this page (or the *Web Filtering > Advanced* page) first, before they can be used in profiles.

Note – For technical reasons, with parent proxies enabled, HTTPS requests are not possible in Transparent mode when SSL scanning is enabled.

To configure a parent proxy, do the following:

1. **Click *New Parent Proxy*.**

The *Create New Parent Proxy* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this parent proxy.

Comment (optional): Add a description or other information.

Use Proxy for These Hosts: Add hosts to this box for which the parent proxy is to be used, e.g. *.wikipedia.org. Note that you can use pattern matching here. Regular expressions, however, are not allowed. If you leave the box empty, an asterisk (*) is automatically added, when clicking *Save*, which matches all hosts. Such a proxy definition can therefore be regarded as a fallback proxy which matches when none of the other proxies, if existent, do.

Parent Proxy: Select or add the network definition of the parent proxy.

Port: The default port for the connection to the parent proxy is 8080. If your parent proxy requires a different port, you can change it here.

Proxy Requires Authentication: If the parent proxy requires authentication, select the checkbox and enter username and password in the appearing textboxes.

3. **Click *Save*.**

The new parent proxy appears on the *Parent Proxies* list.

The proxy can now be used in filter actions or globally.

To either edit or delete a parent proxy, click the corresponding buttons.

9.3 Application Control

The Application Control functionality of ASG allows you to shape and block network traffic based on the type of traffic. In contrast to the Web Filtering functionality of ASG (see chapter [Web Filtering](#)), the application control classification engine distinguishes network traffic not only by protocol or by URL but more fine-grained. This is especially useful regarding web traffic: traffic to websites normally uses the HTTP protocol on port 80 or the HTTPS protocol on port 443. When you want to block traffic to a certain website, e.g. facebook.com, you can do that either based on that website's URL (Web Filtering). Or you can block facebook traffic independent from any URL by relying on network traffic classification.

The classification engine of ASG uses layer 7 packet inspection to classify network traffic.

Application control can be used in two ways. In a first step, you need to generally enable application control on the *Network Visibility* page which makes applications "visible" in a way. Now you can leave it that way (or for a certain time) to see which applications are used by your users (e.g. in Flow Monitor, logging, reporting). In a second step you can block certain applications and allow others. This is achieved by rules which can be created on the *Application Control Rules* page. Additionally, you can use traffic shaping to privilege traffic of defined applications which can be configured via Astaro's Quality of Service function.

9.3.1 Network Visibility

On the *Web Security > Application Control > Network Visibility* page, you can enable and disable application control.

When application control is enabled all network traffic is classified and logged according to its classification. Current network traffic can be viewed via the Flow Monitor with in-depth information about its type (see chapter *Flow Monitor*). For example information on HTTP traffic is drilled down to the underlying applications, e.g. "twitter", "facebook", etc. Regarding logging and reporting, there is extensive information available on network traffic and its classification, as well as clients and

servers which use those applications. For more information on logging and reporting see chapter *Logging & Reporting*, section *View Log Files* for logging and section *Network Usage > Bandwidth Usage* and *Web Security > Application Control* for reporting.

9.3.2 Application Control Rules

On the *Web Security > Application Control > Application Control Rules* page you can create rules based on network traffic classification which define applications whose traffic should be blocked or explicitly allowed for your network.

By default, all network traffic is allowed when application control is enabled.

Application control rules can be created either via this page or via the Flow Monitor. The latter method may be more convenient, however you can only create rules for traffic currently monitored in your network.

To create an application control rule, proceed as follows:

1. **On the *Application Control Rules* tab, click *New Rule*.**

The *Create New Rule* dialog box opens.

2. **Make the following settings:**

Name (optional): You can enter a name for the rule. If you leave the field empty the system is going to generate a name for the rule.

Group: The *Group* option is useful to group application control rules logically for better readability of the rule set. Grouping is only used for display purposes, it does not affect rule matching.

Position: The position number, defining the priority of the rule. Lower numbers have higher priority. Rules are matched in ascending order. Once a rule has matched, rules with a higher number will not be evaluated anymore.

Action: Select whether the traffic is to be blocked or allowed.

Control By: Select whether to control traffic based on its application type or by a dynamic filter based on categories.

- **Applications:** The traffic is controlled application-based. Select one or more applications in the box *Control These Applications*.

- **Dynamic Filter:** The traffic is controlled category-based. Select one or more categories in the box *Control These Categories*.

Control These Applications/Categories: Click the folder icon to select applications/categories. A dialog window opens, which is described in detail in the next section.

Productivity: Only with *Dynamic Filter*. Reflects the productivity score you have chosen.

Risk: Only with *Dynamic Filter*. Reflects the risk score you have chosen.

Note – Some applications cannot be blocked. This is necessary to ensure a flawless operation of Astaro Security Gateway. Such applications miss a checkbox in the application table of the *Select Application* dialog window, e.g. *WebAdmin*, *Teredo* and *SixXs* (for IPv6 traffic), *Portal* (for User Portal traffic), and some more. When using dynamic filters, blocking of those applications is also prevented automatically.

For: Select or add networks or hosts to this box whose network traffic is to be controlled by this rule. This applies both to source and target hosts/networks.

Log: This option is selected by default and enables logging of traffic which matches the rule.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new rule appears on the *Rules* list.

4. **Enable the rule.**

Click the status icon to activate the rule.

The Select Application or Category Dialog Window

When creating application control rules you need to choose applications or application categories from a dialog window called *Select one or more Applications/Categories to control*.

The table in the lower part of the dialog window displays the applications you can choose from or which belong to a defined category. By default, all applications are displayed.

The upper part of the dialog window provides three configuration options to limit the number of applications in the table:

- **Category:** Applications are grouped by category. This list contains all available categories. By default, all categories are selected, which means that the table below displays all applications available. If you want to limit the displayed applications to certain categories, click into the category list and select only one or more categories relevant to you.
- **Productivity:** Applications are also classified by their productivity impact which means how much they influence productivity. Example: Salesforce, a typical business software, has the score 5 which means its usage adds to productivity. On the contrary, Farmville, an online game, has the score 1 which means its usage is counterproductive. The network service DNS has the score 3 which means its productivity impact is neutral.
- **Risk:** Applications are also classified by the risk they carry when used with regard to malware, virus infections, or attacks. A higher number means a higher risk.

Tip – Each application has an Info icon which, when clicked, displays a description of the respective application. You can search the table by using the search box in the table header.

Now, depending on the type of control you selected in the *Create New Rule* dialog window, do the following:

- Control by dynamic filter: Simply click *Apply* to adopt the selected applications to your rule.
- Control by application: From the table, select the applications you want to control by clicking the checkbox in front. Click *Apply* to adopt the selected applications to your rule.

After clicking *Apply*, the dialog window closes and you can continue to edit the settings of your application rule.

9.3.3 Advanced

On the *Web Security > Application Control > Advanced* page you can configure advanced options for application control.

Astaro AppAccuracy Program

You can help to improve the recognition and classification abilities of network visibility and application control by participating in Astaro's AppAccuracy Program. The system will then collect data in form of anonymous application fingerprints and will send that to Astaro's research team. There the fingerprints will be used to identify unclassified applications and to improve and enlarge the network visibility and application control library.

Application Control Skiplist

Hosts and networks listed in this box will not be monitored by application control and can therefore neither be controlled by application control nor by the application selector of Quality of Service. This applies both to source and destination hosts/networks.

9.4 FTP

On the *Web Security > FTP* tab you can configure the FTP proxy. The *File Transfer Protocol* (FTP) is a widely used protocol for exchanging files over the Internet. Astaro Security Gateway presents a proxy service acting as a go-between for all FTP traffic passing your network. The FTP proxy provides such useful features as virus scanning of FTP traffic or blocking of certain file types that are transferred via the FTP protocol.

The FTP proxy can work transparently, that is, all FTP clients within your network would establish a connection to the proxy instead of their ultimate destination. The proxy would then initiate a new network connection on behalf of the request, invisible to the client. The advantage of this mode is that no additional administration or client-side configuration is necessary.

9.4.1 Global

On the *Web Security > FTP > Global* tab you can configure the basic settings of the FTP proxy.

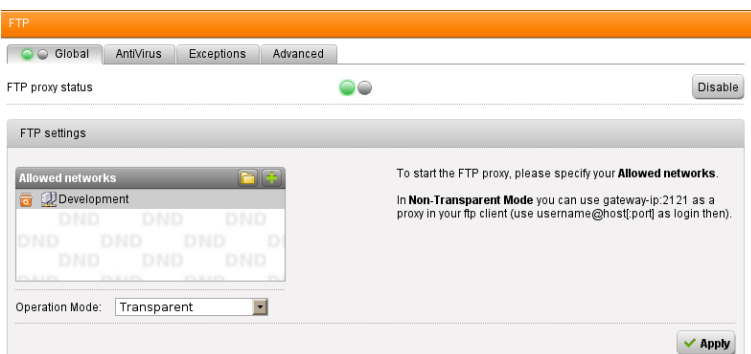


Figure 86 FTP Proxy: Enabling the FTP Proxy

To configure the FTP proxy, proceed as follows:

1. **On the *Global* tab, enable the FTP proxy.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *FTP Settings* area becomes editable.

2. **Select the allowed networks.**

Select the networks that are allowed to use the FTP proxy.

3. **Select an operation mode.**

Select an operation mode for the FTP proxy. The following modes are available:

- **Transparent:** The proxy forwards the client request to the target server and scans the content. No configuration on client side is necessary.
- **Non-Transparent:** Using this mode you need to configure the FTP clients. Use the gateway's IP address and port 2121.
- **Both:** This mode allows you to use transparent mode for some clients and non-transparent mode for others. Configure FTP clients that are to

work in non-transparent mode to use a proxy with the gateway's IP address and port 2121.

4. **Click *Apply*.**

Your settings will be saved.

Note - The FTP proxy is unable to communicate with FTP servers that use Active Directory authentication. To enable FTP clients to connect to an FTP server of that kind, add the server to the FTP proxy skiplist, which is configured on the *Web Security > FTP > Advanced* tab.

9.4.2 AntiVirus

The *Web Security > FTP > AntiVirus* tab contains all measures that can be taken against FTP traffic that carries harmful and dangerous content such as viruses, worms, or other malware.

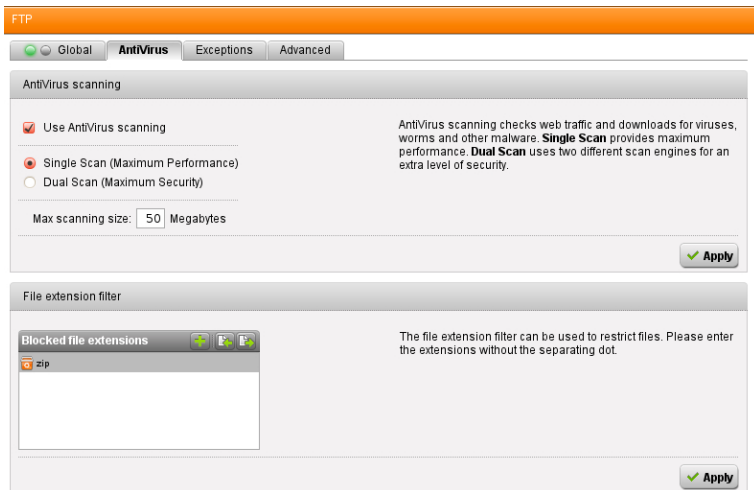


Figure 87 FTP Proxy: Configuring AntiVirus Settings

Use AntiVirus Scanning: When selecting this option, the entire FTP traffic will be scanned. Astaro Security Gateway features several antivirus engines for best security.

- **Single Scan:** Default setting; provides maximum performance.
- **Dual Scan:** Provides maximum recognition rate by scanning all FTP traffic twice using different virus scanners.

Max Scanning Size: Specify the maximum size of files to be scanned by the anti-virus engine(s). Files exceeding this size will be exempt from scanning. Click *Apply* to save your settings.

Note - Encrypted `zip` archives cannot be scanned for malicious content and will pass through the virus scanner. To protect your network from malware included in encrypted `zip` files you might want to consider blocking the `zip` file extension altogether.

File Extension Filter

This feature filters FTP transfers that transmit certain types of files based on their extensions (e.g., executable binaries) from web traffic that have a file extension listed in the *Blocked File Extensions* box. You can add additional file extensions or delete file extensions that are not to be blocked. To add a file extension, click the plus icon in the *Blocked File Extensions* box and enter the file extension you want to block, for example `exe` (without the delimiting dot). Click *Apply* to save your settings.

9.4.3 Exceptions

On the *FTP > Exceptions* tab you can define whitelist hosts/networks that should be excluded from selectable security options offered by the FTP proxy.

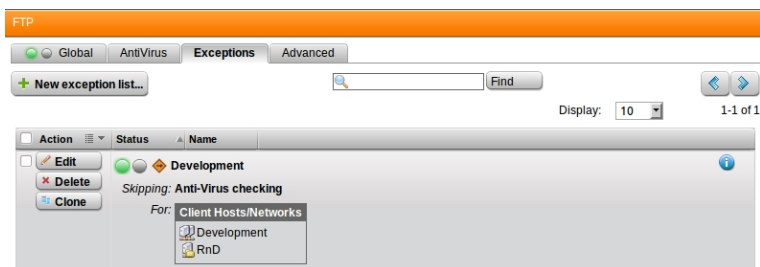


Figure 88 FTP Proxy: Exceptions List

To create an exception, proceed as follows:

1. **On the *Exceptions* tab, click *New Exception List*.**

The *Create Exception List* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this exception.

Skip These Checks: Select the security checks that should be skipped:

- **AntiVirus Checking:** Select to disable virus scanning, which checks traffic for unwanted content such as viruses, trojan horses, and the like.
- **Extension Blocking:** Select to disable the file extension filter, which can be used to block file transfers based on file extensions.
- **Allowed Servers:** Select to disable checks for allowed servers which can be set on the *Advanced* tab.

For These Client Hosts/Networks: When selecting this option, the *Client Hosts/Networks* box opens. Select the client hosts/networks that should be exempt from the security checks of this exception rule.

For These Server Hosts/Networks: When selecting this option, the *Server Hosts/Networks* box opens. Select the servers that should be exempt from the security checks of this exception rule.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new exception appears on the *Exceptions* list.

To either edit or delete an exception, click the corresponding buttons.

9.4.4 Advanced

On the *FTP > Advanced* tab you can specify hosts and networks that can skip the transparent mode of the FTP proxy.

Note - The FTP proxy is unable to communicate with FTP servers that use Active Directory authentication. To enable FTP clients to connect to an FTP server of that kind, add the server to the FTP proxy skiplist.

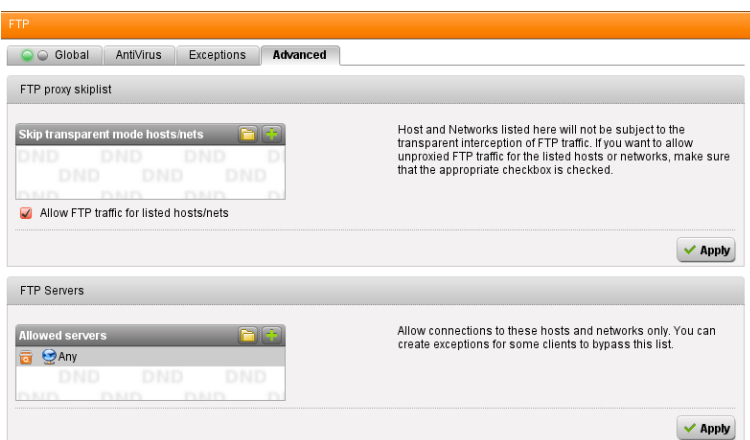


Figure 89 FTP Proxy: Advanced Settings

FTP Proxy Skiplist

Hosts and networks listed here are excluded from the transparent interception of FTP traffic. However, to allow FTP traffic for these hosts and networks, select the *Allow FTP Traffic* checkbox. If you do not select this checkbox, you must define specific firewall rules for the hosts and networks listed here.

FTP Servers

Select or add FTP servers that are allowed to access from your network. You can create exceptions for some clients to bypass this list on the *Exceptions* tab.

10 Mail Security

This chapter describes how to configure basic e-mail security features of Astaro Security Gateway. The *Mail Security Statistics* page in WebAdmin shows an overview of today's top ten e-mail senders, e-mail recipients, spammers (by country), recognized malware, and concurrent connections. Each of the sections contains a *Details* link. Clicking the link redirects you to the respective reporting section of WebAdmin, where you can find more statistical information.

The following topics are included in this chapter:

- [SMTP](#)
- [SMTP Profiles](#)
- [POP3](#)
- [Encryption](#)
- [Quarantine Report](#)
- [Mail Manager](#)

10.1 SMTP

The menu *Mail Security > SMTP* allows you to configure the SMTP proxy. SMTP is the abbreviation of *Simple Mail Transfer Protocol*, a protocol used to deliver e-mails to a mail server. Astaro Security Gateway includes an application level gateway for SMTP, which can be used to protect your internal mail server from remote attacks and additionally provides powerful virus scanning and e-mail filtering services.

Note - To use the SMTP proxy correctly, a valid name server (DNS) must be configured.

10.1.1 Global

On the *Mail Security > SMTP > Global* tab you can decide whether to use *Simple Mode* for SMTP configuration or *Profile Mode*.

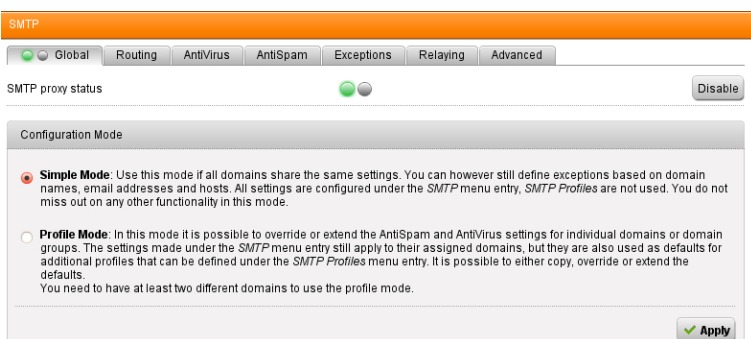


Figure 90 SMTP Proxy: Enabling the SMTP Proxy

1. **Enable SMTP.**

You can either click the status icon or the *Enable* button.

The status icon turns green and the *Configuration Mode* area becomes editable.

2. **Select a configuration mode.**

Simple Mode: Use this mode if all domains share the same settings. However, you can still define exceptions based on domain name, e-mail addresses, and hosts. There is no functionality restriction compared with *Profile Mode*.

Profile Mode: In this mode you can override or extend global settings e.g., of antis spam and antivirus, for individual domains or domain groups by creating profiles for them in the menu *SMTP Profiles*. Settings made in the *SMTP* menu still apply to their assigned domains and, moreover, serve as defaults for profiles. In *Profile Mode*, you will find additional notes with some of the settings regarding recommendations for profile mode and behavior of the ASG.

3. **Click Apply.**

The selected mode will be enabled.

10.1.2 Routing

On the *Routing* tab you can configure domain and routing targets for the SMTP proxy and define how recipients are to be verified.

SMTP

Global **Routing** AntiVirus AntiSpam Exceptions Relaying Advanced

Domains and routing target

Domains

example.com

Route by: Static Host list

Host list

Mail Server

Recipient Verification

Verify recipients: With callout (recommen)

Apply

Please specify your internal domains. The system will accept mail for these domains and route them to the target specified. **Important:** You must not use *Routing by MX* if the system is a public MX for the domain(s).

Profile Mode: Domains that only use global settings should be listed here. Other domains that are supposed to use different settings (including routing target) should only be listed in their respective profiles. If you do not want to apply the global settings to any domains, leave the *Domains* field here empty.

Please specify if and how recipient addresses should be verified. Leaving the option set to 'callout' is heavily recommended to avoid bouncing messages. To use *Active Directory*, you must have an Active Directory Server specified in *Users -> Authentication -> Active Directory*. The *Base DN* setting here is optional.

Figure 91 SMTP Proxy: Configuring Domains and Routing Targets

To configure the SMTP proxy routing, proceed as follows:

1. Enter your internal domain(s).

To enter your e-mail domains, click the Plus icon in the *Domains* box.

In the appearing text box, enter the domain in the form `example.com` and click *Apply*. Repeat this step until all domains are listed.

In *Profile Mode*: Enter only domains that use global settings. All other domains should be listed in their respective profiles.

2. Specify the internal server.

From the drop-down list *Route By*, select the host to which e-mails for the domains listed above should be forwarded to. A typical target host would be the Microsoft Exchange Server on your local network. You can choose between different server types:

- **Static Host List:** Select a host definition of the target route in the *Host List* box. Note that you can select several host definitions for basic fail-over purposes. If delivery to the first host fails, mail will be routed to

the next one. However, the (static) order of hosts cannot be determined with the current version of Astaro Security Gateway and is somewhat accidental. To randomize delivery to a group of hosts so as to additionally achieve basic load balancing capability, use the *DNS Host-name* route type and specify a hostname that has multiple A records (an *A record* or *address record* maps a hostname to an IP address).

- **DNS Hostname:** Specify the *fully qualified domain name* (FQDN) of your target route (e.g., `exchange.example.com`). Note that when you select a DNS name having multiple A records, mail to each server will be delivered randomly. In addition, if one server fails, all mail destined for it will automatically be routed to the remaining servers.
- **MX Records:** You can also route mail to your domain(s) by means of MX record(s). If you select this route type, the mail transfer agent of Astaro Security Gateway makes a DNS query requesting the MX record for the recipient's domain name, which is the portion of the e-mail address following the "@" character. Make sure that the gateway is not the primary MX for the domain(s) specified above, since it will not deliver mail to itself.

3. **Click *Apply*.**

Your settings will be saved.

Recipient verification

Verify recipients: Here you can specify whether and how e-mail recipients are to be verified.

- **With Callout:** A request is sent to the server to verify the recipient.
- **In Active Directory:** A request is sent to the Active Directory server to verify the recipient. To be able to use Active Directory you must have an Active Directory server specified in *Definitions & Users > Authentication Servers > Servers*. Enter a base DN into the *Alternative Base DN* field.

Note - The use of Active Directory recipient verification may lead to bounced messages in case the server does not respond.

- **Off:** You can turn off recipient verification completely but this is not recommended for it will lead to higher spam traffic volume and dictionary

attacks. Thus your quarantine is likely to be flooded with unsolicited messages.

Click *Apply* to save your settings.

10.1.3 AntiVirus

The *AntiVirus* tab contains various measures against e-mails that carry harmful and dangerous content such as viruses, worms, or other malware.

Note: Outgoing e-mails will be scanned if the checkbox *Scan Relayed (Outgoing) Messages* on the *Relaying* tab is selected.

The screenshot shows the 'SMTP' configuration window with the 'AntiVirus' tab selected. The window has a title bar 'SMTP' and several tabs: 'Global', 'Routing', 'AntiVirus', 'AntiSpam', 'Exceptions', 'Relaying', and 'Advanced'. The 'AntiVirus' tab is active. It contains two main sections: 'Scan during SMTP transaction' and 'AntiVirus scanning'. In the 'Scan during SMTP transaction' section, the checkbox 'Reject Malware during SMTP transaction' is checked. To its right, there is explanatory text: 'When this option is activated, one scan engine will already scan messages during the SMTP transaction and reject them if they contain malware. This feature can still be skipped by exceptions. Profile mode: This setting cannot be changed per profile. Messages with more than one recipient will skip this feature if one of the recipient profiles has AV scanning turned off. This means you should still leave the regular AV setting below set to either Blackhole or Quarantine.' An 'Apply' button is at the bottom right of this section. The 'AntiVirus scanning' section has a dropdown menu 'AntiVirus:' set to 'Quarantine'. Below it are three radio buttons: 'Single Scan (Maximum Performance)', 'Dual Scan (Maximum Security)' (which is selected), and 'Quarantine unscannable and encrypted content'. To the right of these options is another block of text: 'AntiVirus scanning checks every message for viruses, worms and other malware. Single Scan provides maximum performance. Dual Scan uses two different scan engines for an extra level of security. If Quarantine unscannable and encrypted content is selected, e-mails will be quarantined if they cannot be scanned due to encrypted archives, oversized content or scanner failure.' An 'Apply' button is at the bottom right of this section.

Figure 92 SMTP Proxy: Configuring AntiVirus Settings

Scan During SMTP Transaction

Select the checkbox *Reject Malware During SMTP Transaction* if you want to have messages scanned already during SMTP transaction and to have them rejected in case they contain malware.

In *Profile Mode*: This setting cannot be changed per profile. Messages with more than one recipient will skip this feature if one of the recipient profiles has *AntiVirus Scanning* turned off. This means it is advisable to leave the regular antivirus setting below set to either *Blackhole* or *Quarantine*.

Click *Apply* to save your settings.

AntiVirus Scanning

When using this option, e-mails will be scanned for unwanted content such as viruses, trojan horses, or suspicious file types. Messages containing malicious content will be blocked and stored in the e-mail quarantine. Users can review and release their quarantined messages either through the Astaro [User Portal](#) or the daily [Quarantine Report](#). However, messages containing malicious content can only be released from the quarantine by the administrator in the [Mail Manager](#).

AntiVirus: You can configure how to proceed with messages that contain malicious content. The following actions are available:

- **Off:** There will be no antivirus scans.
- **Blackhole:** Incoming messages will be accepted and instantly removed. Outgoing messages will never be blackholed to avoid unintended mail loss. They will be quarantined instead.
- **Quarantine:** The message will be blocked and stored in the e-mail quarantine. Quarantined messages can be reviewed either through the User Portal or the daily Quarantine Report. Note that messages containing malicious content can only be released from the quarantine by an administrator.

Astaro Security Gateway features several antivirus engines for best security.

- **Single Scan:** Default setting; provides maximum performance.
- **Dual Scan:** Provides maximum recognition rate by scanning all e-mails twice using different virus scanners.

Quarantine Unscannable and Encrypted Content: Select this option to quarantine e-mails whose content could not be scanned. Unscannable content may be encrypted or corrupt archives or oversized content, or there may be a technical reason like a scanner failure.

Click *Apply* to save your settings.

The screenshot displays two configuration panels for an SMTP Proxy. The top panel, titled 'MIME type filter', contains three unchecked checkboxes: 'Quarantine audio content (e.g. mp3)', 'Quarantine video content (e.g. mpg)', and 'Quarantine executable content (e.g. exe)'. To the right, a text box explains that the filter can quarantine specific content types based on both advertised and actual content types, using wildcards like 'audio/*'. Below the checkboxes are two empty list boxes: 'Additional types to quarantine' and 'Whitelisted Content-Types', each with a plus icon for adding entries. An 'Apply' button is at the bottom right. The bottom panel, titled 'File extension filter', features a 'Blocked file extensions' list box containing 'exe', 'msi', 'com', 'bat', and 'vbx'. To its right, a text box states that the filter restricts file attachments in email messages and that extensions should be entered without a separating dot. An 'Apply' button is also present at the bottom right of this panel.

Figure 93 SMTP Proxy: File Extension Filter

MIME Type Filter

The MIME type filter reads the MIME type of e-mail contents. You can define how the different MIME types are to be dealt with.

- **Quarantine Audio Content:** When you select this checkbox audio content like e.g., mp3 or wav files, will be quarantined.
- **Quarantine Video Content:** When you select this checkbox video content like e.g., mpg or mov files, will be quarantined.
- **Quarantine Executable Content:** When you select this checkbox executable content like e.g., exe files, will be quarantined.

Additional Types To Quarantine: To add a MIME type other than above that shall be quarantined, click the plus icon in the *Additional Types To Quarantine* box and enter the MIME type (e.g., image/gif). You can use wildcards (*) on the right side of the slash, e.g., application/*.

Whitelisted Content-Types: You can use this box to allow generally certain MIME types. To add a MIME type click the plus icon in the *Whitelisted Content-Types* box and enter the MIME type.

MIME type	MIME type class
audio/*	audio files
video/*	video files
application/x-dosexec	applications
application/x-msdownload	
application/exe	
application/x-exe	
application/dos-exe	
vms/exe	
application/x-winexe	
application/msdos-windows	
application/x-msdos-program	

Table 2: MIME types known by the MIME Type Filter

Click *Apply* to save your settings.

File Extension Filter

This feature filters and quarantines e-mails (with warnings) that contain certain types of files based on their extensions (e.g., executables). To add file extensions, click the plus icon in the *Blocked File Extensions* box and enter a critical file extension you want to be scanned, e.g., `exe` or `jar` (without the dot delimiter). Click *Apply* to save your settings.

Note - Encrypted `zip` archives cannot be scanned for malicious content and will pass through the virus scanner. To protect your network from malware included in encrypted `zip` files you might want to consider blocking the `zip` file extension altogether.

AntiVirus Check Footer

For each outgoing e-mail, you can add and customize a special footer informing users that the e-mail has been scanned for malicious content. However, the footer will only be added if the checkbox *Scan Relayed (Outgoing) Messages* on the

Relaying tab is selected. In addition, the antivirus check footer will not be appended to the e-mail if the e-mail is a reply (i.e. having *In-Reply-To* header) or if the content type of the e-mail could not be determined. Click *Apply* to save your settings.

Note - Adding a footer to messages already signed or encrypted by an e-mail client (e.g., Microsoft's Outlook or Mozilla's Thunderbird) will break their signature and render them invalid. If you want to create digital signatures on the client side, disable the antivirus check footer option. However, if you do not wish to forgo the privacy and authentication of your e-mail communication and still want to apply a general antivirus check footer, consider using the built-in [e-mail encryption](#) feature of Astaro Security Gateway. E-mail encryption done on the gateway means that the footer is added to the message prior to creating the digital signature, thus leaving the signature intact.

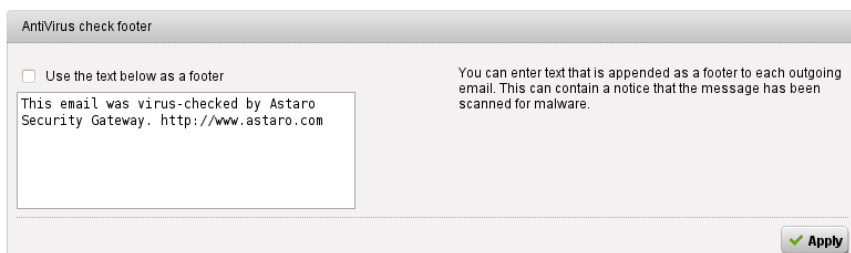
The screenshot shows a window titled "AntiVirus check footer". It contains a checkbox labeled "Use the text below as a footer" which is currently unchecked. To the right of the checkbox, there is explanatory text: "You can enter text that is appended as a footer to each outgoing email. This can contain a notice that the message has been scanned for malware." Below the checkbox, there is a text area containing the text: "This email was virus-checked by Astaro Security Gateway. http://www.astaro.com". At the bottom right of the window, there is a green "Apply" button with a checkmark icon.

Figure 94 SMTP Proxy: AntiVirus Check Footer

10.1.4 AntiSpam

Astaro Security Gateway can be configured to detect unsolicited spam e-mails and to identify spam transmissions from known or suspected spam purveyors. Configuration options located on the *AntiSpam* tab let you configure SMTP security features aimed at preventing your network from receiving unsolicited commercial e-mails.

Note - Outgoing e-mails will be scanned if the checkbox *Scan Relayed (Outgoing) Messages* on the *Relaying* tab is selected.

SMTP

Global Routing AntiVirus **AntiSpam** Exceptions Relaying Advanced

Spam detection during SMTP transaction

Reject at SMTP Time:

Activate spam rejection in the SMTP transaction by selecting either to reject all *Spam* or only *Confirmed Spam*.

Profile mode: This setting cannot be changed per profile. Messages with more than one recipient will skip this feature if one of the recipient profiles has spam scanning completely turned off. This means you should still leave the regular spam scanning setting below set to either *Blackhole* or *Quarantine*.

RBLs (Realtime blackhole lists)

☒ Use recommended RBLs

Extra RBL Zones

- 1 rbl.interserver.net
- 2 spam.rbl.msbl.net

Realtime blackhole lists (RBLs, also called 'DNS lists') are the first line in spam defense. RBL processing is very fast, so it is heavily recommended to leave this feature turned on.

Spam filter

Spam action:

Confirmed Spam action:

Spam marker:

This spam filtering mechanism scores messages based on their content and SMTP envelope information.

Figure 95 SMTP Proxy: Configuring AntiSpam Settings

Spam Detection During SMTP Transaction

You have the possibility to reject spam already during SMTP transaction. Select one of the following settings for the option *Reject at SMTP Time*:

- **Off:** Spam detection is disabled and no e-mail is going to be rejected for spam reasons.
- **Confirmed Spam:** Only confirmed spam is rejected.
- **Spam:** All e-mails that the system regards as spam are rejected. Note that there may be a higher false positive rate because e-mails regarded as probable spam may be rejected such as newsletters.

In Profile Mode: This setting cannot be changed per profile. Messages with more than one recipient will skip this feature if one of the recipient profiles has spam scanning completely turned off. This means it is advisable to leave the regular spam scanning setting set to either *Spam* or *Confirmed Spam*.

RBLs (Realtime Blackhole Lists)

A *Realtime Blackhole List* (RBL) is a means by which an Internet site may publish a list of IP addresses linked to spamming.

Use Recommended RBLs: Selecting this option causes the mail transfer agent to query external databases of known spam senders (so-called *Realtime Blackhole Lists*). Messages sent from a site included in one or more of such lists can easily be rejected. Several services of this type are available on the Internet. This function massively helps to reduce the amount of spam.

By default, the following RBLs are queried:

- Commtouch IP Reputation (ctipd.org)
- cbl.abuseat.org

Note - The list of RBLs queried by Astaro Security Gateway is subject to change without notice. Astaro does not warrant for the contents of these databases.

You can also add further RBL sites to enhance the antispam capability of Astaro Security Gateway. To do so, click the plus icon in the *Extra RBL Zones* box. In the appearing textbox, enter the RBL zone.

Click *Apply* to save your settings.

Spam Filter

Astaro Security Gateway includes a heuristic check of e-mails for characteristics suggestive of spam. It uses SMTP envelope information and an internal database of heuristic tests and characteristics. This spam filtering option scores messages based on their content and SMTP envelope information. Higher scores indicate a higher spam probability.

With the following two options you can specify what to do with messages that have been assigned a certain spam score. This ensures that potential spam e-mails are treated differently by the gateway.

- **Spam Action:** Here you can define what to do with messages that are classified as probable spam. Note that there may be false positives, such as newsletters, thus blackholing may lead to e-mail loss.

- **Confirmed Spam Action:** Here you can define what to do with confirmed spam messages.

You can choose between different actions for those two types of spam:

- **Off:** No messages will be marked as spam or filtered out.
- **Warn:** No messages will be filtered out. Instead, for incoming messages, a spam flag will be added to the message's header and a spam marker will be added to the message's subject. Outgoing messages will be sent without action.
- **Quarantine:** Messages will be blocked and stored in the e-mail quarantine. Quarantined messages can be reviewed either through the User Portal or the daily Quarantine Report.
- **Blackhole:** Incoming messages will be accepted and instantly removed. Outgoing messages will never be blackholed to avoid unintended mail loss. They will be quarantined instead.

Spam Marker: With this option you can specify a spam marker, that is, a string that will be added to the message's subject line making it easy to identify spam messages quickly. By default, the string **SPAM** is used to tag messages as spam.

Sender Blacklist

The envelope sender of incoming SMTP sessions will be matched against the addresses on this blacklist. If the envelope sender is found on the blacklist the message will be blackholed.

To add a new address pattern to the blacklist click the plus icon in the *Blacklisted Address Patterns* box, enter (a part of) an address, and click *Apply*. You can use an asterisk (*) as a wildcard, e.g., **@abbeybnknational.com*.

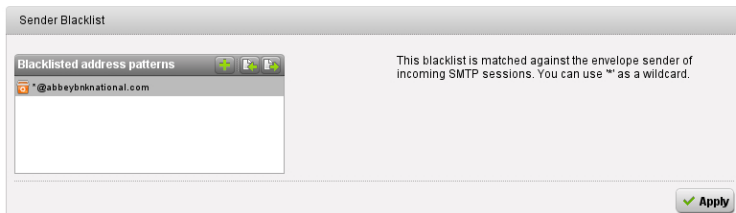


Figure 96 SMTP Proxy: Extending Sender Blacklist

Expression Filter

The expression filter scans messages' content passing through the SMTP proxy for specific expressions. Suspicious e-mails will be blocked. Expressions can be entered as *Perl Compatible Regular Expressions*. Simple strings such as "online dating" are interpreted in a case-insensitive manner. Click *Apply* to save your settings.

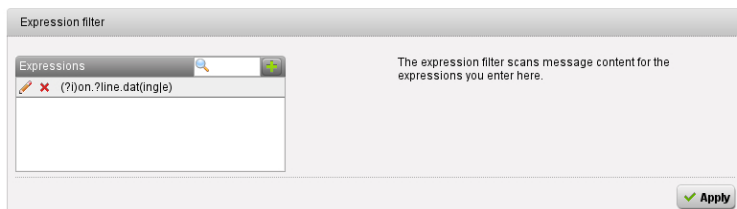


Figure 97 SMTP Proxy: Adding Expressions to the Expression Filter

Advanced AntiSpam Features

This area gathers various other advanced options increasing the antispam capability of Astaro Security Gateway.

Reject Invalid HELO/Missing RDNS: Select this option if you want to reject hosts that send invalid HELO entries or lack RDNS entries. If you want to exempt hosts from this check, please refer to the *Exceptions* tab.

Do Strict RDNS Checks: Select this option if you want to additionally reject mail from hosts with invalid RDNS records. An RDNS record is invalid if the found hostname does not resolve back to the original IP address.

Use Greylisting: Greylisting basically means the temporary rejection of e-mails for a certain amount of time. Typically, a mail server using greylisting will record the following pieces of information for all incoming messages:

- The sender address
- The IP address of the host the message is sent from
- The recipient address
- The message subject

This data set is checked against the SMTP proxy's internal database; if the data set has not been seen before, a record is created in the database along with a special time stamp describing it. This data set causes the e-mail to be rejected for a

period of five minutes. After that time the data set is known to the proxy and the message will be accepted when it is sent again. Note that the data set will expire after a week if it is not updated within this period.

Greylisting uses the fact that most senders of spam messages use software based on the "fire-and-forget" method: Try to deliver the mail and if it doesn't work, forget it! This means that senders of spam mail do not try to send e-mails again when there is a temporary failure, contrary to RFC-conform mail servers. The assumption is that since temporary failures are built into the RFC specifications for e-mail delivery, a legitimate server will try again to send the e-mail later, at which time the destination will accept it.

Use BATV: BATV is a draft of the IETF, facing the challenge to distinguish legitimate uses from unauthorized uses of e-mail addresses. BATV provides a method to sign the envelope sender of outgoing mail by adding a simple shared key to encode a hash of the address and time-varying information as well as some random data proving that the e-mail was really sent by you. It is basically used to reject bounce messages not sent by you. By using BATV, you can now check if bounces you receive are really caused by your initial e-mail, and not from a spammer forging an e-mail with your address. If a bounce returns and the e-mail address is not signed according to BATV, the SMTP proxy will not accept the message. Note that the signature provided by BATV expires after seven days. To change the key (also known as *BATV secret*) that is used to encode the hash of an e-mail's envelope `MAIL FROM` address, go to the *Mail Security > SMTP > Advanced* tab.

Note - Some mail transfer agents may reject a message whose envelope sender address was modified using BATV. In this case, you need to create an exception rule for the senders, recipients, or domains affected.

Perform SPF check: SPF (*Sender Policy Framework*) is a framework where domain owners can publish information about their outgoing e-mail servers. Domains use public records to direct requests for different services (web, e-mail, etc.) to the machines that perform those services. All domains already publish MX records for e-mail related services to let others know what machines receive mail for the domain. SPF works by domains publishing some sort of "reverse MX" records to tell the world what machines send mail from the domain. When receiving a message from a certain domain, the recipient can check those records to make sure that mail is coming from where it should be coming from.

Cross Reference - Further information is available at the [Sender Policy Framework website](#).

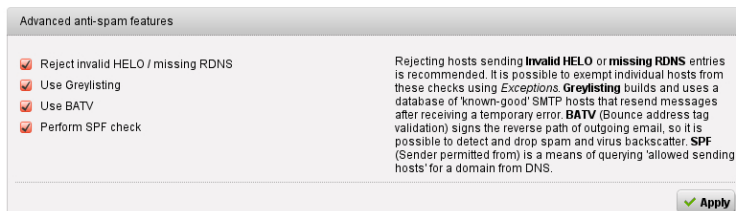


Figure 98 SMTP Proxy: Advanced AntiSpam Features

As an additional antispam feature, the SMTP proxy tacitly checks each recipient address it receives with your back-end mail server(s) before accepting mail for this address. E-mails for invalid recipient addresses will not be accepted. In order for this function to work, your back-end mail server(s) must reject mails for unknown recipients at the SMTP stage. The general rule is that if your back-end server rejects a message, the SMTP proxy will reject it, too.

Note, however, that recipient verification is *not* done for trusted (authenticated) or relay hosts, because some user agents may encounter problems when recipients get rejected in the SMTP transaction. In the usual scenario (back-end mail server rejects unknown recipients in the SMTP transaction), Astaro Security Gateway will only generate bounces in the following cases:

- When a trusted or relay source sends a message to an undeliverable recipient.
- When the back-end mail server has been down so that Astaro Security Gateway was not able to verify the recipient.

However, Astaro Security Gateway does not prevent your back-end mail server(s) from sending non-delivery reports (NDRs) or bounces. In addition, Astaro Security Gateway caches positive callout replies from the mail server for 24 hours, and negative ones for two hours.

10.1.5 Exceptions

On the *SMTP > Exceptions* tab you can define whitelist hosts, networks, senders, and recipients that can be excluded from antispam, antivirus, or other security checks.

Note - Since e-mails can have many recipients, and Astaro Security Gateway implements inline scanning for the SMTP protocol, scanning of an e-mail is skipped for all recipients if one of the e-mail's recipients is listed in the *Recipients* box.

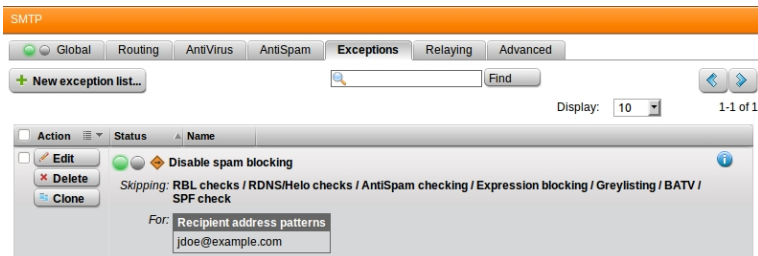


Figure 99 SMTP Proxy: Exceptions List

To create an exception, proceed as follows:

1. **On the *Exceptions* tab, click *New Exception List*.**

The *Create Exception List* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this exception.

Skip These Checks: Select the security checks that should be skipped. For more information, see *Mail Security > SMTP > [AntiVirus](#)* and *[AntiSpam](#)*.

For These Source Hosts/Networks: Select the source hosts/networks (i.e., the host or network messages originate from) that should skip the security checks defined by this exception rule.

Note - No exception needs to be created for localhost because local messages will not be scanned by default.

When selecting this option, the *Hosts/Networks* dialog box opens. You can add a host or network by either clicking the Plus icon or the Folder icon.

These Sender Addresses: Select the senders' e-mail addresses that should skip the defined security checks.

When selecting this option, the *Senders* dialog box opens. You can either enter a complete valid e-mail address (e.g., `jdoe@example.com`) or all e-mail addresses of a specific domain using an asterisk as wildcard (e.g., `*@example.com`).

Note - Use the *Senders* option with caution, as sender addresses can easily be forged.

These Recipient Addresses: Select the recipients' e-mail addresses that should skip the defined security checks.

When selecting this option, the *Recipients* dialog box opens. You can either enter a complete valid e-mail address (e.g., `jdoe@example.com`) or all e-mail addresses of a specific domain using an asterisk as wildcard (e.g., `*@example.com`).

Comment (optional): Add a description or other information.

3. **Click Save.**

The new exception appears on the *Exceptions* list.

To either edit or delete an exception, click the corresponding buttons.

10.1.6 Relaying

The SMTP proxy can be used as a mail relay. A mail relay is an SMTP server configured in such a way that it allows specific users, user groups, or hosts to relay (i.e., send) e-mails through it to domains that are not local.

Upstream Host List

An upstream host is a host that forwards e-mail to you, e.g., your ISP or external MX. If you get inbound e-mail from static upstream hosts, it is necessary that you enter the hosts here. Otherwise spam protection will not work properly.



Figure 100 SMTP Proxy: Configuring Relaying

To add an upstream host either click the plus icon or the folder icon for drag-and-drop from the *Networks* object list. If you would like to only allow upstream hosts select the checkbox *Allow Upstream/Relay Hosts Only*. SMTP access will then be limited to the defined upstream hosts. Upstream hosts can authenticate to get relaying rights. Click *Apply* to save your settings.

Authenticated Relay

SMTP clients can authenticate to get relaying privileges. Select the checkbox *Allow Authenticated Relaying* and specify the users and user groups that should be able to use this feature. Click *Apply* to save your settings.

Note - If the checkbox *Allow Upstream/Relay Hosts Only* is enabled then *Authenticated Relay* does only work when the sending host is configured as upstream/relay host.

Host-based Relay

Mail relaying can also be enabled host-based. If your local mail server or mail clients should be able to use the SMTP proxy as a mail relay, you need to add the networks and hosts which should be able to send mail through the relay to the *Allowed Hosts/Networks* box. The networks and hosts listed are allowed to send messages to any addresses.

Caution - It is extremely important not to select *Any* in the *Allowed Hosts/Networks* box, because this would result in an open relay, allowing anyone on the Internet to send messages through the SMTP proxy. Spammers will quickly recognize this, leading to massive e-mail traffic. In the worst case, you will be listed on 3rd party spammer blacklists. In most configurations, the only hosts that should be allowed to relay mail are the mail servers in your network.

Click *Apply* to save your settings.

Host/Network Blacklist

Here you can define hosts and networks that shall be blocked by the SMTP proxy. Click *Apply* to save your settings.

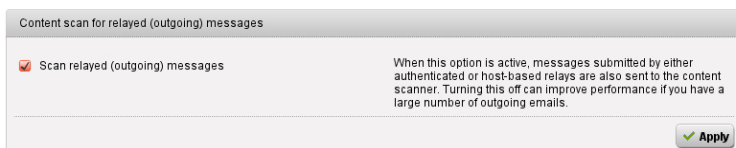


Figure 101 SMTP Proxy: Enabling Host/Network Blacklist

Content Scan For Relayed Messages

When this option is enabled, also messages sent by either authenticated or host-based relays will be scanned for malicious content. If there are many outgoing mails, turning this option off can improve your performance. Click *Apply* to save your settings.

Note that your global antivirus and antispam settings also apply to outgoing messages. But regardless of those settings, infected or spam messages are never blackholed but always sent to quarantine to avoid unintended mail loss.



SMTP Proxy: Enabling Content Scan for Relayed Messages

10.1.7 Advanced

On the *SMTP > Advanced* tab you can configure additional security options of the SMTP proxy such as smarthost settings or transparent mode skiplist, among others.

Parent Proxy

A parent proxy is often required in those countries that require Internet access to be routed through a government-approved proxy server. If your security policy requires the use of a parent proxy, you can set it up here by selecting the host definition and port.

Use a Parent Proxy: Select the checkbox to enable parent proxy use. Enter the hostname and the port of the proxy.

This Proxy Requires Authentication: If the parent proxy requires authentication, enter username and password here.

Transparent Mode

To enable transparent mode for SMTP select the checkbox and click *Apply*. Hosts and networks listed in the *Skip Transparent Mode Hosts/Nets* box will not be subject to the transparent interception of SMTP traffic. However, to allow SMTP traffic for these hosts and networks, select the *Allow SMTP Traffic For Listed Hosts/Nets* checkbox. If you do not select this checkbox, you must define specific firewall rules for the hosts and networks listed here.

TLS Settings

TLS Certificate: Select a certificate from the drop-down list which will be used to negotiate TLS encryption with all remote hosts supporting it.

Require TLS Negotiation Host/Nets: Add hosts or nets here which always require TLS encryption for e-mail communication. The ASG will then hold back e-mails if TLS encryption is not available for those hosts/nets for some reason, that means messages will stay in the mail queue until TLS becomes available again. In case TLS is not available within a reasonable period of time, sending attempts will be stopped and the user will get a notification that their e-mail could not be sent.

Require TLS Negotiation Sender Domains: If you want to enforce TLS encryption for incoming e-mails for certain domains, enter those domains here. E-mails sent from those domains without TLS will be rejected immediately.

Skip TLS Negotiation Host/Nets: If a particular host or network should encounter problems with TLS encryption, you can enter it in the box and select the appropriate TLS certificate from the drop-down menu. This will cause the ASG to skip TLS negotiation for this host or network. Click *Apply* to save your settings.

Domain Keys Identified Mail (DKIM)

DKIM is a method to cryptographically sign outgoing messages. To use DKIM signing, enter your private RSA key and the corresponding key selector into the respective fields and add the domains you want to sign e-mails for to the *DKIM Domains* box. Click *Apply* to save your settings.

Confidentiality Footer

For each outgoing e-mail, you can add and customize a confidentiality footer informing users, for example, that the e-mail may contain confidential or privileged information. However, the confidentiality footer will not be appended to the e-mail if the e-mail is a reply (i.e. having an *In-Reply-To* header) or if the content type of the e-mail could not be determined.

Note - Adding a footer to messages already signed or encrypted by an e-mail client (e.g., Microsoft's Outlook or Mozilla's Thunderbird) will break their signature and render them invalid. If you want to create digital signatures on the client side, disable the antivirus check footer option. However, if you do not wish to forgo the privacy and authentication of your e-mail communication and still want to apply a general antivirus check footer, consider using the built-in [e-mail encryption](#) feature of Astaro Security Gateway. E-mail encryption done on the gateway means that the footer is added to the message prior to creating the digital signature, thus leaving the signature intact.

Advanced Settings

Here you can configure the SMTP hostname and the postmaster address, among other things.

SMTP Hostname: Setting the SMTP hostname will cause the proxy to use the specified name in HELO and SMTP banner messages. By default, the normal system hostname is selected.

Postmaster Address: Specify the e-mail address of the postmaster of the ASG to whom messages are to be forwarded that are sent in the form of `postmaster@[192.168.16.8]`, where the IP literal address is one of the IP addresses of the ASG. Accepting such messages is an RFC requirement.

BATV Secret: Here you can change the automatically generated BATV secret used by the SMTP proxy. The BATV secret is a shared key used to sign an e-mail's envelope `MailFrom` address, thus enabling detection of invalid bounce addresses. If you are using several MXs for your domains, you can change the BATV secret to be the same on all systems.

Max Message Size: The maximum message size that is accepted by the proxy. This setting applies to both incoming and outgoing e-mails. If your back-end server has a limitation with regard to message sizes, you should set the same or a lower value here.

Max Connections: The maximum number of concurrent connections the proxy allows. Default is 20.

Max Connections/Host: The maximum number of hosts per connection the proxy allows. Default is 10.

Max Mails/Connection: The maximum number of mails per connection the proxy allows. Default is 1000.

Max Rcpt/Mail: The maximum number of recipients per mail the proxy allows. Default is 500.

Footers Mode: Here you can define how footers will be added to mails. *MIME Part* will add the footer as extra MIME part. Existing part encodings are not changed and national language characters are preserved. The other method is *Inline* which means that the footer is separated from the main mail by the `--` separator. With this mode you can choose whether the footer should be Unicode (UTF-8)

converted or not. Unicode conversion upgrades the message to preserve national language characters in the footer.

Smarthost Settings

A smarthost is a type of mail relay server which allows an SMTP server to route mail to an upstream mail server rather than directly to the recipient's server. Often this smarthost requires authentication from the sender to verify that the sender has privileges to have mail forwarded through the smarthost.

Use A Smarthost: If you want to use a smarthost to send mail, select the checkbox. In that case, the proxy will never deliver mail itself, but rather send anything to the smarthost.

- **Smarthost:** Select or add a smarthost object.
- **Smarthost Port:** The default port for the smarthost connection is 25. You can change it if required.
- **This Smarthost Requires Authentication:** Select this checkbox if the smarthost requires authentication. Both *Plain* and *Login* authentication types are supported. Enter a username and password into the respective fields.

10.2 SMTP Profiles

The SMTP proxy of Astaro Security Gateway lets you create alternative SMTP profiles, which can then be associated with different domains. That way you can specify domains that should use a different profile other than the default profile configured in *Mail Security* > SMTP. The order of the functions, structured as tabs, reflects how each step gets processed one after the other during SMTP time.

Figure 102 SMTP Profiles: Configuring an SMTP Profile

To create an SMTP profile, proceed as follows:

1. **Enable the SMTP profile mode.**
On the *Mail Security > SMTP > Global* tab select *Profile Mode* and click *Apply*.
The SMTP profiles creation in the *Mail Security > SMTP Profiles* menu is enabled.
2. **On the SMTP Profiles tab, click Create New Profile.**
A dialog box opens.
3. **Enter a descriptive name for the profile and click OK.**
The settings page for the profile opens.
4. **Add one or more domains.**
Add one or more domains to the *Domains* box.

Settings of this profile will be applied for those domains.

5. **Make the following settings:**

You only need to make settings for functions you want to use. For each of the following functions you can decide whether to use individual settings defined here or global settings defined under *Mail Security* > *SMTP*. By default, the global settings option is selected. The individual settings for each function are described below.

Note - Encrypted e-mails whose sender address includes a domain name configured here cannot be decrypted when using the e-mail encryption/decryption engine of Astaro Security Gateway. Therefore, no profile should be added for external e-mail domains.

All settings that you can define here can also be set globally in *Mail Security* > *SMTP*. Therefore only a list of settings and the differences from the global settings are given here, along with cross-references to the respective global setting where detailed information can be found.

The following settings can be made:

- **Routing:** On the *Routing* tab you can configure domain and routing targets for the SMTP proxy and define how recipients shall be verified.
 - Static Host List
 - DNS Hostname
 - MX Records

For detailed information please refer to *Mail Security* > *SMTP* > *Routing*.

- **Recipient verification**

Verify recipients: Here you can specify whether and how e-mail recipients are to be verified.

- **With Callout:** A request is sent to the server to verify the recipient.
- **In Active Directory:** A request is sent to the Active Directory server to verify the recipient. To be able to use Active Directory you must have an Active Directory server specified in *Definitions*

& Users > Authentication Servers > Servers. Enter a Base DN into the *Alternative Base DN* field.

Note - The use of Active Directory recipient verification may lead to bounced messages in case the server does not respond.

- **Off:** You can turn off recipient verification completely but this is not recommended for it will lead to higher spam traffic volume and dictionary attacks. Thus your quarantine is likely to be flooded with unsolicited messages.

For detailed information please refer to *Mail Security* > *SMTP* > *Routing*.

- **Astaro RBLs and Dial-up Blocking:** Here you can block IP addresses linked to spamming.
 - Use Recommended RBLs
 - Block Dial-up/Residential Hosts

For detailed information please refer to *Mail Security* > *SMTP* > *AntiSpam*.

- **Extra RBLs:** You can add further RBL sites to enhance the antispam capability of Astaro Security Gateway. For detailed information please refer to *Mail Security* > *SMTP* > *AntiSpam*. Note that, as a third option, you can add the global settings to your individual settings here.
- **BATV/RDNS/HELO/SPF/Greylisting:** This tab gathers various other advanced options increasing the antispam capability of Astaro Security Gateway.
 - Reject Invalid HELO/Missing RDNS
 - Use Greylisting
 - Use BATV
 - Perform SPF Check

For detailed information please refer to *Mail Security* > *SMTP* > *AntiSpam*.

- **AntiVirus Scanning:** You can configure how to proceed with messages that contain malicious content. The following actions are

available:

- Off
- Quarantine
- Blackhole

You can choose between the following antivirus scan options:

- Single Scan: Provides maximum performance.
- Dual Scan: Provides maximum security.

Quarantine Unscannable and Encrypted Content: Select this option to quarantine e-mails whose content could not be scanned. The reason for that may be, among other things, that content is encrypted or corrupt.

For detailed information please refer to *Mail Security > SMTP > [Anti-Virus](#)*.

- **AntiSpam Scanning:** Here you can decide how to deal with unsolicited commercial e-mails. Both for spam and confirmed spam you can choose between the following actions:
 - Off
 - Warn
 - Quarantine
 - Blackhole

For detailed information please refer to *Mail Security > SMTP > [Anti-Spam](#)*.

- **Sender Blacklist:** The envelope sender of incoming SMTP sessions will be matched against the addresses on this blacklist. If the envelope sender is found on the blacklist the message will be blackholed. For detailed information please refer to *Mail Security > SMTP > [AntiSpam](#)*. Note that, as a third option, you can add the global settings to your individual settings here.
- **MIME Audio/Video/Executables Blocking:** The MIME type filter reads the MIME type of e-mail contents. You can select which content types you would like to quarantine:

- Audio Content
- Video Content
- Executable Content

For detailed information please refer to *Mail Security > SMTP > [Anti-Virus](#)*.

- **MIME Type Blacklist:** Here you can add additional MIME types to quarantine. For detailed information please refer to *Mail Security > SMTP > [AntiVirus](#)*. Note that, as a third option, you can add the global settings to your individual settings here.
- **MIME Type Whitelist:** Here you can add MIME types not to quarantine. For detailed information please refer to *Mail Security > SMTP > [AntiVirus](#)*. Note that, as a third option, you can add the global settings to your individual settings here.
- **Blocked File Extensions:** Using the *File Extension Filter* you can quarantine e-mails (with warnings) that contain certain types of files based on their extensions (e.g., executables). For detailed information please refer to *Mail Security > SMTP > [AntiVirus](#)*. Note that, as a third option, you can add the global settings to your individual settings here.
- **Blocked Expressions:** The expression filter scans messages' content passing through the SMTP proxy for specific expressions. Suspicious e-mails will be blocked. For detailed information please refer to *Mail Security > SMTP > [AntiSpam](#)*. Note that, as a third option, you can add the global settings to your individual settings here.
- **Confidentiality Footer:**For each outgoing e-mail, you can add and customize a confidentiality footer informing users, for example, that the e-mail may contain confidential or privileged information. However, the confidentiality footer will not be appended to the e-mail if the e-mail is a reply (i.e. having an *In-Reply-To* header) or if the content type of the e-mail could not be determined. Note that the footer is appended depending on the sender domain. To use a footer, select the checkbox, enter the footer text and click *Apply*.

6. Click **Apply**.

Your settings will be saved. The new profile appears on the *SMTP Profiles* list.

Note - When you select *Use Global Settings* for a topic and click *Apply*, the icon of the function changes to the global settings icon. By this, you can easily get an overview on which functions global settings or individual settings are applied.

To either disable, rename or delete a profile click the corresponding buttons at the top below the profile drop-down list.

10.3 POP3

The menu *Mail Security > POP3* lets you configure the POP3 proxy for incoming e-mails. The *Post Office Protocol 3* (POP3) is an application-layer Internet standard protocol that allows the retrieval of e-mails from a remote mail server. The POP3 proxy works transparently, meaning that all POP3 requests coming from the internal network on port 110 are intercepted and redirected through the proxy invisible to the client. The advantage of this mode is that no additional administration or client-side configuration is necessary.

Note - It might be necessary to increase the server timeout settings in the e-mail clients' configuration. Usual default settings of about one minute or less might be too low, especially when fetching large e-mails.

The POP3 protocol does not have server-side tracking of which mails have already been retrieved. Generally, a mail client retrieves a mail and deletes it on the server afterwards. However, if the client is configured to not delete mails, then server-side deleting is omitted and the client keeps track of which mail has already been fetched.

10.3.1 Global

On the *Mail Security > POP3 > Global* tab you can configure basic settings for the POP3 proxy.

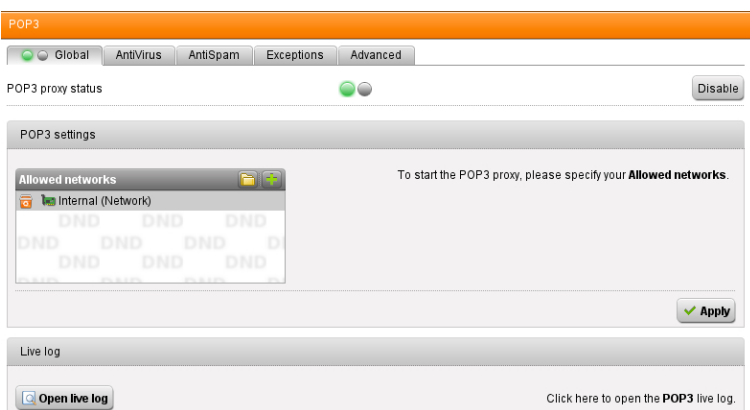


Figure 103 POP3 Proxy: Enabling the POP3 Proxy

To configure the POP3 proxy, proceed as follows:

1. **Enable the POP3 proxy.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *POP3 Settings* area becomes editable.

2. **Select the allowed networks.**

Select the networks that should be allowed to proxy POP3 traffic. By default, this is the internal network.

3. **Click *Apply*.**

Your settings will be saved.

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

Live Log

The *POP3 Live Log* logs the POP3 proxy activities, showing all incoming e-mails. Click the button to open the live log in a new window.

10.3.2 AntiVirus

The *AntiVirus* tab contains various measures against e-mails that carry harmful and dangerous content such as viruses, worms, or other malware.

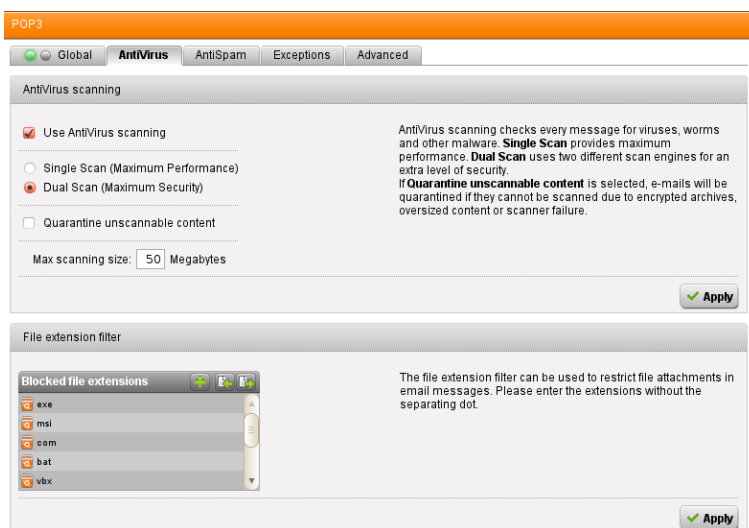


Figure 104 POP3 Proxy: Configuring AntiVirus Settings

AntiVirus Scanning

When using this option, e-mails will be scanned for unwanted content such as viruses, trojan horses, or suspicious file types. Messages containing malicious content will be blocked and stored in the e-mail quarantine. Users can review and release their quarantined messages either through the Astaro [User Portal](#) or the daily [Quarantine Report](#). However, messages containing malicious content can only be released from the quarantine by the administrator in the [Mail Manager](#).

Astaro Security Gateway features several antivirus engines for best security.

- **Single Scan:** Default setting; provides maximum performance.
- **Dual Scan:** Provides maximum recognition rate by scanning all e-mails twice using different virus scanners.

Quarantine Unscannable and Encrypted Content: Select this option to quarantine e-mails whose content could not be scanned. Unscannable content may be encrypted or corrupt archives or oversized content, or there may be a technical reason like a scanner failure.

Max Scanning Size: Specify the maximum size of files to be scanned by the anti-virus engine(s). Files exceeding this size will be exempt from scanning.

Click *Apply* to save your settings.

File Extension Filter

This feature filters and quarantines e-mails (with warnings) that contain certain types of files based on their extensions (e.g., executables). To add file extensions, click the plus icon in the *Blocked File Extensions* box and enter a critical file extension you want to be scanned, e.g., `exe` or `jar` (without the dot delimiter). Click *Apply* to save your settings.

Note - Encrypted `zip` archives cannot be scanned for malicious content and will pass through the virus scanner. To protect your network from malware included in encrypted `zip` files you might want to consider blocking the `zip` file extension altogether.

10.3.3 AntiSpam

Astaro Security Gateway can be configured to detect unsolicited spam e-mails and to identify spam transmissions from known or suspected spam purveyors. Configuration options located on the *AntiSpam* tab let you configure POP3 security features aimed at preventing your network from receiving unsolicited commercial e-mails.

Spam Filter

Astaro Security Gateway includes a heuristic check of incoming e-mails for characteristics suggestive of spam. It uses SMTP envelope information and an internal database of heuristic tests and characteristics. This spam filtering option scores messages based on their content and SMTP envelope information. Higher scores indicate a higher spam probability.

The screenshot shows the 'POP3' configuration window with the 'AntiSpam' tab selected. It contains three main sections: 'Spam filter', 'Expression filter', and 'Sender Blacklist'. Each section has an 'Apply' button at the bottom right.

Spam filter

- ☒ Use spam filter. This spam filtering mechanism scores messages based on their content.
- Spam action: Warn
- Confirmed Spam action: Quarantine
- Spam Marker: [SPAM]

Expression filter

The expression filter scans message content for the expressions you enter here.

Expressions: (?!)on.?line.dat(ingle)

Sender Blacklist

This blacklist is matched against From headers of incoming mails. You can use * as a wildcard.

Blacklisted address patterns: *@bbeybnknational.com

Figure 105 POP3 Proxy: Configuring AntiSpam Settings

With the following two options you can specify what to do with messages that have been assigned a certain spam score. This ensures that potential spam e-mails are treated differently by the gateway.

- **Spam Action:** Here you can define what to do with messages that are classified as probable spam. Note that there may be false positives, such as newsletters, thus blackholing may lead to e-mail loss.
- **Confirmed Spam Action:** Here you can define what to do with confirmed spam messages.

You can choose between different actions for those two types of spam:

- **Off:** No messages will be marked as spam or filtered out.

- **Warn:** No messages will be filtered out. Instead, a spam flag will be added to the message's header and a spam marker will be added to the message's subject.
- **Quarantine:** The message will be blocked and stored in the e-mail quarantine. Quarantined messages can be reviewed either through the User Portal or the daily Quarantine Report.

Spam Marker: With this option you can specify a spam marker, that is, a string that will be added to the message's subject line making it easy to identify spam messages quickly. By default, the string **SPAM** is used to tag messages as spam.

Expression Filter

The expression filter scans the message's subject and body for specific expressions. E-mails that contain an expression listed here will be blocked. However, if the prefetch option is enabled on the *Mail Security > POP3 > Advanced* tab, the e-mail will be sent to the quarantine. Expressions can be entered as *Perl Compatible Regular Expressions*. Simple strings such as "online dating" are interpreted in a case-insensitive manner.

Click *Apply* to save your settings.

Sender Blacklist

The envelope sender of incoming POP3 sessions will be matched against the addresses on this blacklist. If the envelope sender is found on the blacklist the message will be quarantined and marked as *Other* in the subject line.

To add a new address pattern to the blacklist click the plus icon in the *Blacklisted Address Patterns* box, enter (a part of) an address and click *Apply*. You can use an asterisk (*) as a wildcard, e.g., **@abbeybnknational.com*.

10.3.4 Exceptions

On the *POP3 > Exceptions* tab you can define client hosts/networks and sender addresses that shall be excluded from various security features.

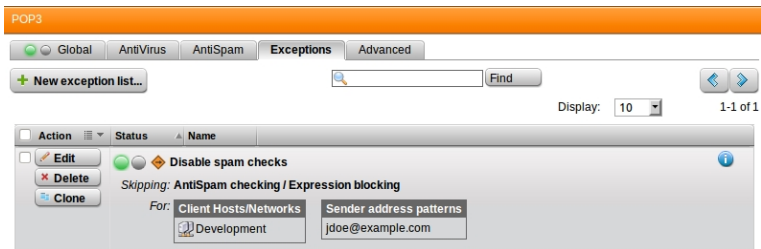


Figure 106 POP3 Proxy: Exceptions List

To create an exception, proceed as follows:

1. **On the *Exceptions* tab, click *New Exception List*.**

The *Create Exception List* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this exception.

Skip These Checks: Select the security checks that should be skipped. For more information, see *Mail Security* > *SMTP* > [AntiVirus](#) and [AntiSpam](#).

For These Client Hosts/Networks: Select the source hosts/networks (i.e., the hosts or networks messages originate from) that should skip the security checks.

Note - No exception needs to be created for localhost because local messages will not be scanned by default.

When selecting this option, the *Hosts/Networks* dialog box opens. You can add a host or network by either clicking the plus symbol or the folder symbol.

These Sender Addresses: Select the senders' e-mail addresses that should skip the defined security checks.

When selecting this option, the *Senders* dialog box opens. You can either enter a complete valid e-mail address (e.g., `jdoe@example.com`) or all e-mail addresses of a specific domain using an asterisk as wildcard (e.g., `*@example.com`).

Note - Use the *Senders* option with caution, as sender addresses can easily be forged.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new exception appears on the *Exceptions* list.

To either edit or delete an exception, click the corresponding buttons.

10.3.5 Advanced

On the *POP3 > Advanced* tab you can specify those hosts and networks that can skip the transparent mode of the POP3 proxy. In addition, it contains the POP3 proxy's prefetch option, which allows the prefetching of messages from a POP3 server and storing them in a database.

POP3

Global AntiVirus AntiSpam Exceptions **Advanced**

Transparent mode skiplist

Skip transparent mode hosts/nets

Host and Networks listed here will not be subject to the transparent interception of POP3 traffic. If you want to allow unproxied POP3 traffic for the listed hosts or networks, make sure that the appropriate checkbox is checked.

☒ Allow POP3 traffic for listed hosts/nets

POP3 servers and prefetch settings

POP3 Servers

msn.com Servers

yahoo.com Servers

POP3 servers listed here will maintain a per user mail tracking including a per user quarantine manager. When **Prefetch mode** is active, the system will prefetch and scan messages from those servers, so that your inbox won't get overcrowded with spam-notifications. Deleting quarantined mails is especially good for laptop users who don't want to get quarantined mails again at home.

☒ Use Prefetch Mode

Prefetch interval: 900 seconds

☐ Delete quarantined mails from server

Preferred charset

Charset: UTF-8

Select a preferred charset for mail headers. This option is intended for some mailclients, which doesn't understand UTF-8.

Figure 107 POP3 Proxy: Advanced Settings

Transparent Mode Skiplist

Using this option is only meaningful if the POP3 proxy runs in transparent mode. Hosts and networks listed in the *Skip Transparent Mode Hosts/Nets* box will not be subject to the transparent interception of POP3 traffic. However, to allow POP3 traffic for these hosts and networks, select the *Allow POP3 Traffic For Listed Hosts/Nets* checkbox. If you do not select this checkbox, you must define specific firewall rules for the hosts and networks listed here.

POP3 Servers And Prefetch Settings

You can enter one or more POP3 servers here, so that they are known to the proxy. Additionally, you can turn on prefetching.

POP3 Servers: Specify the POP3 servers that are used in your network or by your end-users.

If no POP3 server is specified and a mail gets caught by the proxy, the proxy

replaces the mail with a notification to the recipient right away in the same connection stating that the mail has been quarantined. The quarantined mail can be viewed in *Mail Manager*, but is not associated to a server or account and therefore cannot be released in a later connection. Generally, releasing of e-mails from quarantine does only work for prefetched messages.

There are two scenarios:

- If POP3 server(s) are given and prefetching is disabled, the proxy keeps track which quarantined mails belong to which server/account. Thus, quarantined mail can be released when the client polls the mailbox next time. For this to work, the proxy has to safely identify which IP addresses belong to which server (by their FQDN which you have entered in your mail client).
- If POP3 server(s) are given and prefetching is enabled, the POP3 proxy periodically checks the POP3 server(s) for new messages. If a new message has arrived, it will be copied to the POP3 proxy, scanned and stored into a database on the ASG. The message remains on the POP3 server. When a client tries to fetch new messages, it communicates with the POP3 proxy instead and only retrieves messages from this database.

A POP3 proxy supporting prefetching has a variety of benefits, among others:

- No timeout problems between client and proxy or vice versa.
- Delivery of messages is much faster because e-mails have been scanned in advance.
- Blocked messages can be released from the User Portal—they will then be included in the next fetch.

If a message was blocked because it contained malicious content or because it was identified as spam, it will not be delivered to the client. Instead, such a message will be sent to the quarantine. A message held in quarantine is stored in the *Mail Manager* section of the User Portal, from where it can be deleted or released.

Use Prefetch Mode: To enable prefetch mode, select the checkbox and add one or more POP3 servers to the *POP3 Server* box.

Prefetch Interval: Select the time interval at which the POP3 proxy contacts the POP3 server to prefetch messages.

Note - The interval at which mail clients are allowed to connect to the POP3 server may vary from server to server. The prefetch interval should therefore not be set to a shorter interval than allowed by the POP3 server, because otherwise the download of POP3 messages would fail as long as the access to the POP3 server is blocked.

Note further that several mail clients may query the same POP3 account. Whenever messages were successfully fetched from a POP3 server, this will restart the timer until the server can be accessed for the next time. If for that reason the POP3 proxy cannot access a POP3 server four times in a row (default is every 15 minutes), the account password will be deleted from the proxy's mail database and no e-mails will be fetched until a mail client sends the password to the POP3 server again and successfully logs in.

Delete Quarantined Mails From Server: When you select this option, quarantined messages will be deleted from the POP3 server immediately. This is useful to prevent that users get spam or virus messages when they connect to the POP3 server not via the ASG, but for example via the POP3 server's web portal.

If the e-mail client is configured to delete messages from the server after retrieving them, this information will be stored in the database, too. The next time the proxy is going to prefetch messages for this POP3 account, it will delete the messages from the server. This means, as long as no client fetches the messages from the Astaro Security Gateway *and* no delete command is configured, no message will be deleted from the POP3 server. Therefore, they can still be read, for example, via the web portal of the e-mail provider.

Quarantined messages are deleted from the POP3 server in the following cases:

- Messages are manually deleted via the [Mail Manager](#).
- Messages are manually deleted by the user via the [User Portal](#).
- The message was released (either through the [Quarantine Report](#) or the [User Portal](#)) and the user's e-mail client is configured to delete messages upon delivery.
- The notification message has been deleted.

- After the storage period has expired (see section [Configuration](#) in chapter *Mail Manager*).

In prefetch mode however, spam messages in quarantine cannot be deleted from the POP3 server directly by means of a client command.

Note - The e-mail client must successfully connect to the POP3 server at least once for the prefetch function to operate properly. This is because Astaro Security Gateway needs to store the name of the POP3 server, the username, and the user's password in a database in order to fetch POP3 messages on behalf of this user. This, however, *cannot* be achieved by configuring POP3 account credentials in the Astaro User Portal (for more information, see [User Portal](#)). The POP3 account credentials in the User Portal are needed for prefetched messages to appear in this user's portal and daily Quarantine Report.

SSL is currently not supported, therefore mails from mail providers such as goog-lemail, which offer SSL-only access, cannot be filtered by the proxy.

Note for fetchmail users: The `TOP` method is not supported to download e-mails from the mail server for security reasons—messages that are received through `TOP` cannot be scanned. It will work if you specify the `fetchall` option (`-a` on command line). For more information please read "RETR or TOP" in the fetchmail manual.

Preferred Charset

In this section you can select a charset different than UTF-8 that will be used for those mail headers, which have been in some way changed by the ASG (e.g. BATV). This is useful if your users who use mail clients which do not understand UTF-8. Generally the default charset for mail headers works fine for every region. Therefore only change this setting if you are sure this is what you want. If in doubt keep the default *UTF-8*.

10.4 Encryption

Ever since e-mail became the primary electronic communication medium for personal and business purposes, a legitimate concern over privacy and authentication has arisen. In general terms, the e-mail format is transmitted in clear text, similar to a postcard which anyone could read. Moreover, as assimilating false

identities is an easy process, it is important for the recipient to be able to tell if the sender is who they claim to be.

Solutions to these issues are typically accomplished with e-mail encryption and digital certificates, where an e-mail message is electronically signed and cryptographically encoded. This assures that the message recipient exclusively can open and view the contents of the e-mail (privacy), verifying the identity of the sender (authentication). In other words, this process negates the idea of being sent an "e-postcard", and introduces a process much like registered or certified mail.

Modern cryptography has two methods to encrypt e-mail: symmetric and asymmetric. Both have become standard methods and are utilized in several types of applications. Symmetric key cryptography refers to encryption methods in which both, the sender and receiver, share the same key.

On the other hand, asymmetric key cryptography (also known as public key cryptography) is a form of cryptography in which each user has a pair of cryptographic keys; a public key, which encrypts data, and a corresponding private or secret key for decryption. Whereas the public key is freely published, the private key will be securely kept by the user.

One drawback with symmetric encryption is that for a sender and recipient to communicate securely, they must agree upon a key and keep it secret between themselves. If they are in different physical locations, they must prevent the disclosure of the secret key during transmission. Therefore, the persistent problem with symmetric encryption is key distribution: how do I get the key to the recipient without someone intercepting it? Public key cryptography was invented to exactly address this problem. With public key cryptography, users can securely communicate over an insecure channel without having to agree upon a shared key beforehand.

The need for e-mail encryption has produced a variety of public key cryptography standards, most notably S/MIME and OpenPGP, both of which are supported by Astaro Security Gateway. S/MIME (*Secure Multipurpose Internet Mail Extensions*) is a standard for asymmetric encryption and the signing of e-mails encapsulated in MIME. It is typically used within a public key infrastructure (PKI) and is based on a hierarchical structure of digital certificates, requiring a trusted instance as Certificate Authority (CA). The CA issues a digital certificate by binding an identity to a pair of electronic keys; this can be seen as a digital counterpart to a traditional identity document such as a passport. Technically speaking, the CA issues a

certificate binding a public key to a particular *Distinguished Name* in the X.500 standard, or to an *Alternative Name* such as an e-mail address.

A digital certificate makes it possible to verify someone's claim that they have the right to use a given key. The idea is that if someone trusts a CA and can verify that a public key is signed by this CA, then one can also be assured that the public key in question really does belong to the purported owner.

OpenPGP (*Pretty Good Privacy*), on the other hand, uses asymmetric encryption typically employed in a *web of trust* (WOT). This means that public keys are digitally signed by other users who, by that act, endorse the association of that public key with the person.

Note - Although both standards offer similar services, S/MIME and OpenPGP have very different formats. This means that users of one protocol cannot communicate with the users of the other. Furthermore, authentication certificates also cannot be shared.

The entire e-mail encryption is transparent to the user, that is, no additional encryption software is required on the client side. Generally speaking, encryption requires having the destination party's certificate or public key on store. For incoming and outgoing messages, e-mail encryption functions as follows:

- By default, outgoing messages from internal users will be scanned, automatically signed, and encrypted using the recipient's certificate (S/MIME) or public key (OpenPGP), provided the S/MIME certificate or OpenPGP public key of the recipient is existent on the ASG.
- Encrypted incoming messages from external users whose S/MIME certificate or OpenPGP public key are known to the ASG will automatically be decrypted and scanned for malicious content. To decrypt the message, the S/MIME key or OpenPGP private key of the internal user must be existent on the ASG.
- Encrypted incoming messages from external users or for internal users unknown to the ASG will be delivered, although they cannot be decrypted and therefore not scanned for viruses or spam. It is then the responsibility of the recipient (internal user) to ensure that the e-mail does not contain any malware, for example, by using a personal firewall.
- Outgoing messages already encrypted on the client side will directly be sent to the recipient if the recipient's S/MIME certificate or OpenPGP public key

are unknown. However, if the recipient's S/MIME certificate or OpenPGP public key are available, the message will be encrypted a second time. Note that pre-encrypted messages cannot be scanned for malicious content.

- Decryption is only possible for incoming e-mails, where "incoming" means that the domain name of the sender's e-mail address must not be part of any SMTP profile. For example, to decrypt a message sent by `jdoe@example.com`, the domain `example.com` must *not* be configured in either the [routing](#) settings or any [SMTP profile](#).
- A summary of the signing/encryption result is written into the subject line of each e-mail. For example, an e-mail that was correctly signed and encrypted with S/MIME, has "(S/MIME: Signed and encrypted)" appended to the subject line.

Note - Adding a footer to messages already signed or encrypted by an e-mail client (e.g., Microsoft's Outlook or Mozilla's Thunderbird) will break their signature and render them invalid. If you want to create digital signatures on the client side, disable the antivirus check footer option. However, if you do not wish to forgo the privacy and authentication of your e-mail communication and still want to apply a general antivirus check footer, consider using the built-in [e-mail encryption](#) feature of Astaro Security Gateway. E-mail encryption done on the gateway means that the footer is added to the message prior to creating the digital signature, thus leaving the signature intact.

10.4.1 Global

On the *Mail Security > Encryption > Global* tab you can configure the basic settings of the e-mail encryption functionality.

Cross Reference - For a comprehensive description of how to use e-mail encryption, see the E-Mail Encryption Guide, which is available at the [Astaro Knowledgebase](#).

Note – Encryption is only working for SMTP, not for POP3.

Before you can use e-mail encryption, you must first create a *Certificate Authority* (CA) consisting of a CA certificate and CA key. The CA certificate can be

downloaded and stored locally. In addition, it can be installed as an external CA (S/MIME Authority) in other units as illustrated in the diagram to enable transparent e-mail encryption between two Astaro Security Gateway units.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options* > *Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

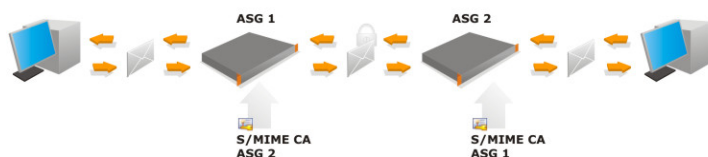


Figure 108 E-mail Encryption: Using Two Astaro Security Gateway Units

Figure 109 E-mail Encryption: Enabling E-mail Encryption

To configure e-mail encryption, proceed as follows:

1. **On the *Global* tab, enable e-mail encryption.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *E-mail Encryption Certificate Authority (CA)* area becomes editable.

2. Create a certificate authority (CA).

Fill out the form in the *Email Encryption Certificate Authority (CA)* area. By default, the form is filled out with the values of the *Management > System Settings > Organizational* tab.

3. Click Save.

The status icon turns green and the following certificates and keys are being created:

- S/MIME CA Certificate
- OpenPGP Postmaster Key

Note that this may take several minutes to complete. If you do not see the fingerprints of the S/MIME CA certificate or the OpenPGP Postmaster key, click the *Reload* button in the upper right corner of WebAdmin. The certificate and the key can be downloaded and locally stored.

Use the *Reset E-mail Encryption System Now* button to reset all settings in the *E-mail Encryption* menu to the factory default configuration.

10.4.2 Options

On the *Encryption > Options* tab you can define the default policy to be used within the public key cryptography framework of Astaro Security Gateway.

The screenshot shows the 'Encryption' configuration window with the 'Options' tab selected. It contains three sections: 'Default policy', 'Automatic extraction of S/MIME certificates', and 'OpenPGP Keyserver'. Each section has a list of options with checkboxes and an 'Apply' button.

Encryption

Global Options Internal Users S/MIME Authorities S/MIME Certificates OpenPGP Public Keys

Default policy

☒ Sign outgoing email
☒ Encrypt outgoing email
☒ Verify incoming email
☒ Decrypt incoming email

These options define the default policy for signing, en- and decrypting email. It is possible to override the default policy on a per-user basis.

Automatic extraction of S/MIME certificates

☒ Enable automatic S/MIME certificate extraction

When this option is enabled, the email encryption system will automatically extract S/MIME certificates from incoming email traffic if the certificates are signed with a valid S/MIME authority.

OpenPGP Keyserver

gpgkeys.mit.edu

Optional Keyserver for OpenPGP. You can append a port number to the hostname, separated with a colon.

Figure 110 E-mail Encryption: Options

Default Policy: Specify your default policy for e-mails in terms of cryptography. These settings can, however, be overwritten by customized settings.

The following actions are available:

- Sign outgoing e-mail
- Encrypt outgoing e-mail
- Verify incoming e-mail
- Decrypt incoming e-mail

Click *Apply* to save your settings.

Note - For encryption to work, the sender must be within the *Internal Users* list. Outgoing e-mails for recipients whose S/MIME certificate or OpenPGP public key are existent on the gateway will be encrypted by default. If you want to disable encryption for these recipients, delete their S/MIME certificates or OpenPGP public keys. If certificates or public keys are unknown to the ASG, e-mails will be sent unencrypted.

Automatic Extraction of S/MIME Certificates

When this option is selected, S/MIME certificates will automatically be extracted from incoming e-mails provided the certificate that is appended to the e-mail is signed by a trusted certificate authority, that is, a CA present on the unit as shown on the *Mail Security > Encryption > S/MIME Authorities* tab. In addition, the time and date of Astaro Security Gateway must be within the certificate's validity period for the automatic extraction of certificates to work. Once a certificate has been successfully extracted, it will appear on the *Mail Security > Encryption > S/MIME Certificates* tab. Note that this may take five to ten minutes to complete. Click *Apply* to save your settings.

OpenPGP Keyserver

OpenPGP keyserver host public PGP keys. You can add an OpenPGP keyserver here. For encrypted incoming e-mails and for outgoing e-mails that shall be encrypted, the ASG will try to retrieve the public key from the given server if the respective public key is yet unknown to the ASG.

10.4.3 Internal Users

For signing and decrypting messages, either the S/MIME key or the OpenPGP private key must be existent on the ASG. On the *Encryption > Internal Users* tab you can create both an individual S/MIME key/certificate and/or OpenPGP key pair for those users for whom e-mail encryption should be enabled.



Figure 111 E-mail Encryption: List of Internal Users

To create an internal e-mail user, proceed as follows:

1. **On the *Internal Users* tab, click *New Email Encryption User*.**
The *Create New User* dialog box opens.

2. Make the following settings:

E-mail Address: Enter the e-mail address of the user.

Full Name: Enter the name of the user.

Signing: The following signing options are available:

- Use Default Policy: The policy from the *Options* tab will be used.
- On: E-mails will be signed using the certificate of the user.
- Off: E-mails will not be signed.

Encryption: The following encryption options are available:

- Use Default Policy: The policy from the *Options* tab will be used.
- On: E-mails will be encrypted using the public key of the recipient.
- Off: E-mails will not be encrypted.

Verifying: The following verification options are available:

- Use Default Policy: The policy from the *Options* tab will be used.
- On: E-mails will be verified using the public key of the sender.
- Off: E-mails will not be verified.

Decryption: The following decryption options are available:

- Use Default Policy: The policy from the *Options* tab will be used.
- On: E-mails will be decrypted using the certificate of the user.
- Off: E-mails will not be decrypted.

S/MIME: Select whether you want to have the S/MIME certificate and key automatically generated by the system or whether you want to upload a certificate in `PKCS#12` format. When uploading the certificate, you must know the passphrase the `PKCS#12` file was protected with. Note that the `PKCS#12` file must both contain the S/MIME key and certificate. Any CA certificate that may be included in this `PKCS#12` file will be ignored.

OpenPGP: Select whether you want to have the OpenPGP key pair consisting of a private key and the public key automatically generated by the system or whether you want to upload the key pair in `ASCII` format. Note that both pri-

vate and public key must be included in one single file and that the file must not contain a passphrase.

Note - If you configure both S/MIME and OpenPGP for an individual user, e-mails sent by this user will be signed and encrypted using S/MIME.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new user appears on the *Internal Users* list.

Use the status icon to turn the usage of one or both keys off without having to delete the key(s).

Note - For security reasons, the files offered for download only contain the S/MIME certificate and the OpenPGP public key, respectively. The S/MIME key and the OpenPGP private key cannot be downloaded from the system. To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options > Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

10.4.4 S/MIME Authorities

On the *Encryption > S/MIME Authorities* tab, import the certificate (i.e., the public key) of an external *Certification Authority* (CA) you trust. That way, all incoming e-mails whose certificates were signed by this CA will be trusted, too. If you have selected the *Automatic Extraction of S/MIME Certificates* option on the *Mail Security > Encryption > Options* tab, certificates signed by a CA listed here will be extracted automatically and placed on the *Mail Security > Encryption > S/MIME Certificates* tab.

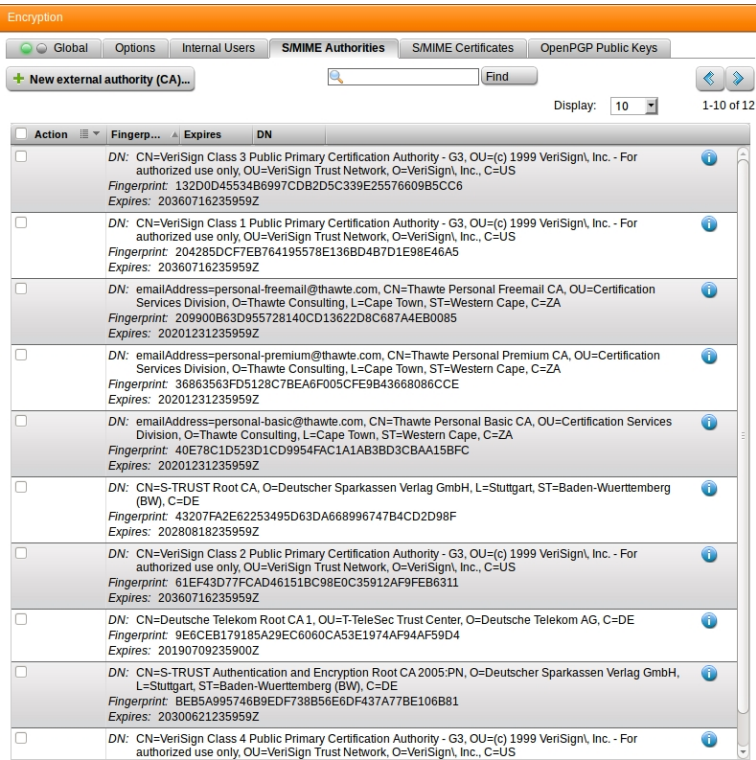


Figure 112 E-mail Encryption: List of S/MIME Authorities

To import an external S/MIME Authority, proceed as follows:

1. **On the *S/MIME Authorities* tab, click *New External Authority (CA)*.**
The *Add External Authority* dialog box opens.
2. **Make the following settings:**
Format: Select the format of the CA. You can choose between the following formats:
 - der (binary)
 - pem (ASCII)

Note - Microsoft Windows operating systems use the `cer` file extension for both `der` and `pem` formats. You must therefore determine in advance whether the certificate you are about to upload is in binary or ASCII format. Then select the format from the drop-down list accordingly.

Certificate: Click on the Folder icon to open the *Upload File* dialog box. Select the file and click *Start Upload*.

Comment (optional): Add a description or other information.

3. **Click Save.**

The CA appears on the *S/MIME Authorities* list.

Astaro Security Gateway ships with several public keys of commercial CA pre-installed to facilitate e-mail encryption between your company and your communication partners who maintain a PKI based on those CAs. The following links point to URLs of notable root certificates:

- [Trustcenter](#)
- [S-TRUST](#)
- [Thawte](#)
- [VeriSign](#)
- [GeoTrust](#)

In addition, you can install the CA of another Astaro Security Gateway unit, thus enabling transparent e-mail encryption between two Astaro Security Gateway units.

10.4.5 S/MIME Certificates

On the *Encryption > S/MIME Certificates* tab, you can import external S/MIME certificates. E-mails for recipients whose certificates are listed here will automatically be encrypted. If you want to disable encryption for a particular recipient, simply delete its certificate from the list.

Note - When you upload an S/MIME certificate manually, messages from the e-mail address associated with the certificate are always trusted, although no CA

certificate is available that may identify the person noted in the certificate. That is to say, manually uploading an S/MIME certificate labels the source as trusted.

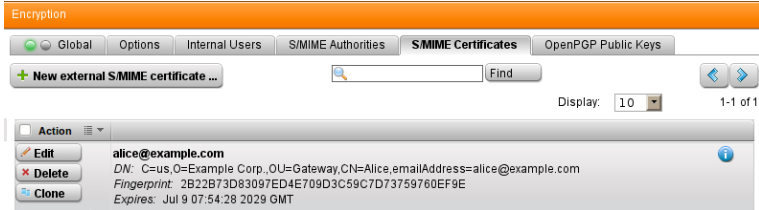


Figure 113 E-mail Encryption: List of S/MIME Certificates

To import an external S/MIME certificate, proceed as follows:

1. **On the *S/MIME Certificates* tab, click *New External S/MIME Certificate*.**

The *Add S/MIME Certificate* dialog box opens.

2. **Make the following settings:**

Format: Select the format of the certificate. You can choose between the following formats:

- pem (ASCII)
- der (binary)

Note - Microsoft Windows operating systems use the `cer` file extension for both `der` and `pem` formats. You must therefore determine in advance whether the certificate you are about to upload is in binary or ASCII format. Then select the format from the drop-down list accordingly.

Certificate: Click on the folder icon to open the *Upload File* dialog box. Select the file and click *Save*.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new S/MIME certificate appears on the *S/MIME Certificates* list.

10.4.6 OpenPGP Public Keys

On the *Encryption > OpenPGP Public Keys* tab you can install OpenPGP public keys. Files must be provided in `.asc` format. The upload of entire keyrings is supported.

Note - Do not upload a keyring that is protected by a passphrase.

All public keys included in the keyring will be imported and can be used to encrypt messages. E-mails for recipients whose public keys are listed here will automatically be encrypted. If you want to disable encryption for a particular recipient, simply delete its public key from the list.

Note - Only one e-mail address per key is supported. If there are multiple addresses attached to a key, only the "first" one will be used (the order may depend on how OpenPGP sorts addresses). If the key you want to import has several addresses attached, you must remove the unneeded addresses with OpenPGP or other tools prior to importing the key into Astaro Security Gateway.



Figure 114 E-mail Encryption: List of OpenPGP Public Keys

To import an OpenPGP public key, proceed as follows:

1. **On the *OpenPGP Public Keys* tab, click *Import Keyring File*.**
The *Import OpenPGP Keyring File* dialog box opens.
2. **Upload the OpenPGP key(s).**
Click the Folder icon to open the *Upload File* dialog window. Select the file and click *Start Upload*.

The key or, if the file contains several keys, a list of keys is displayed.

3. Select one or more keys and click *Import Selected Keys*.

The key(s) appear(s) on the *OpenPGP Public Keys* list.

Note - An e-mail address must be attached to the key. Otherwise the installation will fail.

10.5 Quarantine Report

Astaro Security Gateway features an e-mail quarantine containing all messages (SMTP and POP3) that have been blocked and redirected to the quarantine for various reasons. This includes messages waiting for delivery as well as messages that are infected by malicious software, contain suspicious attachments, are identified as spam, or simply contain unwanted expressions.

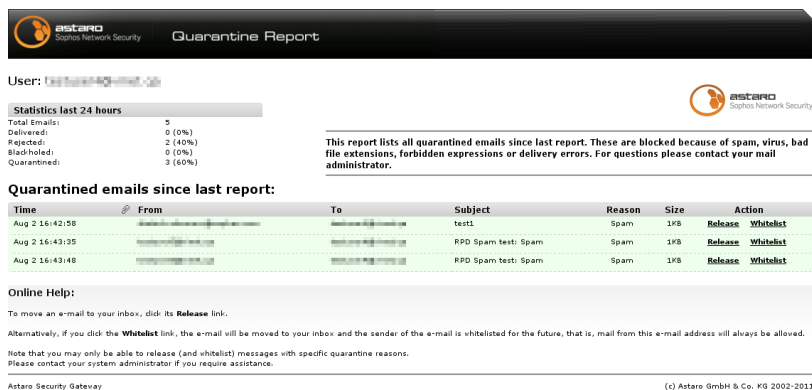


Figure 115 Quarantine Report of Astaro Security Gateway

To minimize the risk of messages being withheld that were quarantined mistakenly (so-called *false positives*), Astaro Security Gateway sends a daily Quarantine Report to the users informing them of messages in their quarantine. If users have several e-mail addresses configured, they will get an individual Quarantine Report for each e-mail address. This also applies if a user has additional POP3 accounts configured in his [User Portal](#), provided the POP3 proxy of Astaro Security Gateway is in *prefetch* mode, which allows the prefetching of messages from a POP3 server and storing them in a local database. In a Quarantine Report a

whitelist the sender for the future.

The following list contains some more information about the Quarantine Report:

- Quarantine Reports are only sent to those users whose e-mail address is part of a domain contained in any SMTP profile. This includes the specification in the *Domains* box on the *SMTP > Routing* tab as well as the specifications in the *Domains* box of any SMTP Profile.
- If the POP3 *prefetch* option is disabled, quarantined messages sent to this account will not appear in the Quarantine Report. Instead, each user will find the typical Astaro POP3 blocked message in his inbox. It is therefore not possible to release the message by means of the Quarantine Report or the User Portal. The only way to deliver such an e-mail is to download it in *zip* format from the *Mail Manager* by the administrator.
- Only spam e-mails can be released from the quarantine. Messages quarantined for other reasons, for example because they contain viruses or suspicious file attachments, can only be released from the quarantine by the administrator in the Mail Manager of Astaro Security Gateway. In addition, users can also review all of their messages currently held in quarantine in the Astaro User Portal.
- If a spam e-mail has multiple recipients, as is the case with mailing lists, when any one recipient releases the e-mail, it is released for that recipient only, provided the e-mail address of the mailing list is configured on the system. Otherwise the e-mail will be sent to all recipients simultaneously. For more information, see the *Define internal mailing lists* option on the *Mail Security > Quarantine Report > Exceptions* tab.
- E-mails sent to an SMTP e-mail address for which no user is configured in Astaro Security Gateway can be released (but not whitelisted) from the Quarantine Report or in the Mail Manager by the administrator. However, as this user is not configured, no access to the User Portal is possible.
- Spam e-mails sent to mailing lists cannot be whitelisted.
- Some e-mail clients do not encode the header of an e-mail correctly, which may result in an awkward representation of the e-mail in the daily Quarantine Report.

10.5.1 Global

On the *Quarantine Report > Global* tab you can define at what time the daily Quarantine Report shall be sent and write a message text that will appear in the Quarantine Reports.

The screenshot shows the 'Quarantine Report' configuration window with the 'Global' tab selected. The window has a title bar 'Quarantine Report' and three tabs: 'Global' (active), 'Exceptions', and 'Advanced'. Below the tabs, there is a 'Quarantine Report status' section with a green status icon and a 'Disable' button. The 'Time to send report' section contains two time pickers: 'Time: 07:00' and 'Time: 16:00'. A checkbox labeled 'Send additional report' is checked. To the right of these pickers is a text box explaining that reports are generated on-demand and that SMTP reports are always generated if there is content to report. Below this is an 'Apply' button. The 'Customizable message text' section contains a text area with a pre-filled message: 'This report lists all quarantined emails since last report. These are blocked because of spam, virus, bad file extensions, forbidden expressions or delivery errors. For questions please contact your mail administrator.' To the right of the text area is a text box explaining that this text can contain contact details of the system administrator. Below this is another 'Apply' button.

Figure 116 Quarantine Report: Enabling the Quarantine Report

To edit the Quarantine Report settings, enable the Quarantine Report: You can either click the status icon or the *Enable* button. The status icon turns green.

Time to Send Report

Here you can define when the daily Quarantine Report will be sent. Select the time using the drop-down lists and click *Apply*.

You can also send an additional report. For this, select the checkbox *Send Additional Report*, set the time, and click *Apply*.

Customizable Message Text

Here you can customize the text which forms the introduction of the Quarantine Report. Change the message text according to your needs and click *Apply*.

Note – It is not possible to use HTML tags in the customizable message text box.

Note – Customization is not possible when using a home use license.

10.5.2 Exceptions

On the *Quarantine Report > Exception* tab you can define a skiplist of e-mail addresses that should be exempt from receiving daily Quarantine Reports.

The screenshot shows the 'Quarantine Report' window with the 'Exceptions' tab selected. It contains two sections: 'Skipping Quarantine Reports' and 'Define internal mailing lists'. Each section has a text input field for patterns and an 'Apply' button. The 'Skipping Quarantine Reports' section has a pattern of '*@example.com'. The 'Define internal mailing lists' section has a pattern of 'newsletter@example.com'. Both sections include explanatory text about how these patterns are used.

Quarantine Report

Global Exceptions Advanced

Skipping Quarantine Reports

Skip address patterns

*@example.com

In **Skip Address patterns**, define for which internal email address patterns the Quarantine Report will NOT be sent.

Apply

Define internal mailing lists

Mailing list address patterns

newsletter@example.com

In **Mailing list patterns**, define which internal email address patterns are distribution lists. When a user wants to release a message to a recipient which matches one of these patterns, he is asked for an alternate address where to deliver it to. This avoids releasing messages to the whole mailing list. Messages to mailing lists can also be released several times.

Apply

Figure 117 Quarantine Report: Exceptions

Skipping Quarantine Reports

Here you can configure internal e-mail addresses for which no quarantine notifications should be sent. Users whose e-mail addresses are listed here will not receive daily Quarantine Reports. You can enter full e-mail addresses or use an asterisk (*) as wildcard, for example `*@example.com`.

Note - The skiplist only applies for the SMTP Quarantine Report. If there is a POP3 account specified for the respective user, the POP3 Quarantine Report will be sent nonetheless.

Define Internal Mailing Lists

If the e-mail address of a mailing list is configured in the *Mailing List Address Patterns* box (e.g., `newsletter@example.com`) and a spam message sent to this mailing list was detected and redirected to the e-mail quarantine, the Quarantine Report of all recipients included in this mailing list will contain a link to this spam message. Thus, each recipient can release this spam message individually by entering his e-mail address in a user prompt that appears once the recipient has clicked the *Release* link in the Quarantine Report.

Note - Mailing lists cannot be whitelisted in the Quarantine Report or the User Portal.

Alternatively, you could enter the e-mail address of that particular mailing list as an additional e-mail address in a local user's profile; this user becoming some sort of a mail manager. Then only this user's Quarantine Report will contain a link to the spam message that was sent to the mailing list. Clicking the *Release* link will deliver the spam message to all recipients of that mailing list at once.

Note - If the e-mail address of a mailing list is configured as an additional e-mail address in a user's profile, no recipient included in that mailing list gets displayed the links to spam messages that were sent to this mailing list.

However, if the e-mail address of a mailing list is both configured as an additional e-mail address in a user's profile and in the *Mailing List Address Patterns* box, then the *Release* link in that user's Quarantine Report will open a user prompt. The user is then to decide who is going to receive the spam mail by manually entering the respective e-mail address(es) to forward the spam message to.

Finally, if the e-mail address of a mailing list is neither configured as an additional e-mail address in a user's profile nor as a mailing list address pattern, a spam message sent to the mailing list is handled like a normal e-mail, meaning that if any one recipient releases the spam mail, it will be sent to all recipients of the mailing list.

To sum up, whenever the e-mail address of a mailing list is configured as a mailing list address pattern, each user having a link to the spam message in his Quar-

antine Report is prompted to enter an e-mail address to release the spam message to.

10.5.3 Advanced

On the *Quarantine Report > Advanced* tab you can configure an alternative host-name and port number for the *Release* links contained in daily Quarantine Reports. Additionally, you can change the release options for spam e-mails.

The screenshot shows the 'Quarantine Report' window with the 'Advanced' tab selected. The 'Advanced Quarantine Report options' section contains a 'Hostname' field with the value 'Gateway' and a 'Port' field with the value '3840'. To the right of these fields is a note: 'The **Hostname** and **Port** are used for the release links contained in the Quarantine Report. You can also specify the **Allowed Networks** that may connect to the release service.' Below this is an 'Allowed Networks' list box containing 'Internal (Network)' and several 'DND' entries. An 'Apply' button is at the bottom right of this section. The 'Release options' section below it contains a list of checkboxes: 'Malware' (unchecked), 'Spam' (checked), 'Expression' (checked), 'File Extension' (unchecked), 'Unscannable' (checked), 'MIME-Type' (unchecked), and 'Other' (checked). To the right of these checkboxes is a note: 'Select which types of quarantined mail can be released by users. These settings are also valid for the End-User Portal.' An 'Apply' button is at the bottom right of this section.

Figure 118 Quarantine Report: Advanced Options

Advanced Quarantine Report Options

Hostname: By default, this is the gateway's hostname as given on the *Management > System Settings > Hostname* tab. The quarantine report, for example, which is sent by the gateway, contains hyperlinks a user can click to release messages from the e-mail quarantine. By default, these links point to the hostname specified here. If you want to enable users to release their e-mails from across the Internet, it might be necessary to enter an alternative hostname here that can be publicly resolved.

Port: By default, port 3840 is configured. You can change the port to any value in the range from 1024 to 65535.

Allowed Networks: You can also specify the networks that should be allowed to connect to the e-mail release service. By default, only the internal network is selected.

Click *Apply* to save your settings.

Release Options

Here you can select which types of quarantined messages shall be releasable by users. You can choose between the following options:

- Malware
- Spam
- Expression
- File Extension
- Unscannable
- MIME
- Other

Click *Apply* to save your settings.

10.6 Mail Manager

The Mail Manager is an administrative tool to manage and organize all e-mail messages currently stored on the unit. This includes messages waiting for delivery as well as quarantined messages that are infected by malicious software, contain suspicious attachments, are identified as spam, or contain unwanted expressions. You can use the Mail Manager to review all messages before downloading, releasing, or deleting them. The Mail Manager is fully UTF-8 capable.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options* > *Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

10.6.1 Mail Manager Window

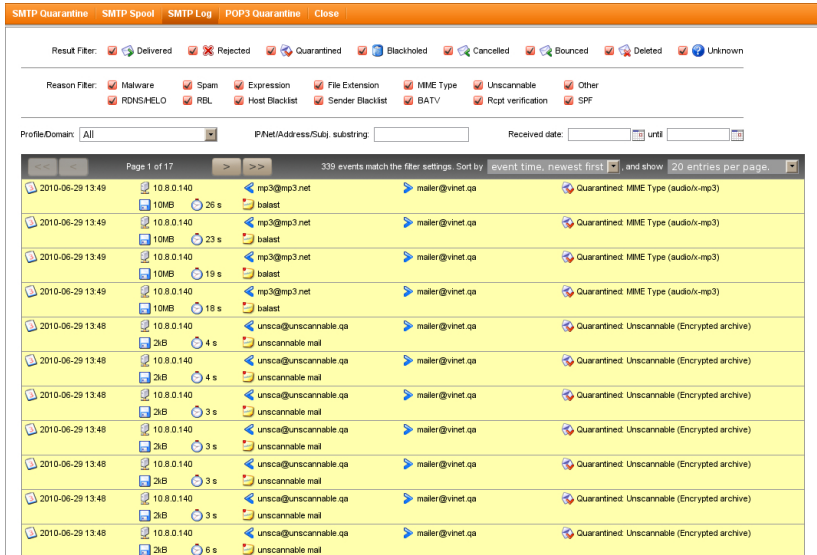


Figure 119 Mail Manager of Astaro Security Gateway

To open the Mail Manager window click the button *Open Mail Manager in New Window* on the *Mail Security > Mail Manager > Global* tab. The Mail Manager is divided into five different tabs:

- **SMTP Quarantine:** Displays all messages that are currently quarantined.
- **SMTP Spool:** Displays all messages currently in `/var/spool`. This may be due to them waiting for delivery or because of an error.
- **SMTP Log:** Displays the delivery log for all messages processed via SMTP.
- **POP3 Quarantine:** Displays all messages fetched via POP3 that are currently quarantined.
- **Close:** Click here to close the Mail Manager window.

10.6.1.1 SMTP/POP3 Quarantine

Messages in SMTP and POP3 Quarantine can be displayed according to their respective quarantine cause:

- Malware
- Spam
- Expression
- File Extension
- MIME Type (SMTP only)
- Unscannable
- Other

Use the checkboxes to select/unselect quarantine causes. Double-click the checkbox of a cause to solely select this cause.

Hint - Double-click a message to view it.

Profile/Domain (SMTP), Accounts (POP3): Select a profile/domain or account to show its messages only.

Sender/Rcpt/Subject Substring: Here you can enter a sender, recipient or subject to search for in the quarantined messages.

Received Date: To only show messages processed during a certain time frame, enter a date or select a date from the calendar icon.

Sort By: Messages can be sorted by date, subject line, sender address, and message size.

And Show: You can choose between displaying 20, 50, 100, 250, 500, and 1000 entries per page and all messages. Note that showing all messages may take a lot of time.

Use the checkbox in front of each message or click a message to select it to apply actions on the selected messages. The following actions are available:

- **Download:** Selected messages will be downloaded.
- **Delete:** Selected messages will be deleted irrevocably.
- **Release:** Selected messages will be released from quarantine.
- **Release and Report as False Positive:** Selected messages will be released from quarantine and reported as false positive to the spam scan engine.

Note that only the administrator can release *all* messages held in quarantine. Users reviewing their messages in the Astaro User Portal can only release messages they are explicitly allowed to. The authorization settings for this can be found on the *Mail Security > Quarantine Report > [Advanced](#)* tab.

Select Global Cleanup Action: Here you find several deletion options that will be applied on messages globally, that is, regardless whether they are selected and/or displayed or not.

Caution - Deleted messages are irrevocable.

10.6.1.2 SMTP Spool

Here you see messages that are either waiting for delivery or have produced an error. The delivery log is also part of the message header. Use the following checkboxes to select only one type of messages for display:

- **Waiting:** Messages waiting for delivery.
- **Error:** Messages that caused an error. If a messages produces an error more than once, please report the case to your Astaro Partner or the Astaro Support Team.

Hint - Double-click a message to view it.

Profile/Domain: Select a profile/domain to show its messages only.

Sender/Rcpt/Subject Substring: Here you can enter a sender, recipient, or subject to search for in the spool messages.

Received Date: To only show messages processed during a certain time frame, enter a date, or select a date from the calendar icon.

Sort By: Messages can be sorted by date, sender address, subject line, and message size.

And Show: You can choose between displaying 20, 50, 100, 250, 500, and 1000 entries per page and all messages. Note that showing all messages may take a lot of time.

Use the checkbox in front of each message or click a message to select it to apply actions on the selected messages. The following actions are available:

- **Download:** Selected messages will be downloaded.
- **Retry:** For selected messages delivery will be retried immediately.
- **Delete:** Selected messages will be deleted irrevocably.
- **Bounce:** Selected messages will be bounced, that is the sender will receive a message that the delivery of their message has been canceled.

Select Global Cleanup Action: Here you find a retry option and several deletion options that will be applied on messages globally, that is, regardless whether they are selected and/or displayed or not.

Caution - Deleted messages are irrevocable.

10.6.1.3 SMTP Log

The *SMTP Log* displays the log messages for all messages processed via SMTP.

Result Filter: Select which type of message will be displayed by selecting the corresponding checkboxes.

- **Delivered:** Successfully delivered messages.
- **Rejected:** Messages rejected by the ASG.
- **Quarantined:** Quarantined messages.
- **Blackholed:** Messages that have been deleted without notification.
- **Canceled:** Messages that have been manually bounced in *SMTP Spool*.
- **Bounced:** Messages that could not be delivered, for example because of false routing settings.
- **Deleted:** Messages that have been manually deleted.
- **Unknown:** Messages whose status is unknown.

Use the checkboxes to select/unselect *Result Filter* items. Double-click an item to solely select this item.

Reason Filter: Use the checkboxes to further filter the message log display.

Hint - Double-click a message log to view it. Click on the server icon of a message to resolve the IP address. An asterisk (*) denotes a successful reverse DNS lookup.

Profile/Domain: Select a profile/domain to show its messages only.

IP/Net/Address/Subj. Substring: Here you can enter an IP address, network address, or subject to search for in the SMTP log messages.

Received Date: To only show messages processed during a certain time frame, enter a date, or select a date from the calendar icon.

Sort By: Messages can be sorted by event time, sender address, and message size.

And Show: You can choose between displaying 20, 50, 100, 250, 500, or 1000 entries per page or all messages. Note that showing all messages may take a lot of time.

10.6.2 Global

In the upper part of the *Mail Manager > Global* tab you can open the Mail Manager by clicking the *Open Mail Manager in New Window* button.

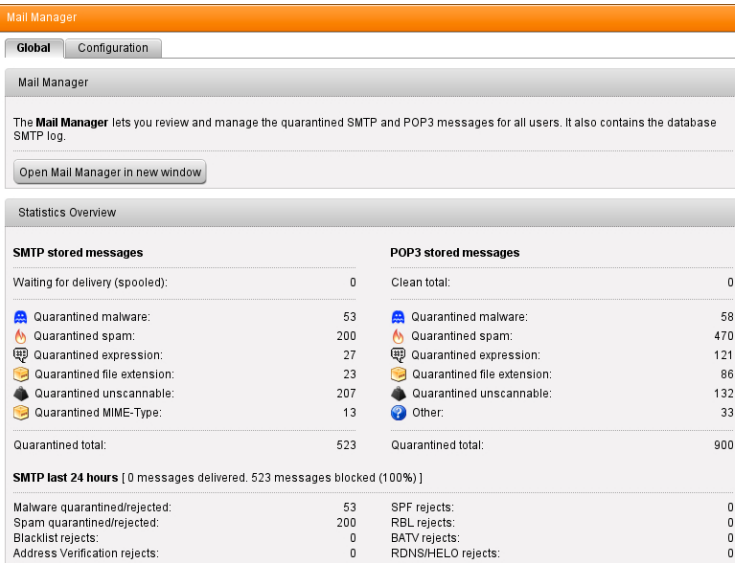


Figure 120 Mail Manager: Overview

In the lower part, the *Statistics Overview* area provides an overview of all messages currently stored on the unit. Data is divided into messages that were delivered via the SMTP or POP3 protocol. For both types, the following information is displayed:

- **Waiting for Delivery (Spooled)** (SMTP only): Mails that are currently in spool, for example because they were being scanned and could not be delivered yet.
- **Clean total** (POP3 only): Mails that have been prefetched by the unit and have not yet been collected by a client/user.
- **Quarantined Malware**: The total of messages that contain malware, such as viruses or other harmful content.
- **Quarantined Spam**: The total of messages that were identified as spam.
- **Quarantined Expression**: The total of messages that were diverted to the quarantine because they contain forbidden expressions.
- **Quarantined File Extension**: The total of messages held in quarantine because they contain suspicious attachments (identified by their file extension).

- **Quarantined Unscannable:** The total of messages held in quarantine because it could not be scanned.
- **Quarantined MIME Type** (SMTP only): The total of messages held in quarantine because they contain MIME types that are to be filtered according to the SMTP settings.
- **Quarantined Total:** The total of messages that are held in quarantine.

Note - The numbers for *Waiting for Delivery* represent a real-time snapshot for SMTP messages. However, for POP3 messages, the numbers presented are the accumulation of data since the last time prefetching was enabled.


Below you see a short statistic for SMTP quarantining and rejections of the last 24 hours:

- **Malware Quarantined/Rejected:** Messages quarantined/rejected because they contain harmful content.
- **Spam Quarantined/Rejected:** Messages quarantined/rejected because they have been identified as spam.
- **Blacklist Rejects:** Messages rejected because the sender is on a blacklist.
- **Address Verification Rejects:** Messages rejected because the sender address could not be verified.
- **SPF Rejects:** Messages rejected because sending host is not allowed.
- **RBL Rejects:** Messages rejected because the sender is on a real time black-hole list.
- **BATV Rejects:** Messages rejected because BATV tag could not be validated.
- **RDNS/HELO Rejects:** Messages rejected due to invalid HELO or missing RDNS entries.

Whether there are any rejects depends on your settings in *Mail Security > SMTP*.

10.6.3 Configuration

On the *Mail Manager > Configuration* tab you can configure how long the database log will be kept and after how many days quarantined messages are to be deleted from the quarantine. Any logs and messages that are older than the number of days in the expiration settings will be deleted automatically.

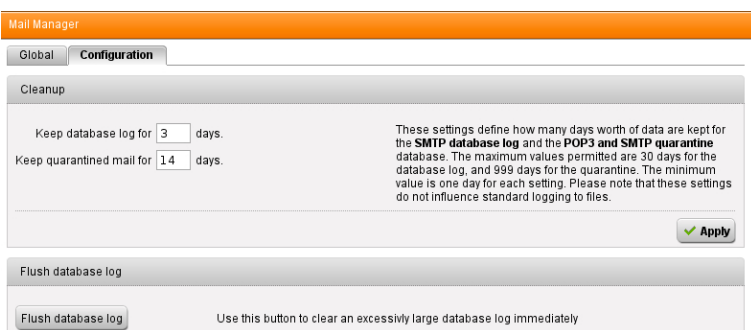

The screenshot shows the 'Mail Manager' interface with the 'Configuration' tab selected. Under the 'Cleanup' section, there are two input fields: 'Keep database log for' with a value of '3' and 'Keep quarantined mail for' with a value of '14'. To the right of these fields is a text box explaining that these settings define how many days worth of data are kept for the SMTP database log and the POP3 and SMTP quarantine database, with maximum values of 30 days for the database log and 999 days for the quarantine. Below the input fields is an 'Apply' button. At the bottom of the configuration area is a 'Flush database log' button and a note: 'Use this button to clear an excessively large database log immediately'.

Figure 121 Mail Manager: Configuration

The default settings are as follows:

- Database log will be deleted after three days. Maximum number permitted: 30 days.
- Quarantined messages will be deleted after 14 days. Maximum number permitted: 999 days.

The minimum number of days permitted for both database log and quarantine is one day.

Flush Database Log

This option is useful if your database log has accumulated an immense amount of data to clear the log immediately. That way you do not have to wait for the normal cleanup action to apply.

1 1 Wireless Security

The *Wireless Security* menu allows you to configure and manage wireless access points for your Astaro Security Gateway, the corresponding wireless networks, and the clients which use wireless access. The access points are automatically configured on your ASG, so there is no need to configure them individually. The communication between the ASG and the access point, which is used to exchange the access point configuration and status information, is encrypted using AES.

Important – When the lights of your access point blink furiously, do not disconnect it from power! Furiously blinking lights mean that a firmware flash is currently in progress. A firmware flash takes place for example after an ASG system update that comes with a Wireless Security update.

The following topics are included in this chapter:

- [Global Settings](#)
- [Wireless Networks](#)
- [Access Points](#)
- [Wireless Clients](#)

The Wireless Security overview page gives you general information on connected access points, their status, connected clients and wireless networks.

Live Log

You can click the *Open Wireless Security Live Log* button to see detailed connection and debug information for the access points and clients trying to connect.

1 1.1 Global Settings

On the *Wireless Security > Global Settings* pages you can enable Wireless Security, configure network interfaces for Wireless Security and WPA/WPA2 enterprise authentication.

11.1.1 Global Settings

On the *Wireless Security > Global Settings > Global Settings* tab you can enable or disable Wireless Security.

Global Settings

Global Settings Advanced

Wireless Security status ⚠️ Abort enable

Initial Setup

Attention: This is the first time you are enabling Wireless Security. To ease your first steps, a basic configuration will be created. You might consider taking notes before pressing the "Apply" button, but you can always change anything later.

The following configuration will be added to your system:

- A wireless "Guest" network with the following credentials:
Network Name: AstaroGuest
Network SSID: AstaroGuest
Encryption: WPA2 Personal using AES
PSK: aesEGvCJD
- A network interface on the wireless network with the IP address 172.16.28.1/24
- A DHCP server, listening on the wireless network, enabling DHCP for wireless clients
- The wireless network will be added to DNS->Allowed Networks, allowing DNS for wireless clients
- A NAT/masquerading rule, enabling wireless clients to access other networks
- A packetfilter rule, giving wireless clients the permission to use HTTP/HTTPS

This configuration will only be added once, but will stay active even if you disable Wireless Security. You can skip the creation of automatic configuration by ticking the checkbox below.

☐ Skip automatic configuration

Access Control

Allowed Interfaces

Select the interfaces which are used to connect your wireless access points to your system. When an access point is plugged into your network, it will automatically connect to the system and will be listed as a "Pending Access Points" on the "Access Points" page.

✓ Apply

Figure 122 Wireless Security: Global Settings

To enable Wireless Security do the following:

1. **On the *Global Settings* tab, enable Wireless Security.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Access Control* area becomes editable.

When enabling Wireless Security for the first time, the *Initial Setup* section appears. It shows the configuration which will be created: A separate wireless "Guest" network using WPA2 personal encryption with DHCP for wireless clients, which will be allowed to use DNS on the ASG and the *Web*

Surfing service. The pre-shared key is auto-generated and will only be shown in this section. This initial configuration is intended as a template. You can edit the settings at any time on the *Wireless Security > Wireless Networks* page.

Skip Automatic Configuration: You can also skip the initial setup by selecting this option. You will then need to configure the wireless settings manually.

2. **Select a network interface for the access point.**

Click the folder icon in the *Allowed Interfaces* section to select a configured interface where the access point is going to be plugged in.

3. **Click *Apply*.**

Your settings will be saved. The status icon turns green to indicate that Wireless Security is active.

You can now continue by plugging the access point into the configured network interface. If you decided to skip the automatic configuration, proceed the configuration on the *Wireless Networks* page.

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

As soon as you plug in an access point it will automatically connect to the system. Newly connected, unconfigured access points are listed as *Pending Access Points* on the *Access Points* page.

11.1.2 Advanced

On the *Wireless Security > Global Settings > Advanced* tab you can configure your access points to use WPA/WPA2 enterprise authentication or enable the usage of VLAN.

Enterprise Authentication

For that, you need to provide some information of your RADIUS server. Note that the AP(s) do not communicate with the RADIUS server for authentication but only the ASG. Port 414 is used for the RADIUS communication between the ASG and the AP(s).

To use WPA/WPA2 enterprise authentication, make the following settings:

RADIUS Server: Select or create a server where clients are to authenticate themselves, e.g. your Active Directory server.

RADIUS Port (optional): The default RADIUS port 1812 is selected. You can change the port if necessary.

RADIUS Secret: Enter the RADIUS passphrase which is needed by the access point to be able to communicate with the RADIUS server.

Repeat Secret: Repeat the RADIUS passphrase here for security reasons.

Click *Apply* to save your settings.

VLAN Settings

This section allows you to enable the usage of VLAN for your wireless network and your access points (AP). VLAN is disabled by default.

VLAN setups are useful for example if you want your access points to be inside the same network although being connected to different switches or ASG network interfaces.

To introduce the usage of VLAN for your access points in your network, keep to the following steps:

1. Enable VLAN and set the VLAN ID.
2. Connect the AP to the ASG using standard LAN for about at least a minute. This is necessary for the AP to get its configuration. Connecting it via VLAN from the beginning, the AP would not know of being in a VLAN and therefore would not be able to connect to the ASG to get its configuration.
3. After having received its configuration, connect the AP to its intended VLAN, e.g. a switch.

Note that you need to do step 2 and 3 for every access point that you want to use the VLAN.

Note – When VLAN tagging is configured, the AP will try DHCP on the configured VLAN for 60 seconds. If no IP address is received during that time, the AP will try DHCP on the regular LAN as a fallback.

VLAN Tagging: To enable VLAN, select *Enabled* from the drop-down list.

AP VLAN ID: Enter the ID of the VLAN the access point should use. Do not use the VLAN tags 0 and 1 as they usually have a special meaning on networking hardware like switches, and 4095 is reserved by convention.

Click *Apply* to save your settings. The connected access points receive their configuration or a configuration update, respectively. After that, APs and wireless clients connected to wireless networks with *Bridge to AP LAN* use the AP VLAN ID for communication. However, you can have single or all wireless networks use a VLAN ID different from this VLAN by setting the option *Bridge to VLAN* on the *Wireless Networks* page for the respective wireless networks.

If VLAN tagging is configured but the AP cannot contact the ASG via VLAN, the AP will reboot itself and try again after receiving the configuration.

Note – If you disable VLAN, all wireless networks using the option *Bridge to VLAN* will be reset to *Bridge to AP LAN*.

11.2 Wireless Networks

On the *Wireless Security > Wireless Networks* page you can define your wireless networks, such as their SSID and encryption method. Moreover, you can define whether the wireless network should have a separate IP address range or be bridged into the LAN of the access point.

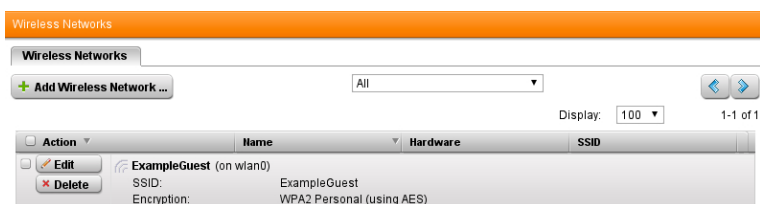


Figure 123 Wireless Security: Wireless Networks

To define a new wireless network, do the following:

1. **On the *Wireless Networks* page, click *Add Wireless Network*.**
The *Add Wireless Network* dialog box opens.
2. **Make the following settings:**
Network Name: Enter a descriptive name for the network.

Network SSID: Enter the Service Set Identifier (SSID) for the network which will be seen by clients to identify the wireless network. The SSID may consist of 1-32 ASCII printable characters¹. It must not contain a comma and must not begin or end with a space.

Encryption Mode: Select an encryption mode from the drop-down list. Default is *WPA 2 Personal*. For security reasons, it is recommended to not use WEP unless there are clients using your wireless network that do not support one of the other methods. When using an enterprise authentication method, you also need to configure a RADIUS server on the *Global Settings > Advanced* tab.

Passphrase/PSK: Only available with *WPA/WPA2 Personal* encryption mode. Enter the passphrase to protect the wireless network from unauthorized access and repeat it in the next field. The passphrase may consist of 8-63 ASCII printable characters.

Algorithm: Only available with WPA/WPA2. Select an encryption algorithm which can be either *AES* or *TKIP & AES*.

128-bit WEP Key: Only available with *WEP* encryption mode. Enter a WEP key here that exactly consists of 26 hexadecimal characters.

Client Traffic: Select a method how the wireless network is to be integrated into your local network.

- **Separate Zone** (default): The wireless network is handled as a separate network, having an IP address range of its own.

Note – When switching an existing *Separate Zone* network to *Bridge to AP LAN* or *Bridge to VLAN*, already configured WLAN interfaces on the ASG will be disabled and the interface object will become *unsigned*. However, you can assign a new hardware interface to the interface object by editing it and thus re-enable it.

- **Bridge to AP LAN:** You can also bridge the wireless network into the

¹http://en.wikipedia.org/wiki/ASCII#ASCII_printable_characters

network of the access point, that means that the wireless clients share the same IP address range.

Note – If VLAN is enabled, the wireless clients will be bridged into the VLAN network of the access point.

- **Bridge to VLAN:** If VLAN is enabled, you can decide to have this wireless network's traffic bridged to a VLAN of your choice. This is useful when you want the access points to be in a common network separate from the wireless clients.

Bridge to VLAN ID: Enter the VLAN ID of the network that the wireless clients should be part of.

Client VLAN ID: Select how the VLAN ID is defined:

- **Static:** Uses the VLAN ID defined on the *Global Settings > Advanced* page.
- **RADIUS & Static:** Uses the VLAN ID delivered by your RADIUS server: When a user connects to one of your wireless networks and authenticates at your RADIUS server, the RADIUS server tells the access point what VLAN ID to use for that user. Thus, when using multiple wireless networks, you can define per user who has access to which internal networks. If a user does not have a VLAN ID attribute assigned, the VLAN ID defined on the *Global Settings > Advanced* page will be used.

Client Isolation: Clients within a network normally can communicate with one another. If you want to prevent this, for example in a guest network, select *Enabled* from the drop-down list.

Hide SSID: Sometimes you want to hide your SSID. Select *Yes* from the drop-down list to do so.

Comment (optional): Add a description or other information.

3. **Click Save.**

Your settings will be saved and the wireless network appears on the *Wireless Networks* list.

Using *Separate Zone*, for each wireless network a corresponding hardware object, e.g. *wlan0*, is being created in the background. With it, you can create a network

interface and define the wireless network's IP address range. This network interface can then be used in various configurations of your ASG. In particular, you may want to create a DHCP server, firewall rules, and masquerading rules for the wireless network.

1 1.3 Access Points

The *Wireless Security > Access Points* pages provide an overview of the access points (AP) known to the system. You can edit AP attributes, delete or group APs and assign wireless networks to APs or AP groups.

Types of Access Points

Currently, Astaro provides three different access points:

- AP 10: standards 802.11b/g/n, 2.4 GHz band
 - AP 30: standards 802.11b/g/n, 2.4 GHz band
 - AP 50: standards 802.11a/b/g/n, 2.4/5 GHz dual-band/dual-radio
- There are two different AP 50 models available where the available channels differ:

- FCC regulatory domain (mainly US): channels 36, 40, 44, 48
- ETSI regulatory domain (mainly Europe): channels 1–13, 36, 40, 44, 48

Note that the country setting of an AP regulates the available channels to be compliant with local law.

1 1.3.1 Overview

The *Wireless Security > Access Points > Overview* page provides an overview of access points (AP) known to the system. The Astaro Security Gateway distinguishes between active, inactive and pending APs. To make sure that only genuine APs connect to your network, APs need to be authorized first.

Tip – All three sections of this page can be collapsed and re-opened by clicking the symbol on the right of the section header.

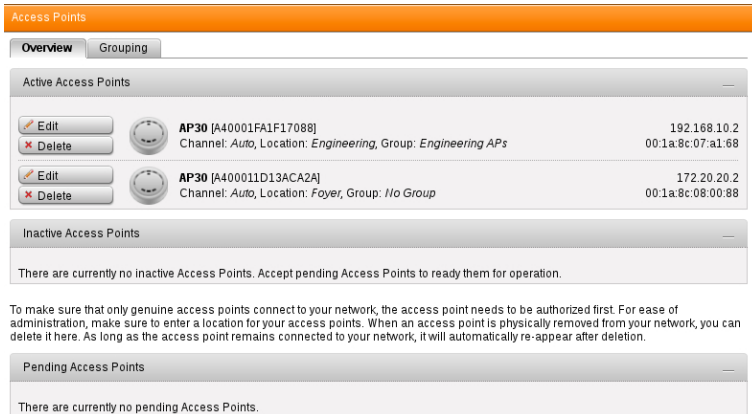


Figure 124 Wireless Security: Access Points

For ease of administration, you can enter a location for each AP. You can also change the channel here. When leaving the channel on *Auto*, the AP will automatically transmit on the least used channel. Click the *Edit* button to make changes on an AP (see *Pending Access Points* below).

When an AP is physically removed from your network, you can delete it here by clicking the *Delete* button. As long as the AP remains connected to your network, it will automatically re-appear in *Pending* state after deletion.

Note – A configuration change needs approximately 15 seconds until all interfaces are reconfigured.

Active Access Points

Here, APs are listed that are connected, configured, and running.

Inactive Access Points

Here, APs are listed that have been configured in the past but are currently not connected to the ASG. If an AP remains in this state for more than five minutes,

please check the network connectivity of the AP and the configuration of your system. A restart of the Wireless Security service will erase *Last Seen* timestamps.

Pending Access Points

Here, APs are listed that are connected to the system but not yet authorized. To authorize an access point, do the following:

1. **Click the *Accept* button of the respective access point.**

The *Edit Device Location* dialog box opens.

2. **Make the following settings:**

Location (optional): Enter a location to easily identify the AP in your network.

Country: Select the country where the AP is located.

Important – The country code regulates which channels will be available for transmit. To comply with local law, always select the correct country (see also chapter *Access Points*).

Channel 2.4 GHz: You can keep the default setting *Auto* which will automatically select a channel for transmit. Or you can select a fix channel.

Channel 5 GHz: (Only available with AP 50.) You can keep the default setting *Auto* which will automatically select a channel for transmit. Or you can select a fix channel.

Group (optional): You can organize your APs in groups. If a group has been created before, you can select it from the drop-down list. Otherwise select *New Group* and enter a name for the group into the appearing *Name* text box.

3. **Click *Save*.**

The now authorized access point will be immediately displayed in one of the above sections, depending on whether it is currently active or not.

11.3.2 Grouping

On the *Wireless Security > Access Points > Grouping* page you can manage access points (APs) in different ways: First, you can assign wireless networks to your access points, so that each access point broadcasts only dedicated wireless

networks. This is useful if you have, for example, a company wireless network that should only be broadcasted in your offices, and a guest wireless network that should only be broadcasted in public parts of your building.

Second, you can group access points. Those groups can also be assigned wireless networks.

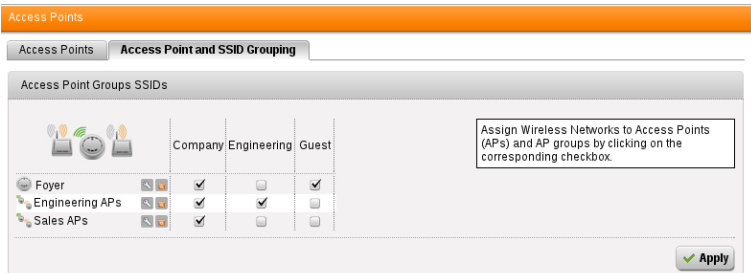


Figure 125 Wireless Security: Grouping Access Points and SSIDs

The page shows a matrix of wireless networks, access points, and access point groups (if existent) and their relations to each other.

There is an Edit and a Recycle Bin icon behind every AP or AP group. The Edit icons can be used to change attributes of an AP or group. Clicking a Recycle Bin icon deletes a group or removes an access point, respectively.

You can click on the name of a wireless network to edit its settings.

Assigning Networks to APs

To assign a wireless network to an AP or AP group, select the respective checkbox and click *Apply*. An AP (or all APs of a group) will broadcast all wireless networks that are assigned to them.

You can also change the AP's location or its channel via the *Edit* dialog window.

Creating and Using Groups

To create an AP group, click the Edit icon of an AP. From the *Group* drop-down list select *New Group* and enter a name into the *Name* field. Click *Save*. The new group appears in the AP's list and the AP disappears from the list as it is now part of that group.

Tip – You can access the *Edit* dialog window also by clicking the name of an AP or a group.

You can add more APs to a group by clicking the *Edit* icon of an AP and selecting the respective group from the *Group* drop-down list.

To remove an AP from a group, click the *Edit* icon of the respective group and click the Recycle Bin icon in front of the AP you want to remove from that group.

You can also rename groups via the *Edit* dialog window.

1 1.4 Wireless Clients

The *Wireless Security > Wireless Clients* page gives you an overview of clients that are currently connected to an access point or have been connected in the past.

Wireless Clients

Wireless Client List

	Name	MAC	Vendor	IP	Last seen
	iPhone	00:1f:f3:92:c9:9d	Apple, Inc	172.16.20.5	online
	notebook	00:1c:f0:ed:68:40	D-Link Corporation	172.16.20.6	2010-11-25 14:53:07

Figure 126 Wireless Security: Clients

As not all clients transmit their name you can give them a name here to ease distinguishing known clients in the overview. If clients transmit their NetBIOS name during the DHCP request, their name is displayed in the table. Otherwise they will be listed as *[unknown]*. You can change the name of (unknown) clients by clicking the Key icon in front of the name. Then enter a name and click *Save*. It takes a few seconds for the change to take effect. Click the Reload button in the upper right corner of WebAdmin to see the name of the client.

You can also delete clients from the table by clicking the recycle bin icon in the first column.

A restart of the Wireless Security service will erase *Last seen* timestamps.

Note – IP addresses assigned to clients can only be displayed if the ASG serves as DHCP server for the corresponding wireless network. Additionally, for static DHCP mappings the IP address 0.0.0.0 is displayed at the moment.

12 Web Application Security

This chapter describes how to configure the web application firewall of Astaro Security Gateway which protects your web servers against attacks and malicious behavior.

The following topics are included in this chapter:

- [Web Application Firewall](#)
- [Certificate Management](#)

12.1 Web Application Firewall

Using the Web Application Firewall (WAF), also known as reverse proxy, Astaro Security Gateway lets you protect your web servers from attacks and malicious behavior like cross-site scripting (XSS), SQL injection, directory traversal, and other potent attacks against your servers. You can define external addresses (virtual servers) which should be translated into the "real" machines in place of using the DNAT rule(s). From there, servers can be protected using a variety of patterns and detection methods. In simpler terms, this area of ASG allows the application of terms and conditions to requests which are received and sent from the web server. It also offers load balancing across multiple targets.

12.1.1 Global

On the *Web Application Firewall > Global* tab you can enable and disable the web application firewall (WAF).

Note – Before you can enable WAF, you need to create at least one virtual web server on the *Virtual Web Servers* tab.

To enable WAF, do the following:

1. **Create at least one real web server and a virtual web server.**

See the sections [Real Web Servers](#) and [Virtual Web Servers](#) for more information.

2. **Enable the web application firewall.**

You can either click the status icon or the *Enable* button.

The status icon turns green and the web application firewall is active.

Live Log

The WAF live log gives you debug information on WAF events. Click the *Open Live Log* button to open the WAF live log in a new window.

12.1.2 Virtual Web Servers

On the *Web Application Firewall > Virtual Web Servers* tab you can create virtual web servers. Those web servers, as part of the ASG, build the firewall between the Internet and your web servers. That is why this kind of intervention is also known as reverse proxy. The ASG picks up the requests for the web servers and protects the real web servers from various attacks. Each virtual server maps to a real web server and determines what level of protection is applied. You can also use more than one real web server in one virtual web server definition. That way you get load balancing for your real web servers.

To add a virtual server, do the following:

1. **Click the *Virtual Web Servers* button.**

The *Create Virtual Web Server* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the virtual web server.

Type: Determine whether you want the communication between the client and the virtual web server to be encrypted (HTTPS) or not (HTTP).

Domains (only with *HTTP*): Enter the domains the web server is responsible for as FQDN, e.g. `shop.example.com`.

Certificate (only with *HTTPS*): Select the web server's certificate from the drop-down list. The certificate needs to be created beforehand.

Domain: This field displays the hostname for which the certificate had been created.

Domains (only with SAN certificates): WAF supports Subject Alternative Name (SAN) certificates. All hostnames covered by a certificate will be listed in this box. You can then select one or more hostnames by selecting the checkbox in front of a hostname.

Interface: Select an interface from the drop-down list over which the web server can be reached.

Port: Enter a port number on which the virtual web server can be reached from external. Default is port 80 with *HTTP* and port 443 with *HTTPS*.

Real Web Servers: Select the checkbox in front of the web server you want to apply the firewall profile to. If you have mirroring web servers you can also select more than one web server. The traffic will be load-balanced then between the selected web servers.

Firewall Profile: Select a firewall profile from the drop-down list. This profile is applied to protect the selected web servers. You can also select *None* to not use any firewall profile.

Enable HTML Rewriting (optional): Select this option to have the ASG rewrite links of the returned web pages in order for the links to stay valid. Example: One of your real web server instances has the hostname `yourcompany.local` but the virtual server's hostname on the ASG is `yourcompany.com`. Thus, absolute links like `` will be broken if the link is not rewritten to `` before delivery to the client. However, you do not need to enable this option if either `yourcompany.com` is configured on your web server or if internal links on your web pages are always realized as relative links. It is recommended to use the option with Microsoft's Outlook Web Access and/or Sharepoint Portal Server.

Note – It is likely that some links cannot be rewritten correctly and are therefore rendered invalid. Ask your website author(s) to format links consistently.

Apart from URL rewriting, the HTML rewriting feature also fixes malformed HTML, for example:

- `<title>` tags are moved in DOM tree from node `html > title` to correct `html > head > title`
- Quotes around HTML attribute values are fixed (e.g., `name="value"` becomes `name='value'`)

Cross Reference – Please see the libxml documentation for further information (<http://xmlsoft.org/html/libxml-HTMLparser.html>).

Pass Host Header (optional): When you select this option, the host header as requested by the client will be preserved and forwarded along with the web request to the web server. Whether passing the host header is necessary in your environment however depends on the configuration of your web server.

Comment (optional): Add a description or other information.

3. **Click Save.**

The server is added to the *Virtual Web Servers* list.

If there is more than one web server configured for a virtual server the *Virtual Web Servers* list displays a status icon for each web server. The status icon of a web sever is red when the server has not been enabled. It is yellow when the web server is down or unavailable and green if everything is working.

12.1.3 Real Web Servers

On the *Web Application Firewall > Real Web Servers* tab you can add the web servers that are to be protected by WAF. You can add web servers either automatically or manually.

To add web servers automatically, do the following:

1. **Click the *Discover Web Servers* button.**

An information dialog window opens.

2. **Click *OK*.**

The information dialog window closes and the discovery process starts in the background.

3. **Use the Reload button on the top right of WebAdmin to see results.**

Note that the discovery process may take some minutes. Web servers can only be automatically detected when they are within the same network as the ASG.

When your web servers have been detected, you can assign firewall profiles to them on the *Virtual Web Servers* tab. If none or not all of your web servers have been detected, use the manual method described below.

To add a web server manually, do the following:

1. **Click the *New Real Web Servers* button.**

The *Create Real Web Server* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the web server.

Host: Add or select a host, which can either be of the type *Host* or *DNS Host*. We highly recommend to use the DNS hostname here because hosts listed with their IP address transmit empty host headers which leads to problems with some browsers.

Type: Determine whether you want the communication between the ASG and the web server to be encrypted (HTTPS) or not (HTTP).

Port: Enter a port number for the communication between the ASG and the web server. Default is port 80 with *HTTP* and port 443 with *HTTPS*.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The server is added to the *Real Web Servers* list.

The web servers present can now be assigned firewall profiles on the *Virtual Web Servers* tab.

12.1.4 Firewall Profiles

On the *Web Application Firewall > Firewall Profiles* tab you can create WAF profiles that define the modes and levels of protection for your web servers.

To create a WAF profile, do the following:

1. **Click the *New Firewall Profile* button.**

The *Create Firewall Profile* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the profile.

Mode: Select a mode from the drop-down list:

- **Monitor:** HTTP requests are monitored and logged.
- **Reject:** HTTP requests are rejected.
- **Drop:** HTTP requests are dropped.

The selected mode is applied when an HTTP request meets any one of the conditions selected below.

SQL Injection Filter: Protects a web server against SQL injections. For that, HTML forms and other input fields are checked by a parser and other means for SQL commands.

Cross Site Scripting (XSS) Filter: Protects a web server against cross-site scripting. For that, HTML forms and other input fields are checked by a parser and other means for HTML and CSS commands.

Enable Cookie Signing: Protects a web server against manipulated cookies. When the web server sets a cookie, a second cookie is added to the first cookie containing a hash built of the primary cookie's name, its value and a secret, where the secret is only known by the WAF. Thus, if a request cannot provide a correct cookie pair, there has been some sort of manipulation and the cookie will be dropped.

Enable URL Hardening: Protects against URL rewriting. For that, when a client requests a website, all URLs of the website are signed. The signing uses a similar procedure as with cookie signing. Additionally the response from the web server is analyzed regarding what links can be validly requested next. Hardened URLs can furthermore be bookmarked and visited later. Select one of the following methods to define entry URLs:

- **Entry URLs specified manually:** Enter URLs that serve as kind of entry URLs of a website and therefore do not need to be signed. They need to comply with the syntax of the following examples:

`http://shop.example.com/products/`,
`https://shop.example.com/products/` or `/products/`.

- **Entry URLs from uploaded Google sitemap file:** You can upload a sitemap file here which contains information on your website structure. Sitemap files can be uploaded in XML or in plain-text format, the latter simply containing a list of URLs. As soon as the profile is saved, the sitemap file is going to be parsed by WAF.
- **Entry URLs from Google sitemap URL:** You can have the ASG download a sitemap file from a defined URL which contains information on your website structure. This file can be checked for updates at a regular interval. As soon as the profile is saved, the sitemap file is going to be downloaded and parsed by WAF.

URL: Enter the path to the sitemap as absolute URL.

Update: Select an update interval from this drop-down list. When you select *Manual* the sitemap is going to be updated only when you save this profile anew.

Enable Form Hardening: Protects against web form rewriting. Form hardening saves the original structure of a web form and signs it. Therefore, if the structure of a form has changed when it is submitted the server will reject the request.

Use AntiVirus Scanning: Select this option to protect a web server against viruses.

AV Engines: Astaro Security Gateway features several antivirus engines for best security.

- **Single Scan:** Default setting; provides maximum performance.
- **Dual Scan:** Provides maximum recognition rate by scanning all e-mails twice using different virus scanners.

Scan: Select from the drop-down list whether to scan only up- or downloads or both.

Block Clients with Bad Reputation: Based on GeoIP and RBL information you can block clients which have a bad reputation according to their classification. Astaro uses the following classification providers:

RBL sources:

- Commtouch IP Reputation (ctipd.org)
- dnsbl.proxybl.org
- http.dnsbl.sorbs.net

The GeoIP source is [Maxmind](#). WAF blocks clients that belong to one of the following Maxmind categories:

- A1: Anonymous proxies or VPN services used by clients to hide their IP address or their original geographical location.
- A2: Satellite providers are ISPs that use satellites to provide Internet access to users all over the world, often from high risk countries.

Comment (optional): Add a description or other information.

3. **Optionally, make the following advanced settings:**

Skip WAF Rules: Add WAF rule numbers to this box which you want to skip for the current profile, for example because they return false positives. WAF rule numbers can be retrieved on the *Logging & Reporting > Web Application Firewall > Details* page, via the *Top Rules* filter.

Skip Remote Lookups for Clients with Bad Reputation: As reputation lookups include sending requests to remote classification providers, using reputation-based blocking may slow down your system. Select this checkbox to only use GeoIP-based classification which uses cached information and is therefore much faster.

4. **Click Save.**

The WAF profile is added to the *Firewall Profiles* list.

Additional Information on URL Hardening and Form Hardening

It would be best practice to always enable both URL hardening and form hardening because those two functions are complementary, especially in the way that they prevent issues you may have when enabling just one of them:

- Only form hardening is activated: When a web page contains hyperlinks with appended queries (which is the case with certain CMSs), e.g. <http://example.com/?view=article&id=1>, such page requests are blocked by form hardening because it expects a signature which is missing.

- Only URL hardening is activated: When a web browser appends form data to the action URL of the form tag of a web form (which is the case with GET requests), the form data becomes part of the request URL sent to the web server, by that rendering the URL signature invalid.

The reason why activating both functions solves those issues is that in case either form hardening or URL hardening find that a request is valid, the server accepts the request.

Outlook Web Access

The configuration of WAF for Outlook Web Access (OWA) is a bit tricky since OWA handles requests from a public IP differently than internal requests from an internal LAN IP to the OWA website. There are redirects attached in the URLs of OWA, where for external access the external FQDN is used, whereas for internal requests the internal server's IP address is used.

The solution is to set the OWA directory as *Entry URL* in the WAF profile of your OWA web server (e.g. <http://webserver/exchange/>). Additionally, you need to create an exception which skips URL hardening for the path `/exchange/*` and to disable cookie signing completely for the virtual server.

12.1.5 Exceptions

On the *Web Application Firewall* > *Exceptions* tab you can define web requests or source networks that are to be exempt from certain checks.

1. **On the *Exceptions* tab, click *New Exception List*.**

The *Create Exception List* dialog box opens.

2. **Make the following settings:**

Comment (optional): Add a description or other information.

Name: Enter a descriptive name for the exception.

Skip These Checks: Select the security check(s) that should be skipped.

On This Virtual Server: Select the virtual web server from the drop-down list that is to be exempt from the selected check(s).

For All Requests: Select a request definition from the drop-down list. Note that you can logically combine two request definitions by either AND or OR.

Networks: Add or select the source networks where the client request comes from and which are to be exempt from the selected check(s).

Paths: Add the paths that are to be exempt from the selected check(s), in the form of e.g. `/products/images/*`.

3. **Click Save.**

The exception is added to the *Exceptions* list.

12.1.6 Advanced

On the *Web Application Firewall > Advanced* tab you can define the keys used for cookie signing and URL hardening.

Cookie Signing Key

Here you can enter a custom secret that is used as signing key for cookie signing.

URL Hardening Signing Key

Here you can enter a custom secret that is used as signing key for URL hardening.

Form Hardening Settings

Here you can enter a custom secret that is used as encryption key for the form hardening token. The secret must consist of at least eight characters.

12.2 Certificate Management

Using the *Web Application Security > Certificate Management* menu, which contains the same configuration options as the *Site-to-site VPN > Certificate Management* menu, you can manage all certificate-related operations of Astaro Security Gateway. This includes creating or importing X.509 certificates as well as uploading so-called *Certificate Revocation List* (CRL), among other things.

12.2.1 Certificates

See *Site-to-site VPN > Certificate Management > Certificates*.

1 2.2.2 Certificate Authority

See *Site-to-site VPN > Certificate Management > [Certificate Authority](#)*.

1 2.2.3 Revocation Lists

See *Site-to-site VPN > Certificate Management > [Revocation Lists](#)*.

1 2.2.4 Advanced

See *Site-to-site VPN > Certificate Management > [Advanced](#)*.

13 RED Management

This chapter describes how to configure Astaro RED. RED is short for *Remote Ethernet Device* and is a means to connect remote branch offices and the like to your main office as if the branch office is part of your local network.

The setup consists of the Astaro Security Gateway in your main office and a Remote Ethernet Device (RED) in your remote office. Establishing a connection between the two is utmost easy as the RED appliance itself does not need to be configured at all. As soon as the RED appliance is connected to your ASG it behaves like any other Ethernet device on your ASG. All traffic of your branch office is safely routed via your ASG which means that your branch office is as secure as your local network.

The following topics are included in this chapter:

- [Overview](#)
- [Global Settings](#)
- [Client Management](#)
- [Deployment Helper](#)
- [Tunnel Management](#)

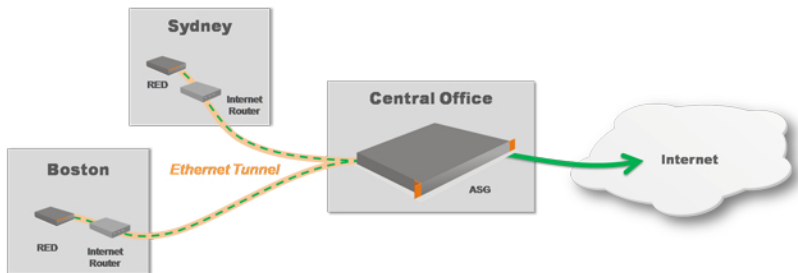


Figure 127 RED: Setup Sketch

Setting up a RED environment involves the following steps:

1. Activation of RED support.
2. Configuration of the RED appliance on your ASG.
3. Connecting the RED appliance to the Internet on the remote site.

Note – The overview page of RED displays general information on the RED architecture as long as no RED appliance is configured. When a RED appliance has been configured, the page will display information on the RED status.



Figure 128 RED: Site Status on the Overview Page

Open RED Live Log

You can use the live log to monitor the connection between your Astaro Security Gateway and the RED appliance. Click the *Open RED Live Log* button to open the live log in a new window.

13.1 Overview

The page *Overview* provides general information on what RED is meant for, how it works, and how a typical RED setup looks like.

13.2 Global Settings

On the *Global Settings* tab you can enable or disable the support for RED which means that your ASG acts as a RED hub. You need to enable the RED support before any RED appliances can connect to the ASG.

To enable RED support, do the following:

1. **On the *Global Settings* tab, enable RED support.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *RED Hub Configuration* area becomes editable.

2. **Enter your organization details.**

By default the settings from the *Management > System Settings > Organizational* tab is used.

3. **Click *Activate RED*.**

The status icon turns green and RED support is activated. Your ASG is now registered at the RED Provisioning Service (RPS) of Astaro to act as a RED hub.

You can now continue by adding one or more RED appliances on the page.

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

13.3 Client Management

On the *Red Management > Client Management* page you can enable remote ASGs to connect to your ASG using a Remote Ethernet Device (RED) tunnel. The remote ASG then simply act like RED appliances. Furthermore you can configure RED appliances manually (expert mode) instead of using the deployment helper. The deployment helper is a more convenient way to configure RED appliances and can be found on the next WebAdmin page.

Each RED appliance or ASG that is configured here is able to establish a connection to your ASG.

The *[Server]* tag in front of the page name indicates that this page only needs configuration if the ASG should act as server (RED hub).

Note – For RED appliances to be able to connect, you need to enable RED support on the *Global Settings* page first.

Setting Up a RED Tunnel Between Two ASGs

To enable another ASG to connect to your local ASG using a RED tunnel, do the following:

1. **On the *Client Management* tab, click *Add RED*.**
The *Add RED* dialog box opens.
2. **Make the following settings:**
Branch Name: Enter a name for the branch where the client ASG is located, e.g. "Office Munich".
Client Type: Select ASG from the drop-down list.
Tunnel ID: By default, *Automatic* is selected. Tunnels will be numbered consecutively. You need to make sure that the tunnel ID is unique for both ASGs. In this case you might need to select another ID from the drop-down list.
3. **Click *Save*.**
The ASG object is being created.
4. **Download the provisioning file.**
To provide the remote (client) ASG with the configuration data download the provisioning file using the *Download* button and transfer the file to the remote ASG in a secure way.

Configuring a RED Appliance

To enable a RED appliance to connect to your local ASG, do the following:

1. **On the *Client Management* tab, click *Add RED*.**
The *Add RED* dialog box opens.
2. **Make the following settings:**
Branch Name: Enter a name for the branch where the RED appliance is located, e.g. "Office Munich".
Client Type: Select *RED* from the drop-down list.

RED ID: Enter the ID of the RED appliance you are configuring. This ID can be found on the back of the RED appliance and on its packaging.

Tunnel ID: By default, *Automatic* is selected. Tunnels will be numbered consecutively. In case you have conflicting IDs, select another ID from the drop-down list.

Unlock Code (optional): During the first deployment of a RED appliance, an unlock code is generated, a security features, which ensures that a RED appliance cannot simply be removed and installed elsewhere. In case, the RED appliance you are configuring has been deployed before, you need to provide its unlock code. (If you are not in the possession of the unlock code, the only way to unlock the RED appliance is to contact the Astaro Support.)

ASG Hostname: You need to enter a public IP address or hostname where the ASG is accessible.

Uplink Mode: You can define how the RED appliance receives an IP address, which can be either via DHCP or by directly assigning a static IP address.

- **DHCP Client:** The RED pulls an IP address from a DHCP server.
- **Static Address:** Enter an IPv4 address, a corresponding netmask, a default gateway and a DNS server.

Operation Mode: You can define how the remote network will be integrated into your local network.

- **Standard/Unified:** The ASG completely controls the network traffic of the remote network. Additionally, it serves as DHCP server and as default gateway. All remote network traffic will be routed through the ASG .
- **Standard/Split:** The ASG completely controls the network traffic of the remote network. Additionally, it serves as DHCP server and as default gateway. In contrast to the Unified mode, only certain traffic will be routed through the ASG. Define local networks in the *Split Networks* box below which can be accessed by remote clients.
- **Transparent/Split:** The ASG does not control the network traffic of the remote network, it does neither serve as DHCP nor as default gateway. On the contrary, it pulls an IP address from the DHCP server of

the remote network to become a part of that network. However, you can enable access for remote clients to your local network. For that you need to define *Split Networks* that are allowed to be accessed by the remote network. Additionally, you can define one or more *Split Domains* to be accessible. If your local domains are not publicly resolvable, you need to define a *Split DNS Server*, which can be queried by remote clients.

You can find examples for all the operation modes on the *Deployment Helper* tab.

Note – You always have to make the following configurations manually: 1) Creating the necessary firewall rules (*Network Security > Firewall > Rules*). 2) Creating the necessary masquerading rules (*Network Security > NAT > Masquerading*).

3. Click Save.

The RED appliance is being created and the ASG registers with the Astaro RED Provisioning Service (RPS).

Important Note – It is crucial that you keep the *Unlock Code* which is e-mailed instantly to the address provided on the *Global Settings* tab (during activation of RED) as soon as the RED appliance registers with the RPS. You need the unlock code when you want to use the RED appliance with another ASG. If you then do not have the unlock code ready, the only way to unlock the RED appliance is to contact the Astaro Support.

When you have configured the necessary firewall rules (and if needed masquerading rules) the RED appliance on the remote site can be connected to the Internet. As soon as it has booted, it will fetch its configuration at the Astaro RED Provisioning Service (RPS). After that the connection between your ASG and the RED appliance is going to be established. You can see the appliance status of all configured RED appliances on the *RED* overview page of WebAdmin.

Deleting a RED Appliance

To delete a RED appliance, click the *Delete* button next to the appliance name. There will be a warning that the RED object has dependencies. Be aware that

deleting a RED appliance will *not* delete associated interfaces and their dependencies. This is intentional, since it enables you to move an interface from one RED appliance to another.

If you want to remove a RED appliance setup completely, you need to delete potential interface and other definitions manually.

13.4 Deployment Helper

The *RED Management > Deployment Helper* tab provides a wizard that facilitates setting up and integrating a RED environment. The wizard is meant to be a simple alternative to the normal configuration on the *Client Management* tab. You only need to fill in the requested fields, if needed also fields marked *optional*, and to click *Deploy RED*.

The *[Server]* tag in front of the page name indicates that this page only needs configuration if the ASG should act as server (RED hub).

Note – For your convenience, with *Standard/Unified* and *Standard/Split* mode, in contrast to the *Client Management* tab, the deployment helper automatically creates the following objects: a local interface with the specified IP address; a DHCP server for the remote network, covering half of the available IP address range; access to the local DNS resolver. In *Transparent/Split* mode, the deployment helper only creates a DHCP client (*Cable Modem (DHCP)*) interface.

The deployment helper provides short descriptions for every option and a sketch for each of the three operation modes offered by the RED technology.

Below you find a description and use case examples for the three operation modes of RED.

Standard/Unified

The ASG manages the whole remote network. It acts as DHCP server and as default gateway.

Technically, the local interface of the RED appliance and its uplink interface to your local ASG are bridged in this mode.

Example: You have a branch office and, for security reasons, you want all its traffic to be routed via your headquarter ASG. That way the remote site becomes a part of your local network as if it were connected via LAN.

Standard/Split

As with the *Standard/Unified* mode, the ASG manages the whole remote network. It acts as DHCP server and as default gateway. The difference is that only traffic targeted to networks listed in the *Split Networks* box is redirected to your local ASG.

Technically, the local interface of the RED appliance and its uplink interface to your local ASG are bridged in this mode. All traffic not originating from defined split networks is directly routed to the Internet.

Example: You have a branch office and you want it to have access to your local intranet or you want to route traffic of the remote network via your ASG for security reasons, e.g. to have the traffic checked for viruses or to use an HTTP proxy.

Transparent/Split

The remote network stays independent, the ASG is a part of this network by getting an IP address from the remote DHCP server. Only certain traffic of the remote network is allowed to access certain networks or local domains of yours. Since the ASG has no control of the remote network, local domains, which are not publicly resolvable, cannot be resolved by the remote router unless you define a *Split DNS Server*. This is a local DNS server of yours which can then be queried by remote clients.

Technically, the local interface of the RED appliance and its uplink interface to your local ASG as well as its link to the remote router are bridged. Since the ASG is only a client of the remote network, routing traffic to the split networks the same way as with the other modes is not possible. Therefore, the RED appliance intercepts all traffic: Traffic targeting to a network listed in the *Split Networks* box or going to a domain listed in the *Split Domains* box is redirected to the ASG interface. This is accomplished by replacing the default gateway's MAC address in the respective data packets with the ASG's MAC address.

Example: There is a partner or a service provider who should have access to your intranet or a certain server in your local network. Using a RED appliance, that

partner's network will stay completely independent of your network, but they can access a defined part of your network for certain purposes, as if they were connected via LAN.

Note – Using the deployment helper, the uplink mode of the RED appliance is *DHCP client* in either operation mode. If you need to assign it a static IP address instead, you need to configure the RED appliance on the *Client Management* tab.

13.5 Tunnel Management

On the *Red Management > Tunnel Management* page you can configure your ASG to act as a RED appliance to be able to establish a RED tunnel to another ASG. The remote host ASG will then serve as RED hub for your ASG.

The *[Client]* tag in front of the page name indicates that this page only needs configuration if the ASG should act as RED client.

To connect your ASG to the host ASG you need a provisioning file. This file needs to be generated on the host ASG (see [Client Management](#)).

To connect your ASG to the host ASG, proceed as follows:

1. **On the host ASG, add your local ASG to the *Client Management* list.**
2. **On the host ASG, download the provisioning file for your ASG.**
3. **On your local ASG, click *Add Tunnel*.**
The *Add Tunnel* dialog box opens.

4. **Make the following settings:**
Tunnel Name: Enter a descriptive name for this tunnel.

ASG Host: Select the remote ASG host.

Prov. File: Click the Folder icon, select the provisioning file you want to upload, and click *Start Upload*.

Comment (optional): Add a description or other information.

5. **Click Save.**

The RED tunnel will be established and displayed on the *Tunnel Management* list.

14 Site-to-site VPN

This chapter describes how to configure site-to-site VPN settings of Astaro Security Gateway. Site-to-site VPNs in Astaro Security Gateway are realized by means of *Virtual Private Networks* (VPNs), which are a cost effective and secure way for remote networks to communicate confidentially with each other over a public network such as the Internet. They use the cryptographic tunneling protocol IPsec to provide confidentiality and privacy of the data transmitted over them.

Cross Reference - More information on how to configure site-to-site VPN connections can be found in the [Astaro Knowledgebase](#).

The following topics are included in this chapter:

- [Amazon VPC](#)
- [IPsec](#)
- [SSL](#)
- [Certificate Management](#)

The *Site-to-site VPN* overview page in WebAdmin shows all configured Amazon VPC, IPsec, and SSL connections and their current status. The state of each connection is reported by the color of its status icons. There are two types of status icons. The larger ones next to the connection name inform about the overall status of a connection. The different colors mean:

- Green – All SAs (*Security Association*) have been established. Connection is fully functional.
- Yellow – Not all SAs have been established. Connection is partly functional.
- Red - No SAs have been established. Connection is not functional.

The smaller ones next to the tunnel information report the status for that tunnel. Here the colors mean:

- Green – All SAs have been established. Tunnel is fully functional.
- Yellow – IPsec SA has been established, ISAKMP SA (*Internet Security Association and Key Management Protocol*) is down. Tunnel is fully functional.
- Red – No SAs have been established. Connection is not functional.

14.1 Amazon VPC

Amazon Virtual Private Cloud (VPC) is a commercial cloud computing service. A user can create virtual private clouds, which can subsequently be connected to a local network and centrally managed over IPsec tunnels.

You can connect your Amazon VPC to your Astaro Security Gateway if the ASG has a static public IP address. The entire configuration of the VPN connections has to be done in the Amazon environment. Afterwards you just import the connection data using your Amazon access data or a configuration file.

14.1.1 Status

The *Site-to-Site VPN > Amazon VPC > Status* page shows a list of all connections to your Amazon VPC's.

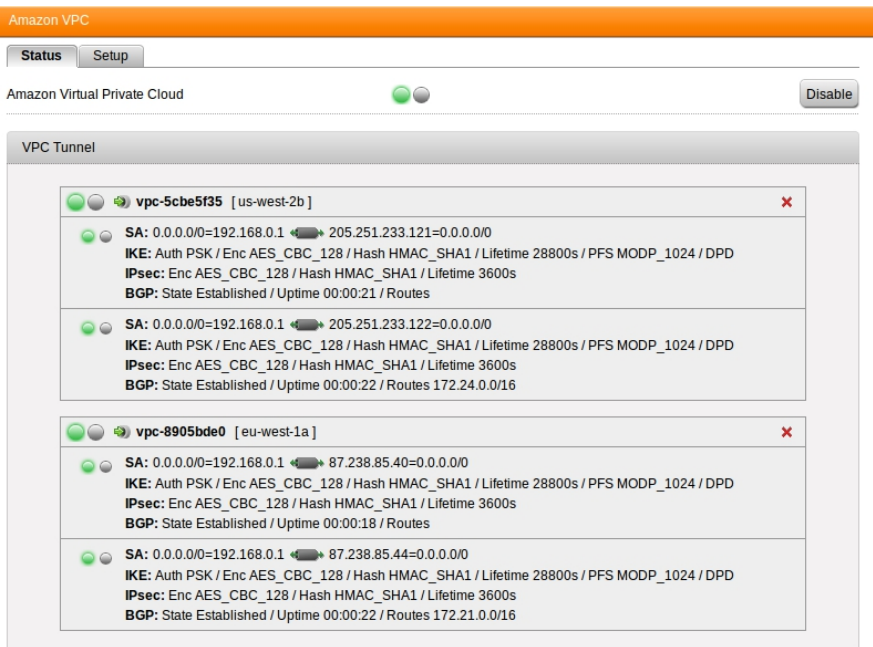


Figure 129 Amazon VPC: List of Connections

Here you can enable and disable the connections.

To enable connections to Amazon VPC, proceed as follows:

1. **On the *Setup* page, import at least one VPC connection.**
2. **On the *Status* page, enable Amazon VPC.**

You can either click the status icon or the *Enable* button.

The status icon turns green and the imported VPC connections are displayed.

3. **Enable the desired connection.**

Click the status icon of the connection you want to enable.

The status icon turns green and the two tunnels of the VPC connection are displayed.

Note – Each connection consists of two tunnels for redundancy reasons: an active and a backup tunnel. Active tunnels can be identified by having a netmask at the end of their BGP line. The status icons of the tunnels are displayed for control purposes only—you cannot enable or disable a single tunnel.

To disable all Amazon VPC connections click the topmost status icon or the *Disable* button. To disable a single connection click the status icon of the respective connection.

To close a connection and delete it from the list, click the red Delete icon of the respective connection.

Note – As the connections are configured on Amazon VPC's side, you can re-import a deleted connection into Astaro Security Gateway with the same data as before.

14.1.2 Setup

On the *Site-to-Site VPN > Amazon VPC > Setup* page you add connections to your Amazon Virtual Private Cloud (VPC). You can either import all connections configured with one Amazon Web Service (AWS) account and using the IP address of your Astaro Security Gateway as *Customer Gateway* (Amazon term for your endpoint of a VPC VPN connection.) Or you add connections one by one using the configuration file which you can download from Amazon.

Import Via Amazon Credentials

You can import all connections which you created with one AWS account and which have your Astaro Security Gateway's IP address as Customer Gateway, at once. Just enter your AWS credentials. You have been given the credentials when you created your Amazon Web Service account.

Note – All connections listed in the *Status* tab will be deleted during the import.

To import connections, proceed as follows:

1. **Make the following settings:**

Access Key: Enter the Amazon Access Key ID. It is a 20-character, alpha-numeric sequence.

Secret Key: Enter the Secret Access Key. It is a 40-character sequence.

2. **Click *Apply*.**

The connections are imported and subsequently displayed on the *Status* page.

Import Via Amazon Configuration

To add a single connection to the existing list of connections you have to upload the configuration file of the respective connection.

To import a single connection, proceed as follows:

1. **Download the configuration file of your Amazon VPC connection.**

In Amazon's download dialog make sure to select *Sophos* in the *Vendor* drop-down list.

2. **Open the *Upload file* dialog window.**

Click the Folder icon next to the *VPC Config File* box.

3. **Select the configuration file.**

4. **Click the button *Start Upload*.**

The file name is displayed in the *VPC Config File* box.

5. **Click *Apply*.**

The connection is imported and subsequently displayed on the *Status* page.

14.2 IPsec

IP Security (IPsec) is a standard for securing *Internet Protocol* (IP) communications by encrypting and/or authenticating all IP packets.

The IPsec standard defines two service modes and two protocols:

- Transport mode
- Tunnel mode
- *Authentication Header* (AH) authentication protocol

- *Encapsulated Security Payload* (ESP) encryption (and authentication) protocol

IPsec also offers methods for manual and automatic management of *Security Associations* (SAs) as well as key distribution. These characteristics are consolidated in a *Domain of Interpretation* (DOI).

IPsec Modes

IPsec can work in either transport mode or tunnel mode. In principle, a host-to-host connection can use either mode. If, however, one of the endpoints is a security gateway, the tunnel mode must be used. The IPsec VPN connections on this ASG always use the tunnel mode.

In transport mode, the original IP packet is not encapsulated in another packet. The original IP header is retained, and the rest of the packet is sent either in clear text (AH) or encrypted (ESP). Either the complete packet can be authenticated with AH, or the payload can be encrypted and authenticated using ESP. In both cases, the original header is sent over the WAN in clear text.

In tunnel mode, the complete packet—header and payload—is encapsulated in a new IP packet. An IP header is added to the IP packet, with the destination address set to the receiving tunnel endpoint. The IP addresses of the encapsulated packets remain unchanged. The original packet is then authenticated with AH or encrypted and authenticated using ESP.

IPsec Protocols

IPsec uses two protocols to communicate securely on the IP level.

- **Authentication Header (AH):** A protocol for the authentication of packet senders and for ensuring the integrity of packet data.
- **Encapsulating Security Payload (ESP):** A protocol for encrypting the entire packet and for the authentication of its contents.

The *Authentication Header* protocol (AH) checks the authenticity and integrity of packet data. In addition, it checks that the sender and receiver IP addresses have not been changed in transmission. Packets are authenticated using a checksum

created using a *Hash-based Message Authentication Code* (HMAC) in connection with a key. One of the following hashing algorithms will be used:

- **Message Digest Version 5 (MD5):** This algorithm generates a 128-bit checksum from a message of any size. This checksum is like a fingerprint of the message, and will change if the message is altered. This hash value is sometimes also called a digital signature or a message digest.
- **The Secure Hash (SHA-1):** This algorithm generates a hash similar to that of MD5, though the SHA-1 hash is 160 bits long. SHA-1 is more secure than MD5, due to its longer key.

Compared to MD5, an SHA-1 hash is somewhat harder to compute, and requires more CPU time to generate. The computation speed depends, of course, on the processor speed and the number of IPsec VPN connections in use at the Astaro Security Gateway.

In addition to encryption, the *Encapsulated Security Payload* protocol (ESP) offers the ability to authenticate senders and verify packet contents. If ESP is used in tunnel mode, the complete IP packet (header and payload) is encrypted. New, unencrypted IP and ESP headers are added to the encapsulating packet: The new IP header contains the address of the receiving gateway and the address of the sending gateway. These IP addresses are those of the VPN tunnel.

For ESP with encryption normally the following algorithms are used:

- Triple Data Encryption Standard (3DES)
- Advanced Encryption Standard (AES)

Of these, AES offers the highest standard of security. The effective key lengths that can be used with AES are 128, 192 and 256 bits. Astaro Security Gateway supports a number of encryption algorithms. Either the MD5 or SHA-1 algorithms can be used for authentication.

NAT Traversal (NAT-T)

NAT traversal is a technology for establishing connections between hosts in TCP/IP networks which use NAT devices. This is achieved by using UDP encapsulation of the ESP packets to establish IPsec tunnels through NAT devices. UDP encapsulation is only used if NAT is detected between the IPsec peers; otherwise normal ESP packets will be used.

With NAT traversal you are able to place the gateway or a road warrior behind a NAT router and still establish an IPsec tunnel. Both IPsec peers must support NAT traversal if you want to use this feature, which is automatically negotiated. Make sure that the NAT device has IPsec-passthrough turned off, because this could impair the use of NAT traversal.

If road warriors want to use NAT traversal, their corresponding user object in WebAdmin must have a static remote access IP address (RAS address) set (see also *Use Static Remote Access IP* on the [Users](#) page in WebAdmin).

By default, a NAT traversal keep-alive signal is sent at intervals of 60 seconds to prevent an established tunnel from expiring when no data is transmitted. The keep-alive messages are sent to ensure that the NAT router keeps the state information associated with the session so that the tunnel stays open.

TOS

Type of Service bits (TOS bits) are several four-bit flags in the IP header. These bits are referred to as *Type of Service* bits because they allow the transferring application to tell the network which type of service quality is necessary.

With the IPsec implementation of Astaro Security Gateway the TOS value is always copied.

14.2.1 Connections

On the *Site-to-site VPN > IPsec > Connections* tab you can create and edit IPsec connections.

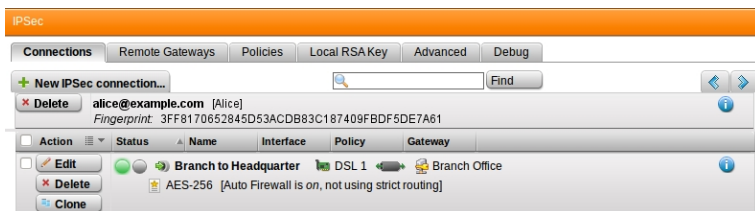


Figure 130 Site-to-Site VPN IPsec: Connections List

To create an IPsec connection, proceed as follows:

1. **On the *Connections* tab, click *New IPsec Connection*.**

The *Add IPsec Connection* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this connection.

Remote Gateway: Select a remote gateway definition. Remote gateways are configured on the *Site-to-site VPN > IPsec > Remote Gateways* tab.

Local Interface: Select the name of the interface which is used as the local endpoint of the IPsec tunnel.

Policy: Select the IPsec policy for this IPsec connection. IPsec policies can be defined on the *Site-to-site VPN > IPsec > Policies* tab.

Local Networks: Select the local networks that should be reachable through the VPN tunnel.

Auto Firewall Rules: By selecting this option you can automatically add firewall rules that allow traffic for the VPN connection. The rules are added as soon as the VPN connection is successfully established, and they are removed when the VPN connection is disconnected. If you want to use a stricter IPsec connection, disable *Auto Firewall Rules* and use IPsec objects in the firewall rule set instead.

Strict Routing: If strict routing is enabled, VPN routing is done according to source and destination IP address (instead of only destination IP address). In this case, only those packets exactly matching the VPN tunnel definition are routed into the VPN tunnel. As a consequence, you cannot use SNAT to add networks or hosts to the VPN tunnel, that are originally not part of the tunnel definition. On the other hand, without strict routing, you cannot have a mixed unencrypted/encrypted setup to the same network from different source addresses.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new connection appears on the *IPsec Connections* list.

To either edit or delete a connection, click the corresponding buttons.

Open Live Log: The IPsec VPN live log displays monitoring information about established IPsec connection. Click the button to open the live log in a new window.

14.2.2 Remote Gateways

On the *Site-to-site VPN > IPsec > Remote Gateways* tab you can define the remote gateways for your site-to-site VPN tunnels. These remote network definitions will become available when creating IPsec connections on the *IPsec > Connections* tab.

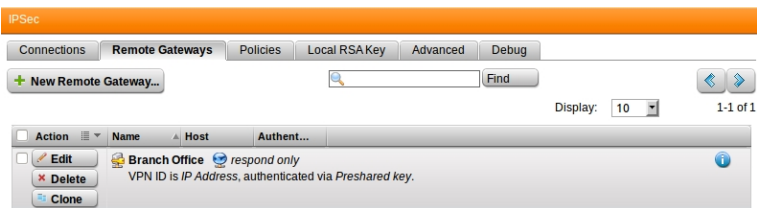


Figure 131 Site-to-Site VPN IPsec: Remote Gateways List

To add a remote gateway, proceed as follows:

1. **On the *Remote Gateways* tab, click *New Remote Gateway*.**

The *Add Remote Gateway* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this remote gateway.

Gateway Type: Select the type of the gateway. The following types are available:

- **Initiate Connection:** Select if the remote endpoint has a static IP address so that a connection to the remote gateway can be initiated by the gateway. If selected, specify the remote gateway in the *Gateway* box. Note that you can also select this option if the remote gateway is resolved through DynDNS.
- **Respond Only:** Select if the IP address of the remote endpoint is unknown or cannot be resolved through DynDNS. The gateway is not able to initiate a connection to the remote gateway but waits for incoming connections to which it only needs to respond.

Authentication Type: Select the authentication type for this remote gateway definition. The following types are available:

- **Preshared key:** Authentication with *Preshared Keys* (PSK) uses secret passwords as keys. These passwords must be distributed to the

endpoints before establishing the connection. When a new VPN tunnel is established, each side checks that the other knows the secret password. The security of PSKs depends on the quality of the passwords used: common words and phrases are subject to dictionary attacks. Permanent or long-term IPsec connections should use certificates or RSA keys instead.

- **RSA Key:** Authentication using RSA keys is much more sophisticated. In this scheme, each side of the connection generates a key pair consisting of a public key and a private key. The private key is necessary for the encryption and authentication during the key exchange. Both endpoints of an IPsecVPN connection using this authentication method need their own key pair. Copy the public RSA key of the remote unit (*Site-to-site VPN > IPsec > Local RSA Key*) into the *Public Key* box of the local unit and vice versa. In addition, enter the VPN ID types and VPN identifiers that correspond to the respective RSA keys.
- **Local X.509 Certificate:** Similarly, the X.509 certificate authentication scheme uses public keys and private keys. An X.509 certificate contains the public key together with information identifying the owner of the key. Such certificates are signed and issued by a trusted *Certificate Authority* (CA). During the key exchange process, the certificates are exchanged and authenticated using a locally stored CA certificate. Select this authentication type if the X.509 certificate of the remote gateway is locally stored on the unit.
- **Remote X.509 Certificate:** Select this authentication type if the X.509 certificate of the remote gateway is not locally stored on the unit. You must then select the VPN ID type and VPN identifier of the certificate being used on the remote unit, that is, the certificate which is selected in the *Local X.509 Certificate* area of the *Site-to-site VPN > IPsec > Advanced* tab.

VPN ID Type: Depending on the authentication type you must select a VPN ID type and VPN identifier. The VPN identifier entered here must match the values configured on the remote site. Suppose you are using two ASG appliances for establishing a site-to-site VPN tunnel. If you select *RSA Key* as authentication type on the local unit, the VPN ID type and the VPN identifier must match what is configured on the *Site-to-site VPN > IPsec > Local RSA Key* tab on the remote unit. You can select among the following VPN ID types:

- **IP Address**
- **Hostname**
- **E-mail Address**
- **Distinguished Name:** Only available with *Remote X.509 Certificate* authentication.
- **Any:** Default with *Respond Only* gateway type.

Remote Networks: Select the remote networks that should be reachable via the remote gateway.

Comment (optional): Add a description or other information.

3. **Make advanced settings if necessary.**

The following advanced settings should only be made when you know what their impact is:

Support Path MTU Discovery: PMTU (Path Maximum Transmission Unit) refers to the size of data packets transmitted. It is usually preferable that IP data packets be of the largest size that does not require fragmentation anywhere along the path from the source to the destination. If any of the data packets are too large to be forwarded without fragmentation by some router along the path, that router will discard them and return *ICMP Destination Unreachable* messages with a code meaning "fragmentation needed and DF set". Upon receipt of such a message, the source host reduces its assumed PMTU for the path.

If you enable this option, ASG enables PMTU if it is enabled on the server side.

Support Congestion Signaling (ECN):ECN (Explicit Congestion Notification) is an extension to the Internet Protocol and allows end-to-end notifications of network congestion without dropping packets. Note that the remote endpoint must support it as well as the underlying network and involved routers.

Enable XAUTH Client Mode:XAUTH is an extension of IPsec IKE to authenticate users via username and password at a VPN gateway. To use XAUTH for authentication with this remote gateway, select the option and provide username and password (twice) as required by the remote gateway.

4. **Click Save.**

The gateway definition appears on the *Remote Gateways* list.

To either edit or delete a remote gateway definition, click the corresponding buttons.

14.2.3 Policies

On the *IPsec > Policies* tab you can customize parameters for IPsec connections and unite them into a policy. An IPsec policy defines IKE (Internet Key Exchange) and IPsec proposal parameters of an IPsec connection. Note that each IPsec connection needs an IPsec policy.

Note - Astaro Security Gateway only supports the main mode in IKE phase 1. The aggressive mode is not supported.

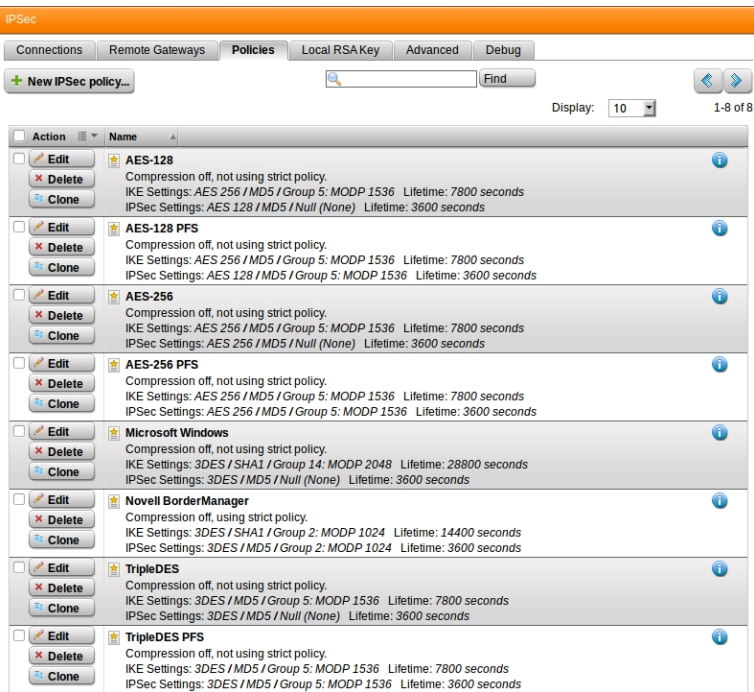


Figure 132 Site-to-Site VPN IPsec: Policies List

To create an IPsec policy, proceed as follows:

1. **On the *Policy* tab, click *New IPsec Policy*.**

The *Add IPsec Policy* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this policy.

IKE Encryption Algorithm: The encryption algorithm specifies the algorithm used for encrypting the IKE messages. Supported algorithms are:

- *DES* (56 bit)
- *3DES* (168 bit)
- *AES 128* (128 bit)
- *AES 192* (192 bit)
- *AES 256* (256 bit)

- *Blowfish* (128 bit)
- *Twofish* (128 bit)
- *Serpent* (128 bit)

IKE Authentication Algorithm: The authentication algorithm specifies the algorithm used for integrity checking of the IKE messages. Supported algorithms are:

- *MD5* (128 bit)
- *SHA1* (160 bit)
- *SHA2 256* (256 bit)
- *SHA2 384* (384 bit)
- *SHA2 512* (512 bit)

IKE SA Lifetime: This value specifies the timeframe in seconds for which the IKE SA (security association) is valid and when the next rekeying should take place. Valid values are between 60 sec and 28800 sec (8 hrs). The default value is 7800 seconds.

IKE DH Group: When negotiating a connection, the communicating parties also settle the actual keys used to encrypt the data. In order to generate a session key, IKE uses the *Diffie-Hellman* (DH) algorithm, which utilizes random data. The random data generation is based on pool bits. The IKE group basically tells the number of pool bits. The more pool bits, the larger the random numbers. The larger the numbers, the harder it is to crack the Diffie-Hellman algorithm. As a consequence, more pool bits mean more security but also the consumption of more CPU resources. Currently, the following Diffie-Hellman groups are supported:

- Group 1: MODP 768
- Group 2: MODP 1024
- Group 5: MODP 1536
- Group 14: MODP 2048
- Group 15: MODP 3072
- Group 16: MODP 4096

Note - Group 1 (MODP 768) is considered weak and only supported for interoperability reasons.

IPsec Encryption Algorithm: The same encryption algorithms as for IKE.

IPsec Authentication Algorithm: The same authentication algorithms as for IKE. Additionally there are the following algorithms:

SHA2 256 (96 bit)

SHA2 384 (96 bit)

SHA2 512 (96 bit)

Those are available for compliance with tunnel endpoints not adhering to [RFC 4868](#), for example ASG versions older than V8, and therefore do not support truncated checksums longer than 96 bit.

IPsec SA Lifetime: This value specifies the timeframe in seconds for which the IPsec SA is valid and when the next rekeying should take place. Valid values are between 60 sec and 86400 sec (1 day). The default value is 7800 seconds.

IPsec PFS Group: *Perfect Forward Secrecy* (PFS) refers to the notion that if a session key is compromised, it will permit access only to data of this specific session. In order for PFS to exist, the key used to protect the IPsec SA must not be derived from random keying material used to get the keys for the IKE SA. Therefore, PFS initiates a second Diffie-Hellman key exchange proposing the selected DH group for the IPsec connection to get a new randomly generated key. Supported Diffie-Hellman groups are the same as for IKE.

Enabling PFS is considered to be more secure, but it takes also more time for the exchange. It is not recommended to use PFS on slow hardware.

Note - PFS is not fully interoperable with all vendors. If you notice problems during the negotiation, you might consider disabling PFS.

Strict Policy: If an IPsec gateway makes a proposition with respect to an encryption algorithm and to the strength, it might happen that the gateway of the receiver accepts this proposition, even though the IPsec policy does

not correspond to it. If you select this option and the remote endpoint does not agree on using exactly the parameters you specified, the IPsec connection will not be established. Suppose the IPsec policy of your ASG requires AES-256 encryption, whereas, for example, a road warrior with SSH Sentinel wants to connect with AES-128; with the strict policy option enabled, the connection would be rejected.

Note - The compression setting will not be enforced via *Strict Policy*.

Compression: This option specifies whether IP packets should be compressed by means of the *IP Payload Compression Protocol* (IPComp) prior to encryption. IPComp reduces the size of IP packets by compressing them to increase the overall communication performance between a pair of communicating hosts or gateways. Compression is turned off by default.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new policy appears on the *Policies* list.

To either edit or delete a policy, click the corresponding buttons.

14.2.4 Local RSA Key

With RSA authentication, RSA keys are used for authentication of the VPN endpoints. The public keys of the endpoints are exchanged manually before the connection is established. If you want to use this authentication type, you have to define a VPN identifier and create a local RSA key. The public RSA key of the gateway must be made available to remote IPsec devices that use IPsec RSA authentication with Astaro Security Gateway.

IPsec

Connections Remote Gateways Policies **Local RSA Key** Advanced Debug

Current local public RSA key

This is the public portion of the currently installed local RSA key. You need to enter this key into remote devices that use IPsec RSA authentication with this system. Click into the box, then press CTRL-A and CTRL-C to copy it to the clipboard.

```
OsAQPJL43z/NhpdBxaMnd4AgT+MuSxJHxOr5ZL4KACo0GuqMLFG+nyBsAadXLU1XZ2j1xkxKnRLT59e3zIeoe84bocRY
nrUb3WURueGUs3CQL79vLRhREmkbN21b2qu7+IvqQq6iAnhuxM4vufSP//SkhXJMLa5NdGW7XxLOMZBgQ==
```

Local RSA key VPN options

VPN ID type:

VPN ID:

It is possible to change the RSA key VPN options here. When the **VPN ID type** is set to **IP Address**, the system will automatically use its interface IP address as the VPN ID. Setting these options does not change the RSA key itself.

Re-generate local RSA key.

Key size:

You can re-generate the local RSA key with a different key length by clicking **Apply** below. **Important:** This will overwrite the currently installed RSA key.

Figure 133 Site-to-Site VPN IPsec: Configuring the Local RSA Key

Current Local Public RSA Key

Displayed is the public portion of the currently installed local RSA key pair. Click into the box, then press **CTRL-A** and **CTRL-C** to copy it to the clipboard.

Local RSA Key VPN Options

Select the VPN ID type which best suits your needs. By default, the hostname of the gateway is taken as the VPN identifier. If you have a static IP address as local VPN endpoint, select **IP Address**. Alternatively, use an e-mail address as VPN ID for mobile IPsec road warriors.

- **Hostname:** Default setting; the hostname of the gateway. However, you can enter a different hostname here.
- **E-mail Address:** By default, this is the e-mail address of the gateway's admin account. However, you can enter a different e-mail address here.
- **IP Address:** The IP address of the external interface of the gateway.

Click **Apply** to save your settings. Changing the settings does not modify the RSA key.

Re-generate Local RSA Key

To generate a new RSA key, select the desired key size and click *Apply*. This will start the key generation process, which can take from a few minutes up to two hours, according to your selected key length and used hardware. The key size (key length) is a measure of the number of keys which are possible with a cipher. The length is usually specified in bits. The following key sizes are supported:

- 1024 bits
- 2048 bits
- 4096 bits

Once the RSA key has been generated, the appropriate public key will be displayed in the *Current Local Public RSA Key* box. Generating a new RSA key will overwrite the old one.

14.2.5 Advanced

On the *Site-to-site VPN > IPsec > Advanced* tab you can configure advanced options of IPsec VPN. Depending on your preferred authentication type, you can define the local certificate (for X.509 authentication) and the local RSA key (for RSA authentication), among other things. Note that this should only be done by experienced users.

IPsec

Connections Remote Gateways Policies Local RSA Key **Advanced** Debug

Local X509 Certificate

Local X509 Cert ▼ Please select the default local X509 certificate used for IPsec connections.

☒ Use Dead peer detection When this option is activated, the system will try to detect dead (offline) remote systems.

NAT Traversal (NAT-T)

☒ Use NAT traversal With NAT Traversal, IPsec traffic can pass upstream systems that use Network Address Translation (NAT).

NAT Traversal keepalive: 60 seconds

CRL handling

☐ Automatic fetching These settings define how Certificate Revocation Lists are handled. When **Automatic fetching** is on, the system will automatically try to acquire CRLs from remote sites.

☐ Strict policy

Preshared Key Probing

☐ Enable probing of preshared keys Activate this option if you want to use different preshared keys (PSKs) for your IPsec connections in respond-only mode. This option applies to L2TP-over-IPsec, IPsec remote access and IPsec site-to-site connections with a respond-only remote gateway.

Figure 134 Site-to-Site VPN IPsec: Advanced Settings

Local X.509 Certificate

With X.509 authentication, certificates are used to verify the public keys of the VPN endpoints. If you want to use this authentication type, you have to select a local certificate from the drop-down list in the *Local X.509 Certificate* area. The selected key/certificate is then used to authenticate the gateway to remote peers if X.509 authentication is selected.

You can only select certificates where the appropriate private key is present, other certificates are not available in the drop-down list.

If there is no certificate available for selection, you have to add one in the *Certificate Management* menu, either by creating a new one or by importing one using the upload function.

After selecting the certificate, enter the passphrase the private key was protected with. During the saving process, the passphrase is verified and an error message is displayed if it does not match the encrypted key.

Once an active key/certificate is selected, it is displayed in the *Local X.509 Certificate* area.

Dead Peer Detection (DPD)

Use Dead Peer Detection: The dead peer detection option is used for automatically terminating a connection if the remote VPN gateway or client is unreachable. For connections with static endpoints, the tunnel will be re-negotiated automatically. Connections with dynamic endpoints require the remote side to re-negotiate the tunnel. Usually it is safe to always enable this option. The IPsec peers automatically determine whether the remote side supports dead peer detection or not, and will fall back to normal mode if necessary.

NAT Traversal (NAT-T)

Use NAT Traversal: Select to enable that IPsec traffic can pass upstream systems which use *Network Address Translation* (NAT). Additionally, you can define the keepalive interval for NAT traversal. Click *Apply* to save your settings.

CRL Handling

There might be situations in which the provider of a certificate attempts to revoke the confirmation awarded with still valid certificates, for example if it has become known that the receiver of the certificate fraudulently obtained it by using wrong data (name, etc.) or because an attacker has got hold of the private key, which is part of the certified public key. For this purpose, so-called *Certificate Revocation Lists* or CRLs are used. They normally contain the serial numbers of those certificates of a certifying instance, that have been held invalid and that are still valid according to their respective periods of validity.

After the expiration of these periods the certificate will no longer be valid and must therefore not be maintained in the block list.

Automatic Fetching: This function automatically requests the CRL through the URL defined in the partner certificate via HTTP, Anonymous FTP or LDAP version 3. On request, the CRL can be downloaded, saved and updated, once the validity period has expired. If you use this feature but not via port 80 or 443, make sure that you set the firewall rules accordingly, so that the CRL distribution server can be accessed.

Strict Policy: If this option is enabled, any partner certificate without a corresponding CRL will be rejected.

Preshared Key Probing

For IPsec connections using the respond-only mode you can decide to use different preshared keys (PSK) for each IPsec connection.

Enable probing of preshared keys: Select the checkbox to enable this option. This will affect L2TP-over-IPsec, remote access IPsec, and VPN IPsec connections.

14.2.6 Debug

On the *Debug* tab you can configure IKE debug options. Select the checkboxes for which types of IKE messages you want to create debug output.

Note – The *Debug* tab is identical across the menus *Site-to-site VPN IPsec*, *Remote Access IPsec*, and *Cisco VPN Client*.

The following flags can be logged:

- **Control:** Displays control messages of IKE state
- **Emitting:** Displays content of outgoing IKE messages
- **Parsing:** Displays content of incoming IKE messages
- **Raw:** Displays messages as raw bytes
- **Crypt:** Shows encryption and decryption operations

14.3 SSL

Site-to-site VPN tunnels can be established via an SSL connection. SSL VPN connections have distinct roles attached. The tunnel endpoints act as either client or server. The client always initiates the connection, the server responds to client requests. Keep in mind that this contrasts IPsec where both endpoints normally can initiate a connection.

Note - If you run into problems in establishing a connection, check whether SSL scanning is activated with the Web Filter operating in transparent mode. If so, make sure that the target host of the VPN connection has been added to the *Transparent Mode Skiplist* under *Web Security > Web Filtering > Advanced*.

14.3.1 Connections

To create an SSLVPN site-to-site tunnel, it is crucial to create the server configuration first. The configuration of the client has always to be the second step.

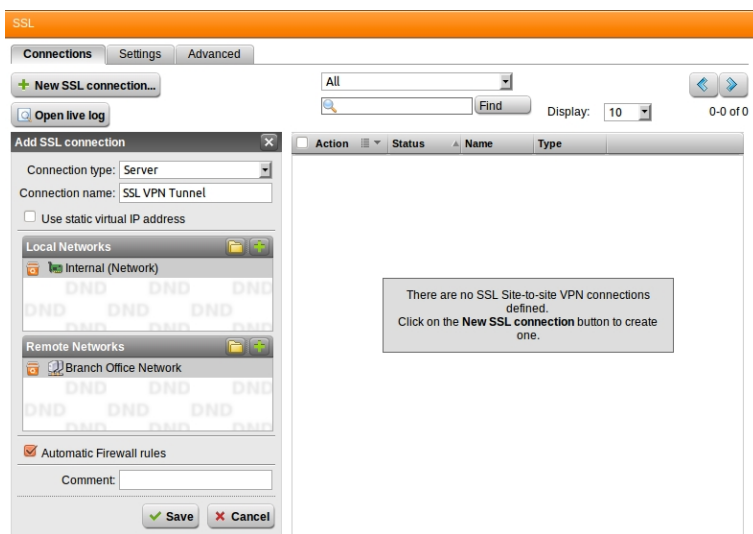


Figure 135 Site-to-Site SSL VPN: Configuring the Server Connection

To create a server configuration, proceed as follows:

1. **On the *Connections* tab, click *New SSL Connection*.**
The *Add SSL Connection* dialog box opens.
2. **Make the following settings:**
Connection Type: Select *Server* from the drop-down list.
Connection Name: Enter a descriptive name for the connection.

Use Static Virtual IP Address (optional): Only select this option if the IP address pool is not compatible with the client's network environment: By default clients are assigned an IP address from the *Virtual IP Pool* (configurable on *Settings* tab). Rarely, it may happen that such an IP address is already in use on the client's host. In that case enter a suitable IP address in the *Static Peer IP* field which will then be assigned to the client during tunnel setup.

Local Networks: Add one or more local networks that are allowed to be accessed remotely.

Remote Networks: Add one or more remote networks that are allowed to connect to the local network(s).

Note - You can change the *Local Networks* and *Remote Networks* settings later without having to reconfigure the client.

Automatic Firewall Rules (optional): When enabled, the ASG will automatically allow access to the selected local networks for all accessing SSL VPN clients.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new SSL server connection appears on the *Connections* list.

4. **Download the configuration file.**

Use the *Download* button, which is located in the newly created SSL server connection row, to download the client configuration file for this connection.

Encrypt Configuration File (optional): It is advisable to encrypt the configuration file for security reasons. Enter a password twice.

Click *Download Peer Config* to save the file.

This file is needed by the client-side administrator in order to be able to set up the client endpoint of the tunnel.

The next step is the client configuration which has to take place on client side and *not* on server side. Ensure that the downloaded client configuration file is at hand.

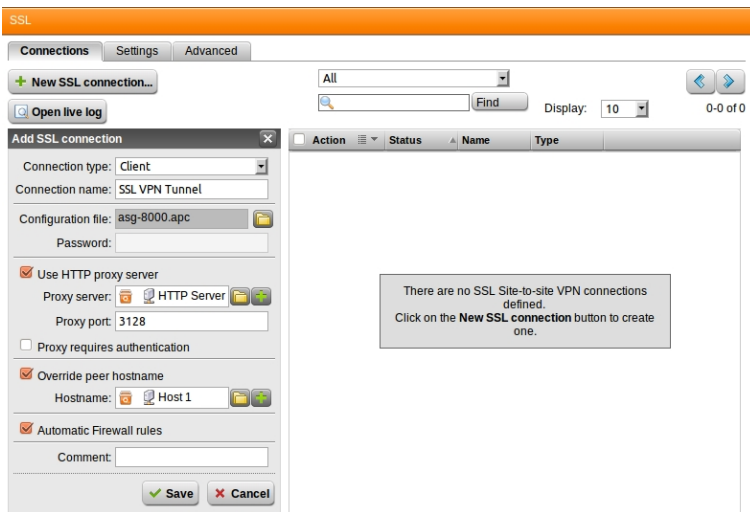


Figure 136 Site-to-Site SSL VPN: Configuring the Client Connection

To create a client configuration, proceed as follows:

1. **On the *Connections* tab, click *New SSL Connection*.**

The *Add SSL Connection* dialog box opens.

2. **Make the following settings:**

Connection Type: Select *Client* from the drop-down list.

Connection Name: Enter a descriptive name for the connection.

Configuration File: Click the folder icon, browse for the client configuration file and click *Save*.

Password (optional): If the file has been encrypted, enter the password.

Use HTTP Proxy Server (optional): Select the checkbox if the client is located behind a proxy and enter the settings for the proxy.

Use Proxy Authentication (optional): Select the checkbox if the client needs to authenticate against the proxy and enter username and password.

Override Peer Hostname (optional): Select the checkbox and enter a host-name here if the server system's regular hostname (or DynDNS hostname) cannot be resolved from the client host.

Automatic Firewall Rules (optional): When enabled, the ASG will automatically allow traffic between hosts on the tunneled local and remote networks.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new SSL VPN client connection appears on the *Connections* list.

To either edit or delete a client connection, click the corresponding buttons.

Click on the *Site-to-site VPN* menu to see the status of the SSL VPN connection on the overview page. The status icon there turns green when the connection is established. Then information about the interconnected subnets on both sides of the tunnel becomes available, too.

14.3.2 Settings

On the *SSL > Settings* tab you can configure the basic settings for SSL VPN server connections.

Note – This tab is identical for *Site-to-site VPN > SSL* and *Remote Access > SSL*. Changes applied here always affect both SSL configurations.

SSL

Connections Settings Advanced

Server settings

Interface Address: 

Protocol: 


Port:

Override hostname:

Select the network **protocol**, **address** and **port** that all SSL VPN clients must use. By default, this is set to TCP port 443 on any address. Note that port 10443 and the port used by WebAdmin can not be used.
For all SSL VPN connections, the **override hostname** setting overrides the built-in choice of preferring a configured *DynDNS* name over the system *hostname*.

 Apply

Virtual IP pool

Pool network: 

Virtual IP addresses for peers are selected from this **IP pool**. It may be changed or replaced to resolve conflicts. For SSL site-to-site connections it is possible to assign a peer a static virtual IP address, which bypasses use of this pool.

 Apply

Duplicate CN

☒ Allow multiple concurrent connections per user

When enabled, duplicate common names are allowed in different SSL VPN sessions. This allows users to open multiple concurrent SSL VPN sessions from different hosts. Otherwise, only one SSL VPN session is allowed per user.

 Apply

Figure 137 Site-to-Site SSL VPN: Settings

Server Settings

You can make the following settings for the SSL VPN connection:

- **Interface Address:** Default value is *Any*. When using the web application firewall you need to give a specific interface address for the service to listen for SSL connections. This is necessary for the site-to-site/remote access SSL connection handler and the web application firewall to be able to differentiate between the incoming SSL connections.
- **Protocol:** Select the protocol to use. You can choose either *TCP* or *UDP*.
- **Port:** You can change the port. The default port is 443. You cannot use port 10443, the ACC Gateway Manager port 4422, or the port used by the WebAdmin interface.
- **Override Hostname:** The value in the *Override Hostname* box is used as the target hostname for client VPN connections and is by default the hostname of the gateway. Only change the default if the system's regular hostname (or DynDNS hostname) cannot be reached under this name from the Internet.

Virtual IP Pool

Pool Network: This is the virtual IP address pool which is used to distribute IP addresses from a certain IP range to the SSL clients. By default, the *VPN Pool (SSL)* is selected. In case you select a different address pool, the netmask must not be greater than 29 bits, for OpenVPN cannot handle address pools whose netmask is /30, /31, or /32.

Duplicate CN

Select *Allow Multiple Concurrent Connections Per User* if you want to allow your users to connect from different IP addresses at the same time. When disabled, only one concurrent SSL VPN connection is allowed per user.

14.3.3 Advanced

On the *SSL > Advanced* tab you can configure various advanced server options ranging from the cryptographic settings, through compression settings, to debug settings.

Note – This tab is identical for *Site-to-site VPN > SSL* and *Remote Access > SSL*. Changes applied here always affect both SSL configurations.

SSL

Connections Settings **Advanced**

Cryptographic settings

Encryption algorithm: AES-128-CBC
 Authentication algorithm: MD5
 Key size: 1024 bit
 Server certificate: Local X509 Cert
 Key Lifetime: 28800 seconds

These settings control the cryptographic parameters for all SSL VPN connections.

Compression settings

☒ Compress SSL VPN traffic

When enabled, SSL VPN traffic will be transparently compressed and uncompressed.

Debug settings

☐ Enable debug mode

When enabled, the SSL VPN log will contain additional debugging information.

Figure 138 Site-to-Site SSL VPN: Advanced Settings

Cryptographic Settings

These settings control the encryption parameters for all SSL VPN remote access clients:

- **Encryption Algorithm:** The encryption algorithm specifies the algorithm used for encrypting the data sent through the VPN tunnel. The following algorithms are supported, which are all in *Cipher Block Chaining* (CBC) mode:
 - *DES-EDE3-CBC*
 - *AES-128-CBC* (128 bit)
 - *AES-192-CBC* (192 bit)
 - *AES-256-CBC* (256 bit)
 - *BF-CBC* (Blowfish (128 bit))
- **Authentication Algorithm:** The authentication algorithm specifies the algorithm used for checking the integrity of the data sent through the VPN tunnel. Supported algorithms are:
 - *MD5* (128 bit)
 - *SHA-1* (160 bit)

- **Key Size:** The key size (key length) is the length of the Diffie-Hellman key exchange. The longer this key is, the more secure the symmetric keys are. The length is specified in bits. You can choose between a key size of 1024 or 2048 bits.
- **Server Certificate:** Select a local SSL certificate to be used by the SSL VPN server to identify itself against the clients.
- **Key Lifetime:** Enter a time period after which the key will expire. The default is 28,800 seconds.

Compression Settings

Compress SSL VPN Traffic: When enabled, all data sent through SSL VPN tunnels will be compressed prior to encryption.

Debug Settings

Enable Debug Mode: When enabling debug mode, the SSL VPN log file will contain extended information useful for debugging purposes.

14.4 Certificate Management

The *Site-to-site VPN > Certificate Management* menu is the central place to manage all certificate-related operations of Astaro Security Gateway. This includes creating or importing X.509 certificates as well as uploading so-called *Certificate Revocation Lists* (CRLs), among other things.

14.4.1 Certificates

On the *Site-to-site VPN > Certificate Management > Certificates* tab you can create or import public key certificates in the X.509 standard format. Such certificates are digitally signed statements usually issued by a *Certificate Authority* (CA) binding together a public key with a particular *Distinguished Name* (DN) in X.500 notation.

All certificates you create on this tab are self-signed by the *Certificate Authority* (CA) that was created automatically using the information you provided during the initial login to the WebAdmin interface.

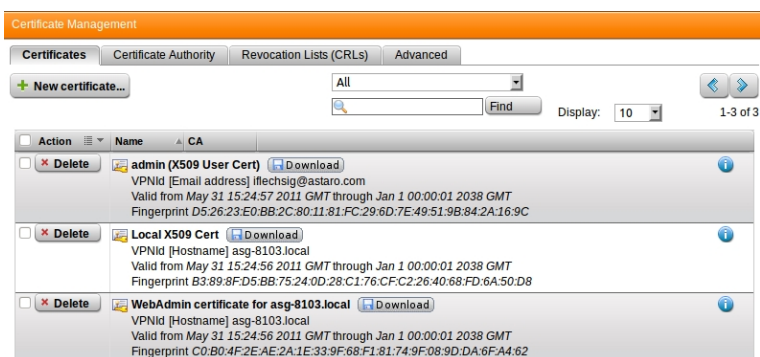


Figure 139 Certificate Management: Certificates List

To generate a certificate, proceed as follows:

1. **On the *Certificates* tab, click *New Certificate*.**

The *Add Certificate* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this certificate.

Method: To create a certificate, select *Generate* (for more information on uploading certificates, see below).

Provide the following information:

- **VPN ID Type:** You have to define a unique identifier for the certificate. The following types of identifiers are available:
 - Email Address
 - Hostname
 - IP Address
 - Distinguished Name
- **VPN ID:** Depending on the selected VPNID type, enter the appropriate value into this text box. For example, if you selected *IP Address* from the *VPN ID Type* list, enter an IP address into this text box. Note that this text box will be hidden when you select *Distinguished Name* from the *VPN ID Type* list. Use the drop-down lists and text boxes from *Country* to *Email* to enter identifying information about the certificate holder. This information is

used to build the *Distinguished Name*, that is, the name of the entity whose public key the certificate identifies. This name contains a lot of personal information in the X.500 standard and is supposed to be unique across the Internet. If the certificate is for a road warrior connection, enter the name of the user in the *Common Name* box. If the certificate is for a host, enter a hostname.

Comment (optional): Add a description or other information.

3. **Click Save.**

The certificate appears on the *Certificates* list.

To delete a certificate click the button *Delete* of the respective certificate.

Alternatively, to upload a certificate, proceed as follows:

1. **On the *Certificates* tab, click *New Certificate*.**

The *Add Certificate* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this certificate.

Method: Select *Upload*.

File Type: Select the file type of the certificate. You can upload certificates being one of the following types:

- **PKCS#12 Container:** PKCS refers to a group of *Public Key Cryptography Standards* (PKCS) devised and published by RSA laboratories. The PKCS#12 file format is commonly used to store private keys with accompanying public key certificates protected with a container passphrase. You must know this container passphrase to upload files in this format (enter the passphrase twice for verification).
- **PEM encoded:** A Base64 encoded *Privacy Enhanced Mail* (PEM) file format with no password required.

File: Click the folder icon next to the *File* box and select the certificate you want to upload.

Comment (optional): Add a description or other information.

3. **Click Save.**

The certificate appears on the *Certificates* list.

To delete a certificate click the button *Delete* of the respective certificate.

You can download the certificate either in `PKCS#12` or as `PEM` format. The `PEM` file only contains the certificate itself, while the `PKCS#12` file also contains the private key as well as the CA certificate with which it was signed.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., `https://192.168.2.100`) to the Trusted Sites, which are configured in IE's *Internet Options* > *Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

14.4.2 Certificate Authority

On the *Site-to-site VPN* > *Certificate Management* > *Certificate Authority* tab you can add new *Certificate Authorities* to the unit. Generally speaking, a certificate authority or *Certification Authority* (CA) is an entity which issues digital certificates for use by other parties. A CA attests that the public key contained in the certificate belongs to the person, organization, host, or other entity noted in the certificate by signing the certificate signing request with the private key of the CA's own certificate. Such a CA is therefore called a signing CA.

On the ASG, the signing CA was created automatically using the information you provided during the initial login to the ASG. Thus, all certificates you create on the *Certificates* tab are self-signed certificates, meaning that the issuer and the subject are identical. However, you can alternatively import a signing CA by third-party vendors. In addition, to verify the authenticity of a host or user requesting an IPsec connection, you can also use alternative CA certificates whose private keys are unknown. Those CA certificates are called verification CAs and can be added on this tab as well.

Important - You can have multiple verification CAs on your system, but only one signing CA. So if you upload a new signing CA, the previously installed signing CA automatically becomes a verification CA.

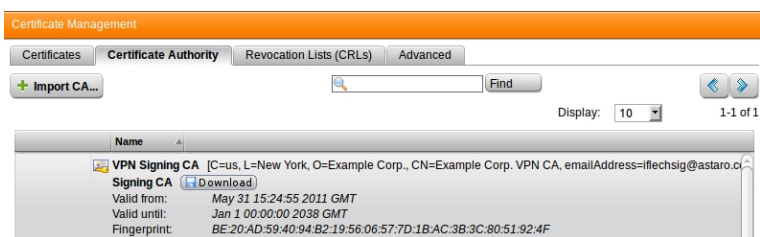


Figure 140 Certificate Management: Certificate Authority List

To import a CA, proceed as follows:

1. **On the *Certificate Authority* tab, click *Import CA*.**

The *Import CA* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this CA.

Type: Select the type of CA you are going to import. You can choose between verification CAs or signing CAs. A verification CA must be available in the `PEM` format, while a signing CA must be available in the `PKCS#12` format.

CA Certificate: Click the folder icon next to the *CA Certificate* box and select the certificate you want to import. Note that if you are to upload a new signing CA, you must enter the password with which the `PKCS#12` container was secured.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new CA certificate appears on the *Certificate Authority* list.

To delete a CA click the button *Delete* of the respective CA.

The signing CA can be downloaded in `PKCS#12` format. You will then be prompted to enter a password, which will be used to secure the `PKCS#12` container. In addition, verification CAs can be downloaded in `PEM` format.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., `https://192.168.2.100`) to the Trusted Sites, which are configured in IE's *Internet Options* > *Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

14.4.3 Revocation Lists (CRLs)

A CRL is a list of certificates (more precisely, their serial numbers) which have been revoked, that is, are no longer valid, and should therefore not be relied upon. On the *Site-to-site VPN > Certificate Management > Revocation Lists (CRLs)* tab you can upload the CRL that is deployed within your PKI.

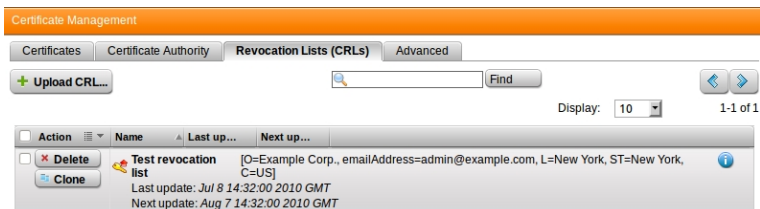


Figure 141 Certificate Management: List of Revocation Lists (CRLs)

To upload a CRL, proceed as follows:

1. **On the *Revocation Lists (CRLs)* tab, click *Upload CRL*.**

The *Upload CRL* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this CRL.

CRL File: Click the folder icon next to the *CRL File* box and select the CRL you want to upload.

Comment (optional): Add a description or other information.

3. **Click *Save*.**

The new CRL appears on the list of revocation lists.

To delete a CRL click the button *Delete* of the respective CRL.

14.4.4 Advanced

On the *Site-to-site VPN > Certificate Management > Advanced* tab you can regenerate the VPN Signing CA that was created during the initial setup of the unit. The VPN Signing CA is the certificate authority with which digital certificates are signed that are used for remote access and site-to-site VPN connections.

Re-generate Signing CA

You can renew all user certificates using the current signing CA. This becomes relevant once you have installed an alternative VPN Signing CA on the *Certificate Authority* tab.

The screenshot shows the 'Certificate Management' window with the 'Advanced' tab selected. The 'Regenerate Signing CA' section contains the following fields and text:

Organization Name:
City:
Country: Email:

Here you can regenerate the VPN signing CA that was created during the initial setup of the unit. The VPN signing CA is the certificate authority with which digital certificates are signed that are used for remote access and site-to-site VPN connections. To ensure that VPN connections that use the old VPN signing CA are still working after the exchange of the signing CA, the old VPN signing CA will be kept as verification CA.

Caution! The device and all user certificates will be regenerated with the new signing CA. This may break current Site-to-Site VPN and Roadwarrior connections.

Figure 142 Certificate Management: Advanced Settings

15 Remote Access

This chapter describes how to configure remote access settings of Astaro Security Gateway. Remote access using Astaro Security Gateway is realized by means of *Virtual Private Networks* (VPNs), which are a cost effective and secure way to provide remote users such as telecommuting employees access to the corporate network. VPNs use cryptographic tunneling protocols such as IPsec and PPTP to provide confidentiality and privacy of the data transmitted over them.

Cross Reference - More information on how to configure remote access VPN connections can be found in the [Astaro Knowledgebase](#).

The ASG automatically generates necessary installation and configuration files for the respective remote access connection type. Those files can be downloaded directly from the User Portal. However, only those files are available to a user that correspond to the connection types enabled for them, e.g., a user who has been enabled to use SSL remote access will find an SSL installation file only.

Welcome Remote Access Change password Log out

SSL VPN (Open installation instructions in new window)

Click here to download a complete installation package including client software, keys and automatic configuration for Windows 2000/XP/Vista. [Download](#)

Click here to download an installation file which updates all keys and configuration on your system, without re-installing the client software (Windows 2000/XP/Vista) [Download](#)

Click here to download a ZIP archive which contains all necessary files to set up SSL VPN on Linux, MacOS X, BSD or Solaris [Download](#)

IPsec VPN (Open installation instructions in new window)

Click here to download the client software for Windows 2000/XP/Vista. [Download](#)

Click here to download the necessary configuration file. [Download](#)

Enter an export password, then click the download button to download your certificate in PKCS#12 format. Export password: [Download](#)

PPTP VPN (Open installation instructions in new window)

PPTP is integrated in Microsoft Windows. You can simply use your present username and password for access. Please click the link above for more detailed instructions.

iPhone VPN Configuration

Click here to install VPN access on your iPhone. You will get remote access through any protocol configured for you. Start the download using Safari on your iPhone and follow the instructions displayed. The configuration can be removed again at Settings > General > Profile on your iPhone. Export password: [Install](#)

Figure 143 User Portal: Remote Access Installation Files

The *Remote Access Status* page contains an overview of all online users.

The following topics are included in this chapter:

- [SSL](#)
- [PPTP](#)

- [L2TP over IPsec](#)
- [IPsec](#)
- [Cisco VPN Client](#)
- [Advanced](#)
- [Certificate Management](#)

15.1 SSL

The remote access SSL feature of Astaro Security Gateway is realized by OpenVPN, a full-featured SSL VPN solution. It provides the ability to create point-to-point encrypted tunnels between remote employees and your company, requiring both SSL certificates and a username/password combination for authentication to enable access to internal resources. In addition, it offers a secure [User Portal](#), which can be accessed by each authorized user to download a customized SSL VPN client software bundle. This bundle includes a free SSL VPN client, SSL certificates and a configuration that can be handled by a simple one-click installation procedure. This SSL VPN client supports most business applications such as native Outlook, native Windows file sharing, and many more.

Cross Reference - More information on how to use the SSL VPN client can be found in the [Astaro Knowledgebase](#).

15.1.1 Global

On the *Remote Access* > *SSL* > *Global* tab you can configure the basic settings for the VPN access. By default, the SSL VPN solution of Astaro Security Gateway employs so-called split tunneling, that is, the process of allowing a remote VPN user to access a public network, for example, the Internet, at the same time that the user is allowed to access resources on the VPN. However, split tunneling can be bypassed if you select *Any* in the *Local Networks* field below. Thus, all traffic will be routed through the VPN SSL tunnel. Whether users are allowed to access a public network then depends on your firewall configuration.

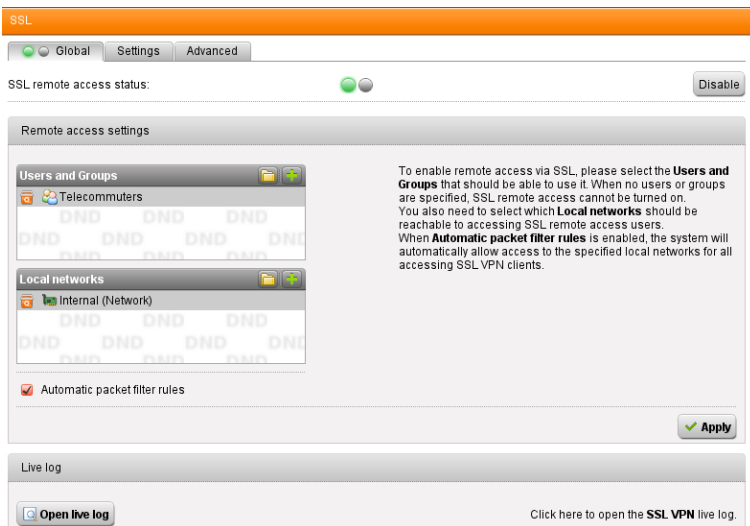


Figure 144 Remote Access SSL: Enabling SSL Remote Access

To configure global SSL VPN options, proceed as follows:

1. **On the *Global* tab, enable SSL remote access.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Remote Access Settings* area becomes editable.

2. **Make the following settings:**

Users and Groups: Select the users and user groups that should be able to use SSL VPN remote access. When no users or user groups are specified, SSL remote access cannot be enabled.

Note - The SSL VPN client software bundle in the [User Portal](#) is only available to users who are selected in the *Users and Groups* box *and* for whom a user definition does exist on the ASG (see *Definitions & Users & Groups > Users*). Nonetheless, they have access to the User Portal.

Local Networks: Select the local network(s) that should be reachable to SSL clients.

Automatic Firewall Rules: Select this option to have the necessary firewall rules automatically created.

3. **Click *Apply*.**

Your settings will be saved.

Open Live Log

The *OpenVPN Live Log* logs remote access activities. Click the button to open the live log in a new window.

15.1.2 Settings

On the *SSL > Settings* tab you can configure the basic settings for SSL VPN server connections.

Note – This tab is identical for *Site-to-site VPN > SSL* and *Remote Access > SSL*. Changes applied here always affect both SSL configurations.

SSL

Global **Settings** Advanced

Server settings

Interface Address:

Protocol:

Port:

Override hostname:

Select the network **protocol**, **address** and **port** that all SSL VPN clients must use. By default, this is set to TCP port 443 on any address. Note that port 10443 and the port used by WebAdmin can not be used.
For all SSL VPN connections, the **override hostname** setting overrides the built-in choice of preferring a configured *DynDNS* name over the system *hostname*.

Virtual IP pool

Pool network:

Virtual IP addresses for peers are selected from this **IP pool**. It may be changed or replaced to resolve conflicts. For SSL site-to-site connections it is possible to assign a peer a static virtual IP address, which bypasses use of this pool.

Duplicate CN

☒ Allow multiple concurrent connections per user

When enabled, duplicate common names are allowed in different SSL VPN sessions. This allows users to open multiple concurrent SSL VPN sessions from different hosts. Otherwise, only one SSL VPN session is allowed per user.

Figure 145 Remote Access SSL: Settings

Server Settings

You can make the following settings for the SSL VPN connection:

- **Interface Address:** Default value is *Any*. When using the web application firewall you need to give a specific interface address for the service to listen for SSL connections. This is necessary for the site-to-site/remote access SSL connection handler and the web application firewall to be able to differentiate between the incoming SSL connections.
- **Protocol:** Select the protocol to use. You can choose either *TCP* or *UDP*.
- **Port:** You can change the port. The default port is 443. You cannot use port 10443, the ACC Gateway Manager port 4422, or the port used by the WebAdmin interface.
- **Override Hostname:** The value in the *Override Hostname* box is used as the target hostname for client VPN connections and is by default the hostname of the gateway. Only change the default if the system's regular hostname (or DynDNS hostname) cannot be reached under this name from the Internet.

Virtual IP Pool

Pool Network: This is the virtual IP address pool which is used to distribute IP addresses from a certain IP range to the SSL clients. By default, the *VPN Pool (SSL)* is selected. In case you select a different address pool, the netmask must not be greater than 29 bits, for OpenVPN cannot handle address pools whose netmask is /30, /31, or /32.

Duplicate CN

Select *Allow Multiple Concurrent Connections Per User* if you want to allow your users to connect from different IP addresses at the same time. When disabled, only one concurrent SSL VPN connection is allowed per user.

15.1.3 Advanced

On the *SSL > Advanced* tab you can configure various advanced server options ranging from the cryptographic settings, through compression settings, to debug settings.

Note – This tab is identical for *Site-to-site VPN > SSL* and *Remote Access > SSL*. Changes applied here always affect both SSL configurations.

SSL

Global Settings **Advanced**

Cryptographic settings

Encryption algorithm: AES-128-CBC
 Authentication algorithm: MD5
 Key size: 1024 bit
 Server certificate: Local X509 Cert
 Key Lifetime: 28800 seconds

These settings control the cryptographic parameters for all SSL VPN connections.

✓ Apply

Compression settings

☒ Compress SSL VPN traffic

When enabled, SSL VPN traffic will be transparently compressed and uncompressed.

✓ Apply

Debug settings

☐ Enable debug mode

When enabled, the SSL VPN log will contain additional debugging information.

✓ Apply

Figure 146 Remote Access SSL: Advanced Settings

Cryptographic Settings

These settings control the encryption parameters for all SSL VPN remote access clients:

- **Encryption Algorithm:** The encryption algorithm specifies the algorithm used for encrypting the data sent through the VPN tunnel. The following algorithms are supported, which are all in *Cipher Block Chaining* (CBC) mode:
 - DES-EDE3-CBC
 - AES-128-CBC (128 bit)
 - AES-192-CBC (192 bit)
 - AES-256-CBC (256 bit)
 - BF-CBC (Blowfish (128 bit))
- **Authentication Algorithm:** The authentication algorithm specifies the algorithm used for checking the integrity of the data sent through the VPN

tunnel. Supported algorithms are:

- *MD5* (128 bit)
- *SHA-1* (160 bit)
- **Key Size:** The key size (key length) is the length of the Diffie-Hellman key exchange. The longer this key is, the more secure the symmetric keys are. The length is specified in bits. You can choose between a key size of 1024 or 2048 bits.
- **Server Certificate:** Select a local SSL certificate to be used by the SSL VPN server to identify itself against the clients.
- **Key Lifetime:** Enter a time period after which the key will expire. The default is 28,800 seconds.

Compression Settings

Compress SSL VPN Traffic: When enabled, all data sent through SSL VPN tunnels will be compressed prior to encryption.

Debug Settings

Enable Debug Mode: When enabling debug mode, the SSL VPN log file will contain extended information useful for debugging purposes.

15.2 PPTP

Point-to-Point Tunneling Protocol (PPTP) allows single Internet-based hosts to access internal network services through an encrypted tunnel. PPTP is easy to configure and requires no special client software on Microsoft Windows systems.

PPTP is included with versions of Microsoft Windows starting with Windows 95. In order to use PPTP with Astaro Security Gateway, the client computer must support the MSCHAPv2 authentication protocol. Windows 95 and 98 users must apply an update to their systems in order to support this protocol.

15.2.1 Global



Figure 147 Remote Access PPTP: Enabling PPTP Remote Access

To configure global PPTP options, proceed as follows:

1. **On the *Global* tab, enable PPTP remote access.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Main Settings* area becomes editable.

2. **Make the following settings:**

Authentication via: Select the authentication mechanism. PPTP remote access only supports local and RADIUS authentication.

- **Local:** If you select *Local*, specify the users and user groups who should be able to use PPTP remote access. It is not possible to drag back-end user groups into the field. Until a user account has been specified, PPTP remote access cannot be activated.

Note - Similar to SSL VPN, the *Remote Access* menu of the User Portal is only available to users who are selected in the *Users and Groups* box and for whom a user definition does exist on the ASG. Authorized

users who have successfully logged in to the User Portal will find a link to installation instructions, which are available at the [Astaro Knowledgebase](#)).

- **RADIUS:** *RADIUS* can only be selected if a RADIUS server has been previously configured. With this authentication method users will be authenticated against an external RADIUS server that can be configured on the *Definitions & Users > Authentication Servers > Servers* tab. The *Users and Groups* dialog box will be grayed out. However, its settings can still be changed, which has no effect. The RADIUS server must support MSCHAPv2 challenge-response authentication. The server can pass back parameters such as the client's IP address and DNS/WINS server addresses. The PPTP module sends the following string as NAS-ID to the RADIUS server: pptp. Note that when RADIUS authentication is selected, local users cannot be authenticated with PPTP anymore. Note further that clients must support MSCHAPv2 authentication as well.

Assign IP Addresses By: IP addresses can be either assigned from a predefined IP address pool or distributed automatically by means of a DHCP server:

- **IP Address Pool:** Select this option if you want to assign IP addresses from a certain IP range to the clients gaining remote access through PPTP. By default, addresses from the private IP space 10.242.1.0/24 are assigned. This network definition is called the *VPN Pool (PPTP)* and can be used in all network-specific configuration options. If you want to use a different network, simply change the definition of the *VPN Pool (PPTP)* on the *Definitions & Users > Network Definitions* page. Alternatively, you can create another IP address pool by clicking the plus icon next to the *Pool Network* text box.
- **DHCP Server:** If you select *DHCP Server*, also specify the network interface through which the DHCP server is connected. The DHCP server does not have to be directly connected to the interface—it can also be accessed through a router. Note that the local DHCP server is not supported; the DHCP server selected here must be running on a physically different system.

3. Click **Apply**.

Your settings will be saved.

Live Log

The *PPTP Daemon Live Log* logs all PPTP remote access activities. Click the button to open the live log in a new window.

15.2.2 iOS Devices

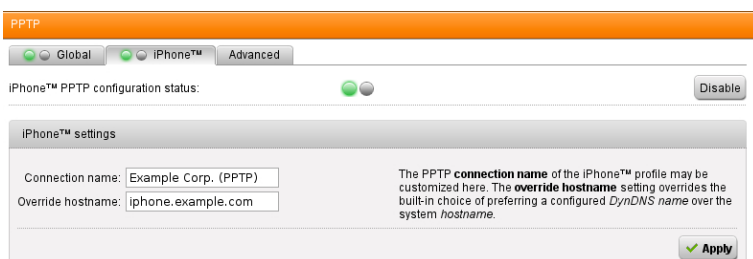


Figure 148 Remote Access PPTP: iOS Device Settings

You can enable that iOS device users are offered automatic PPTP configuration in the User Portal.

However, only users that have been added to the *Users and Groups* box on the *Global* tab will find configuration files on their User Portal site. The iOS device status is enabled by default.

Connection Name: Enter a descriptive name for the PPTP connection so that iOS device users may identify the connection they are going to establish. The default name is your company name followed by the protocol PPTP.

Note - *Connection Name* must be unique among all iOS device connection settings (PPTP, L2TP over IPsec, Cisco VPN Client).

Override Hostname: In case the system hostname cannot be publicly resolved by the client, you can enter a server hostname here that overrides the internal preference of the *DynDNS Hostname* before the *System DNS Hostname*.

To disable automatic iOS device configuration, click the status icon or *Disable* in the header of the tab.

The status icon turns red.

15.2.3 Advanced

On the *Remote Access > PPTP > Advanced* tab you can configure the encryption strength and the amount of debug output with regard to PPTP remote access. Note that advanced PPTP options can only be configured if PPTP remote access status is enabled on the *Global* tab.

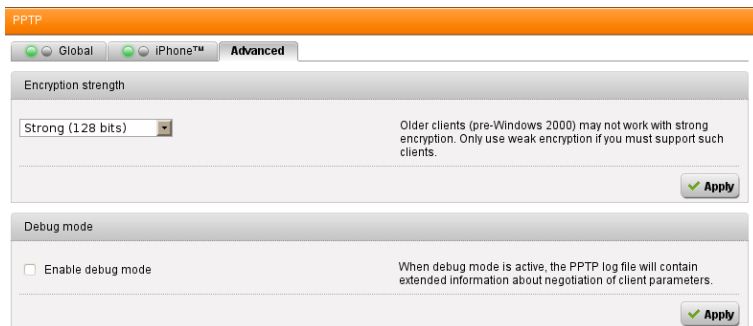


Figure 149 Remote Access PPTP: Advanced Settings

Encryption Strength

You can choose between strong (128-bit) and weak (40-bit) tunnel encryption (MPPE). Do not use weak encryption unless you have endpoints that do not support 128-bit encryption.

Debug Mode

Enable Debug Mode: This option controls how much debug output is generated in the PPTP log. Select this option if you encounter connection problems and need detailed information about the negotiation of client parameters, for example.

15.3 L2TP over IPsec

L2TP, short for *Layer Two (2) Tunneling Protocol*, is a data link layer (layer 2 of the OSI model) protocol for tunneling network traffic between two peers over an existing network (usually the Internet), better known as VPNs. Because of the lack of confidentiality inherent in the L2TP protocol, it is often combined with IPsec, which provides confidentiality, authentication, and integrity. The combination of these

two protocols is also known as L2TP over IPsec. L2TP over IPsec allows you, while providing the same functions as PPTP, to give individual hosts access to your network through an encrypted IPsec tunnel.

15.3.1 Global

On the *L2TP over IPsec > Global* tab you can configure basic options for setting up remote access via L2TP over IPsec.

The screenshot shows the 'L2TP over IPsec' configuration window with the 'Global' tab selected. The window has a title bar with 'L2TP over IPsec' and three tabs: 'Global', 'iPhone™', and 'Advanced'. Below the tabs, there's a status indicator (a green circle) and a 'Disable' button. The main area is divided into two sections: 'Server settings and IP address assignment' and 'Access control'. In the 'Server settings' section, there are dropdown menus for 'Interface' (set to 'DSL 1'), 'Authentication mode' (set to 'X509 CA check'), and 'Certificate' (set to 'Local X509 Cert'). There's also a section for 'Assign IP addresses by' (set to 'IP address pool') and a 'Pool Network' field with a 'VPN Pool (L2TP)' button. In the 'Access control' section, there's a dropdown for 'Authentication via' (set to 'Local') and a 'Users and Groups' list box containing 'Telecommuters'. Both sections have an 'Apply' button at the bottom right. Explanatory text is provided for several settings, such as selecting the network interface and authentication method.

Figure 150 Remote Access L2TP: Enabling L2TP Remote Access

To use L2TP over IPsec, proceed as follows:

1. **On the *Global* tab enable L2TP over IPsec.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Server Settings and IP Address Assignment* area becomes editable.

2. **Make the following settings:**

Interface: Select the network interface to be used for L2TP VPN access.

Authentication Mode: You can choose between the following authentication modes:

- **Preshared Key:** Enter a password which is subsequently used as pre-shared key. The *Preshared Key* method makes use of a shared secret that is exchanged by the communicating parties prior to the communication taking place. To communicate, both parties prove that they know the secret. The shared secret is a secure phrase or password that is used to encrypt the traffic using the encryption algorithm for L2TP. For best security, you should take appropriate measures to increase the strength of the shared secret. The security of a shared secret depends on the quality of the password and how securely it has been transmitted. Passwords consisting of common words are extremely vulnerable to dictionary attacks. For that reason, the shared secret should be quite long and contain a variety of letters, capital letters, and numbers. Consequently, using a preshared secret as an authentication method should be replaced by certificates whenever possible.

Note - If you want to enable access for iOS devices you need to select *Preshared Key* because iOS devices only support PSK authentication.

- **X.509 CA Check:** X.509 certificates ease the process of exchanging public authentication keys in large VPN setups with a lot of participants. A so-called CA gathers and checks the public keys of the VPN endpoints and issues a certificate for each member. The certificate contains the peer's identity along with its public key. Because the certificate is digitally signed, no one else can issue a forged certificate without being detected.
During the key exchange, certificates are exchanged and verified using locally stored CA public keys. The actual authentication of the VPN endpoints is then done by using public and private keys. If you want to use this authentication mode, select an X.509 certificate.
Note that for X.509 authentication to work, you need to have a valid CA configured on the *Remote Access > Certificate Management > Certificate Authority* tab.

Assign IP Addresses By: IP addresses can be either assigned from a pre-defined IP address pool or distributed automatically by means of a DHCP server:

- **Pool Network:** By default, *IP Address Pool* is selected as IP address assignment, having the pre-defined *VPN Pool (L2TP)* network definition selected as the *Pool Network*. The *VPN Pool (L2TP)* is a randomly generated network from the 10.x.x.x IP address space for private inter-nets, using a class C subnet. It is normally not necessary to ever change this, as it ensures that the users have a dedicated pool of addresses to make connections from. If you want to use a different network, you can simply change the definition of the *VPN Pool (L2TP)*, or assign another network as IP address pool here.

Note - If you use private IP addresses for your L2TP VPN Pool and you want IPsec hosts to be allowed to access the Internet, appropriate masquerading or NAT rules must be in place for the IP address pool.

- **DHCP Server:** If you select *DHCP Server*, also specify the network interface through which the DHCP server is connected. The DHCP server does not have to be directly connected to the interface—it can also be accessed through a router. Note that the local DHCP server is not supported; the DHCP server selected here must be running on a physically different system.

3. **Click *Apply*.**

Your settings will be saved.

To cancel the configuration, click *Abort Enable* or the amber colored status icon.

Access Control

Authentication Via: L2TP remote access only supports local and RADIUS authentication.

- **Local:** If you select *Local*, specify the users and user groups who should be able to use L2TP remote access. It is not possible to drag back-end user groups into the field. For local users you need to add users in the usual way and enable L2TP for them. If no users or groups are selected, L2TP remote access is turned off.

Note - Similar to SSLVPN the *Remote Access* menu of the User Portal is only available to users who are selected in the *Users and Groups* box and for whom a user definition does exist on the ASG. Depending on the authentication mode, authorized users who have successfully logged in to the User Portal will find the IPsec pre-shared key (authentication mode *Pre-shared key*) or the `PKCS#12` file (authentication mode *X.509 CA check*) as well as a link to installation instructions, which are available at the [Astaro Knowledgebase](#)).

- **RADIUS:** If you select *RADIUS*, the authentication requests are forwarded to the RADIUS server. The L2TP module sends the following string as NAS-ID to the RADIUS server: `l2tp`.

The authentication algorithm gets automatically negotiated between client and server. For local users, Astaro Security Gateway supports the following authentication protocols:

- MSCHAPv2
- PAP

By default, a Windows client negotiates MSCHAPv2.

For RADIUS users, Astaro Security Gateway supports the following authentication protocols:

- MSCHAPv2
- MSCHAP
- CHAP
- PAP

15.3.2 iOS Devices

You can enable that iOS device users are offered automatic L2TP over IPsec configuration in the User Portal.

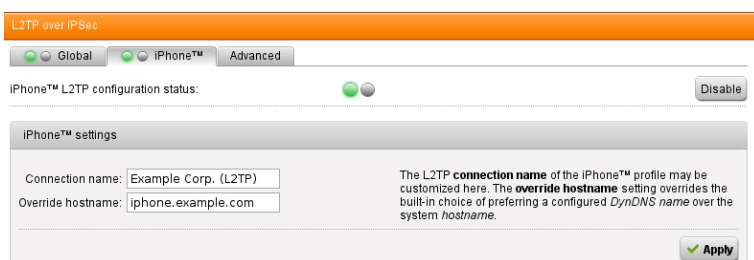


Figure 151 Remote Access L2TP: iOS Devices Settings

However, only users that have been added to the *Users and Groups* box on the *Global* tab will find configuration files on their User Portal site. The iOS device status is enabled by default.

Connection Name: Enter a descriptive name for the L2TP over IPsec connection so that iOS device users may identify the connection they are going to establish. The default name is your company name followed by the protocol L2TP over IPsec.

Note - *Connection Name* must be unique among all iOS device connection settings (PPTP, L2TP over IPsec, Cisco VPN Client).

Override Hostname: In case the system hostname cannot be publicly resolved by the client, you can enter a server hostname here that overrides the internal preference of the *DynDNS Hostname* before the *System DNS Hostname*.

To disable automatic iOS device configuration, click the status icon or *Disable* in the header of the tab.

The status icon turns red.

15.3.3 Advanced

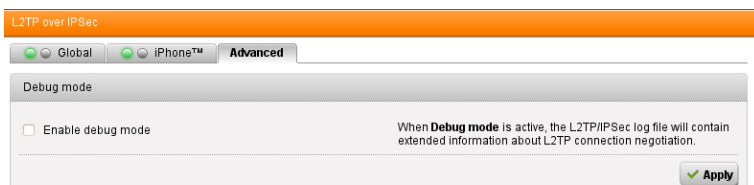


Figure 152 Remote Access L2TP: Advanced Settings

Debug Mode

Enable Debug Mode: This option controls how much debug output is generated in the L2TP over IPsec log. Select this option if you encounter connection problems and need detailed information about the negotiation of client parameters, for example.

15.4 IPsec

IP Security (IPsec) is a standard for securing *Internet Protocol* (IP) communications by encrypting and/or authenticating all IP packets.

The IPsec standard defines two service modes and two protocols:

- Transport mode
- Tunnel mode
- *Authentication Header* (AH) authentication protocol
- *Encapsulated Security Payload* (ESP) encryption (and authentication) protocol

IPsec also offers methods for manual and automatic management of *Security Associations* (SAs) as well as key distribution. These characteristics are consolidated in a *Domain of Interpretation* (DOI).

IPsec Modes

IPsec can work in either transport mode or tunnel mode. In principle, a host-to-host connection can use either mode. If, however, one of the endpoints is a security gateway, the tunnel mode must be used. The IPsec VPN connections on this ASG always use the tunnel mode.

In transport mode, the original IP packet is not encapsulated in another packet. The original IP header is retained, and the rest of the packet is sent either in clear text (AH) or encrypted (ESP). Either the complete packet can be authenticated with AH, or the payload can be encrypted and authenticated using ESP. In both cases, the original header is sent over the WAN in clear text.

In tunnel mode, the complete packet—header and payload—is encapsulated in a new IP packet. An IP header is added to the IP packet, with the destination address set to the receiving tunnel endpoint. The IP addresses of the encapsulated packets remain unchanged. The original packet is then authenticated with AH or encrypted and authenticated using ESP.

IPsec Protocols

IPsec uses two protocols to communicate securely on the IP level.

- **Authentication Header (AH):** A protocol for the authentication of packet senders and for ensuring the integrity of packet data.
- **Encapsulating Security Payload (ESP):** A protocol for encrypting the entire packet and for the authentication of its contents.

The *Authentication Header* protocol (AH) checks the authenticity and integrity of packet data. In addition, it checks that the sender and receiver IP addresses have not been changed in transmission. Packets are authenticated using a checksum created using a *Hash-based Message Authentication Code* (HMAC) in connection with a key. One of the following hashing algorithms will be used:

- **Message Digest Version 5 (MD5):** This algorithm generates a 128-bit checksum from a message of any size. This checksum is like a fingerprint of the message, and will change if the message is altered. This hash value is sometimes also called a digital signature or a message digest.
- **The Secure Hash (SHA-1):** This algorithm generates a hash similar to that of MD5, though the SHA-1 hash is 160 bits long. SHA-1 is more secure than MD5, due to its longer key.

Compared to MD5, an SHA-1 hash is somewhat harder to compute, and requires more CPU time to generate. The computation speed depends, of course, on the processor speed and the number of IPsec VPN connections in use at the Astaro Security Gateway.

In addition to encryption, the *Encapsulated Security Payload* protocol (ESP) offers the ability to authenticate senders and verify packet contents. If ESP is used in tunnel mode, the complete IP packet (header and payload) is encrypted. New, unencrypted IP and ESP headers are added to the encapsulating packet: The new IP

header contains the address of the receiving gateway and the address of the sending gateway. These IP addresses are those of the VPN tunnel.

For ESP with encryption normally the following algorithms are used:

- Triple Data Encryption Standard (3DES)
- Advanced Encryption Standard (AES)

Of these, AES offers the highest standard of security. The effective key lengths that can be used with AES are 128, 192 and 256 bits. Astaro Security Gateway supports a number of encryption algorithms. Either the MD5 or SHA-1 algorithms can be used for authentication.

NAT Traversal (NAT-T)

NAT traversal is a technology for establishing connections between hosts in TCP/IP networks which use NAT devices. This is achieved by using UDP encapsulation of the ESP packets to establish IPsec tunnels through NAT devices. UDP encapsulation is only used if NAT is detected between the IPsec peers; otherwise normal ESP packets will be used.

With NAT traversal you are able to place the gateway or a road warrior behind a NAT router and still establish an IPsec tunnel. Both IPsec peers must support NAT traversal if you want to use this feature, which is automatically negotiated. Make sure that the NAT device has IPsec-passthrough turned off, because this could impair the use of NAT traversal.

If road warriors want to use NAT traversal, their corresponding user object in WebAdmin must have a static remote access IP address (RAS address) set (see also *Use Static Remote Access IP* on the [Users](#) page in WebAdmin).

By default, a NAT traversal keep-alive signal is sent at intervals of 60 seconds to prevent an established tunnel from expiring when no data is transmitted. The keep-alive messages are sent to ensure that the NAT router keeps the state information associated with the session so that the tunnel stays open.

TOS

Type of Service bits (TOS bits) are several four-bit flags in the IP header. These bits are referred to as *Type of Service* bits because they allow the transferring application to tell the network which type of service quality is necessary.

With the IPsec implementation of Astaro Security Gateway the TOS value is always copied.

15.4.1 Connections

On the *IPsec > Connections* tab you can create and edit IPsec connections.

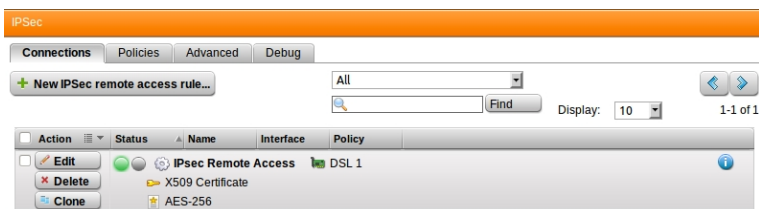


Figure 153 Remote Access IPsec: Connections List

To create an IPsec connection, proceed as follows:

1. **On the *Connections* tab, click *New IPsec Remote Access Rule*.**
The *Add IPsec Remote Access Rule* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this connection.

Interface: Select the name of the interface which is used as the local end-point of the IPsec tunnel.

Local Networks: Select the local networks that should be reachable through the VPN tunnel.

Virtual IP Pool: The IP address pool where clients get an IP address assigned from in case they do not have a static IP address. The default pool is *VPN Pool (IPsec)* which comprises the private IP space 10.242.4.0/24. You can, however, select or create a different IP address pool.

Policy: Select the IPsec policy for this IPsec connection. IPsec policies can be defined on the *Remote Access > IPsec > Policies* tab.

Authentication Type: Select the authentication type for this remote gateway definition. The following types are available:

- **Preshared key:** Authentication with *Preshared Keys* (PSK) uses secret passwords as keys. These passwords must be distributed to the end-points before establishing the connection. When a new VPN tunnel is established, each side checks that the other knows the secret password. The security of PSKs depends on the quality of the passwords used: common words and phrases are subject to dictionary attacks. Permanent or long-term IPsec connections should use certificates instead.
- **X.509 Certificate:** The X.509 Certificate authentication scheme uses public keys and private keys. An X.509 certificate contains the public key together with information identifying the owner of the key. Such certificates are signed and issued by a trusted *Certificate Authority* (CA). Once selected, specify the users that should be allowed to use this IPsec connection. It is not possible to drag back-end user groups into the *Allowed Users* field. Unless you select the checkbox *Automatic Firewall Rules*, you need to specify appropriate firewall rules manually in the *Network Security* menu.

Note - The [User Portal](#) can only be accessed by users who are selected in the *Allowed Users* box and for whom a user definition does exist on the ASG. Authorized users who have successfully logged in to the User Portal will find the *Astaro IPsec Client* (AIC), its configuration file, the *PKCS#12* file as well as a link to installation instructions, which are available at the [Astaro Knowledgebase](#).

- **CA DN Match:** This authentication types uses a match of the *Distinguished Name* (DN) of CA certificates to verify the keys of the VPN endpoints. Once selected, select an *Authority* and choose a *DN Mask* that matches the DNs of remote access clients. Now select or add a *Peer Subnet Range*. Clients are only allowed to connect if the DN mask matches the one in their certificate.

Enable XAUTH (optional): Extended authentication should be enabled to require authentication of users against configured back-ends.

Automatic Firewall Rules (optional): This option is only available with the authentication type *X.509 Certificate*.

Once the IPsec connection has been successfully established, firewall rules will automatically be added for the respective data traffic. They will be removed as soon as the connection is closed.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new remote access rule appears on the *Connections* list.

To either edit or delete a remote access rule, click the corresponding buttons.

15.4.2 Policies

On the *Remote Access > IPsec > Policies* tab you can customize parameters for IPsec connections and unite them into a policy. An IPsec policy defines IKE (Inter-net Key Exchange) and IPsec proposal parameters of an IPsec connection. Note that each IPsec connection needs an IPsec policy.

Note - Astaro Security Gateway only supports the main mode in IKE phase 1. The aggressive mode is not supported.

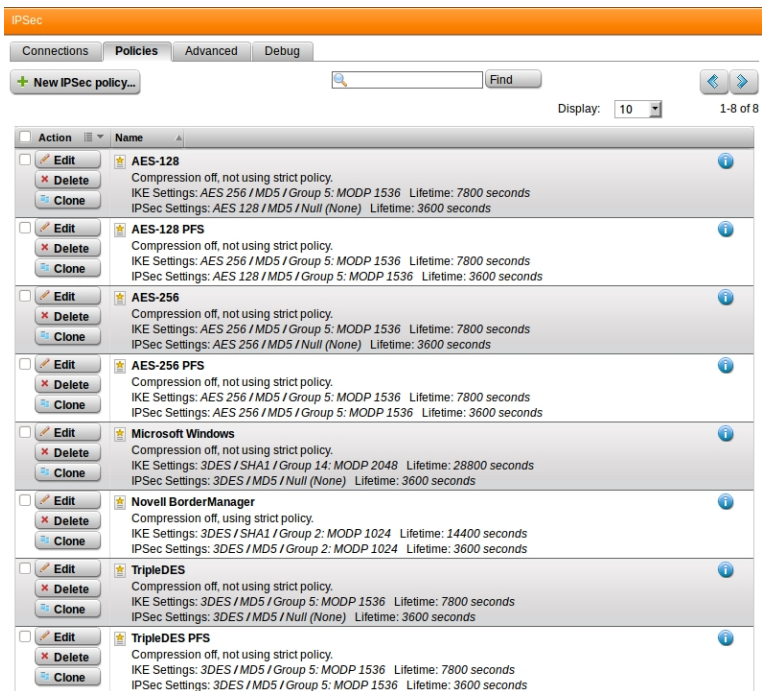


Figure 154 Remote Access IPsec: Policies List

To create an IPsec policy, proceed as follows:

1. **On the *Policy* tab, click *New IPsec Policy*.**

The *Add IPsec Policy* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for this policy.

IKE Encryption Algorithm: The encryption algorithm specifies the algorithm used for encrypting the IKE messages. Supported algorithms are:

- *DES* (56 bit)
- *3DES* (168 bit)
- *AES 128* (128 bit)
- *AES 192* (192 bit)
- *AES 256* (256 bit)

- *Blowfish* (128 bit)
- *Twofish* (128 bit)
- *Serpent* (128 bit)

IKE Authentication Algorithm: The authentication algorithm specifies the algorithm used for integrity checking of the IKE messages. Supported algorithms are:

- *MD5* (128 bit)
- *SHA1* (160 bit)
- *SHA2 256* (256 bit)
- *SHA2 384* (384 bit)
- *SHA2 512* (512 bit)

IKE SA Lifetime: This value specifies the timeframe in seconds for which the IKE SA (security association) is valid and when the next rekeying should take place. Valid values are between 60 sec and 28800 sec (8 hrs). The default value is 7800 seconds.

IKE DH Group: When negotiating a connection, the communicating parties also settle the actual keys used to encrypt the data. In order to generate a session key, IKE uses the *Diffie-Hellman* (DH) algorithm, which utilizes random data. The random data generation is based on pool bits. The IKE group basically tells the number of pool bits. The more pool bits, the larger the random numbers. The larger the numbers, the harder it is to crack the Diffie-Hellman algorithm. As a consequence, more pool bits mean more security but also the consumption of more CPU resources. Currently, the following Diffie-Hellman groups are supported:

- Group 1: MODP 768
- Group 2: MODP 1024
- Group 5: MODP 1536
- Group 14: MODP 2048
- Group 15: MODP 3072
- Group 16: MODP 4096

Note - Group 1 (MODP 768) is considered weak and only supported for interoperability reasons.

IPsec Encryption Algorithm: The same encryption algorithms as for IKE.

IPsec Authentication Algorithm: The same authentication algorithms as for IKE. Additionally there are the following algorithms:

SHA2 256 (96 bit)

SHA2 384 (96 bit)

SHA2 512 (96 bit)

Those are available for compliance with tunnel endpoints not adhering to [RFC 4868](#), for example ASG versions older than V8, and therefore do not support truncated checksums longer than 96 bit.

IPsec SA Lifetime: This value specifies the timeframe in seconds for which the IPsec SA is valid and when the next rekeying should take place. Valid values are between 60 sec and 86400 sec (1 day). The default value is 7800 seconds.

IPsec PFS Group: *Perfect Forward Secrecy* (PFS) refers to the notion that if a session key is compromised, it will permit access only to data of this specific session. In order for PFS to exist, the key used to protect the IPsec SA must not be derived from random keying material used to get the keys for the IKE SA. Therefore, PFS initiates a second Diffie-Hellman key exchange proposing the selected DH group for the IPsec connection to get a new randomly generated key. Supported Diffie-Hellman groups are the same as for IKE.

Enabling PFS is considered to be more secure, but it takes also more time for the exchange. It is not recommended to use PFS on slow hardware.

Note - PFS is not fully interoperable with all vendors. If you notice problems during the negotiation, you might consider disabling PFS.

Strict Policy: If an IPsec gateway makes a proposition with respect to an encryption algorithm and to the strength, it might happen that the gateway of the receiver accepts this proposition, even though the IPsec policy does

not correspond to it. If you select this option and the remote endpoint does not agree on using exactly the parameters you specified, the IPsec connection will not be established. Suppose the IPsec policy of your ASG requires AES-256 encryption, whereas, for example, a road warrior with SSH Sentinel wants to connect with AES-128; with the strict policy option enabled, the connection would be rejected.

Note - The compression setting will not be enforced via *Strict Policy*.

Compression: This option specifies whether IP packets should be compressed by means of the *IP Payload Compression Protocol* (IPComp) prior to encryption. IPComp reduces the size of IP packets by compressing them to increase the overall communication performance between a pair of communicating hosts or gateways. Compression is turned off by default.

Comment (optional): Add a description or other information.

3. **Click Save.**

The new policy appears on the *Policies* list.

To either edit or delete a policy, click the corresponding buttons.

15.4.3 Advanced

On the *Remote Access > IPsec > Advanced* tab you can configure advanced options of IPsec VPN. Depending on your preferred authentication type, you can define the local certificate (for X.509 authentication) and the local RSA key (for RSA authentication), among other things. Note that this should only be done by experienced users.

Figure 155 Remote Access IPsec: Advanced Settings

Local X.509 Certificate

With X.509 authentication, certificates are used to verify the public keys of the VPN endpoints. If you want to use this authentication type, you have to select a local certificate from the drop-down list in the *Local X.509 Certificate* area. The selected key/certificate is then used to authenticate the gateway to remote peers if X.509 authentication is selected.

You can only select certificates where the appropriate private key is present, other certificates are not available in the drop-down list.

If there is no certificate available for selection, you have to add one in the *Certificate Management* menu, either by creating a new one or by importing one using the upload function.

After selecting the certificate, enter the passphrase the private key was protected with. During the saving process, the passphrase is verified and an error message is displayed if it does not match the encrypted key.

Once an active key/certificate is selected, it is displayed in the *Local X.509 Certificate* area.

Dead Peer Detection (DPD)

Use Dead Peer Detection: The dead peer detection option is used for automatically terminating a connection if the remote VPN gateway or client is unreachable. For connections with static endpoints, the tunnel will be re-negotiated automatically. Connections with dynamic endpoints require the remote side to re-negotiate the tunnel. Usually it is safe to always enable this option. The IPsec peers automatically determine whether the remote side supports dead peer detection or not, and will fall back to normal mode if necessary.

NAT Traversal (NAT-T)

Use NAT Traversal: Select to enable that IPsec traffic can pass upstream systems which use *Network Address Translation* (NAT). Additionally, you can define the keepalive interval for NAT traversal. Click *Apply* to save your settings.

CRL Handling

There might be situations in which the provider of a certificate attempts to revoke the confirmation awarded with still valid certificates, for example if it has become known that the receiver of the certificate fraudulently obtained it by using wrong data (name, etc.) or because an attacker has got hold of the private key, which is part of the certified public key. For this purpose, so-called *Certificate Revocation Lists* or CRLs are used. They normally contain the serial numbers of those certificates of a certifying instance, that have been held invalid and that are still valid according to their respective periods of validity.

After the expiration of these periods the certificate will no longer be valid and must therefore not be maintained in the block list.

Automatic Fetching: This function automatically requests the CRL through the URL defined in the partner certificate via HTTP, Anonymous FTP or LDAP version 3. On request, the CRL can be downloaded, saved and updated, once the validity period has expired. If you use this feature but not via port 80 or 443, make sure that you set the firewall rules accordingly, so that the CRL distribution server can be accessed.

Strict Policy: If this option is enabled, any partner certificate without a corresponding CRL will be rejected.

Preshared Key Probing

For IPsec connections using the respond-only mode you can decide to use different preshared keys (PSK) for each IPsec connection.

Enable probing of preshared keys: Select the checkbox to enable this option. This will affect L2TP-over-IPsec, remote access IPsec, and VPN IPsec connections.

15.4.4 Debug

On the *Debug* tab you can configure IKE debug options. Select the checkboxes for which types of IKE messages you want to create debug output.

Note – The *Debug* tab is identical across the menus *Site-to-site VPN IPsec*, *Remote Access IPsec*, and *Cisco VPN Client*.

The following flags can be logged:

- **Control:** Displays control messages of IKE state
- **Emitting:** Displays content of outgoing IKE messages
- **Parsing:** Displays content of incoming IKE messages
- **Raw:** Displays messages as raw bytes
- **Crypt:** Shows encryption and decryption operations

15.5 Cisco VPN Client

Astaro Security Gateway supports IPsec remote access via Cisco VPN Client. The Cisco VPN Client is an executable program from Cisco Systems that allows computers to connect remotely to a *Virtual Private Network* (VPN) in a secure way.

15.5.1 Global

On the *Remote Access > Cisco VPN Client > Global* tab you can configure basic options for setting up remote access via Cisco VPN Client.

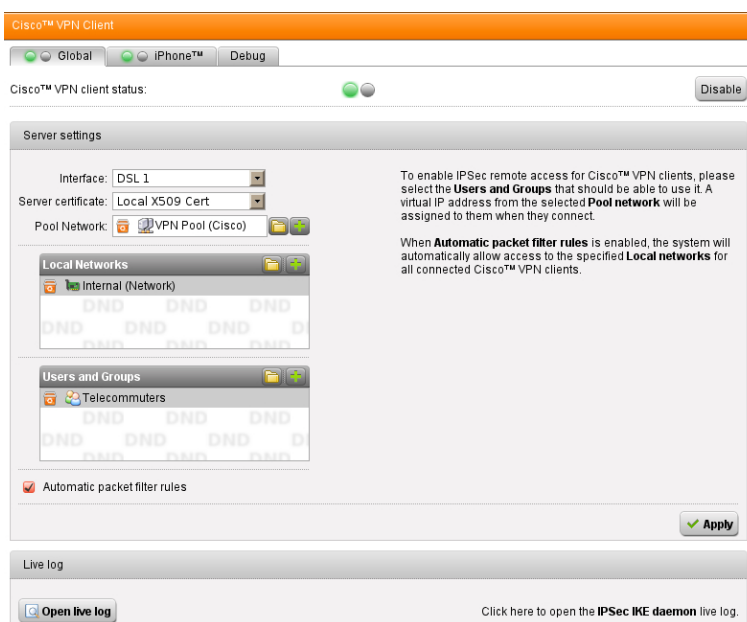


Figure 156 Cisco VPN Client: Enabling Remote Access via Cisco VPN Client

To configure Astaro Security Gateway to allow Cisco VPN Client connections, proceed as follows:

1. **On the *Global* tab enable Cisco VPN Client.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Server Settings* area becomes editable.

2. **Make the following settings:**

Interface: Select an interface to be used for Cisco VPN Client connections.

Server Certificate: Select the certificate with which the server identifies itself to the client.

Pool Network: Select a network pool to choose virtual network addresses from to assign them to connecting clients. By default *VPN Pool (Cisco)* is selected.

Users and Groups: Select users and/or groups that are allowed to connect to the ASG via Cisco VPN Client. However, it is not possible to drag back-end

membership groups into the box because a user certificate is needed at IPsec configuration time but the certificate is only generated when a user successfully logs in for the first time.

Local Networks: Select the local networks that should be reachable through the VPN tunnel.

Automatic Firewall Rules (optional): Once the IPsec connection has been successfully established, firewall rules will automatically be added for the respective data traffic. They will be removed as soon as the connection is closed.

3. **Click *Apply*.**

Your settings will be saved.

Live Log

Use the live log to track connection logs of the IPsec IKE daemon log. It shows information on establishing, upkeeping, and closing connections.

15.5.2 iOS Devices

You can enable that iOS device users are offered automatic Cisco IPsec configuration in the User Portal.



Figure 157 Cisco VPN Client: iOS Device Settings

However, only users that have been added to the *Users and Groups* box on the *Global* tab will find configuration files on their User Portal site. The iOS device status is enabled by default.

Connection Name: Enter a descriptive name for the Cisco IPsec connection so that iOS device users may identify the connection they are going to establish. The default name is your company name followed by the protocol Cisco IPsec.

Note - *Connection Name* must be unique among all iOS device connection settings (PPTP, L2TP over IPsec, Cisco VPN Client).

Override Hostname: In case the system hostname cannot be publicly resolved by the client, you can enter a server hostname here that overrides the internal preference of the *DynDNS Hostname* before the *System DNS Hostname*.

To disable automatic iOS device configuration, click the status icon or *Disable* in the header of the tab.

The status icon turns red.

Establish VPN Connection On Demand: Select this option to automatically initiate a connection whenever the location matches either the hostname or one of the domains.

Note that connecting iOS devices get presented the server certificate specified on the *Global* tab. The iOS device checks whether the VPN ID of this certificate corresponds to the server hostname and refuses to connect if they differ. If the server certificate uses *Distinguished Name* as VPN ID Type it compares the server hostname with the *Common Name* field instead. You need to make sure the server certificate fulfills these constraints.

15.5.3 Debug

On the *Debug* tab you can configure IKE debug options. Select the checkboxes for which types of IKE messages you want to create debug output.

Note – The *Debug* tab is identical across the menus *Site-to-site VPN IPsec*, *Remote Access IPsec*, and *Cisco VPN Client*.

The following flags can be logged:

- **Control:** Displays control messages of IKE state
- **Emitting:** Displays content of outgoing IKE messages
- **Parsing:** Displays content of incoming IKE messages

- **Raw:** Displays messages as raw bytes
- **Crypt:** Shows encryption and decryption operations

15.6 Advanced

On the *Remote Access > Advanced* page you can make the advanced configurations for remote access clients. The IP addresses of the DNS and WINS servers you enter here are provided for the use of remote access clients while establishing a connection to the gateway, thus providing full name resolution for your domain.

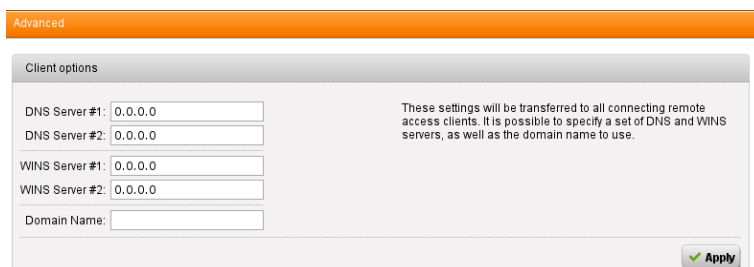


Figure 158 Remote Access: Advanced Settings

DNS Server: Specify up to two DNS servers of your organization.

WINS Server: Specify up to two WINS servers of your organization. *Windows Internet Naming Service* (WINS) is Microsoft's implementation of *NetBIOS Name Server* (NBNS) on Windows operating systems. Effectively, WINS is to NetBIOS names what DNS is to domain names—a central mapping of hostnames to IP addresses.

Domain Name: Enter the *fully qualified domain name* (FQDN) of your organization. The fully qualified domain name is an unambiguous domain name that specifies the node's absolute position in the DNS tree hierarchy, for example `intranet.example.com`.

Note - For PPTP and L2TP over IPsec the domain name *cannot* be distributed automatically, but needs to be configured on the client side.

iOS devices using *Cisco VPN Client*, the DNS servers specified above are only used to resolve hosts that belong to the specified domain.

15.7 Certificate Management

Using the *Remote Access > Certificate Management* menu, which contains the same configuration options as the *Site-to-site VPN > Certificate Management* menu, you can manage all certificate-related operations of Astaro Security Gateway. This includes creating or importing X.509 certificates as well as uploading so-called *Certificate Revocation List* (CRL), among other things.

15.7.1 Certificates

See *Site-to-site VPN > Certificate Management > [Certificates](#)*.

15.7.2 Certificate Authority

See *Site-to-site VPN > Certificate Management > [Certificate Authority](#)*.

15.7.3 Revocation Lists (CRLs)

See *Site-to-site VPN > Certificate Management > [Revocation Lists \(CRLs\)](#)*.

15.7.4 Advanced

See *Site-to-site VPN > Certificate Management > [Advanced](#)*.

16 Logging & Reporting

This chapter describes the logging and reporting functionality of Astaro Security Gateway.

Astaro Security Gateway provides extensive logging capabilities by continuously recording various system and network protection events. The detailed audit trail provides both historical and current analysis of various network activities to help identify potential security threats or to troubleshoot occurring problems.

The reporting function of Astaro Security Gateway provides real-time information of its managed devices by collecting current log data and presenting it in a graphical format.

The *Log Partition Status* page in WebAdmin shows the status of the log partition of your Astaro Security Gateway unit, including information about the disk space left and fillup rate as well as a four-week histogram of the log partition utilization. As the fillup rate is the difference between the measurement point and the starting point divided by the time elapsed, the value is somewhat inaccurate in the beginning but becomes more precise the longer the system is up.

The following topics are included in this chapter:

- [View Log Files](#)
- [Hardware](#)
- [Network Usage](#)
- [Network Security](#)
- [Web Security](#)
- [Mail Security](#)
- [Remote Access](#)
- [Web Application Firewall](#)
- [Executive Report](#)
- [Log Settings](#)
- [Reporting Settings](#)

Flash-based Reporting

Starting with version 8, Astaro Security Gateway by default displays reporting data charts as Adobe® Flash® animations. Those Flash charts allow a more fine-grained access to information forming the basis of a chart than the static images used formerly. However, if you prefer to use V7 reporting style, you can switch back to static imagery by changing the preferences (see *Management > WebAdmin Settings > [User Preferences](#)*).

Line Charts

Interacting with flash line charts is easy: When hovering the mouse cursor on a chart a big dot will appear, which gives detailed information of this part of the chart. The dot is clung to the line of the chart. As you move the mouse cursor the dot follows. In case a chart has several lines, the dot switches between them according to where you move the mouse cursor. Additionally, the dot changes its color depending on which line its information refer to, which is especially useful with lines running close to each other.

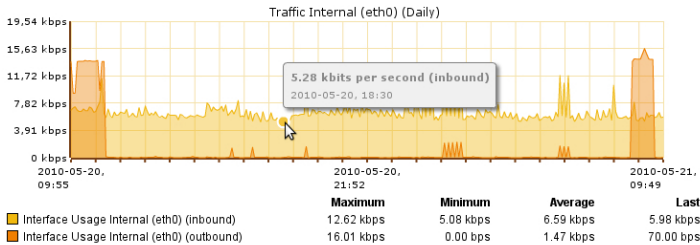


Figure 159 Reporting: Example of a Flash-based Line Chart

Pie Charts

Similar to Flash line charts, you can interact with pie charts: Direct the mouse cursor to a piece of a pie chart. This piece will immediately be extracted from the rest of the pie, the tooltip showing detailed information of the extracted piece.

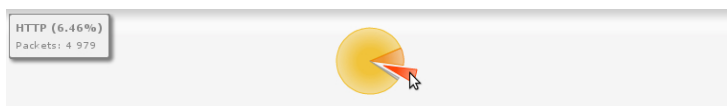 


Figure 160 Reporting: Example of a Flash-based Pie Chart

16.1 View Log Files

The *Logging & Reporting > View Log Files* menu offers the possibility to view different kind of log files and to search in log files.

16.1.1 Today's Log Files

On the *Logging & Reporting > View Log Files > Today's Log Files* tab all current logs can easily be accessed.

View Log Files			
Today's Log Files Archived Log Files Search Log Files			
Log name	Activity	Size	Actions
<input type="checkbox"/> Admin notifications	Today	2.6 kB	Live Log View Clear
<input type="checkbox"/> Boot messages	Today	26.5 kB	Live Log View Clear
<input type="checkbox"/> Configuration daemon	Today	82.9 kB	Live Log View Clear
<input type="checkbox"/> Content Filter (HTTP/S)	Today	137 kB	Live Log View Clear
<input type="checkbox"/> DHCP server		0 bytes	Live Log
<input type="checkbox"/> DNS proxy	Today	3.0 kB	Live Log View Clear
<input type="checkbox"/> Device agent		0 bytes	Live Log

Figure 161 Logging: Today's Log Files

This tab provides various actions that can be applied to all logfiles. The following actions are available:

- **Live Log:** Opens a pop-up window allowing you to view the logfile in real-time. New lines are added to the logfile on the fly. If you select *Autoscroll*, the pop-up window will automatically scroll down to always display the most recent log. In addition, the pop-up window also contains a filter text box that allows you to limit the display of new logs to only those records that match the filter.
- **View:** Opens a pop-up window that shows the logfile in its current state.
- **Clear:** Deletes the contents of the logfile.

Using the drop-down list in the table footer, you can either download selected log-files as a zip file or clear their contents simultaneously.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options* > *Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7. The Live Log pop-up might stop adding lines in some cases. If you experience this kind of problem, try to press **F5** (refresh) within the Live Log window.

16.1.2 Archived Log Files

On the *Logging & Reporting* > *View Log Files* > *Archived Log Files* tab you can manage the logfile archive. All logfiles are archived on a daily basis. To access an archived logfile, select the subsystem of Astaro Security Gateway for which logs are written as well as a year and month.

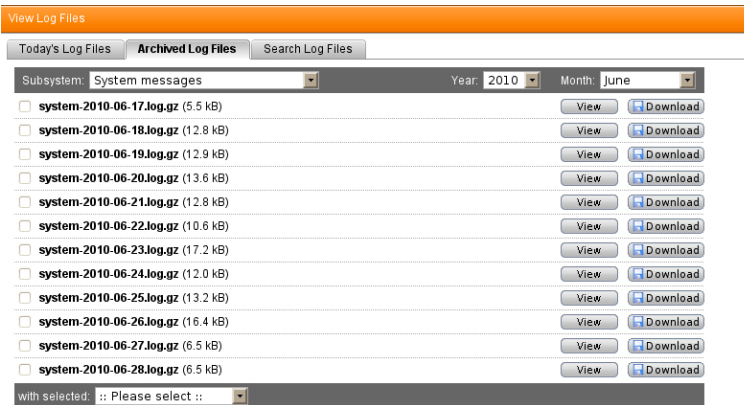


Figure 162 Logging: Archived Log Files

All available logfiles that match your selection will be displayed in chronological order. You can either view the archived logfile or download it in zip file format.

Using the drop-down list in the table footer, you can either download selected log-files as a zip file or delete them simultaneously.

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options* > *Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

16.1.3 Search Log Files

The tab *Logging & Reporting* > *View Log Files* > *Search Log Files* enables you to search through your local logfiles for various time periods. First, select the logfile you want to search through, then enter the search term and select the time range. If you select *Custom Time Frame* from the *Select Time Frame* list, you can specify a start and end date. After clicking the *Start Search* button, a popup window will open presenting the results of your query. Depending on your browser it may be necessary to allow pop-up windows for WebAdmin.

The screenshot shows a web interface titled "View Log Files" with three tabs: "Today's Log Files", "Archived Log Files", and "Search Log Files". The "Search Log Files" tab is active. Below the tabs is a section titled "Query log files" with a descriptive paragraph: "You can search log files with this form. Select the subsystem, a timeframe and enter a text string to search for. A popup window will open that contains the results. You can open several windows at the same time." The form contains the following fields: "Select log file to search:" with a dropdown menu showing "Firewall"; "Search term:" with a text input field; "Select time frame:" with a dropdown menu showing "Custom time frame"; "Custom start date:" with three dropdown menus showing "30", "September", and "2010"; and "Custom end date:" with three dropdown menus showing "30", "September", and "2011". At the bottom right of the form is a button labeled "Start search" with a green checkmark icon.

Figure 163 Logging: Searching Log Files

16.2 Hardware


The *Logging & Reporting* > *Hardware* menu provides overview statistics about the utilization of hardware components for several time periods.

16.2.1 Daily


The *Hardware > Daily* tab provides overview statistics about the following hardware components of the last 24 hours:

- CPU Usage
- Memory/Swap Usage
- Partition Usage


CPU Usage: The histogram displays the current processor utilization in percent.

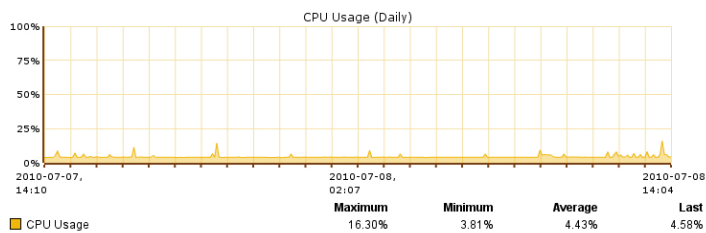

Memory/Swap Usage: The utilization of memory and swap in percent. The swap usage heavily depends on your system configuration. The activation of system services such as Intrusion Prevention or the proxy servers will result in a higher memory usage. If the system runs out of free memory, it will begin to use swap space, which decreases the overall performance of the system. The used swap space should be as low as possible. To achieve that, increase the total amount of memory available to your system.

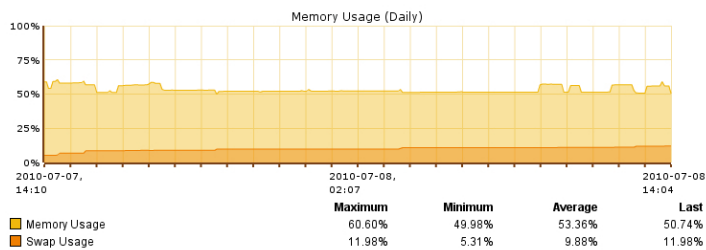

Partition Usage: The utilization of selected partitions in percent. All charts show three graphs, each representing one hard disk drive partition:

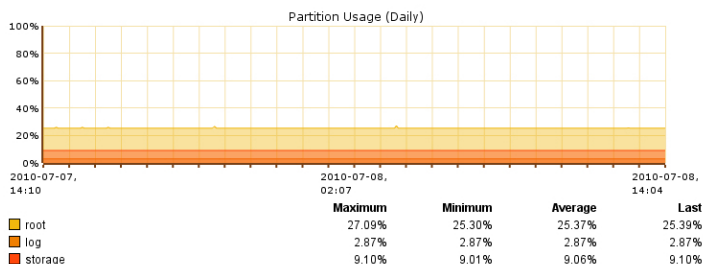

- **Root:** The root partition is the partition where the root directory of Astaro Security Gateway is located. In addition, this partition stores update packages and backups.
- **Log:** The log partition is the partition where log files and reporting data is stored. If you run out of space on this partition, please adjust your settings under *Logging & Reporting > Log Settings > [Local Logging](#)*.
- **Storage:** The storage partition is the partition where proxy services store their data, for example images for the Web Filter, messages for the SMTP proxy, quarantined mails and the like. In addition, the database, temporary data, and configuration files are located there.

16.2.2 Weekly

The *Hardware > Weekly* tab provides overview statistics about selected hardware components for the last seven days. The histograms are described in the [Daily](#) section.

16.2.3 Monthly

The *Hardware > Monthly* tab provides overview statistics about selected hardware components for the last four weeks. The histograms are described in the [Daily](#) section.

16.2.4 Yearly

The *Hardware > Yearly* tab provides overview statistics about selected hardware components for the last twelve months. The histograms are described in the [Daily](#) section.

16.3 Network Usage

The tabs of the *Logging & Reporting > Network Usage* menu provide overview statistics about the traffic passing each interface of Astaro Security Gateway for several time periods. Each chart presents its data using the following units of measurement:

- u (Micro, $10e^{-6}$)
- m (Milli, $10e^{-3}$)
- k (Kilo, $10e^3$)
- M (Mega, $10e^6$)
- G (Giga, $10e^9$)

Note that the scaling can range from $10e^{-18}$ to $10e^8$.

16.3.1 Daily

The *Network Usage > Daily* tab provides overview statistics about the traffic passing each configured interface of the last 24 hours.

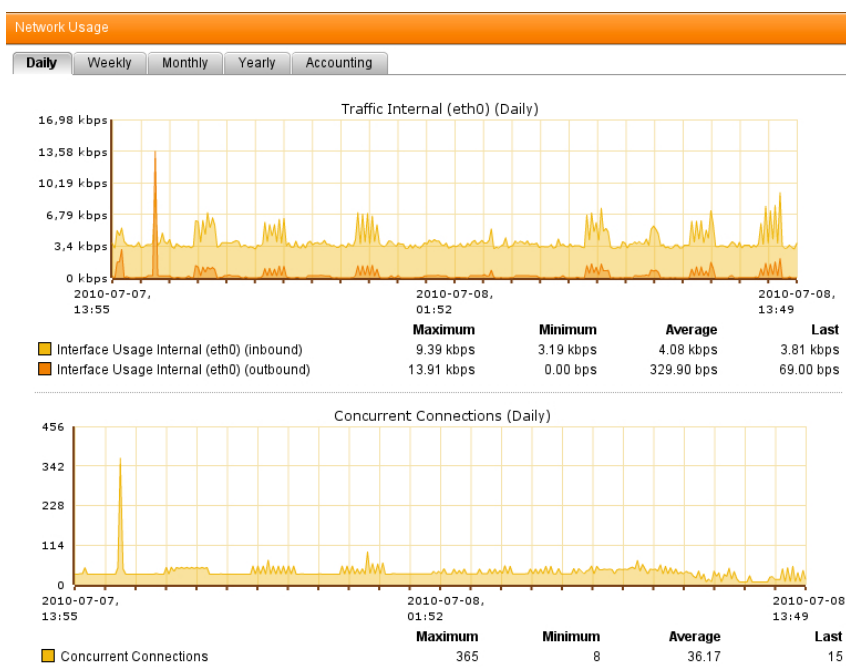


Figure 164 Reporting: Histogram of the Ethernet Interfaces Utilization

Each histogram shows two graphs:

- **Inbound:** The average incoming traffic for that interface, in bits per second.
- **Outbound:** The average outgoing traffic for that interface, in bits per second.

The *Concurrent Connections* chart shows you the total of concurrent connections.

16.3.2 Weekly

The *Network Usage > Weekly* tab provides overview statistics about the traffic passing each configured interface of the last seven days. The histograms are described in the [Daily](#) section.

16.3.3 Monthly

The *Network Usage > Monthly* tab provides overview statistics about the traffic passing each configured interface of the last four weeks. The histograms are described in the [*Daily*](#) section.

16.3.4 Yearly

The *Network Usage > Yearly* tab provides overview statistics about the traffic passing each configured interface of the last twelve months. The histograms are described in the [*Daily*](#) section.

16.3.5 Bandwidth Usage

The *Network Usage > Bandwidth Usage* tab presents comprehensive data about the network traffic which was transferred to/from and through the device.

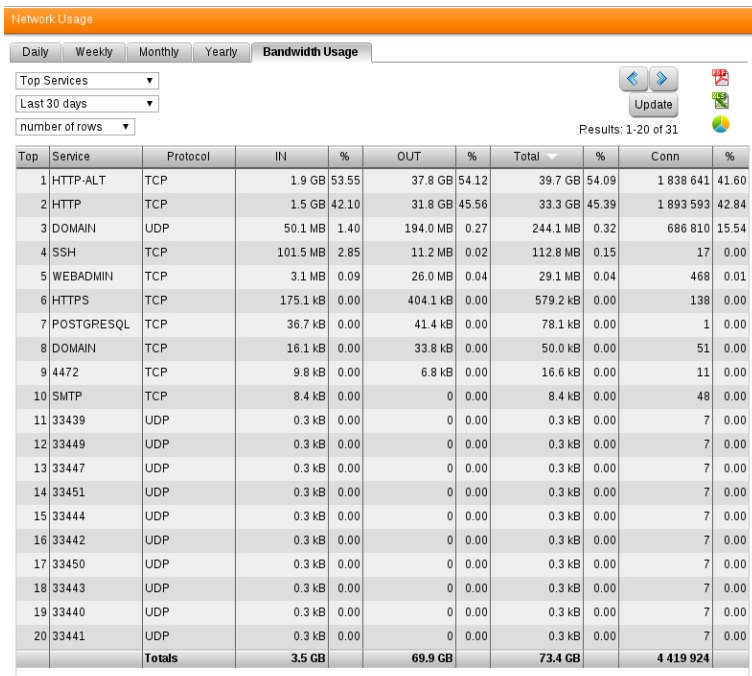


Figure 165 Reporting: Bandwidth Usage Data Sorted by Top Services

If an IP or a hostname is clicked in the result table on the *By Client/By Server* views, it will automatically be used as a filter for the *Top Services By Client* view. You can change this afterwards to the *Top Services by Server* view, or manually provide an IP/Network, as well as network ranges (e.g., 192.168.1.0/24 or 10/8), and confirm those settings by clicking the *Update* button.

On the *By Service* views you can enter protocol and service, separated by comma (e.g., *TCP,SMTP,UDP,6000*). If you do not supply the protocol, TCP will be assumed (e.g. *HTTP* is also valid). If there are more than 20 results per page, you can jump forward and backward using the next page and previous page buttons, respectively.

Top Applications/Top Application Groups: If Application Control is turned off, network traffic will be displayed as "unclassified". If Application Control is active, network traffic will be displayed by type, e.g. "WebAdmin", "NTP", "facebook", etc. For more information on Application Control see chapter *Web Security > Application Control*.

You can download the data in PDF or Excel format by clicking one of the corresponding icons in the top right corner of the tab. The report is generated from the current view you have selected. Additionally, by clicking the pie chart icon—if present—you can get a pie chart displayed above the table.

Please note that the labels *IN* and *OUT* for traffic may vary depending on the point of view. When running in proxy mode, the client connects to port 8080 on the ASG (even in transparent mode), so data sent by the client (the request) is seen as *incoming* traffic and the data sent to the client (the response) is seen as *outgoing* traffic on the internal interface.

Tip - You can sort all data by clicking the table column headings. For example, if you want to sort all hosts by incoming traffic, click on *IN* in the table heading. Thus, hosts causing the most incoming traffic will be listed first. Note that the data for traffic is given in kibibytes (KiB) and mebibytes (MiB), both of which are base-2 units of computer storage (e.g., 1 kibibyte = 2^{10} bytes = 1 024 bytes).

16.4 Network Security

The tabs of the *Logging & Reporting > Network Security* menu provide overview statistics about relevant network security events detected by Astaro Security Gateway.

16.4.1 Daily

The *Network Security > Daily* tab provides overview statistics about the following events of the last 24 hours:

- Firewall Violations
- Intrusion Prevention Events

Firewall Violations: Every data packet that is dropped or rejected is counted as a firewall violation. The number of firewall violations is calculated over a time span of five minutes.

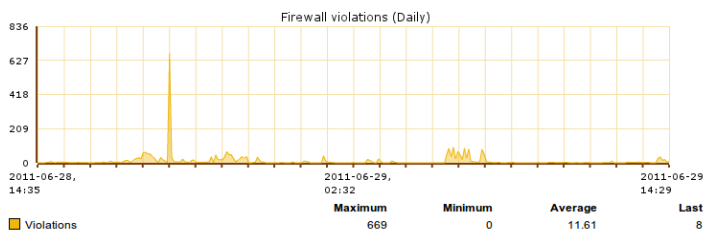


Figure 166 Reporting: Histogram of Firewall Violations (Daily)

Intrusion Prevention Events: All charts show two graphs:

- **Alert Events:** The number of data packets that triggered an intrusion alert.
- **Drop Events:** The number of data packets that were dropped by the intrusion prevention system.

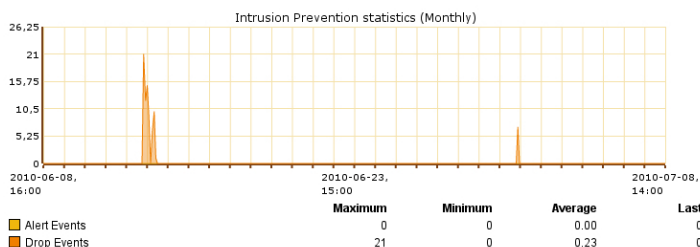


Figure 167 Reporting: Histogram of Intrusion Prevention Events (Monthly)

16.4.2 Weekly

The *Network Security > Weekly* tab provides overview statistics about firewall violations and intrusion prevention events of the last seven days. The histograms are described in the [Daily](#) section.

16.4.3 Monthly

The *Network Security > Monthly* tab provides overview statistics about firewall violations and intrusion prevention events of the last four weeks. The histograms are described in the [Daily](#) section.

16.4.4 Yearly

The *Network Security > Yearly* tab provides overview statistics about firewall violations and intrusion prevention events of the last twelve months. The histograms are described in the [Daily](#) section.

16.4.5 Firewall

The *Network Security > Firewall* tab presents comprehensive data about the firewall activity, classified according to source IP, source hosts, number of received packets and number of services.

If you click an IP or a hostname in the result table, it will automatically be used as a filter for the *Top Services* view. You can manually provide an IP/Network, as well as network ranges (e.g., 192.168.1.0/24 or 10/8), and use those settings by using the *Update* button.

On the *By Service* views you can enter protocol and service, separated by comma (e.g., *TCP,SMTP,UDP,6000*).

If there are more than 20 results per page, you can jump forward and backward using the next page and previous page buttons, respectively.

You can download the data in PDF or Excel format by clicking one of the corresponding icons in the top right corner of the tab. The report is generated from the current view you have selected. Additionally, by clicking the pie chart icon—if present—you can get a pie chart displayed above the table.

Tip - You can sort all data by clicking the table column headings. For example, if you want to sort the table by number of services, click on *Services* in the table heading. Thus, the source IP having requested the most services is listed first.

16.4.6 IPS

The *Network Security > IPS* tab presents comprehensive data about intrusion prevention activities on your network.

You can download the data in PDF or Excel format by clicking one of the corresponding icons in the top right corner of the tab. The report is generated from

the current view you have selected. Additionally, by clicking the pie chart icon—if present—you can get a pie chart displayed above the table.

Tip - You can sort all data by clicking the table column headings. For example, if you want to sort the table by number of packets, click on *Packets* in the table heading. Thus, the source IP having requested the most packets is listed first.

16.5 Web Security

The tabs of the *Logging & Reporting > Web Security* menu provide overview statistics about the most active web users and most frequently visited websites.

16.5.1 Web Usage Report

The *Logging & Reporting > Web Security > Web Usage Report* page is a mighty tool when you want to take a deeper look into your network traffic and your users' web usage. At a first glance, this page looks very complicated, but the best way to start is to use it and learn from the results.

Page Structure

Header Bar

First there is the header bar which consists of the following elements:

- **Home:** This icon takes you back to the beginning, clear of any clicks or filters.
- **Forward/Backward:** Use these icons to move back and forth along the history of your changes and settings. It works like in every web browser.
- **Available Reports:** This drop-down list contains all available report types including, if existent, your saved reports. It is set to *Sites* by default. The result table of the *Web Usage Report* page is directly dependent on this reporting type setting.

Note – When using filters and clicking through reports notice how the *Available Reports* setting changes automatically. It always reflects the current reporting basis.

Standard: There are five report types available, see below for a detailed description.

Saved Web Reports: Here you can select saved web reports you created in the past.

- **Delete:** Click this icon to delete a saved web report. Standard reports cannot be deleted.
- **Save:** Click this icon to save a current view to be able to access this view easily in the future. It will be stored in the *Available Reports* drop-down list. If you select the checkbox *Send Reports*, you can enter one or more e-mail recipients who should receive this report. You can also receive saved reports on a regular basis, see section *Scheduled Reports* for more information.

Filter Bar

Next there is the filter bar which consists of the following elements:

- **Plus:** Click this icon to create additional filters, see below for a detailed description.
- **Amount:** Use the drop-down list to reduce the amount of results in the table. You can limit the results to the top 10, top 50, or top 100 results.
- **Time:** Use the drop-down list to limit or expand the results in the table to certain time frames. The *Custom* timeframe allows you to specify your own timeframe.
- **Departments:** Use the drop-down list to limit the results in the table to defined departments. Departments can be created on the *Departments* page.

Results Table

Last, there is the results table. What you see here depends firstly on the selected report type (always reflected at *Available Reports* list) and secondly on possibly defined filters.

Note – When anonymization is enabled, users are not displayed by their name or IP address but they appear enumerated instead.

Depending on the report type, the table provides different information:

	Users	Categories	Sites	Domains	URLs
#	✓	✓	✓	✓	✓
Traffic	✓	✓	✓	✓	✓
%	✓	✓	✓	✓	✓
Duration	✓		✓		
Pages	✓	✓	✓		
Requests	✓	✓	✓	✓	✓
Categories*					✓
Action*					✓
Reason*					✓
Info*					✓

* = Those cells can be clicked to further drill-down information.

#: Position with regard to traffic caused.

Traffic: Size of traffic caused.

%: Percentage on overall traffic.

Duration: Time spent by user(s) on the website.

Pages: Number of pages requested.

Requests: Number of requests for a category, site, domain, or URL.

Categories: Shows all categories a URL belongs to. With more than one category, clicking the category opens a small dialog field to select one of the categories from before a filter is created based on that category.

Action: Displays whether the website has been delivered to the client (*passed*) or whether it has been *blocked* by an application control rule.

Reason: Displays why a website request has been blocked. Example: A user tries to download an `msi` file and there is an application control rule which prohibits file transfers, then the cell displays "msi" for reason.

Info: If available, this cell displays additional information to why a website request has been blocked, e.g. when a file download was blocked due to its extension then the cell says "extension".

Defining Filters

Filters are used to drill down the information displayed in the result table. They can be defined in two different ways: either by clicking the *Plus* icon in the Filter Bar or by clicking into the table.

Via Plus icon: After clicking the green Plus icon in the Filter Bar a small filter box with two fields is displayed. The first field, a drop-down list, lets you choose a report type, for example *Category*. The second field lets you choose or enter a value for the selected report type, e.g. *Adult Topics* when *Category* is selected. Click *Save* to save the filter and at the same time apply it to the result table.

Via table: Clicking into the table opens a dialog window *Reporting Direction* if there is more than one report type available for the item you clicked. You need to select one of the presented options for filtering. After that the *Reporting Direction* window closes, the relevant filter is created and displayed in the Filter Bar. The results table now shows the newly filtered results.

Example: The default report of the *Web Usage Report* is *Sites*. In the results table you click on any row (e.g. amazon.com). The *Reporting Direction* window opens and gives you three options: either you want to see information on *Domains* for the site, on *Users* who visited the site, or on *Categories* the site belongs to. You see that several users visited amazon.com and you want to know more about this, so you click the *Users* box. The window closes. In the Header Bar you see that the report type changed to *Users* and in the Filter Bar you see that the result table for *Users* is filtered by the site you selected (amazon.com). Therefore the table shows all users who visited that site and additionally information on their sessions.

Note – Sometimes it makes a difference where you click into a table row as some table cells provide their own filter (see the items with an asterisk (*) in the section *Results Table* above).

16.5.2 Search Engine Report

The *Logging & Reporting > Web Security > Search Engine Report* page provides information on search engines used by your users and searches they made. At a first glance, this page looks very complicated, but the best way to start is to use it and learn from the results.

Page Structure

Header Bar

First there is the header bar which consists of the following elements:

- **Home:** This icon takes you back to the beginning, clear of any clicks or filters.
- **Forward/Backward:** Use these icons to move back and forth along the history of your changes and settings. It works like in every web browser.
- **Available Reports:** This drop-down list contains all available report types including, if existent, your saved reports. It is set to *Searches* by default. The result table of the *Search Engine Report* page is directly dependent on this reporting type setting.

Note – When using filters and clicking through reports notice how the *Available Reports* setting changes automatically. It always reflects the current reporting basis.

Standard: There are three report types available, see below for a detailed description.

Saved Search Engine Reports: Here you can select saved search engine reports you created in the past.

- **Delete:** Click this icon to delete a saved search engine report. Standard reports cannot be deleted.
- **Save:** Click this icon to save a current view to be able to access this view easily in the future. It will be stored in the *Available Reports* drop-down list. If you select the checkbox *Send Reports*, you can enter one or more e-mail

recipients who should receive this report. You can also receive saved reports on a regular basis, see section *Scheduled Reports* for more information.

Filter Bar

Next there is the filter bar which consists of the following elements:

- **Plus:** Click this icon to create additional filters, see below for a detailed description.
- **Amount:** Use the drop-down list to reduce the amount of results in the table. You can limit the results to the top 10, top 50, or top 100 results.
- **Time:** Use the drop-down list to limit or expand the results in the table to certain time frames. The *Custom* timeframe allows you to specify your own timeframe.
- **Departments:** Use the drop-down list to limit the results in the table to defined departments. Departments can be created on the *Departments* page.

Results Table

Last, there is the results table. What you see here depends firstly on the selected report type (always reflected at *Available Reports* list) and secondly on possibly defined filters. The following report types are available:

- **Searches:** Displays the search terms your users used.
- **Search Engines:** Displays the search engines your users used.
- **Users Searches:** Displays the users who did searches.

Note – When anonymization is enabled, users are not displayed by their name or IP address but they appear enumerated instead.

For each report type, the table provides the following information:

#: Position with regard to frequency.

Requests: Number of requests for a search term, for a search engine, or by a user.

%: Percentage on overall searches.

Defining Filters

Filters are used to drill down the information displayed in the result table. They can be defined in two different ways: either by clicking the *Plus* icon in the Filter Bar or by clicking into the table.

Via Plus icon: After clicking the green Plus icon in the Filter Bar a small filter box with two fields is displayed. The first field, a drop-down list, lets you choose a report type, for example *Search Engine*. The second field lets you choose or enter a value for the selected report type, e.g. *Google (google.com)* when *Search Engine* is selected. Click *Save* to save the filter and at the same time apply it to the result table.

Via table: Clicking into the table opens a dialog window *Reporting Direction* if there is more than one report type available for the item you clicked. You need to select one of the presented options for filtering. After that the *Reporting Direction* window closes, the relevant filter is created and displayed in the Filter Bar. The results table now shows the newly filtered results.

Example: The default report of the *Search Engine Report* is *Searches*. In the results table you click on any row (e.g. weather). The *Reporting Direction* window opens and gives you two options: either you want to see information on the search engines used for the search (*Search Engines*) or on users who searched for this term (*Users Searches*). You see that several users searched for weather and you want to know more about this, so you click the *Users Searches* box. The window closes. In the Header Bar you see that the report type changed to *Users Searches* and in the Filter Bar you see that the result table for *Users Searches* is filtered by the search you selected (weather). Therefore the table shows all users who searched for weather and additionally information on those searches.

Note – Sometimes it makes a difference where you click into a table row as some table cells provide their own filter (see the items with an asterisk (*) in the section *Results Table* above).

16.5.3 Departments

On the *Logging & Reporting > Web Security > Departments* page you can group users or hosts and networks to virtual departments. Those departments can then

be used to filter web usage reports or search engine reports.

To create a department, proceed as follows:

1. **On the *Departments* tab, click *Add Department*.**

The *Add New Department* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the department.

3. **Add users or hosts/networks.**

A department definition can only contain users or hosts/networks, not both types at the same time.

- **Users:** Add one or more users to the box who should be part of this department.
- **Hosts/Networks:** Add one or more hosts or networks to the box which should be part of this department.

Comment (optional): Add a description or other information.

4. **Click *Save*.**

The new department appears on the *Departments* list.

To either edit, delete, or clone a department click the corresponding buttons.

For information on usage of departments please see sections *Web Usage Report* and *Search Engine Report*.

16.5.4 Scheduled Reports

On the *Logging & Reporting > Web Security > Scheduled Reports* page you define which of your saved reports you would like to send by e-mail on a regular basis. Before you can create a scheduled report, you need to have a least one saved report (for more information on saving reports see sections *Web Usage Report* or *Search Engine Report*).

To create a scheduled report, proceed as follows:

1. **On the *Scheduled Reports* tab, click *Add Scheduled Report*.**

The *Add New Scheduled Report* dialog box opens.

2. **Make the following settings:**

Name: Enter a descriptive name for the scheduled report.

Interval: Select an interval from the drop-down list at which the report(s) should be sent.

Reports: All saved reports are listed here. Select the checkbox in front of each report that should be sent at the selected interval.

Recipients: Add recipients to the box who should receive the selected report(s). Note that you can add a list of recipients via the import button.

Comment (optional): Add a description or other information.

3. Click Save.

The new scheduled report appears on the *Scheduled Reports* list.

To either edit, delete, or clone a department click the corresponding buttons. Use the status icon of a report to disable sending of reports without deleting the scheduled report itself.

16.5.5 Application Control

The *Logging & Reporting > Web Security > Application Control* page contains comprehensive statistics about the most active sources, most frequently visited destinations, and the most popular applications given for various time ranges. Always confirm your changes by clicking the *Update* button. If there are more than 20 results per page, you can jump forward and backward using the next page and previous page buttons, respectively.

You can download the data in PDF or Excel format by clicking one of the corresponding icons in the top right corner of the tab. The report is generated from the current view you have selected. Additionally, by clicking the pie chart icon—if present—you can get a pie chart displayed above the table.

Tip - You can sort all data by clicking the table column headings. For example, if you want to sort all sources by their number of packets sent and received, click on *Packets* in the table heading. Thus, sources which sent and received the most packets will be listed first.

The most active sources do not appear immediately in the table, but only after a session timeout had occurred. This is the case if a certain client (username or IP address) has ceased to surf the web for five minutes. The ASG determines this

surfing session as "dead" and sends it to a database before it gets displayed on the most active sources list.

In addition, you can also select reports with the addendum *By Application* or *By Source*. You will then see a filter field where you need to enter the application or source you are looking for and confirm your settings by clicking *Update*. The table displays results (if any) filtered by the given application or source, respectively. Note that you can use the percent sign (%) as a wildcard. By placing a percent sign at the end of your keyword, you are telling Astaro Security Gateway to look for exact matches or sub-sets. Note that the filter field is case-sensitive. Example: If you enter "Google%" into the *Application* field, the table would show results for "Google Safe Browsing", "Google Analytics", and "Google" but *not* "google".

16.5.6 Deanonymization

The *Web Security > Deanonymization* tab is only accessible if anonymization is activated (see *Logging & Reporting > Reporting Settings > Anonymizing*).

Figure 168 Reporting: Deanonymizing Single Users

Here it is possible to abandon anonymization for specific users regarding web security reports. Proceed as follows:

1. **Enter both passwords.**

Enter the first and the second password that have been provided to enable anonymization.

2. **Add users to deanonymize.**

To the *Deanonymize Users* box add the usernames of those users you want to deanonymize.

3. **Click *Apply*.**

Your settings will be saved.

16.6 Mail Security

The tabs of the *Logging & Reporting > Mail Security* menu provide overview statistics about mail flow, mail usage and mail security.

16.6.1 Usage Graphs

The *Mail Security > Usage Graphs* tab provides overview statistics about the mail flow on the ASG given for various time frames:

- Daily
- Weekly
- Monthly
- Yearly


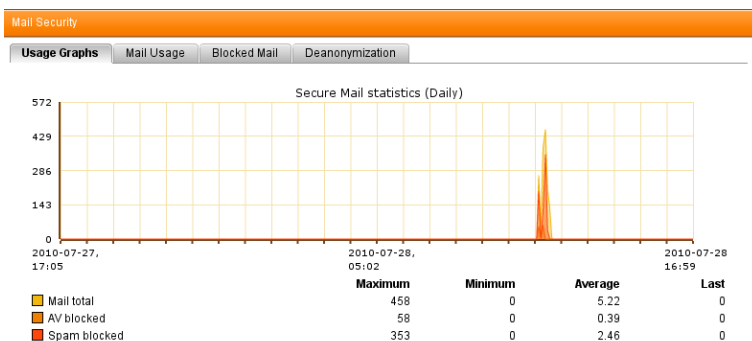


Figure 169 Reporting: Histogram of the Mail Flow

16.6.2 Mail Usage

The *Mail Security > Mail Usage* tab contains comprehensive statistics about the most actively used e-mail addresses and address domains given for various time ranges. Always confirm your changes by clicking the *Update* button. If there are more than 20 results per page, you can jump forward and backward using the next page and previous page buttons, respectively.

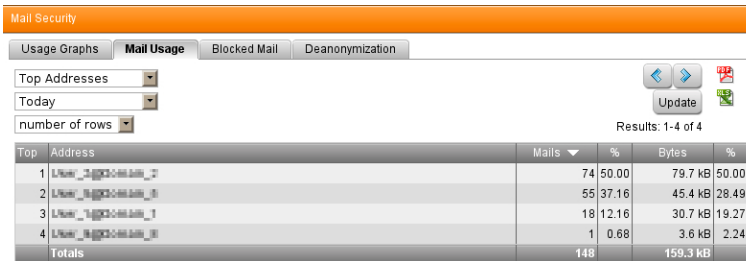

Top	Address	Mails	%	Bytes	%
1	LName_1@X2000-0000-0000_0	74	50.00	79.7 kB	50.00
2	LName_2@X2000-0000-0000_0	55	37.16	45.4 kB	28.49
3	LName_3@X2000-0000-0000_1	18	12.16	30.7 kB	19.27
4	LName_4@X2000-0000-0000_0	1	0.68	3.6 kB	2.24
Totals		148		159.3 kB	

Figure 170 Reporting: Ranking of Most Active E-mail Addresses

16.6.3 Blocked Mail

The *Mail Security > Blocked Mail* tab contains comprehensive statistics about all blocked e-mail requests based on antivirus and antispam. Always confirm your changes by clicking the *Update* button. If there are more than 20 results per page, you can jump forward and backward using the next page and previous page buttons, respectively.

16.6.4 Deanonymization

The *Mail Security > Deanonymization* tab is only accessible if anonymization is activated (see *Logging & Reporting > Reporting Settings > [Anonymizing](#)*).

Figure 171 Reporting: Deanonymizing E-mail Addresses and Domains

Here it is possible to abandon anonymization for specific e-mail addresses and/or domains regarding mail security reports. Proceed as follows:

1. **Enter both passwords.**
Enter the first and the second password that have been provided to enable anonymization.
2. **Make the following settings:**
Deanonymize Addresses: You can add e-mail addresses you want to deanonymize.
Deanonymize Domains: You can add domains you want to deanonymize.
3. **Click *Apply*.**
Your settings will be saved.
 Provided e-mail addresses and domains become readable in reports.

16.7 Remote Access

The tabs of the *Logging & Reporting > Remote Access* menu provide overview statistics about remote access activity and information on sessions.

16.7.1 Activity

The *Remote Access > Activity* tab provides overview statistics about the remote access activity on the ASG for IPsec, SSL VPN, PPTP, and L2TP given for various timeframes:

- Daily
- Weekly
- Monthly
- Yearly

Select Timeframe: Use the drop-down list to select a reporting timeframe. The page will reload automatically.

16.7.2 Session

The *Remote Access > Session* tab contains comprehensive statistics about completed sessions, failed logins, and current users given for various time ranges.

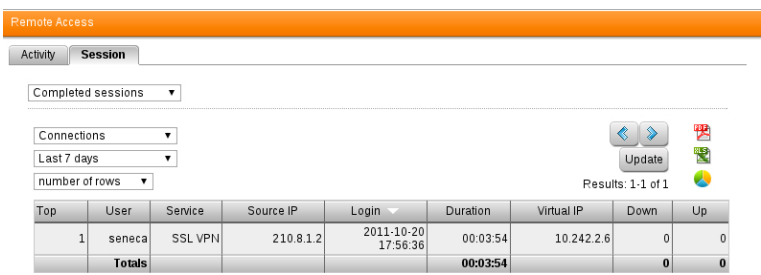


Figure 172 Reporting: Completed Session Connections of the Last 30 Days

You can filter the table data. The fastest way to filter is by clicking into a table header cell. Another way is to select a filter via the second drop-down list, to type in the filter argument and to click the *Update* button.

The following filters are available depending on the session selected in the first drop-down list:

- **By Service:** *Current Users, Completed Sessions, Failed Logins*
- **By User:** *Current Users, Completed Sessions*

- **By Source IP Address:** *Current Users, Completed Sessions*
- **By Virtual IP Address:** *Current Users, Completed Sessions, Failed Logins*

If there are more than 20 results per page, you can jump forward and backward using the next page and previous page buttons, respectively.

You can download the data in PDF or Excel format by clicking one of the corresponding icons in the top right corner of the tab. The report is generated from the current view you have selected. Additionally, by clicking the pie chart icon—if present—you can get a pie chart displayed above the table.

Tip - You can sort all data by clicking the table column headings. For example, if you want to sort the table by service, click on *Service* in the table heading. Thus, the table is sorted alphabetically by services.

16.8 Web Application Firewall

The tabs of the *Logging & Reporting > Web Application Firewall* menu provide overview statistics about web server requests, warnings, and alerts.

16.8.1 Usage Graphs

The *Web Application Firewall > Usage Graphs* tab provides overview statistics about the web server requests, warnings, and alerts on the ASG given for various time frames:

- Daily
- Weekly
- Monthly
- Yearly

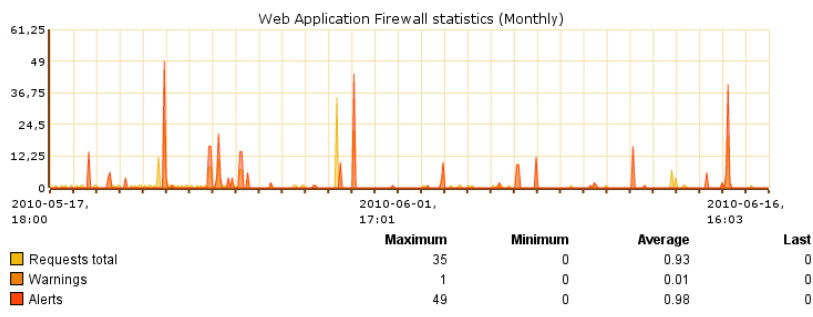


Figure 173 Reporting: Histogram of the Monthly Web Application Firewall Activities

16.8.2 Details

The *Web Application Firewall > Details* tab contains comprehensive statistics about the most active clients, virtual hosts, backends, response codes, and various attacks given for various time ranges. Always confirm your changes by clicking the *Update* button. If there are more than 20 results per page, you can jump forward and backward using the next page and previous page buttons, respectively.

You can download the data in PDF or Excel format by clicking one of the corresponding icons in the top right corner of the tab. The report is generated from the current view you have selected. Additionally, by clicking the pie chart icon—if present—you can get a pie chart displayed above the table.

Tip - You can sort all data by clicking the table column headings.

16.9 Executive Report

In the menu *Logging & Reporting > Executive Report* you can create a collection of the most important reporting data presented in graphical format to show network utilization for a number of services.

16.9.1 View Report

On the *Logging & Reporting > Executive Report > View Report* tab you can create a complete executive report based on the individual reports in the tabs and pages of the *Reporting* menu. Click the button *Generate Report Now* to open a window showing the executive report.

16.9.2 Archived Executive Reports

The *Executive Report > Archived Executive Reports* tab provides an overview of all archived executive reports. Only those executive reports will be archived for which archiving has been selected on the *Configuration* tab.

16.9.3 Configuration

On the *Executive Report > Configuration* tab you can make the settings for executive reports.

Select the time period for the executive report. The report can be created on a daily, weekly, or monthly basis. If you select *Weekly*, you can additionally choose the weekday when the executive report should start to collect its data.

In addition, enter the e-mail addresses of the recipients who should receive the executive report. Note that for various time periods different e-mail addresses can be configured.

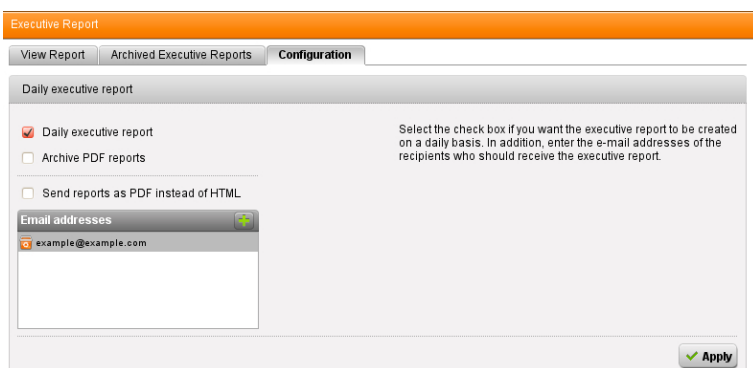


Figure 174 Reporting: Configuring the Daily Executive Report

16.10 Log Settings

In the *Logging & Reporting > Log Settings* menu you can configure basic settings for local and remote logging.

16.10.1 Local Logging

On the *Logging & Reporting > Log Settings > Local Logging* tab you can make the settings for local logging. Local logging is enabled by default.

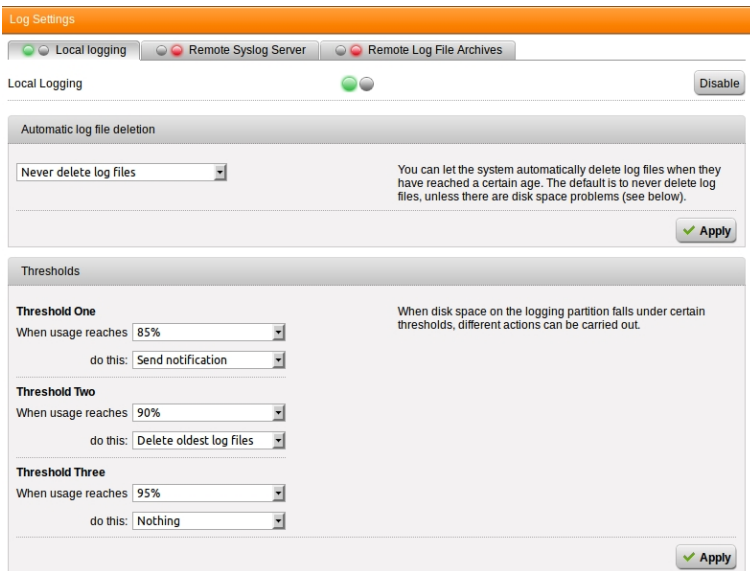


Figure 175 Logging: Enabling Local Logging

However, to activate local logging in case it was disabled, proceed as follows:

1. **On the *Local Logging* tab enable local logging.**
You can either click the status icon or the *Enable* button.
The status icon turns green and the areas on this tab become editable.
2. **Select a time frame when log files are to be deleted.**
From the drop-down list select what action is to be applied automatically on log files. *Never delete log files* is selected by default.
3. **Click *Apply*.**
Your settings will be saved.

Thresholds

Here you can define thresholds for local logging which are bound to certain actions that are to be carried out if a threshold is reached. The following actions are available:

- **Nothing:** No actions will be initiated.
- **Send Notification:** A notification will be sent to the administrator stating that the threshold was reached.
- **Delete Oldest Logfiles:** Oldest log files will be deleted until the remaining amount is below the configured threshold or until the log file archive is empty. In addition, a notification of that event will be sent to the administrator.
- **Shutdown System:** The system will be shut down. A notification of that event will be sent to the administrator.
In case of a system shutdown, the administrator has to change the configuration of the local logging, configure log file deletion or move away/delete log files manually. If the reason for the system shutdown persists, the system will shut down itself again the next time the log cleaning process runs, which happens daily at 12:00 AM (i.e., at midnight).

Click *Apply* to save your settings.

16.10.2 Remote Syslog Server

On the *Logging & Reporting > Log Settings > Remote Syslog Server* tab you can make the settings for remote logging. This function allows you to forward log messages from the gateway to other hosts. This is especially useful for networks using a host to collect logging information from several gateways. The selected host must run a logging daemon that is compatible to the syslog protocol.

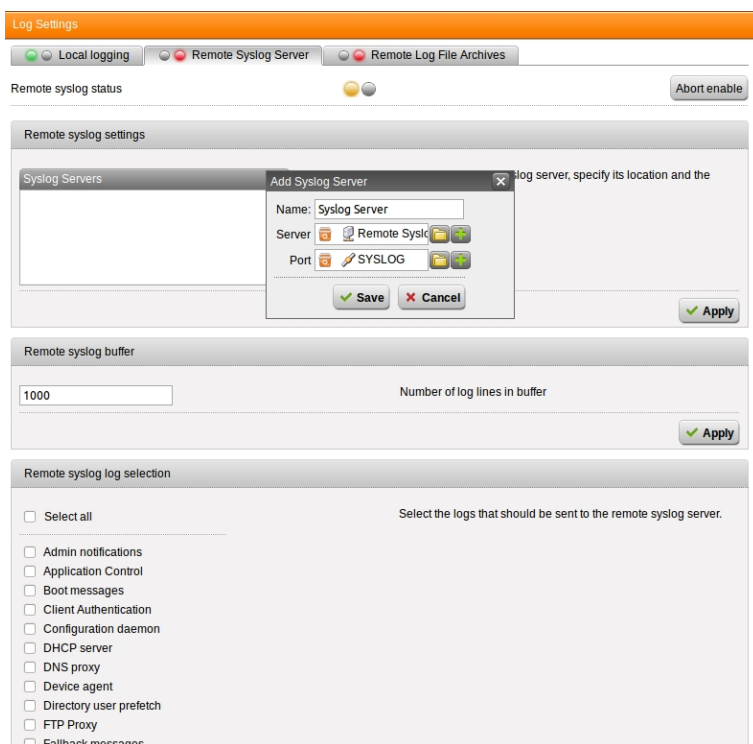


Figure 176 Logging: Configuring Remote Syslog Server

To configure a remote syslog server, proceed as follows:

1. **On the *Remote Syslog Server* tab enable remote syslog.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Remote Syslog Settings* area becomes editable.

2. **Click the plus icon in the *Syslog Servers* box to create a server.**

The *Add Syslog Server* dialog box opens.

3. **Make the following settings:**

Name: Enter a descriptive name for the remote syslog server.

Server: Add or select the host that should receive log data from the gateway.

Caution - Do not use one of the gateway's own interfaces as a remote syslog host, since this will result in a logging loop.

Port: Add or select port which is to be used for the connection.

4. **Click *Apply*.**

Your settings will be saved.

Remote Syslog Buffer

In this area you can change the buffer size of the remote syslog. The buffer size is the number of log lines kept in the buffer. Default is 1000. Click *Apply* to save your settings.

Remote Syslog Log Selection

This area is only editable when remote syslog is enabled. Select the checkboxes of the logs that should be delivered to the syslog server. You can select all logs at once by selecting the option *Select All*. Click *Apply* to save your settings.

16.10.3 Remote Logfile Archives

On the *Logging & Reporting > Log Settings > Remote Logfile Archives* tab you can make the settings for remote archiving of log files. If remote log file archiving is enabled, the log files of the past day are packed and compressed into one file, which is transferred to a remote log file storage. Using the drop-down list you can select your preferred transfer method.

The screenshot shows the 'Log Settings' window with three tabs: 'Local logging', 'Remote Syslog Server', and 'Remote Log File Archives'. The 'Remote Log File Archives' tab is active. At the top, there is a 'Remote Logging' section with a green status icon and a 'Disable' button. Below this is the 'Remote Log File Archive' section, which contains a dropdown menu set to 'Secure Copy (SSH Server)'. To the right of the dropdown is a text box explaining that the type of remote log file archive must be selected, and further options will be shown. Below the dropdown is the 'Secure Copy (SSH Server)' configuration section. It includes fields for 'Host' (set to 'Remote Host SSH'), 'Username' (set to 'jdoe'), and 'Path' (set to '/usr/jdoe/logarchive'). There is also a 'Public DSA key' field containing a long SSH key. To the right of these fields is a text box explaining that to enable SCP remote archives, the host, username, and path must be specified, and the public DSA key must be added to the list of authorized keys. An 'Apply' button is at the bottom right.

Figure 177 Logging: Configuring Remote Log File Archiving

To configure a remote log file archive, proceed as follows:

1. **Enable the *Remote Log File Archives* function.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Remote Logfile Archive* area becomes editable.

2. **Select the logfile archiving method.**

From the drop-down list, select your preferred archiving method. Depending on your selection, the related configuration options for each archiving method will be displayed below. You can choose between the following archiving methods:

- **FTP Server:** The *File Transfer Protocol* (FTP) method needs the following parameters to be set:
 - **Host:** Host definition of the FTP server.
 - **Service:** TCP port the server is listening on.
 - **Username:** Username for the FTP server account.
 - **Password:** Password for the FTP server account.
 - **Path:** Remote (relative) path where the log files are stored.

- **SMB (CIFS) Share:** The SMB method needs the following parameters to be set:
 - **Host:** Host definition of the SMB server.
 - **Username:** Username for the SMB account.
 - **Password:** Password for the SMB account.

Security Note - The password will be saved plain-text in the configuration file. It is therefore advisable to create a user/password combination uniquely for this logging purpose.

- **Share:** SMB share name. Enter the path or the network share information where the log files are to be transferred to, e.g. `/logs/logfile_archive`.
 - **Workgroup/Domain:** Enter the workgroup or domain the log file archive is part of.
- **Secure Copy (SSH Server):** To use the SCP method, it is necessary that you add the public SSH DSA key to the authorized keys of your SCP server. On a Linux system, you can simply cut and paste the SSH DSA key and add it to the `~/.ssh/authorized_keys` file of the configured user account. During the installation, Astaro Security Gateway creates a new SSHDSA key. For security reasons, this SSH DSA key is not included in backups. After a new installation or the installation of a backup, you must therefore store the new SSH DSA key on the remote server to be able to securely copy your logfile archives to the SCP server.

The SCP method requires the following settings:

- **Host:** Host definition for the SCP server.
 - **Username:** Username for the SCP server account.
 - **Path:** Remote (full) path where the log files should be stored.
 - **Public DSA Key:** On the remote storage host, add the provided public DSA key to the list of authorized keys.
- **Send by E-mail:** To have the logfile archive sent by e-mail, enter a valid e-mail address.

3. Click *Apply*.

Your settings will be saved.

If the transfer fails, the archive will remain on the gateway. During each run of the log cleaning process, the gateway tries to deliver all remaining archives.

16.11 Reporting Settings

In the *Logging & Reporting > Reporting Settings* menu you can make settings for the reporting functions such as enabling/disabling certain features of reporting, setting time frames and amounts for keeping data. Additionally, you can anonymize data to enhance privacy protection.

16.11.1 Settings

The *Settings* tab allows you to define reporting actions and the time period reporting data will be kept on the system before it is automatically deleted. The following report topics can be set:

- Accounting
- Application Control
- Authentication
- Mail Security
- Firewall
- IPS
- Remote Access
- Web Application Firewall
- Web Security

Use the checkboxes on the left side to enable or disable reporting for a certain report topic. By default, all report topics are enabled.

Use the drop-down lists on the right to determine how long reporting data is kept.

Note - Disabling needless reports will lower the base load of your machine and can reduce performance bottlenecks. Try to keep time frames as short as possible since high amounts of stored data result in a higher base load and decreased responsiveness on the dynamical reporting pages.

The settings on this tab do not affect the log file archives.

Web Security Reporting Detail Level

In this section you can define the detail level of Web Security reporting. Note that a higher detail level results in a perceptible increase in memory usage and system load, so unless necessary, it is recommended to keep the detail level low.

The following detail levels are available:

- **Domain only:** Reports display the top-level domain and second-level domain of a URL, e.g. `example.com`. Third-level domains will be also displayed if they are enforced, such as `example.co.uk`.
- **Full domain:** Reports display the full domains, e.g. `www.example.com` or `shop.example.com`
- **1 level of URL:** Reports display additionally the first (virtual) directory of a URL, e.g. `www.example.com/en/`.
- **2 levels of URL:** Reports display additionally the first two (virtual) directories of a URL, e.g. `www.example.com/en/products/`.
- **3 levels of URL:** Reports display additionally the first three (virtual) directories of a URL, e.g. `www.example.com/en/products/new/`.

Executive Report Settings

In this area you can define respectively the number of executive reports to keep:

- Daily reports: 60 at maximum
- Weekly reports: 52 at maximum
- Monthly reports: 12 at maximum

Click *Apply* to save your settings.

For more information on the executive report and its options, see *Logging & Reporting* > [Executive Report](#).

PDF Paper Settings

The default paper format for the PDF executive report is A4. Using the drop-down list you can alternatively select *Letter* or *Legal*. Click *Apply* to save your settings.

16.1 1.2 Exceptions

The *Reporting Settings > Exceptions* tab allows you to exclude certain domains and addresses from reporting, which affects the Executive Report as well as the respective *Reporting* sections. You can define exceptions for the following reports:

- Web Security: domains
- Mail Security: domains and addresses
- Network Security: IP addresses

Define exceptions in the respective boxes and click *Apply*. Note the import function with which you can define multiple items at once.

16.1 1.3 Anonymizing

The *Reporting Settings > Anonymizing* tab allows to anonymize data based on the four-eyes principle. That means that deanonymization can only take place when two different people agree on that procedure. Anonymization ensures that user data is kept secret when viewing logging and reporting data, and therefore actions (such as web-surfing habits) cannot be traced back to a specific person.

Reporting Settings

Settings Exceptions **Anonymizing**

Anonymizing status ⬤ ⬤ Abort enable

Anonymizing Settings

First password: When enabling anonymized reporting, two passwords have to be provided. Both passwords are required for disabling anonymization or deanonymization of single users (four eyes principle).

Repeat:

Second password:

Repeat:

✓ Apply

Figure 178 Reporting: Enabling Anonymization of User Data

To use anonymization, proceed as follows:

1. **On the *Anonymizing* tab enable anonymization.**

You can either click the status icon or the *Enable* button.

The status icon turns amber and the *Anonymizing Settings* area becomes editable.

2. **Enter two security passwords.**

The four-eyes principle is only allowed for when two different people enter a password unknown to each other.

3. **Click *Apply*.**

Your settings will be saved.

To disable anonymization (globally) again, both passwords are necessary.

1. **On the *Anonymizing* tab click *Disable* or the status icon.**

The status icon turns amber and the *Anonymizing Settings* area becomes editable.

2. **Enter both passwords.**

Enter the first and the second password that have been provided to enable anonymization.

3. **Click *Apply*.**

Your settings will be saved.

If necessary, anonymization can be disabled for single users, see *Logging & Reporting* > [Web Security](#) and *Logging & Reporting* > [Mail Security](#).

17 Support

This chapter describes the support tools available for Astaro Security Gateway.

The pages of the *Support* menu contain many customer support related features ranging from various web links, through contact information, to the output of useful network tools that are used to determine important network properties without the need to access the gateway's command-line interface.

The following topics are included in this chapter:

- [Manual](#)
- [Printable Configuration](#)
- [Contact Support](#)
- [Tools](#)
- [Advanced](#)

In addition, the main page of the *Support* menu contains web links to the following information resources:

- **Knowledgebase (KB):** Astaro's official knowledgebase contains numerous information on configuring Astaro Security Gateway.
- **Known Issues List (KIL):** The list of known problems that cannot be fixed or for which a workaround is available.
- **Hardware Compatibility List (HCL):** The list of hardware that is compatible to Astaro Security Gateway Software.
- **Up2Date Information:** Astaro's Up2Date blog, which informs about product improvements and firmware updates.

17.1 Manual

On the *Support > Manual* page you can download the current Administration Guide in PDF format. Select the language of the guide and click *Download*. Note that you need a special reader to open PDF documents such as Adobe's Reader or Xpdf.

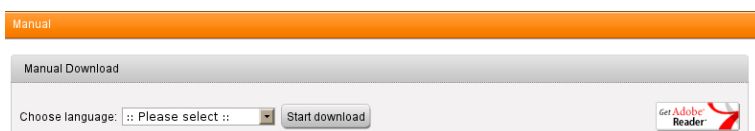


Figure 179 Support: Downloading the Administration Guide of Astaro Security Gateway

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options* > *Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

17.2 Printable Configuration

On the *Support* > *Printable Configuration* page you can create a detailed report of the current WebAdmin configuration.

Note – The printable configuration is opened in a new window. Depending on your browser it may be necessary to allow pop-up windows for WebAdmin.

The structure of the printable configuration matches the WebAdmin menu structure to facilitate finding the corresponding configuration options in WebAdmin.

The printable configuration browser page consists of an overview page, called *index*, and several subpages. Links to subpages are highlighted blue. Subpages give detailed information to the respective topic. You can always return from a subpage to the index by clicking the *Back to the index* link at the bottom of the subpage.

There are two more viewing options for the printable configuration:

- WebAdmin format
- Confd format

You can find the links to these viewing options at the bottom of the index page.

17.3 Contact Support

Astaro offers a comprehensive range of customer support services for its security solutions. Based on the support/maintenance level, you have various levels of access and committed response time by the Astaro service department and/or Astaro's certified partners.

All support cases concerning Astaro Security Gateway are processed via the [Astaro Partner Portal](#). You may open a support case via a web form by clicking *Open Support Case*.

17.4 Tools

The tabs of the *Support > Tools* menu display the output of useful network tools that can be used to determine important network properties without the need to access the gateway's command-line interface. The output of the following tools can be viewed:

- Ping
- Traceroute
- DNS Lookup

17.4.1 Ping Check

The program *ping* is a computer network tool used to test whether a particular host is reachable across an IP network. Ping works by sending ICMP *echo request* packets to the target host and listening for ICMP *echo response* replies. Using interval timing and response rate, ping estimates the round-trip time and packet loss rate between hosts.

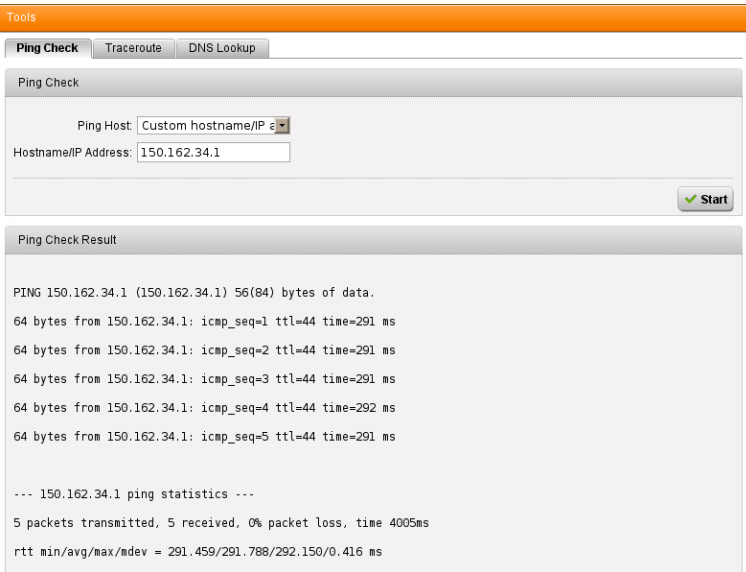


Figure 180 Support: Checking the Availability of a Host Using Ping

To make a ping check, proceed as follows:

1. **Select the ping host.**

Select the host you want to ping. In the *Ping Host* box, you can select a host for which a host definition exists. Alternatively, you can also select *Custom hostname/IP address* and enter a custom hostname or IP address into the textbox below.

2. **Click *Start*.**

The output of the ping check will be displayed in the *Ping Check Result* area.

17.4.2 Traceroute

The program *traceroute* is a computer network tool used to determine the route taken by packets across an IP network. It lists the IP addresses of the routers that were involved in transporting the packet. If the packet's route cannot be determined within a certain time frame, traceroute will report an asterisk (*) instead of the IP address. After a certain number of failures, the check will end. An interruption of the check can have many causes, but most likely it is caused by a firewall along the network path that blocks traceroute packets.

The screenshot shows a web-based interface for a network tool. At the top is an orange bar labeled "Tools". Below it are three tabs: "Ping Check", "Traceroute" (which is selected), and "DNS Lookup". The "Traceroute" section has a "Traceroute Host" dropdown menu set to "Custom hostname/IP address", a text input field for "Hostname/IP Address" containing "astaro.de", and an unchecked checkbox labeled "Print hop addresses numerically rather than symbolically and numerically.". A green "Start" button is at the bottom right of this section. Below the input fields is a "Traceroute Result" section containing the following text:

```

traceroute to astaro.de (85.115.22.4), 30 hops max, 40 byte packets using UDP
 1  10.8.19.254 (10.8.19.254)  0.100 ms  0.062 ms  0.026 ms
 2  10.2.19.254 (10.2.19.254)  0.217 ms  0.241 ms  0.275 ms
 3  10.0.3.1 (10.0.3.1)  0.276 ms  0.352 ms  0.274 ms
 4  hellkeeper.qa.astaro.de (10.0.0.254)  0.438 ms  0.340 ms  0.365 ms
 5  gw-tp-pl-astaro.telemaxx.net (213.144.15.1)  2.564 ms  1.620 ms  2.365 ms
 6  rt1tp.ka.telemaxx.net (213.144.4.113)  0.917 ms  1.039 ms  0.892 ms
 7  sw4ch.ka.telemaxx.net (213.144.4.134)  4.390 ms  3.815 ms  2.851 ms
 8  85.115.22.4 (85.115.22.4)  1.505 ms  1.181 ms  1.186 ms

```

Figure 181 Support: Checking a Route Using Traceroute

To trace a route, proceed as follows:

1. **Specify the hostname/IP address.**
Enter the hostname or IP address of the host for which you want to determine the route.
2. **Print hop addresses numerically** (optional).
Selecting this option saves a nameserver address-to-name lookup for each gateway found on the path.
3. **Click Start.**
The output of traceroute will be displayed in the *Traceroute Result* area.

17.4.3 DNS Lookup

The program *dig* (short for *Domain Information Groper*) is a network tool for interrogating DNS name servers. It performs DNS lookups and displays the answers that are returned from the name server(s) that were queried.

The screenshot shows a web-based tool interface with an orange header bar labeled 'Tools'. Below the header are three tabs: 'Ping Check', 'Traceroute', and 'DNS Lookup', with 'DNS Lookup' being the active tab. The 'DNS Lookup' section contains a text input field with 'google.com' entered, a checkbox for 'Enable verbose output' which is unchecked, and a green 'Start' button with a checkmark. Below this is a section titled 'DNS Lookup Result' which displays the following text:

```
google.com has address 72.14.221.104
google.com has address 72.14.221.99
google.com mail is handled by 100 google.com.s9a1.psmtpl.com.
google.com mail is handled by 200 google.com.s9a2.psmtpl.com.
google.com mail is handled by 300 google.com.s9b1.psmtpl.com.
google.com mail is handled by 400 google.com.s9b2.psmtpl.com.
```

Figure 182 Support: Looking up a DNS Entry Using Dig

To make a DNS lookup, proceed as follows:

1. **Specify the hostname/IP address.**
Enter the hostname or IP address of the host for which you want to determine DNS information.
2. **Select *Enable Verbose Output*** (optional).
Select this option to generate lengthy output showing more information.
3. **Click *Start*.**
The output of dig will be displayed in the *DNS Lookup Result* area.

17.5 Advanced

The *Support > Advanced* menu displays even more information on your gateway and gives access to advanced features. It gives overview of running processes and local network connections and you can view the routing table and the interfaces table. Additionally, you can download a support package for debugging and recovery purposes and find background information about internally used configuration references which you may encounter in log files. Finally, you can import Web Security log files from ASG versions prior to version 8.200.

17.5.1 Process List

The program *ps* displays a header line followed by lines containing information about your processes that have controlling terminals. This information is sorted by controlling terminal, then by process ID.

17.5.2 LAN Connections

The program *netstat* (short for *Network Statistics*) is a network tool that displays a list of the active Internet connections a computer currently has, both incoming and outgoing.

17.5.3 Routes Table

The program *ip* is a network tool for controlling TCP/IP networking and traffic control. Invoked with the parameter `route show table all` it displays the contents of all routing tables of the gateway.

17.5.4 Interfaces Table

The table shows all configured interfaces of Astaro Security Gateway, both network interface cards and virtual interfaces. The program *ip* invoked with parameter `addr` displays interfaces and their properties.

17.5.5 Config Dump

For debugging or recovery purposes it is useful to gather as many information as possible about your installation of Astaro Security Gateway. The support package that can be downloaded from the *Support > Advanced > Configuration Dump* tab provides exactly this. The `zip` file contains the following items:

- The entire dump of the gateway's configuration (`storage.abf`). Note that this is no genuine backup file—it does not contain any passwords, among other things—and can be used for debugging purposes only.
- Information on the hardware present in the system (`hwinfo`).
- Information on the software packages installed on the system (`swinfo`).

Note - To avoid problems with file downloads using Internet Explorer 6, add the URL of the gateway (e.g., <https://192.168.2.100>) to the Trusted Sites, which are configured in IE's *Internet Options* > *Security*. In addition, select *Automatic Prompting for File Downloads* in the *Trusted Sites Zone* when using Internet Explorer 7.

17.5.6 Weblog Import

After upgrading the Astaro Security Gateway to version 8.2 or newer the web reports are not automatically available due to a new database structure. However, you can have the system re-create the Web Security reports from logs prior to version 8.2.

The list shows all available log files in chronological order. It contains re-created logs as well as current logs, one for each completed day. Logs with 0 byte or older than 180 days are not displayed.

1. **Select the log files you want to import.**

You can either check individual checkboxes or select all log files by checking the *Date* checkbox on top.

Selecting logs which are already in your current report list does not prolong the importing process because the Astaro Security Gateway will skip the redundant ones.

2. **Click *Apply*.**

The logs will not be imported directly, because this process can take a long time and will cause extra system load. Instead, the import process will start automatically at 10 pm the same day.

After the import you can find the reports on the *Web Usage Report* page.

17.5.7 Resolve REF

For debugging purposes you can resolve configuration references internally used by the system. If you encounter a reference somewhere in the logs, you can paste the reference string here (e.g., `REF_DefaultSuperAdmin`). The tab will then display an excerpt of the configuration daemon's data structure.

18 Log Off

You can log out of WebAdmin by clicking the *Log Off* menu entry. If you do not log out properly or if you close the web browser inadvertently, you might not be able to log in again for approximately 30 seconds.

Note - You will be logged out if you visit a different website during a session. In this case, you will have to log in again.

Glossary

B

3DES

Triple Data Encryption Standard

A

ACPI

Advanced Conguration and Power Interface

AD

Active Directory

Address Resolution Protocol

Used to determine the Ethernet MAC address of a host when only its IP address is known.

ADSL

Asymmetric Digital Subscriber Line

Advanced Configuration and Power Interface

The ACPI specification is a power management standard that allows the operating system to control the amount of power distributed to the computer's devices.

Advanced Programmable Interrupt Controller

Architecture for dealing with interrupts in multi-processor computer systems.

AES

Advanced Encryption Standard

AFC

Astaro Flow Classifier

AH

Authentication Header

AMG

Astaro Mail Gateway

APIC

Advanced Programmable Interrupt Controller

ARP

Address Resolution Protocol

AS

Autonomous System

ASCII

American Standard Code for Information Interchange

ASG

Astaro Security Gateway

Astaro Command Center

Software for monitoring and administering multiple Astaro gateway units by means of a single interface.

Astaro Security Gateway

Software for unified threat management, including mail and web security.

AUA

Astaro User Authentication

Authentication Header

IPsec protocol that provides for anti-replay and verifies that the contents of the packet have not been modified in transit.

Autonomous System

Collection of IP networks and routers under the control of one entity that presents a common routing policy to the Internet.

AWG

Astaro Web Gateway

AWS

Amazon Web Services

B**BATV**

Bounce Address Tag Validation

BGP

Border Gateway Protocol

Bounce Address Tag Validation

Name of a method designed for determining whether the return address specified in an e-mail message is valid. It is designed to reject bounce messages to forged return addresses.

Broadcast

The address used by a computer to send a message to all other computers on the network at the same time. For example, a network with IP address 192.168.2.0 and network mask 255.255.255.0 would have a broadcast address of 192.168.2.255.

C**CA**

Certificate Authority

CBC

Cipher Block Chaining

Certificate Authority

Entity or organization that issues digital certificates for use by other parties.

CHAP

Challenge-Handshake Authentication Protocol

Cipher Block Chaining

Refers in cryptography to a mode of operation where each block of plaintext is "XORed" with the previous ciphertext block before being encrypted. This way, each ciphertext block is dependent on all plaintext blocks up to that point.

Cluster

Group of linked computers, working together closely so that in many respects they form a single computer.

CMS

Content Management System

CPU

Central Processing Unit

CRL

Certificate Revocation List

CSS

Cascading Style Sheets

D

DC

Domain Controller

DCC

Direct Client Connection

DDoS

Distributed Denial of Service

DER

Distinguished Encoding Rules

Destination Network Address Translation

Special case of NAT where the destination addresses of data packets are rewritten.

Device tree

Located below the main menu. Grants access to all Astaro gateway units registered with the ACC.

DHCP

Dynamic Host Configuration Protocol

Digital Signature Algorithm

Standard propagated by the United States Federal Government (FIPS) for digital signatures.

Digital Subscriber Line

Family of technologies that provides digital data transmission over the wires of a local telephone network.

Distinguished Encoding Rules

Method for encoding a data object, such as an X.509 certificate, to be digitally signed or to have its signature verified.

DKIM

Domain Keys Identified Mail

DMZ

Demilitarized Zone

DN

Distinguished Name

DNAT

Destination Network Address Translation

DNS

Domain Name Service

DOI

Domain of Interpretation

Domain Name Service

Translates the underlying IP addresses of computers connected through the Internet into more human-friendly names or aliases.

DoS

Denial of Service

DSA

Digital Signature Algorithm

DSCP

Differentiated Services Code Point

DSL

Digital Subscriber Line

DUID

DHCP Unique Identifier

Dynamic Host Configuration Protocol

Protocol used by networked devices to obtain IP addresses.

E**Encapsulating Security Payload**

IPsec protocol that provides data confidentiality (encryption), anti-replay, and authentication.

ESP

Encapsulating Security Payload

F**FAT**

File Allocation Table

File Transfer Protocol

Protocol for exchanging files over packet-switched networks.

FQHN

Fully Qualified HostName

FTP

File Transfer Protocol

G**Generic Routing Encapsulation**

Tunneling protocol designed for encapsulation of arbitrary kinds of network layer packets inside arbitrary kinds of network layer packets.

GeoIP

Technique to locate devices worldwide by means of satellite imagery.

GRE

Generic Routing Encapsulation

H

H.323

Protocol providing audio-visual communication sessions on packet-switched networks.

HA

High Availability

HCL

Hardware Compatibility List

HELO

A command in the Simple Mail Transfer Protocol (SMTP) with which the client responds to the initial greeting of the server.

High Availability

System design protocol that ensures a certain absolute degree of operational continuity.

HMAC

Hash-based Message Authentication Code

HTML

Hypertext Transfer Markup Language

HTTP

Hypertext Transfer Protocol

HTTP/S

Hypertext Transfer Protocol Secure

HTTPS

Hypertext Transfer Protocol Secure

Hypertext Transfer Protocol

Protocol for the transfer of information on the Internet.

Hypertext Transfer Protocol over Secure Socket Layer

Protocol to allow more secure HTTP communication.

I**IANA**

Internet Assigned Numbers Authority

ICMP

Internet Control Message Protocol

ID

Identity

IDE

Intelligent Drive Electronics

IDENT

Standard protocol that helps identify the user of a particular TCP connection.

IE

Internet Explorer

IE7

Internet Explorer Version 7

IKE

Internet Key Exchange

IM

Instant Messaging

Internet Control Message Protocol

Special kind of IP protocol used to send and receive information about the network's status and other control information.

Internet Protocol

Data-oriented protocol used for communicating data across a packet-switched network.

Internet Relay Chat

Open protocol enabling the instant communication over the Internet.

Internet service provider

Business or organization that sells to consumers access to the Internet and related services.

IP

Internet Protocol

IP Address

Unique number that devices use in order to identify and communicate with each other on a computer network utilizing the Internet Protocol standard.

IPS

Intrusion Prevention System

IPsec

Internet Protocol Security

IRC

Internet Relay Chat

ISP

Internet Service Provider

L**L2TP**

Layer Two (2) Tunneling Protocol

LAG

Link Aggregation Group

LAN

Local Area Network

LDAP

Lightweight Directory Access Protocol

Link-state advertisement

Basic communication means of the OSPF routing protocol for IP.

LSA

Link-state advertisement

M**MAC**

Media Access Control

MAC Address

Unique code assigned to most forms of networking hardware.

Managed Security Service Provider

Provides security services for companies.

Management Information Base

Type of database used to manage the devices in a communications network. It comprises a collection of objects in a (virtual) database used to manage entities (such as routers and switches) in a network.

Masquerading

Technology based on NAT that allows an entire LAN to use one public IP address to communicate with the rest of the Internet.

MD5

Message-Digest algorithm 5

Message-Digest algorithm 5

Cryptographic hash function with a 128-bit hash value.

MIB

Management Information Base

MIME

Multipurpose Internet Mail Extensions

MPPE

Microsoft Point-to-Point Encryption

MSCHAP

Microsoft Challenge Handshake Authentication Protocol

MSCHAPv2

Microsoft Challenge Handshake Authentication Protocol Version 2

MSSP

Managed Security Service Provider

MTU

Maximum Transmission Unit

Multipurpose Internet Mail Extensions

Internet Standard that extends the format of e-mail to support text in character sets other than US-ASCII, non-text attachments, multi-part message bodies, and header information in non-ASCII character sets.

MX record

Type of resource record in the Domain Name System (DNS) specifying how e-mails should be routed through the Internet.

N**NAS**

Networked Attached Storage

NAT

Network Address Translation

NAT-T

NAT Traversal

Network Address Translation

System for reusing IP addresses.

Network Time Protocol

Protocol for synchronizing the clocks of computer systems over packet-switched networks.

NIC

Network Interface Card

Not-so-stubby area

In the OSPF protocol, a type of stub area that can import autonomous system (AS) external routes and send them to the backbone, but cannot receive AS external routes from the backbone or other areas.

NSSA

Not-so-stubby area

NTLM

NT LAN Manager (Microsoft Windows)

NTP

Network Time Protocol

O

Open Shortest Path First

Link-state, hierarchical interior gateway protocol (IGP) for network routing.

OpenPGP

Protocol combining strong public-key and symmetric cryptography to provide security services for electronic communications and data storage.

OSI

Open Source Initiative

OSPF

Open Shortest Path First

OU

Organisational Unit

P

PAC

Proxy Auto Configuration

PAP

Password Authentication Protocol

PCI

Peripheral Component Interconnect

PEM

Privacy Enhanced Mail

PGP

Pretty Good Privacy

PKCS

Public Key Cryptography Standards

PKI

Public Key Infrastructure

PMTU

Path Maximum Transmission Unit

POP3

Post Office Protocol version 3

Port

Virtual data connection that can be used by programs to exchange data directly. More specifically, a port is an additional identifier—in the cases of TCP and UDP, a number between 0 and 65535 – that allows a computer to distinguish between multiple concurrent connections between the same two computers.

Portscan

Action of searching a network host for open ports.

Post Office Protocol version 3

Protocol for delivery of e-mails across packet-switched networks.

PPP

Point-to-Point Protocol

PPPoA

PPP over ATM Protocol

PPTP

Point to Point Tunneling Protocol

Privacy Enhanced Mail

Early IETF proposal for securing e-mail using public key cryptography.

Protocol

Well-defined and standardized set of rules that controls or enables the connection, communication, and data transfer between two computing endpoints.

Proxy

Computer that offers a computer network service to allow clients to make indirect network connections to other network services.

PSK

Preshared Key

Q

QoS

Quality of Service

R

RADIUS

Remote Authentication Dial In User Service

RAID

Redundant Array of Independent Disks

RAM

Random Access Memory

RAS

Remote Access Server

RBL

Realtime Blackhole List

RDN

Relative Distinguished Name

RDNS

Reverse Domain Name Service

Real-time Blackhole List

Means by which an Internet site may publish a list of IP addresses linked to spamming. Most mail transport agent (mail server) software can be configured to reject or flag messages which have been sent from a site listed on one or more such lists.

RED

Random Early Detection

Redundant Array of Independent Disks

Refers to a data storage scheme using multiple hard drives to share or replicate data among the drives.

Remote Authentication Dial In User Service

Protocol designed to allow network devices such as routers to authenticate users against a central database.

RFC

Request for Comment

Router

Network device that is designed to forward packets to their destination along the most efficient path.

RPS

RED Provisioning Service

RSA

Rivest, Shamir, & Adleman (public key encryption technology)

S

S/MIME

Secure/Multipurpose Internet Mail Extensions

SA

Security Associations

SCP

Secure Copy (from the SSH suite of computer applications for secure communication)

SCSI

Small Computer System Interface

Secure Shell

Protocol that allows establishing a secure channel between a local and a remote computer across packet-switched networks.

Secure Sockets Layer

Cryptographic protocol that provides secure communications on the Internet, predecessor of the Transport Layer Security (TLS).

Secure/Multipurpose Internet Mail Extensions

Standard for public key encryption and signing of e-mail encapsulated in MIME.

Security Parameter Index

Identification tag added to the header while using IPsec for tunneling the IP traffic.

Sender Policy Framework

Extension to the Simple Mail Transfer Protocol (SMTP). SPF allows software to identify and reject forged addresses in the SMTP MAIL FROM (Return-Path), a typical annoyance of e-mail spam.

Session Initiation Protocol

Signalization protocol for the setup, modification and termination of sessions between two or several communication partners. The text-oriented protocol is based on HTTP and can transmit signalization data through TCP or UDP via IP networks. Thus, it is the base among others for Voice-over-IP videotelephony (VoIP) and multimedia services in real time.

SFQ

Stochastic Fairness Queuing

Shared Secret

Password or passphrase shared between two entities for secure communication.

Simple Mail Transfer Protocol

Protocol used to send and receive e-mail across packet-switched networks.

Single sign-on

Form of authentication that enables a user to authenticate once and gain access to multiple applications and systems using a single password.

SIP

Session Initiation Protocol

SMB

Server Message Block

SMP

Symmetric Multiprocessing

SMTP

Simple Mail Transfer Protocol

SNAT

Source Network Address Translation

SNMP

Simple Network Message Protocol

SOCKets

Internet protocol that allows client-server applications to transparently use the services of a network firewall. SOCKS, often called the Firewall Traversal Protocol, is currently at version 5 and must be implemented in the client-side program in order to function correctly.

SOCKS

SOCKets

Source Network Address Translation

Special case of NAT. With SNAT, the IP address of the computer which initiated the connection is rewritten.

SPF

Sender Policy Framework

SPI

Security Parameter Index

SSH

Secure Shell

SSID

Service Set Identifier

SSL

Secure Sockets Layer

SSO

Single sign-on

Subnet mask

The subnet mask (also called netmask) of a network, together with the network address, defines which addresses are part of the local network and which are not. Individual computers will be assigned to a network on the basis of the definition.

Symmetric Multiprocessing

The use of more than one CPU.

SYN

Synchronous

T**TACACS**

Terminal Access Controller Access Control System

TCP

Transmission Control Protocol

TFTP

Trivial File Transfer Protocol

Time-to-live

8-bit field in the Internet Protocol (IP) header stating the maximum amount of time a packet is allowed to propagate through the network before it is discarded.

TKIP

Temporal Key Integrity Protocol

TLS

Transport Layer Security

TOS

Type of Service

Transmission Control Protocol

Protocol of the Internet protocol suite allowing applications on networked computers to create connections to one another. The protocol guarantees reliable and in-order delivery of data from sender to receiver.

Transport Layer Security

Cryptographic protocol that provides secure communications on the Internet, successor of the Secure Sockets Layer (SSL).

TTL

Time-to-live

U

UDP

User Datagram Protocol

Uniform Resource Locator

String that specifies the location of a resource on the Internet.

Uninterruptible power supply

Device which maintains a continuous supply of electric power to connected equipment by supplying power from a separate source when utility power is not available.

Up2Date

Service that allows downloading relevant update packages from the Astaro server.

UPS

Uninterruptible Power Supply

URL

Uniform Resource Locator

USB

Universal Serial Bus

User Datagram Protocol

Protocol allowing applications on networked computers to send short messages sometimes known as datagrams to one another.

UTC

Coordinated Universal Time

V**VDSL**

Very High Speed Digital Subscriber Line

Virtual Private Network

Private data network that makes use of the public telecommunication infrastructure, maintaining privacy through the use of a tunneling protocol such as PPTP or IPsec.

VLAN

Virtual LAN

Voice over IP

Routing of voice conversations over the Internet or through any other IP-based network.

VoIP

Voice over IP

VPC

Virtual Private Cloud

VPN

Virtual Private Network

W**WAF**

Web Application Firewall

WAN

Wide Area Network

WebAdmin

Web-based graphical user interface of Astaro products such as ACC, ASG, AWG, and AMG.

WEP

Wired Equivalent Privacy

Windows Internet Naming Service

Microsoft's implementation of NetBIOS Name Server (NBNS) on Windows, a name server and service for NetBIOS computer names.

WINS

Windows Internet Naming Service

WPA

Wi-Fi Protected Access

X**X.509**

Specification for digital certificates published by the ITU-T (International Telecommunications Union – Telecommunication). It specifies information and attributes required for the identification of a person or a computer system.

XSS

Cross-site scripting

List of Figures

Figure 1	IE7 Security Settings Trusted Sites Zone	15
Figure 2	WebAdmin: Initial Login Page	23
Figure 3	WebAdmin: Regular Login Page	24
Figure 4	WebAdmin: Dashboard	27
Figure 5	WebAdmin: Overview	29
Figure 6	WebAdmin: Example of a List	32
Figure 7	WebAdmin: Example of a Dialog Box	34
Figure 8	WebAdmin: Dragging an Object From the Object List Networks	37
Figure 9	WebAdmin: Example Dashboard of ASG Software V8	39
Figure 10	System Settings: Configuring Time and Date	49
Figure 11	WebAdmin Settings: Configuring Access Control	53
Figure 12	WebAdmin Settings: Configuring User Preferences	57
Figure 13	MyAstaro Portal	60
Figure 14	Licensing: Subscription Warning Message	65
Figure 15	Licensing: Overview (OnDemand Licensing)	66
Figure 16	Licensing: Installing a License	66
Figure 17	Up2Date: Overview Page	68
Figure 18	Up2Date: Progress Window	69
Figure 19	Up2Date: Implicit Installation of Up2Date Packages	70
Figure 20	User Portal: Welcome Page	78
Figure 21	User Portal: Configuring Access to the User Portal	80
Figure 22	Customization: Example Blocked Page and Its Customizable Parts	84
Figure 23	Customization: HTTP Download Page Step 1 of 3	87
Figure 24	Customization: HTTP Download Page Step 2 of 3	87
Figure 25	Customization: HTTP Download Page Step 3 of 3	88
Figure 26	Customization: POP3 Proxy Blocked Message	88
Figure 27	SNMP: Configuring SNMP Queries	90
Figure 28	Central Management: Dashboard of Astaro Command Center	94
Figure 29	Central Management: Using an ACC V2 Server	96
Figure 30	High-Availability: Status Page	100
Figure 31	High Availability: Resource Usage of the Single HA or Cluster Devices	101
Figure 32	High Availability: Configuring a Cluster	104

Figure 33	Definitions: List of Network Definitions.....	110
Figure 34	Definitions: List of Service Definitions.....	114
Figure 35	Definitions: List of Time Events Definitions.....	117
Figure 36	Users: List of Users.....	119
Figure 37	Groups: List of Groups.....	121
Figure 38	Groups: eDirectory Browser of Astaro Security Gateway.....	124
Figure 39	Authentication: Configuring eDirectory.....	128
Figure 40	Authentication: Configuring Active Directory User Authentication..	130
Figure 41	Authentication: Microsoft Management Console	132
Figure 42	Authentication: Configuring LDAP.....	134
Figure 43	Authentication: Configuring RADIUS.....	136
Figure 44	Authentication: Configuring TACACS+ User Authentication.....	139
Figure 45	Authentication: Configuring Single Sign-On.....	140
Figure 46	Interfaces: Configuring Interfaces.....	147
Figure 47	Interfaces: Configuring Uplink Balancing.....	166
Figure 48	Interfaces: Multipath Rules.....	169
Figure 49	Bridging: Configuring a Bridge.....	172
Figure 50	Bridging: Bridging Enabled.....	173
Figure 51	Bridging: Disabling Bridging.....	174
Figure 52	QoS: Status Page.....	175
Figure 53	QoS: Traffic Selectors.....	177
Figure 54	QoS: Bandwidth Pools.....	180
Figure 55	Static Routing: Static Routes Table	189
Figure 56	Static Routing: Policy Routes Table	191
Figure 57	OSPF: Enabling OSPF.....	193
Figure 58	OSPF: Overview of Configured Areas.....	194
Figure 59	PIM-SM: Example Configuration.....	208
Figure 60	PIM-SM: Interfaces List.....	209
Figure 61	PIM-SM: List of Rendezvous Point Routers.....	211
Figure 62	PIM-SM: Routes List.....	212
Figure 63	DNS: Configuring DynDNS.....	218
Figure 64	DHCP: Configuring a DHCP Relay.....	223
Figure 65	DHCP: IPv4 Lease Table.....	225
Figure 66	DHCP: IPv6 Lease Table.....	226
Figure 67	Firewall: Rule Table.....	230
Figure 68	Firewall: Live Log.....	232

Figure 69 NAT: List of Masquerading Rules.....	239
Figure 70 NAT: List of DNAT/SNAT Rules.....	240
Figure 71 IPS: Enabling Intrusion Prevention.....	243
Figure 72 IPS: Attack Patterns.....	246
Figure 73 IPS: Configuring Portscan Protection.....	249
Figure 74 IPS: Exceptions List.....	251
Figure 75 Server Load Balancing: List of Balancing Rules.....	254
Figure 76 VoIP SIP: Enabling VoIP SIP.....	258
Figure 77 VoIP H.323: Enabling VoIP H.323.....	259
Figure 78 Generic Proxy: Rules List.....	261
Figure 79 Web Filter: Global Settings.....	267
Figure 80 Web Filter: Configuring AntiVirus and Malware Settings.....	271
Figure 81 Web Filter: Configuring URL Filtering.....	273
Figure 82 Web Filter: Exceptions List.....	278
Figure 83 Web Filtering Profiles: List of Profiles.....	291
Figure 84 Web Filtering Profiles: List of Filter Assignments.....	295
Figure 85 Web Filtering Profiles: List of Filter Actions.....	297
Figure 86 FTP Proxy: Enabling the FTP Proxy.....	306
Figure 87 FTP Proxy: Configuring AntiVirus Settings.....	307
Figure 88 FTP Proxy: Exceptions List.....	308
Figure 89 FTP Proxy: Advanced Settings.....	310
Figure 90 SMTP Proxy: Enabling the SMTP Proxy.....	312
Figure 91 SMTP Proxy: Configuring Domains and Routing Targets.....	313
Figure 92 SMTP Proxy: Configuring AntiVirus Settings.....	315
Figure 93 SMTP Proxy: File Extension Filter.....	317
Figure 94 SMTP Proxy: AntiVirus Check Footer.....	319
Figure 95 SMTP Proxy: Configuring AntiSpam Settings.....	320
Figure 96 SMTP Proxy: Extending Sender Blacklist.....	322
Figure 97 SMTP Proxy: Adding Expressions to the Expression Filter.....	323
Figure 98 SMTP Proxy: Advanced AntiSpam Features.....	325
Figure 99 SMTP Proxy: Exceptions List.....	326
Figure 100 SMTP Proxy: Configuring Relaying.....	328
Figure 101 SMTP Proxy: Enabling Host/Network Blacklist.....	329
Figure 102 SMTP Profiles: Configuring an SMTP Profile.....	334
Figure 103 POP3 Proxy: Enabling the POP3 Proxy.....	340
Figure 104 POP3 Proxy: Configuring AntiVirus Settings.....	341

Figure 105 POP3 Proxy: Configuring AntiSpam Settings.....	343
Figure 106 POP3 Proxy: Exceptions List	345
Figure 107 POP3 Proxy: Advanced Settings.....	347
Figure 108 E-mail Encryption: Using Two Astaro Security Gateway Units.....	354
Figure 109 E-mail Encryption: Enabling E-mail Encryption.....	354
Figure 110 E-mail Encryption: Options.....	356
Figure 111 E-mail Encryption: List of Internal Users.....	357
Figure 112 E-mail Encryption: List of S/MIME Authorities.....	360
Figure 113 E-mail Encryption: List of S/MIME Certificates.....	362
Figure 114 E-mail Encryption: List of OpenPGP Public Keys.....	363
Figure 115 Quarantine Report of Astaro Security Gateway.....	364
Figure 116 Quarantine Report: Enabling the Quarantine Report	366
Figure 117 Quarantine Report: Exceptions.....	367
Figure 118 Quarantine Report: Advanced Options.....	369
Figure 119 Mail Manager of Astaro Security Gateway.....	371
Figure 120 Mail Manager: Overview.....	376
Figure 121 Mail Manager: Configuration.....	378
Figure 122 Wireless Security: Global Settings.....	380
Figure 123 Wireless Security: Wireless Networks.....	383
Figure 124 Wireless Security: Access Points.....	387
Figure 125 Wireless Security: Grouping Access Points and SSIDs	389
Figure 126 Wireless Security: Clients.....	390
Figure 127 RED: Setup Sketch.....	405
Figure 128 RED: Site Status on the Overview Page.....	406
Figure 129 Amazon VPC: List of Connections.....	417
Figure 130 Site-to-Site VPN IPsec: Connections List	422
Figure 131 Site-to-Site VPN IPsec: Remote Gateways List	424
Figure 132 Site-to-Site VPN IPsec: Policies List	428
Figure 133 Site-to-Site VPN IPsec: Configuring the Local RSA Key.....	432
Figure 134 Site-to-Site VPN IPsec: Advanced Settings.....	434
Figure 135 Site-to-Site SSL VPN: Configuring the Server Connection.....	437
Figure 136 Site-to-Site SSL VPN: Configuring the Client Connection.....	439
Figure 137 Site-to-Site SSL VPN: Settings.....	441
Figure 138 Site-to-Site SSL VPN: Advanced Settings.....	443
Figure 139 Certificate Management: Certificates List	445
Figure 140 Certificate Management: Certificate Authority List	448

Figure 141	Certificate Management: List of Revocation Lists (CRLs).....	449
Figure 142	Certificate Management: Advanced Settings.....	450
Figure 143	User Portal: Remote Access Installation Files.....	451
Figure 144	Remote Access SSL: Enabling SSL Remote Access.....	453
Figure 145	Remote Access SSL: Settings.....	454
Figure 146	Remote Access SSL: Advanced Settings.....	456
Figure 147	Remote Access PPTP: Enabling PPTP Remote Access.....	458
Figure 148	Remote Access PPTP: iOS Device Settings.....	460
Figure 149	Remote Access PPTP: Advanced Settings.....	461
Figure 150	Remote Access L2TP: Enabling L2TP Remote Access.....	462
Figure 151	Remote Access L2TP: iOS Devices Settings.....	466
Figure 152	Remote Access L2TP: Advanced Settings.....	466
Figure 153	Remote Access IPsec: Connections List.....	470
Figure 154	Remote Access IPsec: Policies List.....	473
Figure 155	Remote Access IPsec: Advanced Settings.....	477
Figure 156	Cisco VPN Client: Enabling Remote Access via Cisco VPN Client ...	480
Figure 157	Cisco VPN Client: iOS Device Settings.....	481
Figure 158	Remote Access: Advanced Settings.....	483
Figure 159	Reporting: Example of a Flash-based Line Chart.....	486
Figure 160	Reporting: Example of a Flash-based Pie Chart.....	487
Figure 161	Logging: Today's Log Files.....	487
Figure 162	Logging: Archived Log Files.....	488
Figure 163	Logging: Searching Log Files.....	489
Figure 164	Reporting: Histogram of the Ethernet Interfaces Utilization.....	493
Figure 165	Reporting: Bandwidth Usage Data Sorted by Top Services.....	495
Figure 166	Reporting: Histogram of Firewall Violations (Daily).....	497
Figure 167	Reporting: Histogram of Intrusion Prevention Events (Monthly)...	497
Figure 168	Reporting: Deanonymizing Single Users.....	508
Figure 169	Reporting: Histogram of the Mail Flow.....	509
Figure 170	Reporting: Ranking of Most Active E-mail Addresses.....	510
Figure 171	Reporting: Deanonymizing E-mail Addresses and Domains.....	511
Figure 172	Reporting: Completed Session Connections of the Last 30 Days...	512
Figure 173	Reporting: Histogram of the Monthly Web Application Firewall ...	514
	Activities.....	
Figure 174	Reporting: Configuring the Daily Executive Report.....	516
Figure 175	Logging: Enabling Local Logging.....	517

Figure 176 Logging: Configuring Remote Syslog Server..... 519

Figure 177 Logging: Configuring Remote Log File Archiving..... 521

Figure 178 Reporting: Enabling Anonymization of User Data 525

Figure 179 Support: Downloading the Administration Guide of Astaro..... 528

Security Gateway.....

Figure 180 Support: Checking the Availability of a Host Using Ping..... 530

Figure 181 Support: Checking a Route Using Traceroute..... 531

Figure 182 Support: Looking up a DNS Entry Using Dig..... 532

Index

1

10BASE-T 170

3

3DES, encryption 421, 469

3G/UMTS (interface type) 148-149

A

ACC 93-94

as Up2Date cache 94

authentication at 94

connection status 96

health status 96

live log 97

servers 93

ACC Gateway Manager 95

port number 95

ACC objects 96

local copies 97

removal of 97

ACC WebAdmin 95

port number 95

access control 53

logging of traffic 50

to SSH 126

to User Portal 53

to WebAdmin 53

access points 379, 386

active 387

authentication at 379-381

authorization of 386

channel 387-388

clients See wireless networks, clients

configuration 379, 382

country setting 386, 388

deletion of 387

encryption 383

algorithms 384

passphrase 384

WEP 384

WPA/WPA2 384

ETSI 386

FCC 386

grouping of 388-389

inactive 387

location of 387-388

network assignment 389

network interface of 381

pending 381, 387-388

SSID 383-384

status of 379

types of 386

accounting data, reporting 98

activation keys, license 59

Active Directory 125, 129

back-end servers 130

Base DN 132

domain joining 141

e-mail recipient verification 314

FTP proxy and 307, 309

groups 143

port number 131

prefetching with 142

Single Sign-On 126-127, 140

Active Directory SSO (Web Filter 268

authentication mode)

Admin Password Setup (dialog win- 51

dow)

administration See administrator

guide manual

administrative interface 19

administrator 118

contact data 85

password of 51

setting of 23

WebAdmin access 53

administrator manual

download of 527

language of	527	of web application firewall	399
ADSL	159	of Web Filter	270, 278
AES, encryption	421, 469	scanning	
ageing timeout, bridging	174	of downloads	399
agent, SNMP	90	of e-mails	316, 336, 341
AH (protocol)	420, 468	of file extensions	64
aliases, IP addresses	164	of uploads	399
Amazon VPC	416	settings of	26
connections	416	status of	41
import	418	unscannable files	282
enable	416	zip archives, encrypted	272, 308,
Setup	418	and	318, 342
Status	416	AonSpeed (ISP)	160
anonymization, reporting	508-511,	APC (manufacturer)	15
data	525	AppAccuracy, application control	305
antispam engine	64, 319, 342	Apple OpenDirectory SSO (Web	268,
BATV	324, 332, 336	Filter authentication mode)	285
blacklisting of e-mail	79, 120, 322,	appliances	
addresses	337, 344	default settings	22
expression filter	323, 338, 344	models	99
greylisting	323, 336	application control	301
RBLs	321, 336	AppAccuracy	305
rejection of invalid HELO	323, 336	network visibility	41, 301
rejection of missing RDNS	323,	reporting	507
entries	336	rules	179, 302-304
spam filter	321, 337, 342	skiplist	305
spam marker	322, 344	area, system settings	18
SPF check	324, 336	ARP	
status of	41	broadcasts and bridging	174
whitelisting of e-mail	78, 120,	cache of	99
addresses	365, 368	clashes	146
antispyware engine	64	gratuitous	99
blocked spyware	40	high availability and	98
blocking spyware	274, 298	resolution, wrong	146
settings of	26	Astaro's FTP server	71
status of	41	Astaro's homepage	62
antivirus engine	64	Astaro's portal	59, 63
encrypted files	282	Astaro's Up2Date Blog	63, 527
maximum e-mail size	341	Astaro's website	93
of FTP proxy	305, 307	Astaro Command Center	See ACC
of POP3 proxy	340	Astaro Knowl-	13-14, 16, 27, 34, 63,
of SMTP proxy	315	edgebase	99, 107, 153, 527

Astaro News Feed	58	TACACS+	125, 138
Astaro Partner Portal	529	authentication services	137
Astaro RED Pro-	See RED Pro-	authorization	
visioning Service	visioning Service	of users	137-138
Astaro Support Forum	27, 63	automatic backups	76
Astaro User Authentication	127	deletion of	76-77
live log	127	download of	77
Astaro User Portal	See User Portal	e-mailing	76
attacks, intrusion prevention	40	encryption of	77
patterns	243-244	interval of creation	76
signatures	243	password protection	77
AUA	See Astaro User Authentication	restoration of	77
audio content, filtering	317, 338	storage of	76
auditor (user right)	54	autonegotiation, interfaces	170
auditor (user role)	53	AV engine	See antivirus engine
authentication	125-126	availability groups	112
cache for	127	always resolved	113
clearance of	127		
global settings	126	B	
IPsec	424, 426	back-end directory	See directory
live log	127	services	services
of clients	109	back-end servers	
of users	119	Active Directory	130
SOCKS proxy	262	eDirectory	128
Web Filter	278, 283	LDAP	134
Active Directory SSO	268	RADIUS	137
Apple OpenDirectory SSO	268,	TACACS+	139
	285	backup uplink	166
basic user authentication	268	backups	
eDirectory SSO	269	as templates	75
NTLM	268	automatic	76
authentication algorithms		before Up2Date installation	69
Internet Key Exchange	429, 474	deletion of	76-77
IPsec	430, 475	download of	77
WPA/WPA2 enterprise	379, 381	e-mailing	69, 76
authentication servers	127	encryption of	77
Active Directory	125, 129	interval of creation	76
eDirectory	125, 127	password protection	77
external	109, 125	restoration of	77
LDAP	125, 133	storage of	76
RADIUS	125-126, 136, 381	available	73, 76-77
system load	269	confidential information and	74

content of	72, 74	autonomous systems, mul-	201,
creation of	72-73, 75	tip	206
creator of	73, 77	debug information	207
deletion of	74	filter lists	205
download of	74	IP address match, strict	207
e-mailing	74	neighbor routers	202
recipients of	74	peer routers	202
encryption of	74	route maps	203
file extensions	74	branch offices, network integration	405
import of	73, 76-77	of	
lock files and	73	bridging	22, 172
password protection	74	ageing timeout	174
readability of	72	ARP broadcasts	174
restoration of	24, 27, 72-73	configuration of	172
from USB flash drive	73	firewall rules	172
SSH DSA keys and	522	IPv6 and	174
storage of	72	RED appliances	411-412
version number	73	removal of bridge	173
balancing rules, server load bal-	254	removal of interfaces	173
ancing		status of	172
bandwidth monitor	See flow monitor	broadcasts, firewall and	232
bandwidth pools, Quality of Service	180	browser	See web browser
bandwidth usage, reporting	494	button bar, of WebAdmin	31
base license	65	buttons, in WebAdmin	35
basic configuration	13, 21	bypassing blocked content, HTTP	276
backup restoration	27	proxy	
basic system setup	23		
basic user authentication (Web	268	C	
Filter authentication mode)		Cable Modem (interface type)	148,
battery operation, UPS	15		155
BATV	324, 332, 336	MTU	156
BGP	See Border Gateway Protocol	cache	
bit mask	112	for authentication	127
bit rate, network cards	40	clearance of	127
blacklisting, e-mail	79, 120, 322,	for Up2Dates	71
addresses	337, 344	Web Filter	278, 285
blocked IP address, due to failed	54	CBC mode (Cipher Block Chaining)	74
logins		CD-ROM drive, system require-	14,
Blowfish (cipher)	74	ments	18
Border Gateway Protocol	200	CD-ROM, for installation	16
activation of	200	central management	93

certificate authority	23, 285, 444,	live log	481
	447	classic license	59, 63
download of	448	expiration of	63
fingerprint	289	client authentication	79, 109
import of	448	clusters, high availability	97, 100,
signing CA	285, 447		103
for VPN	449	autojoin	103
verification CA	288, 447	configuration	102, 107
Web Filter certificate	79	of master	104, 107
WebAdmin certificate	23, 55	of slave	105
certificates	444	deactivation of	107
date check	279	nodes	97, 100, 102
deletion of	446	resource usage	102
download of	447	system status	101
generation of	118, 445	status of	41
import of	446	codes, of notifications	82
information contained in	46	command-line	50, <i>See also</i> shell
invalid	47	access	access
management of	402, 444, 484	community string, SNMP	91-92
of User Portal	56	company information	23
of WebAdmin	23, 55-56	company logo, customization of	84
public keys, import of	444	company text, customization of	85
remote access	118	complexity, password	51, 142
revocation lists	403, 435, 444, 449,	confidentiality footer, SMTP	331,
	478, 484	proxy	338
self-signed, of system	22, 444, 447	configuration	21
SSL, of users	126, 452	of system	40
time, time zones, and	55	of Up2Dates	70
trust check	279	reset of	51
validity of	22, 55	configuration dump, support	533
VPN ID	118, 445	configuration wizard	<i>See</i> wizard
VPN ID type	445	connection tracking helpers	236
X.509	444	H.323	259
local	24	SIP	257
of users	118	connection types, for Internet uplink	25
changes, of WebAdmin settings	45	connections, terminating	244
charsets, used by POP3 proxy	350	console	<i>See</i> shell
charts, reporting	486	contact data, administrator	85
Cisco VPN client	479	Content Blocked by Blacklist (Web	86
configuration	479-481	Filter message)	
debug information	482-483	Content Blocked by Surf Protection	86
iOS configuration	481-482, 484	(Web Filter message)	

content filtering	64	deanonymization, reporting	508-
content removal	272, 298	data	511
deactivation of	279	decryption, e-mail	353
controllers		default gateway, for external inter-	25
IDE	18	face	
SCSI	18	default settings, appliances	22
cookie signing	398	definitions	109
key for	402	of networks	109
Outlook Web Access	401	of services	109, 113
secret of	398, 402	of time periods	109, 116
country blocking	233	Denial of Serv- See DoS, intrusion pre-	
CPU usage	40, 490	ice	vention
CPU, system requirements	14, 18	departments, reporting	505
CRL See certificates, revocation lists		DER (file format)	362
cross-site scripting		destination address translation	See
protection from	393, 398		DNAT
customer support, Astaro	529	detection, hardware	16, 18
customization		device information, SNMP	91
home use license and	84, 367	DHCP	220
of company logo	84	HTTP proxy browser con-	222
of company text	85	figuration, automatic	
of POP3 messages	85	IP address pool	224
of Quarantine Report	85	lease table	225-226
of quarantine status messages	85	IPv4	225
of system messages	84	IPv6	226
of Web Filter messages	85	leases and prefix advertisements	226
D		relays	223
Dashboard	26, 30, 39	requests, forwarding of	223
Astaro News Feed	58	servers	25, 221
RAID display	16	static mappings	224-226
refresh rate	39	Web Filter browser configuration,	281
data packets	See packets	automatic	
databases		wireless networks	380, 391
reset of	52	with RED appliances	411-412
date	46	dialog boxes, in WebAdmin	34
NTP servers	46, 48	dig (network tool)	531
setting of	19	directory services	125, 127
manual	46, 48	Active Directory	125, 129
daylight saving time	46	eDirectory	125, 127
dead peer detection, IPsec	435, 478	LDAP	125, 133
		RADIUS	125, 136
		TACACS+	125, 138

directory traversals		Downloading File (Web Filter mes-	86
protection from	393	sage)	
disabled tabs	64	downloads	
Distinguished Name	129, 131, 134,	antivirus scanning	399
	444	problems with	14, 55, 74, 79, 354,
DKIM, SMTP proxy	331	Internet	359, 370, 447-448,
DN	See Distinguished Name	Explorer	488-489, 528, 534
DNAT	240, 260	DSA keys, SSH	522
firewall and	233	backups and	522
firewall rules and	241	public	522
PPTP access and	241	DSL	
DNS	215	ADSL	159
cache, clearance of	215	VDSL	157
DynDNS	218	DSL (PPPoA/PPTP) (interface	148,
forwarders	216	type)	159
by ISP	216	MTU	160
groups	111	DSL (PPPoE) (interface type)	148, 157
hostname of system and	46	MTU	158
hosts	111, 531	dynamic address allocation	147
time-to-live	111	dynamic IP endpoints	111
lookup	529, 531	dynamic routing (OSPF)	See OSPF
Web Filter and	283	DynDNS	218
proxy	262	E	
records		e-mail addresses	
time-to-live	215	blacklisting of	79, 120, 322, 337,
reverse DNS	217		344
servers	216	conflict of	126
allowed networks	215	unique	126
internal	215-216	whitelisting of	78, 120, 365
remote access	483	e-mail decryption	353
root	216	e-mail domains	313
static mappings	217	e-mail encryption	319, 331, 350, 353
wireless networks	380	activation of	354
zone information	216	CA, creation of	355
domain controllers	See directory serv-	certificates	361
	ices	automatic extraction, S/MIME	357
domains		information contained in	46
SMTP	26	configuration	353
DoS, intrusion prevention	247	decryption	353
download manager, Web Filter	87,	default policy settings	356
	283	internal users	357

OpenPGP	64, 357, 363	embedded objects, in web pages	
keyservers	357	removal of	279
public keys	363	encryption algorithms	
reset of	355	3DES	421, 469
S/MIME	64	AES	384, 421, 469
authorities	359	Internet Key Exchange	428, 473
certificates	357, 361	IPsec	430, 475
public keys, pre-installed	361	TKIP & AES	384
status of	41	encryption, e-mail	See e-mail encryption
e-mail footers		encryption, wireless networks	
antivirus check	318	WEP	384
format of	332	WPA/WPA2 personal	380, 384
e-mail quarantine	77, 316, 341	end user portal	See User Portal
false positives	364	Enterprise Toolkit, installation of	20
high availability and	103	Error While Releasing Message From	88
Mail Manager	371	Quarantine (SMTP/POP3 proxy message)	
mailing lists	368	ESP (protocol)	420, 468
POP3 Quarantine Report	367	Ethernet	
release of e-mails	78, 316, 341, 364-365	modes of operation	170
reporting of	510	Ethernet Standard (interface type)	148, 151
e-mail recipients		MTU	150, 152
of backups	69	proxy ARP	152
verification of	314, 325, 335	Ethernet VLAN (interface type)	148, 153
e-mail relays	327-329	MTU	154
antivirus scanning	329	proxy ARP	154
authentication	328	Excel (format)	
blacklisting of	329	download of reporting	496, 498,
host-based	329	data in	507, 513-514
upstream hosts	327	exceptions	
e-mail signatures	64	in reporting	525
ECN, IPsec	426	POP3 proxy	344
eDirectory	125, 127	SMTP proxy	326
back-end servers	128	Web Filter	277, 279-280, 289
Base DN	129	standard mode and	279
groups	143	executables, filtering	317, 338
port number	128	executive reports	514
prefetching with	142	archived	515
Single Sign-On	141	configuration of	515
eDirectory SSO (Web Filter authentication mode)	269		

generation of	515	firewall profiles, web application	397,
number of	524	firewall	401
PDF settings	525	firewall rules	229
settings of	524	"Any" rules	230
view of	515	active	40
expression filter, POP3 proxy	344	change of	231
expression filter, SMTP proxy	323,	creation of	230
	338	debug information	232
external interfaces	25, 145	deletion of	231
external networks	145	DNAT and	241
		for bridging	172
		order of	230
		rule matching	230
F		firmware updates	67, 69
factory reset	51-52	download of	69, 71
system shutdown	52	installation of	68-69, 71
failover, basic	165	scheduling of	70
failover, high availability	97, 99	firmware version	39, 69
failure, hardware, dealing with	97	Flash-based reporting	58
false positives, quarantined e-mails	364	flood protection, intrusion pre-	247
File Download Completed (Web Filter	86	vention	
message)		ICMP	248
file extensions		SYN	247
blocking of	272, 278, 298, 305,	UDP	248
	308, 318, 342	flow monitor	40
filtering of	318, 338, 342	adaption of	150, 152, 154, 156,
of backups	74		158, 161, 163
scanning of	64	form hardening	399-400
fingerprint, certificate authorities	289	secret of	402
firewall	40, 229	forwarders, DNS	216
broadcasts and	232	FQDN	483
configuration of	232	hostname and	46
connection tracking helpers	236	FTP	305
country blocking	233	clients	261
debug information	232	connection tracking helpers	236
ICMP	234	servers	310
IDENT traffic and	232	as logfile archive	521
Internet access	240	of Astaro	71
live log	231	FTP proxy	305
logging options	238	activation of	306
NAT and	233	Active Directory and	307, 309
protocol handling	237	antivirus engine	305, 307
reporting of	496, 498		
security policy	229		

-
- blocking of file extensions 305, 308
 - exceptions 308, 310
 - operation modes 305-306
 - skiplist 307, 310
 - status of 41
 - full transparent (Web Filter operation mode) 269
 - Fully Qualified Domain Name *See* FQDN
 - G**
 - generic proxy 260
 - GeoIP 233
 - gratuitous ARP 99
 - greylisting 323, 336
 - groups
 - availability groups 112
 - DNS groups 111
 - multicast groups 112
 - network groups 112
 - service groups 113, 116
 - user groups 121
 - Guest (wireless network) 380
 - H**
 - H.323 259
 - connection tracking helpers 259
 - HA *See* high availability
 - hard disk
 - erasure of 20-21
 - size and type 18
 - system requirements 14
 - usage of 40
 - hardware
 - failure, dealing with 97
 - interfaces 170
 - minimum requirements 18
 - reporting on 98, 489-492
 - Hardware Compatibility 14, 16, 99, 153, 527
 - List 153, 527
 - hardware detection 16, 18
 - HCL *See* Hardware Compatibility List
 - HDD *See* hard disk
 - heart-beat requests, high availability 98
 - HELO, invalid 323, 336
 - help, online 68
 - high availability 97
 - active-active 97, 103
 - active-passive 97, 103
 - ARP requests 98
 - autojoin 103
 - backup interfaces 107
 - clusters 97, 103
 - configuration 102, 107
 - automatic 102-103, 107
 - of master 104, 107
 - of slave 105
 - deactivation of 107
 - failover 97, 99
 - heart-beat requests 14, 98
 - hot standby 97, 103
 - license requirements 99
 - link aggregation 165
 - link monitoring 171
 - live log 101
 - master-master situations 106-107
 - node IDs 100
 - nodes 97, 100
 - resource usage 102
 - system status 101
 - status of 41, 100
 - reset of 52
 - system requirements 99
 - takeover in 98-99, 106, 171
 - home use license 63
 - customization and 84
 - homepage, Astaro 62
 - hostname, system 55
 - configuration of 46
 - DNS and 46
 - hosts 111
 - DNS 111
 - hot standby 97, 99-100, 103
 - autojoin 103

configuration	102, 107	Info icon	32
of master	104, 107	interface definitions	146
of slave	105	network definitions	110
deactivation of	107	service definitions	114
nodes		time period definitions	117
resource usage	102	user definitions	118
system status	101	initial login page	22
HTML rewriting, web application	395	installation	13, 522
firewall		abortion of	18
HTTP proxy	See Web Filter	and basic configuration	21
HTTP return codes	254	duration of	21
HTTPS		from CD-ROM	16
problems with	287	hardware requirements	18
return codes	254	key functions during	16
WebAdmin CA certificate	23, 55	of Enterprise Toolkit	20
WebAdmin certificate	55	of Open Source Software	20
HTTPS proxy	See also HTTP proxy, Web	problems after	21
Filter		system reboot after	21
certificate authorities	285	warning message	20
fingerprint	289	installation instructions	16
problems with HTTPS	287	installation menu	13
I		installation requirements	14
IANA	92	instant messaging	
ICMP	234	clients	261
echo request	529	instant messaging control	
echo response	529	settings of	26
flood protection	248	Interface Address	110
settings of	234	Interface Broadcast Address	110
icons, in WebAdmin	35	Interface Network Address	110
Info icon	32	interface persistence	
IPv4/IPv6 marks on	185	server load balancing	256
traffic icon	40	uplink balancing	167
IDE controllers	18	interfaces	145
IDENT		administrative	19
protocol	263	aliases	165
traffic, firewall and	232	automatic definitions of	147
IDENT relay	See IDENT reverse proxy	dynamic address allocation	147
IDENT reverse proxy	263	autonegotiation of	170
idle timeout, WebAdmin	58	configuration of	145
IKE	See Internet Key Exchange	default gateway	25
		dynamic routing	192
		external	25, 145, 151, 155

flow monitor	40	Internet, access to	240
Info icon	146	intrusion attempts	40
internal	19, 25, 145	intrusion prevention	243
link aggregation	165	attack patterns	243-244
load balancing	97, 103, 166	DoS protection	247
multicast routing	209	events	229
of name "Internal"	147	flooding protection	247
of status	146, 150, 153, 155,	live log	244
"Down"	157, 159, 161, 163	portscan detection	249
of status "Up"	150, 153, 155, 157,	reporting of	496, 498
	159, 161, 163	settings of	26
OSPF	192	signatures	40
Quality of Service	174	status of	40
table of	533	intrusion prevention system	See IPS
types of	147, 151, 153, 155, 157,	iOS configuration	
	159, 161, 163	Cisco VPN client	481-482, 484
3G/UMTS	148-149	L2TP	465-466
Cable Modem (DHCP)	148, 155	PPTP	460-461
DSL (PPPoA/PPTP)	148, 159	IP addresses	
DSL (PPPoE)	148, 157	active	67
Ethernet Standard	148, 151	additional	164
Ethernet VLAN	148, 153	aliases of	164
Modem (PPP)	148, 161	blocking of	54
uplink balancing	166	IPv6	184
uplink monitoring	182	limitation on	67
virtual	146, 165, 168	link-local, IPv6	185
internal interfaces	19, 25, 145	static, for remote access users	120
internal mail server	26	IP endpoints, dynamic	111
internal network card	19	IP header	422, 470
Internet (network definition)	111, 145	IP masquerading	25
Internet Explorer	14	IPS	40
download	14, 55, 74, 79, 354,	activation of	243
problems	359, 370, 447-448,	attack patterns	243-244
	488-489, 528, 534	live log	244
Internet Key Exchange		performance of	253
authentication algorithms	429, 474	rules	243, 246
Diffie-Hellman groups	429, 474	modification of	252
encryption algorithms	428, 473	IPsec	419, 467
security association lifetime	429,	authentication	424, 426, 431-433
	474	X.509 certificates	434, 477
Internet time servers	See NTP servers	authentication algorithms	430, 475
Internet uplink, connection type	25		

certificates		tunneling IPv4	186
information contained in	46	IRC	
certificates of		clients	261
revocation lists	435, 478	connection tracking helpers	236
compression of IP packets	431, 476	J	
connections	422-423, 470-472	JavaScript	14
encryption	421, 468	removal of	279
operation modes	420, 467	K	
remote gateways	424-425, 427	Kerberos authentication sup-	140-141,
status of	415	port	285
dead peer detection	435, 478	kernel	
debug information	436, 479	modules	236
ECN	426	key functions, during installation	16
encryption algorithms	430, 475	keyboard layout, selection of	18
high availability and	103	keyboard shortcuts, in WebAdmin	57
L2TP over	461, 466-467	keys	
NAT traversal	421-422, 435, 469, 478	for cookie signing	402
PFS groups	430, 475	for URL hardening	402
PMTU	426	keyservers, OpenPGP	357
policies	427-428, 431, 472-473, 476	Knowledgebase,	13-14, 16, 27, 34,
preshared key probing	436, 479	Astaro	63, 99, 107, 153, 527
protocol	415	Known Issues List, Astaro	527
protocols used by	420, 468	L	
security association lifetime	430, 475	L2TP over IPsec	461, 466-467
strict policy	430, 475	access control	464
TOS bits	422, 470	configuration	462
XAUTH	426	debug information	466-467
IPv6	184	domain name	483
activation of support	185	iOS configuration	465-466
bridging and	174	LAG	See link aggregation, groups
IP addresses	185	LAN	145
IPv4 and	186	language, WebAdmin	52
simultaneous use of	164	LDAP	125, 133
link-local addresses	185	back-end servers	134
object icons	185	Base DN	135
prefix advertisements	185	port number	134
status of	185	user attribute	135
supported functions	184	LDAP browser	143
tunnel brokers	186-187	LDAP over SSL	128, 131, 134

lease table, DHCP	225	load, system	39
license	25, 39	lowering	524
activation keys	59	local logging	516
base license	65	thresholds of	517
classic	59	localization	
download of	60	of system messages	84
expiration of	63	lock files and backups	73
for home use	63	log off, WebAdmin	535
for trial use	25	log partition	
information on	65	histogram of, utilization	485
installation of	66	status of	485
IP address limitation	67	usage of	40
notification about	67	logfiles	
OnDemand	59-60	archive of	488, 520
purchase of	59	e-mail	522
reset of	52	FTP server	521
subscriptions	59, 64	SMB share	522
upgrade of	59	SSH server	522
upload of	60	deletion of	487-488, 518
license counter	67	download of	488
license key	16	import of	534
licensing	59, 63	live log	487
support services	65	of SMTP	78
warning message	65	of today	487
Licensing Info	65	reset of	52
line charts, reporting	486	search in	487, 489
link-local addresses, IPv6	185	view of	487
link aggregation	165	logging	485
alias interfaces	165	accessed webpages	279, 282
groups	165	blocked webpages	279, 282
link monitoring, high availability	171	local	516
link speed, increase of	165	thresholds of	517
Linux, SSH and	50	notifications and	518
lists, in WebAdmin	32	remote	518
Info icon	32	settings of	46, 516
search in	33	time gaps	47
load balancing, interfaces	97, 103, 166	time settings	46
load balancing, servers	254, 393	using syslog	518
balancing rules	254	login page	
interface persistence	256	initial	22
weight distribution	256	standard	24, 28
		login problems	535

logins, into WebAdmin		manager (user right)	54
failed	54	manual, administrator	527
loginuser		language of	527
password of	51	masquerading	25, 239, 260
logout, WebAdmin	535	rules	239
automatic	535	Master (high availability	98, 100,
M		node)	102
Mail Manager	370	MD5 (hashing algorithm)	421, 468
cleanup of database log	378	MD5 authentication, OSPF	198
configuration	377	memory	
statistics	376	system requirements	14
Mail Manager Window	371	usage of	490
deletion of e-mails	372	menu, WebAdmin	30
download of e-mails	372	search box	31
false positives, report of	372	message digest keys, OSPF	198
global cleanup actions	373	Message Released From Quarantine	88
opening of	375	(SMTP proxy message)	
POP3 quarantine	371	MGE UPS Systems (manufacturer)	15
release of e-mails	372	MIB	See Management Information
restrictions of users	373	Base	
SMTP log	374-375	Microsoft Active Direc-	See Active Direc-
SMTP quarantine	371	tory	tory
SMTP spool	373	MIME types	
Mail Quarantine	See e-mail quarantine	blocking of	272, 282, 298
Mail Security	311	deactivation of	278
encryption	350	filtering of	317, 337
Mail Manager	370	of PAC file	281
POP3 proxy	339	Modem (PPP) (interface type)	148,
Quarantine Report	364		161
reporting of	509-511	MTU	163
settings of	26	monitoring	
SMTP proxy	311	of link status, high availability	171
statistics	311	of network	89
subscription	64-65	of nodes, high availability	98
mail server, internal	26, 311, 313	of requests, web application fire-	398
mailing lists	368	wall	
whitelisting of	368	of systems	93-94
maintenance levels, support	529	of uplink	182
Management Information Base	89	MSCHAPv2 (authentication protocol)	457
management workstation	13	MTU	
management, central	93	Cable Modem (DHCP)	156
		DSL (PPPoA/PPTP)	160

DSL (PPPoE)	158	heart-beat capable	14, 99
Ethernet Standard	150, 152	internal	19
Ethernet VLAN	154	name of	40
Modem (PPP)	163	recognition of	145
multicast groups	112, 210	Software Appliance and	145
prefixes	211	sequence of	21
multicast routing	207	status of	40
activation of	208	SysIDs	151, 155
deactivation of	209	network definitions	
debug information	213	availability groups	112
firewall rules, automatic	213	bind to interface	111-112
interfaces	209	creation of	111
IP address range	208	DNS groups	111
live log	209	DNS hosts	111
rendezvous point routers	210	hosts	111
routes	211	Info icon	110
settings, advanced	212	Internet	111
shortest path	213	multicast groups	112
multicast, high availability	98	network groups	112
multipath rules, uplink balancing	168	types of	111
MyAstaro Portal	59, 63	network groups	112
N		of name "Uplink Primary Address-168 es"	
NAS identifiers, RADIUS	137-138	network interfaces	See interfaces
NAT	164, 238	network mask	See netmask
DNAT	240	network monitoring	89
firewall and	233	uplink monitoring	182
firewall rules, automatic	242	Network	229-241, 243-255,
Full NAT	242	Security	257-263
masquerading	239	country blocking	233
rules	241	exceptions in	250
SNAT	240	firewall	229
NAT traversal	421-422, 435, 469,	generic proxy	260
	478	ICMP	234
neighbor routers, BGP	202	IDENT reverse proxy	263
netmask	112	intrusion prevention	243
netstat	533	NAT	238
network activities	485	reporting of	496-498
network cards	14, 18	server load balancing	254
bit rate	40	SOCKS proxy	261
configuration of	146	statistics	229
flow monitor	40	subscription	65

network services	215	notifier MIB of Astaro, SNMP	91
DNS	215	Novell eDirectory	See eDirectory
NTP	227	NTLMv2 support	140
network statistics	533	NTP	227
overview of	145	NTP servers	46, 49, 227
network usage, reporting	98, 492-494	testing of	49
network visibility, application control	41, 301	O	
networks	109	object identifier, SNMP traps	92
definition of	109	object lists	36
external	145	keyboard shortcuts	57
never blocked	54	OID, SNMP traps	92
RED	See RED Management	OnDemand license	59-60
static	110	online help	68
wireless	See wireless networks	Open Source software, installation of	20
news, Astaro News Feed	58	OpenPGP encryption	64, 357, 363
NIC bonding	See link aggregation	key servers	357
nodes, high availability	97, 100	public keys	363
dead	98	Operating Instructions	13
IDs of	100	operating status, system	39
Master	100, 102	operation modes	
monitoring of	98	bridge mode	22
reboot of	101	routing mode	22
removal of	101	organizational information, system	46
shutdown of	101	OSPF	190, 192
Slave	100	activation of	193
status of	100	areas	194
system status	101	deactivation of	193
version of	101	debug information	198
Worker	100	interfaces	196
notifications	46, 82-83	live log	196, 198
by e-mail	82-83	MD5 authentication	198
codes of	82	message digest keys	198
device-specific text	83	settings, advanced	199
license and	67	Outlook Web Access	401
limiting	82	P	
logging and	518	P2P	See peer-to-peer control
recipients	82	PAC file	281
smarthosts and	83	example of	281
SNMP trap	82-83	MIME type of	281
types of	83	packet flow	22

packet loss	529	peer	See Border Gateway Protocol,
packets		routers	neighbor routers
dropped	40, 229	PEM (file format)	362, 446
dropping	244	pending access points	381, 387-388
rejected	40	phishing protection	64
pagination, tables	57	pie charts, reporting	486
parent proxies		PIM-SM	See multicast routing
as Up2Date cache	71-72, 95	ping	529
authentication at	72	settings of	234
SMTP proxy and	330	ping check	21, 112, 529
Web Filter and	283-284, 299-300	interval of	112
partition usage	490	PKCS#12 container (file format)	446
log partition	491	PMTU	426
root partition	40, 491	policy routes	188, 190
storage partition	491	POP3	
Partner Portal, Astaro	529	accounts	78
password		e-mail encryption	353
for shell	51	POP3 Message Blocked (POP3 proxy	88
of administrator	24, 51	message)	
setting of	23	POP3 messages	
of loginuser	51	customization of	85
setting of	51	POP3 proxy	26, 339
of root	51	activation of	340
setting of	51	antispam engine	342
of users		blacklisting of e-mail addresses	79,
change of	79		344
setting of	120	expression filter	344
of WebAdmin	24	spam filter	342
reset of	51-52	spam marker	344
password complexity	51, 142	whitelisting of e-mail addresses	78,
password guessing	54		365
pattern updates	67	antivirus engine	340
download of	70-71	encrypted e-mails	341
installation of	68, 70-71	maximum e-mail size	341
online help	68	unscannable e-mails	341
pattern version	39, 70	charsets	350
PCI ID	21	configuration of	339
PDF (format)		deletion of e-mails	339, 349
download of reporting	496, 498,	exceptions	344
data in	507, 513-514	file extension filter	342
peer-to-peer control		live log	340
settings of	26	messages of, customization	88

port number	339	preferences	
prefetching	348, 364-365	of user	56
Quarantine Report	367	prefetching, authentication	
servers	347	groups	143
skiplist, transparent mode	347	interval of	142
SSL	350	time of	142
status of	41	with Active Directory	142
timeout settings of client	339	with eDirectory	142
POP3 quarantine	See e-mail quarantine	prefetching, POP3 proxy	348, 364-365
POP3 servers		prefix advertisements, IPv6	185
allowed	78	DHCP leases and	226
port forwarder	See generic proxy	preinstalled software	13
port number		preinstalled system	13
of ACC communication	95	problems, after installation	21
of ACC Gateway Manager	95	process list, support	533
of ACC WebAdmin	95	processor	18
of Active Directory	131	system requirements	14
of eDirectory	128	profiles, SMTP proxy	333, 335-339
of LDAP	134	global settings	339
of POP3 proxy	339	profiles, Web Filter	289, 291
of Quarantine Report	369	filter actions	289, 296
of RADIUS	137, 381	filter assignments	289, 295
of SSH	51	flowchart	290
of TACACS+	139	operation modes	293
of User Portal	81	parent proxies	300
of WebAdmin	22	SSL scanning	295
port trunking	See link aggregation	profiles, Web Filtering	335
portscan detection, intrusion prevention	249	filter actions	
activation of	250	parent proxies	299
PPTP	457-461	protocols	
activation of	458	AH	420, 468
client installation instructions	459	ESP	420, 468
connection tracking helpers	236	IPsec	415
debug information	461	LDAP	133
DNAT and	241	MSCHAPv2	457
domain name	483	NTP	227
encryption	461	of routing	190
iOS configuration	460-461	RADIUS	136
live log	460	syslog	518
		TACACS+	138

proxies		restrictions of users	370
FTP	305	report, additional	366
generic proxy	260	skiplist	367
HTTP/S	266	whitelisting	365
IDENT reverse	263	quarantine status messages	
POP3	339	customization of	85
reverse proxy	See web application	quarantined e-mails	77
	firewall	deletion of	372
SMTP	311	from server	349
SOCKS	261	download of	372
Web Filter	266	false positives	364
proxy ARP (function)		report of	372
with Ethernet Standard	152	release of	78, 341, 364-365, 372
with Ethernet VLAN	154	allowed networks	370
proxy server, government-	See parent	restrictions of users	370, 373
approved	proxies	Quick Start Guide Hardware	13
ps, support tool	533		
public keys, OpenPGP	363	R	
public keys, S/MIME, pre-installed	361	RADIUS	125-126, 136
public keys, SSH DSA	522	back-end servers	137, 381
		NAS identifiers	137-138
Q		port number	137, 381
QoS	See Quality of Service	protocol of	136
Quality of Service	174	shared secret	137, 382
bandwidth pools	180	RAID	
interfaces	175	controllers	16
status of	175	display on Dashboard	16
traffic selectors	176	support for	16
Quarantine	78, 119, 364-367,	RAM	
Report	369-370	system requirements	14
activation of	366	usage of	40
customization of	85	RBLs	321, 336
delivery time	366	RDNS entries, missing	323, 336
exceptions	367	readonly (user role)	54
false positives	364	real web servers	393-394, 396-397
hostname of	369	automatic addition	396
HTML and	367	manual addition	397
mailing lists	368	matching virtual web servers	395
message text, customization of	366	Realtime Blackhole Lists	See RBLs
port number	369	reboot, system	
release of e-mails	364-365	after installation	21
allowed networks	370	manual	107

recipient verification, SMTP	314, 325,	Cisco VPN client	479
proxy	335	configuration files for users	451
recipients		DNS servers	483
of e-mails	69	domain name	483
of notifications	82	IPsec	467
recommended reading	13	L2TP over IPsec	461, 466-467
RED appliances		PPTP	457-461
bridging	411-412	reporting of	511-513
configuration	405, 407-411	section in User Portal	79
deletion of	410	SSL VPN	452, 454
deployment helper	407, 411-413	static IP address for users	120
DHCP servers	411-412	status of	41, 451
live log	406	WINS servers	483
operation modes	409, 411-413	Remote Ethernet	See RED Man-
unlock code	409-410	Device	agement
uplink modes	409, 413	remote logfile archive	520
RED hub	406-407	e-mail	522
configuration	407	FTP server	521
RED Management	405-407, 409-413	SMB share	522
activation of	406	SSH server	522
ASG as client	408, 413	remote syslog server	518
ASG as host	407	rendezvous point routers, multicast	210
deployment helper	407, 411-413	routing	
live log	406	reporting	485
routing	405	accounting data	98
settings, global	406	activation of	523
setup	405	bandwidth usage	494
overview of	406	deactivation of	523
RED Provisioning Service	407, 410	e-mail flow	509
redundancy, computer net-	97, 103,	e-mail usage	510
works	165	e-mails, blocked	510
regular expressions	33	exceptions	525
Relative Distinguished Name	131	executive reports	514
relays, DHCP	223	firewall	496, 498
relays, e-mail	327-329	flash-based	58, 486
antivirus scanning	329	deactivation of	486
authentication	328	hardware information	98, 489-492
blacklisting of	329	import of log files	534
host-based	329	intrusion prevention	496, 498
upstream hosts	327	line charts	486
remote access	451	Mail Security	509-511
certificates for	23, 118	Network Security	496-498

network traffic	492-494	routing	
network usage	98, 492-494	automatic	189
pie charts	486	BGP	200
Quarantine Report	364-367, 369-370	multicast	207
remote access	511-513	policy routes	188, 190
settings of	46, 523	request routing	216
time frames	523	standard static routes	188-189
time gaps	47	static	188-189
time settings	46	routing loops	190
web application firewall	513-514	routing mode	22
Web Security	499, 508-509	routing protocols	190
application control	507	routing table	188-190, 533
data acquisition	265	RPS	See RED Provisioning Service
departments	505	RSA keys	
scheduled reports	506	and backups	74
search engine report	503	site-to-site VPN IPsec	431-433
web usage	499	S	
reporting data		S/MIME encryption	64
anonymization of	508-511, 525	authorities	359
automatic deletion	523	certificates	361
deanonymization of	508-511, 526	automatic extraction	357
download of	496, 498, 507, 513-514	public keys, pre-installed	361
high availability and	98	scanning	See antivirus engine, scanning
reset of	52	scheduled reports	506
request routing	216	SCP servers	522
resolve REF	534	SCSI controllers	18
resource usage	39, 97	search box, of lists	
restart, system	107	description	33
restoration, backups	24, 27	search box, of menu	
return codes, HTTP/S	254	description	31
reverse DNS	217	keyboard shortcut	57
reverse proxy	See web application firewall	search engine report	503
revocation lists	403, 444, 449, 484	Secure Copy, archiving method	522
rights, user	54	Secure Shell	50, <i>See also</i> SSH
root DNS servers	216	security certificate	See certificates
root password	51	security threats	40
route flapping	190	identification of	485
route maps, BGP	203	security warning, web	22, 24,
		browser	55

self-signed certificate		signatures, intrusion prevention	40,
of system	22		243
Sender Policy Framework	See antispam engine, SPF check	signing certificate authority	447
server load balancing	254	for VPN	449
balancing rules	254	Simple Network Management Protocol	See SNMP
interface persistence	256	Single Sign-On	140
weight distribution	256	of Active Directory	126-127, 140
servers		of eDirectory	141
DHCP	25, 221	SIP	257
DNS	215	connection tracking helpers	257
for authentication	127	site-to-site VPN	415
mail, internal	26	Amazon VPC	416
NTP	227	certificates for	23
SCP	522	IPsec	419
service definitions		remote gateways	424-425, 427
change type of	116	SSL	436-437, 440, 442
creation of	114	status of	41, 415
Info icon of	114	skiplist	
of name "Web Surfing"	380	application control	305
service groups	113, 116	FTP proxy	307, 310
services		POP3 proxy	347
allowed by Web Filter	282	Quarantine Report	367
definition of	109, 113	Web Filter	281
network services	215	Slave (high availability node)	98, 100
types of	25	smarthosts	
using AH	116	notifications and	83
using ESP	116	SMTP proxy	333
using ICMP	115	SMB share, as logfile archive	522
using IP	115	SMTP	
using TCP	113	e-mail encryption	353
using UDP	113	SMTP domains	26
sessions, WebAdmin, overview of	45	SMTP log	374-375
SHA-1 (hashing algorithm)	421, 468	SMTP proxy	
shell		activation of	312
setting passwords for	51-52	antispam engine	319
shell access	50	BATV	324, 332, 336
after password reset	52	blacklisting of e-mail addresses	79,
shutdown, system	51, 107		322,
after factory reset	52		337
logging thresholds and	518	expression filter	323, 338
signatures, e-mail	64	greylisting	323, 336

RBLs	321, 336	download of e-mails	374
spam filter	321, 337	global cleanup actions	374
spam marker	322	SNAT	240
SPF check	324, 336	firewall and	233
whitelisting of e-mail addresses	78, 365	masquerading	239
antivirus engine	315-316, 336	SNMP	89
e-mail footer	318	agent	90
encrypted e-mails	316, 337	Astaro notifier MIB	91
unscannable e-mails	316, 337	community string	91-92
confidentiality footer	331, 338	device information	91
configuration of	311	error codes	92
DKIM	331	queries	89
e-mail relays	327-329	traps	82, 89, 92
exceptions	326	SOCKS proxy	261
file extension filter	318, 338	bind requests	262
footer format	332	hostname resolution and	262
maximum e-mail size	332	protocol versions	262
messages of, customization	88	user authentication	262
MIME type filter	317, 337	software	
operation modes	311	preinstalled	13
profile	312	source network address trans-	See
simple	312	lation	SNAT
transparent	330	spam e-mails	
parent proxies	330	blocked	40
postmaster address	332	spam filter	321, 337, 342
profiles	333, 335-339	spam marker	322, 344
global settings	339	SPF check, SMTP proxy	324, 336
recipient verification	314, 325, 335	split tunneling	452
restriction settings	332	spyware	See antispysware engine
routing	312, 335	SQL injections	
smarthosts	333	protection from	393, 398
SMTP hostname	332	SSH	50
status of	41	access control	50
TLS	330	authentication methods	50
SMTP quarantine	See e-mail quar-	clients	50, 261
	antine	daemon listen port	51
SMTP relay	26	Linux and	50
SMTP spool	373	port number	51
bouncing of e-mails	374	public keys	50
deletion of e-mails	374	SSH DSA keys	522
delivery attempts, forced	374	backups and	522
		public	522

SSH server, as logfile archive	522	operating, of system	26, 39
SSL		streaming content	280
LDAP over	128, 131, 134	subnet	20
POP3 proxy	350	subscriptions, license	59, 64
SSL certificates	452	activation of	60
identifiers of	126	information on	65
of users	126	Mail Security	64-65
SSL scanning		Network Security	65
deactivation of	279	Web Application Security	65
transparent proxy and	279	Web Filtering	64
SSL VPN, remote access	452, 454	Web Security	65
activation of	453	Wireless Security	65
certificates	452	SuperAdmins (user group)	120-121
client software	452	support	27, 527
configuration files for users	452	Astaro Partner Portal	529
live log	454	configuration dump	533
settings of	454-457	contact information	88, 529
split tunneling	452	resolve REF	534
SSL VPN, site-to-site	440-444	support cases	529
configuration	437	Support Forum, Astaro	27, 63
of clients	438, 440	support levels	529
of servers	437-438	support services	65, 529
connections	438	support tools	529
settings of	440, 442-444	DNS lookup	529, 531
status of	415	ip	533
transparent Web Filter and SSL	270,	netstat	533
scanning	437	ping	529
SSO	See Single Sign-On	ps	533
standard (Web Filter operation	268	traceroute	529-530
mode)		swap usage	40, 490
standard static routes	188-189	switches	
standard time	46	high availability requirements	99
static mappings, DHCP	224	system requirements	14
static mappings, DNS	217	SYN flood protection	247
static routing	188-189	SysIDs, network cards	151, 155
statistic overview		syslog protocol	518
of e-mails	311, 376	syslog server	
of network	145	buffer size	520
of network security events	229	log selection	520
of web surfing	265	remote	518
status			
of log partition	485		

system		time	46
configuration of	13, 40	certificates and	55
reset of	52	daylight saving time	46
organizational information	46	NTP	227
preinstalled	13	NTP servers	46, 48
reboot of		setting of	19
after installation	21	manual	46, 48
manual	107	standard time	46
settings of	13, 21, 25, 45	synchronization of	227
shutdown of	107	time gaps	47
after factory reset	51-52	time-to-live	111
status of	26	time period definitions	109, 116
system load	39	creation of	117
lowering	524	filter assignments and	116, 296
system messages		firewall rules and	116
customization of	84	Info icon	117
system requirements	14	recurring events	116
T		single events	116
		time zone	46
table		certificates and	55
of interfaces	533	setting of	18, 48
routing table	188-190, 533	timeout, WebAdmin	58
tables		TLS, SMTP proxy	330
pagination of	57	tools, support	529
sorting data	496, 498-499, 507, 513-514	DNS lookup	529, 531
tabs		ip	533
disabled	64	netstat	533
TACACS+	125, 138	ping	529
back-end servers	139	ps	533
key of	139	traceroute	529-530
port number	139	TOS bits	422, 470
tags, VLAN	153	traceroute	529-530
takeover, high availability	98-99, 171	settings of	235
Telnet		traffic icons	40
clients	261	traffic monitor	See flow monitor
templates		traffic selectors, Quality of Service	176
backup templates	75	transparent (POP3 proxy operation mode)	
terms of use, WebAdmin	59	skiplist	347
TFTP		transparent (Web Filter operation mode)	269
connection tracking helpers	236	full transparent	269
threat status	40		

skiplist	281	Uplink Interfaces (virtual interface)	168
SSL scanning and	279	uplink monitoring	182
traps, SNMP	92	actions	182
trial license	25	activation of	182
TTL	See time-to-live	automatic	183
tunnel brokers, IPv6	186-187	deactivation of	182
types of services	25	Uplink Primary Addresses (network group)	168
U		uplink, backup	166
UDP flood protection	248	uplink, Internet	
UMTS (interface type)	148-149	connection type	25
uninterruptible power supply	15	uploads	
battery operation	15	antivirus scanning	399
notifications and	15	UPS	See uninterruptible power supply
recognition of	16	URL filter	272
status of	40	blocked URLs	40
USB port	14	categories	276, 284
Up2Date Blog, Astaro	63, 527	deactivation of	279
Up2Date cache	71	URL Filter Override (Web Filter message)	86
parent proxies	71-72	URL hardening	398, 400
Up2Date Information, Astaro	63, 527	entry URLs	398
Up2Dates	67	key for	402
configuration of	70	Outlook Web Access	401
connection problems	68	secret of	402
digital signature	67	URL rewriting, web application firewall	396
download of	68-69	USB port, system requirements	14
installation of	68-69	user definitions	118
implicit	70	administrator privileges	120
manual upload	71	back-end synchronization	120
of firmware	69	e-mail addresses and	118
of patterns	70	Info icon	118
packages, reset of	52	User Portal	77
scheduling of	70	access control to	80, 126
system backup, automatic and	69	blacklisting of e-mail addresses	79, 120
update servers	68	certificate of	56
update servers	68	client authentication	79
upgrades		cookies of	81
of license	59	e-mail log	78
uplink balancing	166	e-mail quarantine	78
interface persistence	167		
multipath rules	168		
weight distribution	167		

hostname of	81	of patterns	39
language of	81	video content, filtering	317, 338
listen address of	81	virtual interfaces	146, 165
logout of	79	of name "Uplink Interfaces"	168
menu of	81	virtual LAN	See VLAN
POP3 accounts	78	virtual web servers	393-396
port number	81	HTML rewriting	395
PPTP client installation instructions	459	matching real web servers	395
remote access configuration	451-	URL rewriting	396
files	452	Virus Detected (Web Filter message)	86
remote access software	79	Virus Scanning (Web Filter message)	86
SMTP log	78	viruses	See also antivirus engine
Web Application Firewall and	81	blocked	40
Web Filter CA certificate	79	VLAN	153
welcome message	82	switches, configuration of	146
whitelisting of e-mail addresses	78, 120	tags	153
user preferences	56	wireless networks	382
user rights	54	activation of	382
auditor	54	deactivation of	383
manager	54	IDs	383
user roles	53	tagging	382
auditor	53	tags	383
readonly	54	Voice over IP	See VoIP
users	109, 118	VoIP	257
authentication of	119	H.323	259
authorization of	137-138	SIP	257
automatic creation of	126	VPN	415, 451, See also site-to-site
certificate of	120	VPN, remote access	
disabling of	119	signing certificate authority	449
password			
change of	79	W	
setting of	120	WAF	See web application firewall
user groups	109, 118, 121	warning message	
UTC	47	at installation	20
V		Licensing Info	65
VDSL	157	WAS	See Web Application Security
verification certificate authority	447	web application fire-	393-398, 401-
version	39	wall	402
of firmware	39	antivirus engine	399
		certificate management	402
		cookie signing	398, 402
		cross-site scripting filter	398

debug information	394	Agent	268, 270
dropping of requests	398	Apple OpenDirectory SSO	268, 285
exceptions	401-402	basic user authentication	268
form hardening	399-400, 402	browser	270
HTML rewriting	395	eDirectory SSO	269
live log	394	blocking	
load balancing of servers	393	encrypted files	282
monitoring of requests	398	file extensions	272, 278, 298
Outlook Web Access	401	MIME types	272, 278, 282, 298
profiles	397, 401	spyware	274, 298
real web servers	393-397	unscannable files	282
rejection of requests	398	URLs	272, 279
reporting of	513-514	website categories	26, 265, 275-276, 298
settings of	393, 402	bypassing blocked content	276
SQL injection filter	398	CA certificate	79
status of	41	cache of	278, 285
URL hardening	398, 400, 402	reset of	52
URL rewriting	396	certificate checks	279
virtual web servers	393-396	configuration of	267
Web Application	393-398, 401-	content removal	272, 279, 298
Security	402	deactivation of	266
subscription	65	DNS requests	283
web application firewall	393	download manager	87, 283
web browser		exceptions	277, 279-280, 289
certificates and	22	standard mode and	279
HTTP proxy configuration, auto-	222	logging	
Kerberos authentication	140-141, 285	accessed pages	279, 282
support	285	blocked pages	279, 282
NTLMv2 support	140	messages of	46
security warning	22, 24, 55	customization of	85
system requirements	14	operation modes	267
Web Filter configuration, auto-	281	full transparent	269
matic		standard	268, 279
Web Filter	266	transparent	269
activation of	266	transparent with authentication	86
administrator information	86	parent proxies	283, 300
antivirus engine	270, 278	port number	282
authentication at	278, 283	profiles	289, 291
Single Sign-On, use of	140	filter actions	289, 296
authentication modes	268, 270		
Active Directory SSO	268		

filter assignments	289, 295	button bar of	31
flowchart	290	buttons in	35
operation modes	293	certificate of	23, 55-56
SSL scanning	295	information contained in	46
skiplist, transparent mode	281	Dashboard	30, 39
SSL scanning	279	dialog boxes in	34
status of	41	icons in	35
streaming content	280	keyboard shortcuts	57
target services	282	language of	52
URLs, invalid	265	lists in	32
web browser configuration,	222,	logging of access traffic	53
automatic	281	menu of	30
website categorization	284	object lists	36
website categorization	276	password of	24
Web Filtering, subscription	64	port number	22, 58
Web	265-267, 269-283, 285-	protocol of	22
Security	296, 298-301, 305-310	sessions, overview	45
application control	301	settings of	52
reporting of	499, 508-509	monitoring of changes	45
settings of	26	terms of use	59
statistics	265	timeout of	58
subscription	65	user roles	53
web server attacks		version of	39
blocked	40	weblog import	534
web servers		website categories	276
protection from viruses	399	blocking of	26, 265, 275, 298
protection of	393	categorization	284
real	393-394, 396-397	website, Astaro	62
automatic addition	396	weight distribution	
manual addition	397	server load balancing	256
matching virtual web servers	395	uplink balancing	167
virtual	393-396	whitelisting, e-mail address-	78, 120,
HTML rewriting	395	es	365
matching real web servers	395	WINS servers	
URL rewriting	396	remote access	483
web surfing	265	wireless	See wireless networks,
data acquisition	265	clients	clients
Web Surfing (service definition)	380	wireless networks	379, 383
web usage, reporting	499	access points	379, 382, 386
WebAdmin	13, 29	active	387
access control to	53	authorization of	386
administrators of	24, 53	channel	387

-
- deletion of 387
 - inactive 387
 - location of 387
 - pending 387-388
 - clients 380, 390
 - DHCP 380, 391
 - DNS 380
 - encryption 383
 - algorithms 384
 - passphrase 384
 - WEP 384
 - WPA/WPA2 384
 - of name "Guest" 380
 - SSID 383-384
 - traffic routing 384
 - VLAN 382
 - activation of 382
 - deactivation of 383
 - IDs 383
 - tagging 382
 - tags 383
 - Wireless 379-384, 386-388,
 - Security 390-391
 - access points 386, *See also* access points
 - activation of 379-380
 - configuration, automatic 381
 - deactivation of 380
 - live log 379
 - settings, global 379-383
 - status of 41
 - subscription 65
 - wireless net- 383, *See also* wire-works less networks
 - wizard 24, 27
 - Worker (high availability role) 98, 100
 - workstation
 - for management 13
 - WPA/WPA2 enterprise authen- 379,tication 381
 - WPA/WPA2 personal authentication 380
 - passphrase 384
- X**
- X.509 certificates
 - backups and 74
 - creation of 444
 - import of 444
 - local 24, 434, 477
 - of users 118
 - XAUTH, IPsec 426
 - XSS *See* cross-site scripting
- Z**
- zip archives
 - encrypted, antivirus 272, 308,
 - engine and 318, 342
 - zone information, DNS 216

